






WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.	
	CAUTION For Compact Disc Units Only: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.	

SPECIFICATION

Power Consumption	: 23 W
Power Source	: AC 120V/60Hz
Speaker	: 4" Dynamic Type x 2
Tape Speed	: 4.75 cm/sec
Wow and Flutter	: 0.35 % JLS.WTD.

* Design and Specifications subject to change without notice.

910-211500-003

CROSLEY®



Model: CR-77CD

INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTION

PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR EQUIPMENT

1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating Instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built - in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources - This product should be operated only from the type of power source indicated on the marking label, if you are not sure of the type of power supply to your home. Consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power - Cord Protection - Power - supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
13. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power - line surges.
14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



15. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short - out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinct change in performance - this indicates a need for service.
19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. Wall or ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. Heat - The product should be situated away from heat sources such as radiators, Heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

POWER SOURCE

Unwind the AC power cord at the back of the unit and connect it to a power outlet.

UNPACKING THE TURNTABLE

1. Carefully remove unit from its package and take it out of the plastic bag.
2. Open lid and remove black tie-wrap by untwisting and gently sliding out from under tone arm.
3. Remove cardboard shipper.
4. Remove white protective needle cover by gently pulling towards front of unit.



TURNTABLE OPERATION

Turn the unit on by switching the VOLUME ON/OFF (11) located on the front panel to the ON position.

1. Select the function switch to the PHONO position.
2. Set the speed control switch to desired speed (331/3, 45 or 78 rpm). Place the record on the turntable.
3. Adjust the Volume switch (11) set at the mid range.
4. Pull the TONE ARM (16) slightly to the right side until hear the "click" sound to activate the turntable.
5. Move the tone arm by hand out over the record and slowly lower it. Re adjust the VOLUME control (11) to the desired level.
6. At the end of the record, the tone arm will stop automatically by the center and return to the arm rest manually.

ACCESSORY: ADAPTER FOR 45RPM

TO PLAY THE RPM RECORD, PLACE THE ADAPTER AT THE CENTRE OF THE TURNTABLE.

POLARIZED ELECTRICAL PLUG INSTRUCTIONS

This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the polarized plug.

CASSETTE OPERATION

Turn the unit on by switching the VOLUME ON/OFF (11) located on the front panel to the on position.

1. Turn the function switch (2) to CASSETTE position.
2. Insert a prerecorded tape through the CASS DOOR (20). Tape will slide into the cassette mechanism and start playing.
3. Adjust the volume level by turning the VOLUME (11) Control.
4. For fast forwarding, press the EJECT/FF (21) half way in. Pressing (21) again, will stop the fast forwarding and return the cassette to the playing mode.
5. To stop and eject the cassette, press the EJECT/FF (21) in completely.
6. When one side of the tape finishes playing, the cassette will automatically stop.

NOTE: Remove the tape from the unit when it is not in use or stopped.

CD (COMPACT DISC) OPERATION

Turn the unit on by switching the VOLUME ON/OFF (11) located on the front panel to the on position.

PLAYBACK

1. Set the function switch (2) to CD position.
2. Press the OPEN/CLOSE (3) to open the CD door.
3. Insert the CD and close the CD Door.
4. The CD-Player starts and scans the contents list of the CD. After 3 seconds, the total track numbers will be displayed.
5. Press the PLAY/PAUSE (5) to start playing the CD.
6. Adjust the VOLUME (11) to desired sound level.
7. Press the PLAY /PAUSE (5) to stop playback temporarily.
8. Press the PLAY /PAUSE (5) again to resume playback.
9. Press the STOP (4) to stop the playback.

SKIP / SEARCH

1. Press the FORWARD SKIP (10) to go to next track, press BACKWARD SKIP (9) to play the previous track.
2. Press and hold the FORWARD SKIP (10) or BACKWARD SKIP (9) to search within the current track. Release the button to resume play.

PROGRAMMED PLAYBACK

Up to 19 tracks can be programmed.

1. Press the PROGRAM (6). "0" will appear on the display.
2. Press the FORWARD SKIP (10) or BACKWARD SKIP (9) to make the selection of tracks.
3. Press the PROGRAM (6) again to memorize the track number.
4. Repeat step 2 and 3 above to program other tracks.
5. Press the PLAY/PAUSE BUTTON (5) to start programmed playback.
6. Press the PROGRAM (6) to review and store the tracks numbers in memory. Change track numbers as desired.
7. Press Play (5) to start playing. To erase all programmed memories, press PROGRAM first, then the STOP (4) button once.

OTHER IMPORTANT NOTES

Avoid installing the unit in the locations described below:

1. Places exposed to direct sunlight or close to heat radiating appliances such as heater.
2. On top of other electronic/electrical equipment which radiates excess heat.
3. Dusty areas.
4. Humid and moist areas.

TROUBLE SHOOTING GUIDE

The unit does not operate

 
 
 
 
- * The AC power cord is not connect to a power outlet.
- * The unit is not turn on: rotate the VOLUME knob from the OFF position past the "click" to turn on the unit.

No sound

- * The white protective needle cover was not remove.
- * The volume has not been turned up.
- * The turntable has not been activated by pulling the tone arm slightly to the right.

LOCATION OF PARTS

1. LED DISPLAY
2. CASSETTE/CD/PHONO (FUNCTION SWITCH)
3. OPEN/CLOSE
4. STOP
5. PLAY/PAUSE
6. PROGRAM
7. REPEAT
8. CD DOOR
9. BACKWARD SKIP
10. FORWARD SKIP
11. ON-OFF SWITCH / VOLUME CONTROL
12. SPEAKERS R&L
13. TURNTABLE
14. SPINDLE
15. ADAPTER FOR 45 RPM RECORDS
16. TONE ARM
17. SPEED CONTROL SWITCH
18. ARM REST
19. AC POWER PLUG CORD
20. CASSETTE DOOR
21. EJECT/FAST FORWARD

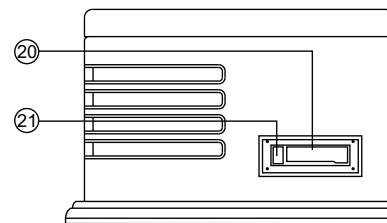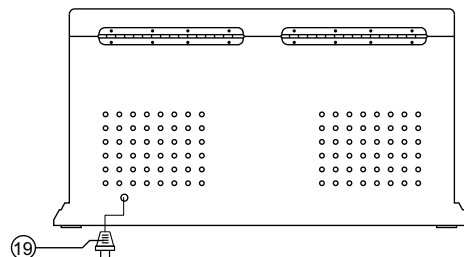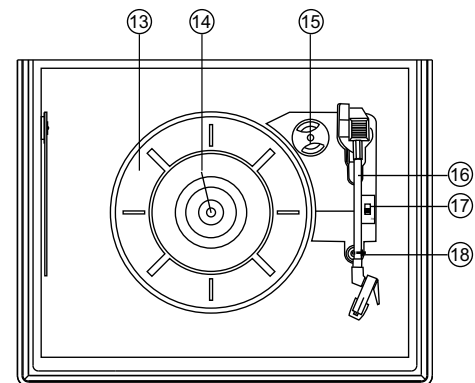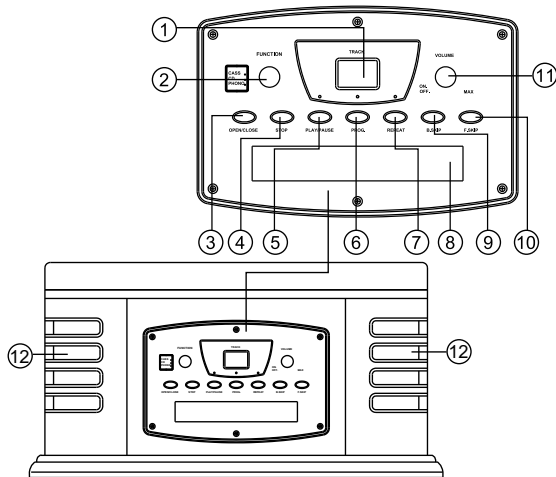

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>