

TROUBLE SHOOTING

Problem: Machine does not have power.

Solution:

- Plug the machine into an independent outlet.
- Make sure the machine is securely plugged in.
- Reset your home's circuit breaker.
- Confirm the power has been turned on and the controls are illuminated.

Problem: Machine will not brew.

Solution:

- Turn off and unplug the machine for 30 seconds or more. When you plug the machine back in, be sure to turn the power back on.
- Make sure there is water in the reservoir.
- Make sure the reservoir is properly installed.
- Make sure brew head is completely closed.

Problem: Chlorine or mineral taste in coffee.

Solution:

- Consider using bottled or filtered water.

Problem: Doesn't brew a full cup.

Solution:

- Turn off and unplug the machine for 30 seconds or more. When you plug the machine back in, be sure to turn the power back on.
- Decalcify the machine (refer to page 8).

Problem: The used capsule will not fall into the capsule container.

Solution:

- That indicates the capsule container is full. Empty the capsule container and then try again, or manually remove the used capsule in the brew head.

Problem: I want to reset the coffee programming.

Solution:

- See pages 6 and 7 for instructions.

Problem: The controls lights are not as bright as they were.

Solution:

- The machine has an energy-saving feature that dims the lights and power by about 50% after 30 minutes of non-use. Restore full power by pressing any button.


Problem: Machine turned off.

Solution:

- The machine's auto-off feature turns the coffeemaker off after 60 minutes of non-use.


Problem: Coffee is too hot.



Solution:

- Press the **HOT**  button and wait until the light is steady.

Problem: Coffee is not hot enough.

Solution:

- Press the **HOTTER SETTING**  button and wait until the light is steady.
- If still not hot enough at hotter setting, use the manual **M** button to dispense a cup of water to pre heat, then make your espresso as indicated on page 6.

Problem: SHORT  / **LONG**  buttons flash quickly; all buttons are non-functional; or some buttons are off.




 
Solution:

- That indicates the coffee boiler detects low or high temperature. Recover the unit by unplugging it and let the unit cool down for approximately 10 minutes.

Problem: CAPPUCCINO  / **LATTE**  buttons flash quickly; all other buttons are off; or all buttons are non-functional.

Solution:

- The steam boiler detects low or high temperature. Recover the unit by unplugging it and let the unit cool down for approximately 10 minutes.

Problem: Short  / **Long**  / **Manual**  / **Steam**  buttons flash.

Solution:

- Refill the water reservoir or make sure it is properly engaged on the base.

Problem: Steam  / **Cappuccino**  / **Latte**  buttons are non-functional or off.

Solution:

- Install or properly engage the milk tank with no capsule in the brew head.

Cuisinart for **illy**



Buona Tazza™ Super Automatic Single Serve Espresso, Caffè Latte & Cappuccino Maker

BEFORE FIRST USE

1. Remove lid from water reservoir. Lift off base with handle and fill with fresh cold water. Replace reservoir and lid. Using tracks as guide, slide back into position and push down firmly.
2. Insert plug into power outlet and press power button once. Controls will flash as unit preheats; lights turn steady when ready.
3. Place a mug on drip tray, then press Manual **M** button and dispense water for 5 to 10 seconds. Press **M** again to stop flow.
4. Place espresso cups on warming plate. Lights will all be on and steady. The machine is now ready to use.

MAKING ESPRESSO

1. Use lever to open brew head.





2. Insert an illy iperEspresso capsule and close brew head.




 
3. Place an espresso cup on the fold-down tray.



4. Press single  or double  espresso button to brew.



TEMPERATURE CONTROLS

1. Hotter  is the default setting. To select Hot, press the  button.



2. In less than 10 seconds  or  will stop flashing to signal temperature is reached.



3. Use buttons to select the type of espresso drink you want to brew.



ENERGY SAVE AND AUTO-OFF

After 30 minutes, machine switches to sleep mode and lights dim. Press any button to start preheat mode. When lights are all steady, machine is ready to operate.

Following the Energy Saver cycle, if the espresso machine is not used for another 30 minutes, it will turn off. Pressing the power button will turn it back on.

Cuisinart for **illy**

Buona Tazza™ Super Automatic Single Serve Espresso, Caffè Latte & Cappuccino Maker

IMPORTANT!

Do not throw away.
Read before operating your new food processor.
Keep for further reference.

PG-30765

ADJUSTING FLAVOR STRENGTH

- 1.** With capsule in brew head, press Manual **M** button to start dispensing. The longer espresso flows, the lighter flavor strength will be.




- 2.** Simply press **M** again to stop.



STEAMING CONTINUED

- 5.** Press  again to stop steaming.



- 6.** To use steam to clean, fill tank with water and press  to turn on and off.



STEAMING

- 1.** Remove milk tank and cover by pulling it away from machine. Remove cover and fill tank with milk to level between MIN and MAX markings.




- 2.** Cover and realign tank with unit; push in to install.



- 3.** Place mug on drip tray and position wand in mug.



- 4.** Press steam  button to start steaming, and use dial on milk tank lid to control air/froth ratio.



MAKING CAPPUCCINO OR LATTE

- 1.** Check to make sure there is a capsule in the brew head and milk in the milk tank.


 


- 2.** Place a mug on drip tray and position wand in mug.



- 3.** Use steam control dial on milk tank lid to select amount of air/froth.



- 4.** Press either the Cappuccino  or Latte  button. Foamed milk will be dispensed followed by espresso.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>