

## QUICK START GUIDE

# Compact Digital Toaster Oven Broiler



## IMPORTANT!

Do not throw away these instructions.  
Read before operating your new  
Compact Digital Toaster Oven Broiler.  
Keep for future reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

# Cuisinart®

## Rack Positions

- 1. Rack Position A**  
For baking pizzas, cake, potatoes, chicken or muffins.



- 2. Rack Position B**  
For baking nachos or quesadillas.



- 3. Rack Position C**  
Use for toast, bagels and open-faced sandwiches.



## Control Panel Helpful Hints

- When the Time, Temperature or Shade button is flashing, you may press it to select that setting.
- Your selection will begin flashing in the display, indicating you may turn the Selector dial to set it.
- The button and display will become solid, indicating your selection is set.
- When Start/Stop is flashing and everything else is solid, begin heating by pressing Start/Stop or select another function by turning the dial.
- Any time the Start/Stop button is flashing, you may press it to start heating the oven.
- When the Start/Stop button is solid the oven is heating. Press Start/Stop to stop heating.

# Function Guide

## Toast, Bagel, Bake, Broil, Sandwich, Leftover and Keep Warm

### Toast:

Oven rack should be in position C.

 


Turn Selector dial to Toast.

Press Shade button, turn dial to set shade, then press Start/Stop button.

### Bagel:

Oven rack should be in position C.



Turn Selector dial to Bagel.

Press Shade button. Turn dial to set shade, then press Start/Stop button.

### Bake:

Oven rack should be in position A.

 


Turn Selector dial to Bake.

Press Temperature button, turn dial to set temperature, then press Time button and turn dial to set time. Press Start/Stop button.

### Broil:

Oven rack should be in position B or C\*.



Turn Selector dial to Broil.

Press Time button and turn dial to set time. Press Start/Stop button.

\*depending on height of food

### Sandwich:

Oven rack should be in position C.

 


Turn Selector dial to Sandwich.

Press Temperature button, turn dial to set temperature, then press Time button and turn dial to set time. Press Start/Stop button.

### Leftover:

Oven rack should be in position C.



Turn Selector dial to Leftover.

Press Temperature button, turn dial to set temperature, then press Time button and turn dial to set time. Press Start/Stop button.

### Keep Warm:

Oven rack should be in position C.



Turn Selector dial to Keep Warm.

Press Temperature button, turn dial to set temperature, then press Time button and turn dial to set time. Press Start/Stop button.

### Helpful Hints Toasting:



If toasting two items, center them in the middle of the rack.



If toasting four items, place two in front and two in back, evenly spaced.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>