Cuisinart

INSTRUCTION AND RECIPE BOOKLET



Compact Toaster Oven Broiler

TOB-80

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.
- 2. UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. Allow to cool before cleaning or handling.
- 3. Do not touch hot surfaces. Use handles.
- 4. To protect against electrical shock, do not place any part of the toaster oven broiler in water or other liquids. See instructions for cleaning.
- This appliance should not be used by or near children or individuals with certain disabilities.
- 6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way or is not operating properly. Return the compact toaster oven broiler to the store or retailer where purchased for examination or repair.
- 7. The use of accessory attachments not recommended by Cuisinart may cause injury.
- 8. Do not use outdoors.
- Do not let cord hang over the edge of the table or countertop, where it could be pulled on inadvertently by children or pets, or touch hot surfaces, which could damage the cord.
- Do not place compact toaster oven broiler on or near a hot gas or electric burner or in a heated oven.
- Do not use this compact toaster oven broiler for anything other than its intended purpose.
- 12. Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the compact toaster oven broiler.
- To avoid burns, use extreme caution when removing tray or disposing of hot grease.
- 14. When not in use, always unplug the unit. Do not store any materials other than manufacturer's recommended accessories in this oven.

- 15. Do not place any of the following materials in the oven: paper, cardboard, plastic and similar products.
- 16. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- 17. Oversize foods, metal foil packages and utensils must not be inserted in the compact toaster oven broiler, as they may involve a risk of fire or electric shock.
- 18. A fire may occur if the compact toaster oven broiler is covered or touching flammable materials such as curtains, draperies or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
- 19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- 20. Do not attempt to dislodge food when the compact toaster oven broiler is plugged into electrical outlet.
- WARNING: To avoid possibility of fire, NEVER leave compact toaster oven broiler unattended during use.
- 22. Use recommended temperature settings for baking and roasting.
- 23. Do not rest cooking utensils or baking dishes on glass door.
- Turn the timer dial to the OFF position to turn off compact toaster oven broiler.
- 25. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

Please read and keep these instructions handy. These instructions will help you to use your Cuisinart® Compact Toaster Oven Broiler to its fullest so that you will achieve consistent, professional results.

SPECIAL CORD SET INSTRUCTIONS

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be tripped over or pulled on by children.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FOR HOUSEHOLD USE ONLY NOT INTENDED FOR COMMERCIAL USE

CONTENTS

Important Safeguards
Special Cord Set Instructions
Features and Benefits
Before First Use
General Guidelines
Operation
Cleaning and Maintenance
Oven Rack Positions
Recipes
Warranty

FEATURES AND BENEFITS

1. Function Dial

Select cooking method - Bake, Broil, Toast, or Warm.

2. Temperature Dial

Select desired temperature for the Bake or Broil functions.

3. ON/Toast Shade Control Dial

Set toast shade from light to dark. Or choose always On feature so that oven will continue to cook until you turn it off manually.

4. Oven On Indicator

Indicator light will remain lit when oven is in use.

5. Slide-out Crumb Tray

The crumb tray slides out from bottom of the compact toaster oven broiler, for easy cleaning.

6. Easy-clean Interior

The sides of the oven are coated, providing an easy-to-clean surface.

7. Oven Rack

Has two positions. The top position has a 50% stop feature so the rack stops halfway out of the oven. It can be removed by lifting the front of the rack and sliding it out.

8. Broiling Rack

A broiling rack fits into the drip tray/baking pan to use when broiling.

9. Baking Pan/Drip Tray

A baking pan/drip tray is included for your convenience. Use with the broiling rack when broiling. Use alone when baking or roasting.


10. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.

11. BPA Free (not shown)

All materials that come in contact with food are BPA free.



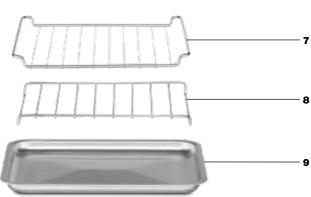

BEFORE FIRST USE

Place your oven on a flat surface.

Before using your oven, move it two to four inches away from the wall or from any objects on the countertop. Do not use on heat-sensitive surface. OBJECTS SHOULD NOT BE STORED ON THE TOP OF THE OVEN. IF THEY ARE, REMOVE ALL OBJECTS BEFORE YOU TURN ON YOUR OVEN. THE EXTERIOR WALLS GET VERY HOT WHEN IN USE. KEEP OUT OF REACH OF CHILDREN.

GENERAL GUIDELINES

Baking: Baking function can be used as you would normally use your kitchen oven for roasting meats including chicken, or baking cakes, cookies and more.

Broiling: Broiling function can be used for beef, chicken, pork, fish and more. It also can be used to top-brown casseroles and gratins. **Caution:** Aluminum foil is not recommended for covering the broiling rack. If covered, the foil prevents the fat from dripping into the drip tray. Grease will accumulate on the foil surface and may catch fire. If you choose to use foil to cover the drip tray/baking pan, be sure foil is tucked neatly around the pan and does not touch the wall or heating elements.

Toasting: Always have the rack in rack position B, as indicated in the diagram on page 6, for even toasting. Always position your item/items in the middle of the rack.

WARNING: Placing the rack in the bottom position or in the top position with the rack upward while toasting may result in a fire. Refer to rack position diagram for proper use.

Turning off the compact toaster oven broiler: Turn the timer dial to OFF. The indicator light will turn off.

OPERATION

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the oven. Plug power cord into the wall outlet.

Broil

NOTE: When broiling, add approximately ½ cup water to the bottom of the drip tray to reduce sizzling and splattering. Place the broiling rack in the drip tray. The oven rack can be turned up or down depending on the thickness of the food being broiled. In most cases the oven rack should be

in the higher position (position C – see rack position diagram on page 6).

To broil, set temperature and function dials to broil. Turn ON/Toast shade dial to the ON position. Put food on the broiling rack and set in the drip tray. Place tray on the oven rack.

To stop broil operation, turn dial to OFF position.

NOTE: Never use glass oven dishes to broil.

Bake

To bake, turn the temperature dial to the desired temperature, turn function dial to bake position and turn ON/Toast shade dial to the ON position. The oven indicator light will turn on. Preheat oven for three to five minutes (time will vary depending upon desired temperature); then begin to bake. You will need to turn off the oven manually by turning the ON/Toast shade dial to the OFF position.

Warm

To keep food warm, turn the temperature dial to Warm; turn the function dial to warm position and set the ON/Toast shade dial to the always ON position. The oven indicator light will turn on. Place food on the wire rack or in the baking pan. When warming, we recommend placing oven rack in the B position, (see rack position diagram on page 6). You will need to turn off the oven manually by turning the ON/Toast shade dial to the OFF position.

Toast

To toast, make sure the oven rack is in position B (as indicated in the diagram on page 6.) If toasting two items, center them in the middle of the rack. Four items should be evenly spaced – two in front, two in back.

Shade Selection

Turn temperature dial to Toast/Broil. Set function dial to Toast. Turn the ON/ Toast shade dial to desired shade setting from light to dark within the marked settings on this dial. This will turn on the compact toaster oven broiler and the oven indicator light will turn on.

Stop Toasting

When the toasting cycle is finished, the oven will ring once and turn off. If you wish to stop the toasting cycle before it is finished, simply turn the ON/Toast shade dial to Off. The compact toaster oven broiler will cancel your toast cycle.

Important Notes on Toasting

The oven rack must be in position B as indicated in the diagram on page 6. Do not position rack in the bottom position or in the top position with rack facing upward.

CLEANING AND MAINTENANCE

Always allow the oven to cool completely before cleaning.

- 1. Always unplug the oven from the electrical outlet.
- 2. Do not use abrasive cleansers, as they will damage the finish. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply the cleansing agent to a cloth, not to the toaster oven, before cleaning.
- To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Never use harsh abrasives or corrosive products. These could damage the oven surface. Never use Brillo pads, etc. on interior of oven.
- 4. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Crumb tray is dishwasher safe. To remove baked-on grease, soak the tray in hot sudsy water or use nonabrasive cleaners. Never operate the oven without the crumb tray in place.
- 5. Oven rack, broiling rack and drip tray are dishwasher safe. If heavily soiled, soak in hot sudsy water or use a nylon scouring pad or nylon brush. Dry thoroughly after washing.
- Never wrap the cord around the outside of the oven. Use the cord storage cleats on the back of the oven.
- Any other servicing should be performed by an authorized service representative.


IMPORTANT

After cooking greasy foods and after your oven has cooled, always clean top interior of oven. If this is done on a regular basis, your oven will perform like new. Removing the grease will help to keep toasting consistent, cycle after cycle.

All of our recipes have been tested in our kitchen and specially developed to work in the Cuisinart® Compact Toaster Oven Broiler. These mouth-watering recipes are just a sampling of what this appliance can do.

OVEN RACK POSITION DIAGRAMS

Each recipe gives you step-by-step directions and will even tell you where the oven rack should be positioned for best results. Please refer to the diagram for oven rack positions. Each position is described with a letter that is referred to in the recipe.

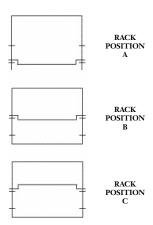

WARNING: Placing the rack in the bottom position or in the top position with the rack turned upward while toasting may result in a fire. Refer to rack position diagram for proper use.

RECIPES CONTENTS

BREAKFAST

French Toast Strata
APPETIZERS
Quick Cheese Nachos 8 Potato Skins 9 Roasted Vegetable Quesadillas 9 Five-Spice Chicken Wings 10 Buffalo-Style Chicken Wings 10
SIDE DISHES
Buttery Dinner Rolls
ENTRÉES
Sole with Lemon and Capers.13Baked Pork Chops with Hot Cherry Peppers14Chicken Parmesan14
SANDWICHES
California Sandwich15Hummus and Vegetable Sandwich15Open-Faced Reuben16Pizza Bagels16
DESSERTS
Bittersweet Espresso Brownies

All of our recipes have been tested in our kitchen and specially developed to work in the Cuisinart® Compact Toaster Oven Broiler. These mouth-watering recipes are just a sampling of what the Cuisinart® Compact Toaster Oven Broiler can do.

French Toast Strata

Give your family a new twist on French toast this weekend. To save time, prepare the night before and bake in the morning.

Makes 8 servings

nonstick cooking spray

- 4 large eggs
 - cups whole milk
- cup heavy cream
- 1 tablespoon pure vanilla extract
- ½ cup maple syrup
- 2 teaspoons ground cinnamon
- 1 teaspoon ground nutmeg
- 1/4 teaspoon kosher salt
- loaf (1 pound) challah bread, cut into ½-inch x 9-inch strips
- 2 tablespoons packed light brown sugar, divided
- 2 tablespoons unsalted butter, cut into ½-inch pieces
- 1. Lightly coat a 9-inch square pan with nonstick cooking spray.
- Put the eggs, milk, cream, vanilla, syrup, spices and salt into a medium mixing bowl. Whisk until completely combined.
- 3. Tightly fit half of the challah bread strips into the bottom of the prepared pan. Pour half of the egg mixture on top and evenly dot with half of the brown sugar. Repeat with the remaining bread, laying the strips in the opposite direction of the first layer. Pour the remaining egg mixture on top, dot with the remaining brown sugar. Cover and chill in the refrigerator for at least 2 hours, or overnight.
- 4. Remove the strata from the refrigerator and bring to room temperature. Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with the rack in position A for 5 minutes. Dot the top of the strata with the butter and loosely cover with aluminum foil. Bake for about 15 minutes; remove foil and bake for an additional 10 minutes, or until the internal temperature of the strata reaches 160°F.
- 5. Remove and serve immediately.

Nutritional information per serving:

Calories 420 (47% from fat) • carb. 44g • pro. 11g • fat 22g • sat. fat 12g • chol. 190mg • sod. 430mg • calc. 177mg • fiber 2g

Buttermilk Crumb Cake

Buttery, sweet and tender – pair with a cup of coffee for a delicious start to the day.

Makes one 9-inch cake (10 to 12 servings)

nonstick cooking spray

Crumb Topping:

- ½ cup unbleached, all-purpose flour
- 1/4 cup packed light brown sugar
- 1/4 cup granulated sugar
- 1 teaspoon ground cinnamon pinch kosher salt
- ½ teaspoon pure vanilla extract
- 4 tablespoons (1/2 stick) unsalted butter, cold and cubed

Cake:

- 11/3 cups unbleached, all-purpose flour
- 34 teaspoon baking soda
- 1/4 teaspoon kosher salt
- 1/3 cup unsalted butter, cut into 5 pieces
- ½ cup + 3 tablespoons granulated sugar
- 1 large egg, room temperature
- ½ teaspoon pure vanilla extract
- 1/3 cup buttermilk*
- Preheat the Compact Toaster Oven Broiler on Bake to 350°F with the rack in position A for 5 minutes. Lightly coat a 9-inch square or round baking pan with non-stick cooking spray. Reserve.
- 2. Combine the crumb topping ingredients in the work bowl of a food processor fitted with the metal chopping blade. Pulse 3 to 4 times, until the mixture is just combined. Reserve. (Alternatively, this topping can be made by hand. Whisk the dry ingredients together, and then add the vanilla and cubed butter. Mix together with hands, or a pastry blender, until large crumbs form.)
- 3. In a small bowl, mix together the flour, baking soda, and salt. Reserve.

- 4. Put the butter and sugar in a medium bowl and mix with a hand mixer until light and fluffy, about 1 minute. Add the egg and vanilla and beat until fully combined. Add the reserved dry ingredients, ½ at a time, and the buttermilk, ½ at time, alternating between the two, starting with the buttermilk and ending with the dry ingredients. Pour the batter into the prepared pan. Cover evenly with the reserved crumb topping.
- Bake in preheated oven for 20 minutes, or until a cake tester inserted into the cake comes out clean.
- * If you don't have buttermilk, you can add 1 teaspoons lemon juice or white vinegar to enough milk to make ½ cup. Let stand 5 minutes; proceed with recipe.

Nutritional information per serving (based on 12 servings):

Calories 212 (38% from fat) • carb. 30g • pro. 3g • fat 9g • sat. fat 6g • chol. 39mg • sod. 129mg • calc. 13mg • fiber 0g

Quick Cheese Nachos

The great thing about this recipe is that you can make it as extravagant or simple as you want – add some guacamole or salsa, gourmet cheeses, or keep it as is for a casual appetizer.

Either way it is sure to keep the family satisfied.

Makes 4 servings

- tortilla chips (this is an estimate you need enough to cover the bottom of the baking tray, but can have more or less depending on how many mouths you need to feed)
- 2/3 cup refried beans (about 1/2 of a 15.5-ounce can)
- 1 small to medium tomato, chopped
- 1 jalapeño, halved, seeded and thinly sliced
- 1 to 2 scallions, thinly sliced (white and green parts)
- 1/2 cup sliced black olives (these can be purchased pre-sliced in a 2.25-ounce can. Be sure to drain them first.)
- 1 to 11/4 cups shredded Cheddar (about 4 to 5 ounces)
- 1. Set the rack of the Compact Toaster Oven Broiler to position B.

- Line the baking pan with aluminum foil. Evenly distribute the chips on top of the prepared baking pan. Distribute the remaining ingredients over the chips, as evenly as possible, in the order listed.
- Broil for about 5 to 6 minutes, or until the cheese is fully melted. Serve immediately with salsa, sour cream, guacamole and lime wedges.

Nutritional information per serving:

Calories 262 (52% from fat) • carb. 23g • pro. 9g • fat 16g • sat. fat 5g • chol. 22mg • sod. 523mg • calc. 207mg • fiber 3g

Potato Skins

Don't let the potato flesh go to waste. It can be made into a delicious breakfast side dish the next morning. Just cook with some oil, salt and pepper in a hot skillet, and then top with chopped bacon or sautéed vegetables. Perfect with any type of eggs.

Makes 4 servings

- 4 russet potatoes, cleaned well
- 2 tablespoons unsalted melted butter, kept warm sea or kosher salt, to taste freshly ground black pepper, to taste
- 1 cup shredded Cheddar
- 4 slices bacon, cooked and crumbled sour cream, to taste
- 2 tablespoons chopped chives
- Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with the rack in position A for 5 minutes.
- 2. Prick the potatoes with the tines of a fork on all sides. Place the potatoes directly on the rack and bake until potatoes are fork-tender, about 60 minutes.
- 3. Remove potatoes and let rest until cool enough to handle. Increase temperature to 425°F.
- 4. Halve potatoes lengthwise and scoop out flesh, leaving a 1/4-inch shell.
- 5. Brush both sides of the potato halves with the melted butter and season with salt and pepper. Arrange the halves on the foil-lined baking pan.

- 6. Evenly distribute the cheese on top of each half, and then top with the bacon.
- 7. Bake skins for 5 minutes or until cheese is melted.
- 8. Remove and with a sharp knife halve each skin to make a total of 16 wedges. Top with the sour cream and chopped chives. Serve immediately.

Nutritional information per serving:

Calories 491 (34% from fat) • carb. 65g • pro. 17g • fat 18g • sat. fat 11g • chol. 55mg • sod. 300mg • calc. 284mg • fiber 8g

Roasted Vegetable Quesadilla

For a less traditional twist swap out the Monterey Jack for goat cheese.

Makes 4 servings

- ½ small zucchini, cut into ½-inch pieces
- 1/2 bell pepper (red, yellow or orange is preferable), cut into ½-inch pieces
- ½ jalapeño, seeded and finely chopped
- ½ small onion, sliced
- 1 garlic clove, smashed
- teaspoon olive oil, plus 1/2 tablespoon for brushing
- 1/4 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- 1 tablespoon chopped cilantro
- 1/2 teaspoon fresh lime juice
- 2 10-inch flour tortillas

ounces Monterey Jack, shredded

- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 450°F with rack in position A for 5 minutes. Line baking pan with aluminum foil.
- Toss the zucchini, bell and jalapeño peppers, onion and garlic with 1 teaspoon
 of the olive oil, salt and pepper in a medium mixing bowl. Put vegetables on the
 prepared baking pan. Bake until vegetables are softened and browned, about 10
 to 15 minutes. Return vegetables to mixing bowl and toss with the cilantro and
 lime juice. Reduce oven temperature to 350°F.

(continues)

- Assemble quesadilla: Put one tortilla on the foil-lined baking pan. Evenly distribute the vegetables on top and then add the cheese. Top with the other tortilla and brush it with the remaining oil.
- 4. Bake quesadilla at 350°F for about 8 minutes, until top is golden and cheese inside is melted.
- 5. Cut quesadilla in half and serve with salsa, guacamole, and/or sour cream.

Nutritional information per serving:

Calories 194 (45% from fat) • carb. 20g • pro. 6g • fat 10g • sat. fat 3g • chol. 13mg • sod. 457mg • calc. 153mg • fiber 2g

Five-Spice Chicken Wings

Seasoned with the classic Chinese spice blend, these wings are wonderfully aromatic and flavorful too.

Makes about 12 wings, 2 to 4 servings

- 1 pound chicken wings, tips removed, drumettes and flats separated
- 11/2 tablespoons vegetable oil
- 1 teaspoon kosher salt
- 21/2 tablespoons five-spice powder, store-bought or homemade
- 2 tablespoons sliced scallions, for serving
- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 425°F with rack in position A for 5 minutes. Line the baking tray with aluminum foil.
- 2. In a bowl, toss the wings with the vegetable oil. Evenly sprinkle wings with the salt and spice powder, rubbing the spices into the chicken wings by hand to thoroughly and evenly coat. Cover and marinate in refrigerator for up to 3 hours.
- 3. Arrange the wings in a single layer on the prepared pan and bake for 25 minutes.
- 4. Garnish with scallions and serve immediately.

Nutritional information per wing:

Calories 53 (40% from fat) • carb. 1g • pro. 7g • fat 2g • sat. fat 1g • chol. 17mg • sod. 25mg • calc. 4mg • fiber 0g

Buffalo-Style Chicken Wings

This bar-menu staple still gets crisp despite being baked instead of the traditional deep-fry. They have a kick, but if you like them really spicy feel free to increase the amount of cayenne.

Makes about 12 wings, 2 to 4 servings

- pound chicken wings, tips removed, drumettes and flats separated
- 1 teaspoon kosher salt, divided
- ½ teaspoon freshly ground black pepper, divided
- 1 tablespoon vegetable oil
- 2 tablespoons unsalted butter
- 1/4 teaspoon cayenne pepper
- 1/4 cup hot sauce (such as Frank's Red Hot)
- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 425°F with rack in position A. Line the baking tray with aluminum foil.
- 2. In a bowl, toss the wings with ¾ teaspoon of the salt, ¼ teaspoon of the pepper, and the vegetable oil. Arrange the wings in a single layer on the prepared pan and bake for 25 minutes.
- 3. When finished baking, remove the pan and carefully adjust the rack to position C. Switch to Broil and return wings for another 2 to 3 minutes to crisp the skin.
- 4. While the wings are broiling, melt the butter in a small saucepan over low heat. Whisk in the remaining salt and pepper, cayenne and hot sauce. Keep warm.
- Put wings in a medium-size bowl, cover with sauce and toss well to coat. Serve immediately.

Nutritional information per wing:

Calories 65 (57% from fat) • carb. 0g • pro. 6g • fat 4g • sat. fat 2g • chol. 22mg • sod. 295mg • calc. 4mg • fiber 0g

Buttery Dinner Rolls

The perfect complement to any dinner. After your first bite, you will never go back to store-bought rolls again.

Makes 12 rolls

- ½ cup whole milk
- 3 tablespoons water
- 3 tablespoons granulated sugar
- 1¾ teaspoons active dry yeast
- 1 large egg, lightly beaten
- 3 cups bread flour, plus more as needed
- 6 tablespoons unsalted butter, cut into 6 pieces
- 34 teaspoon kosher salt
- Put the milk and water in a small saucepan set over medium heat. *Bring to 105°-110°F. Remove from heat and add the sugar and yeast. Stir to dissolve and let sit until foamy, about 5 minutes. Add beaten egg; stir to combine. Transfer to a large measuring cup to make it easier to add to the food processor.
- 2. Insert the dough blade into the food processor. Add the flour, butter and salt and process on the dough speed until combined, about 15 to 20 seconds. With the machine running on the dough speed, slowly pour the yeast mixture through the feed tube, adding only as fast as the flour absorbs it (you may not need all of the liquid mixture). After the dough forms a ball, process for 45 seconds to knead. Dough should be smooth and elastic. If dough is too wet, sprinkle a tablespoon of additional bread flour over the dough and pulse to combine, adding more flour, 1 teaspoon at a time, until a tender dough is achieved.
- Put the dough in a lightly floured plastic food storage bag with the air squeezed out, or in a bowl covered with plastic wrap. Let rise in a draft-free warm place until it has doubled in size, about 45 to 60 minutes.
- 4. Lightly butter an 8 or 9-inch round baking pan. Divide the dough into 12 equal pieces, about 2 ounces each. Roll into smooth rounds and arrange in the prepared pan. Cover with plastic wrap and let rise until about doubled in size, about 30 to 40 minutes.

- 5. Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with rack in position A for 5 minutes. **Bake the rolls until golden brown, about 20 minutes. Remove from pan and let cool on a rack for about 10 minutes before serving.
 - *You can also warm the milk and butter in the microwave. Simply put in a microwave-safe container, such as a glass measuring cup, warm slightly (about 10 to 15 seconds on High, depending on your microwave. Be sure to check temperature). Stir in sugar and yeast to dissolve and let sit until foamy. Continue with directions above.
 - **For a polished finish, melt 1 tablespoon of butter with 1 tablespoon of milk and brush the tops of the rolls just before baking.

Nutritional information per roll:

Calories 144 (28% from fat) • carb. 7g • pro. 4g • fat 2g • sat. fat 1g • chol. 22mg • sod. 157mg • calc. 17mg • fiber 1g

Twice Baked Potatoes

Here we give you the groundwork for the classic twice baked potato, but don't stop here. They can be topped with just about anything from shredded Cheddar and chopped broccoli to salsa and sliced avocado.

Makes 2 servings

- 2 russet potatoes (10 to 12 ounces each)
- 1 teaspoon extra virgin olive oil, divided
- 1/3 cup low-fat milk
- 1 tablespoons unsalted butter
- 1/4 cup sour cream
- 1/4 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- 2 tablespoons chopped fresh chives
- Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position A for 5 minutes.
- Rub each potato with ½ teaspoon of olive oil, and then evenly prick about 6 to 8 times with a fork. Place potatoes directly on the rack and bake for about 40 to 45 minutes. Remove and let cool slightly. Reduce oven temperature to 350°F.

- When potatoes are cool enough to handle, slice off the top ¼ of each potato and scoop out the cooked flesh, leaving a ¼-inch thick potato shell. Reserve cooked potato and skin shells.*
- 4. Put cooked potato in a medium bowl. Add milk and 1 tablespoon of the butter. Using a potato masher or hand mixer, mash/beat until smooth. Add sour cream, salt, pepper and chives. Mash/beat to combine completely. Generously fill the potato shells with potato mixture. (Potatoes may be prepared a day ahead to this point cover and refrigerate. Bring to room temperature before baking.)
- 5. Line the baking tray with foil and arrange potatoes on it. Bake for 30 to 35 minutes, until potatoes are hot and golden on the tops.

*The top ¼ of the potatoes can either be discarded, or made into potato skins such as those on page 9.

Nutritional information per serving (1 potato):

Calories 422 (42% from fat) • carb. 53g • pro. 9g • fat 19g • sat. fat 11g • chol. 54mg • sod. 347mg • calc. 116mg • fiber 6g

Middle-Eastern Stuffed Acorn Squash

Not only are the flavors rich and delicious, but the different textures of the couscous filling make this a standout at any dinner table. They make for a beautiful presentation as well.

Makes 2 servings

- 1 small acorn squash (about 1¾ pounds), halved widthwise and seeded (cutting along the ridges of the squash ensures perfectly even halves)
- 11/2 tablespoons olive oil, divided
- 1/4 teaspoon kosher salt, divided
- 2 pinches freshly ground black pepper, divided
- 1 small shallot, finely chopped
- 1/2 cup Israeli (or pearl) couscous
- 1/4 teaspoon ground cumin
- 1/4 teaspoon ground cinnamon
- 1 cup chicken broth plus 2 tablespoons, low sodium
- ½ cup chopped dried apricots (about 4 to 5 apricots)
- 2 tablespoons toasted pistachios

- Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with the rack in position A for 5 minutes.
- Line the baking tray with foil and put the squash, cut side up, on top. Brush the
 inside of each squash with ½ tablespoon of the olive oil and sprinkle with a
 pinch each of the salt and pepper. Bake until the flesh of the squash is just
 fork-tender, about 25 to 30 minutes. Remove and reserve.
- 3. While squash is baking, make the couscous filling: Put remaining olive oil in a sauté pan set over medium/medium-low heat. Once hot, add the shallot with a pinch each of the salt and pepper. Sauté until softened. Add the couscous, cumin, cinnamon and remaining salt and pepper. Sauté for about 1 minute to toast couscous. After 1 minute, add the broth. Bring to a strong simmer and cook partially covered for a few minutes, stirring occasionally. Cook until liquid is almost completely absorbed by the couscous. Remove pan from heat, add apricots and pistachios and mix to combine. Cover and set aside until squash is baked.
- When squash is tender, evenly divide the couscous mixture between the two halves. Return to the oven and bake until just golden on top, about 10 to 12 minutes.
- 5. Serve immediately.

Nutritional information per serving:

Calories 423 (24% from fat) • carb. 74g • pro. 10g • fat 12g • sat. fat 2g • chol. 0mg • sod. 721mg • calc.109mg • fiber 8g

Old-Fashioned Macaroni and Cheese

Extra-creamy, this will become a family favorite.

Makes 8 servings

nonstick cooking spray

- 1/2 pound elbow macaroni
- 1 teaspoon olive oil
- 1/4 cup (1/2 stick) unsalted butter
- 3 tablespoons unbleached, all-purpose flour
- 3 cups whole milk

- 2 cups (about 6 ounces) shredded cheese (we use a variety of Cheddar, Gruyère and Monterey Jack for ultimate creaminess and flavor)
- 34 teaspoon kosher salt dash hot sauce
- 1½ cups prepared white-bread croutons
- 1. Lightly coat a 9-inch square or round baking pan with cooking spray; reserve.
- Cook macaroni according to the package instructions. Drain pasta and rinse under cold water. Toss with a small amount of oil to prevent sticking; reserve.
- 3. Put a medium saucepan over medium heat and add the butter. Once melted, stir in the flour until smooth. Continue to cook, constantly stirring, for about 2 minutes to cook the flour. While whisking, slowly add the milk to the butter/flour mixture. Raise the heat slightly to bring the mixture to a boil, while stirring. Once the mixture reaches a boil, reduce the heat to maintain a simmer, stirring so a film does not form on the bottom of the pot. Cook until the mixture becomes very thick, about 30 to 45 minutes. Once thickened, stir in the shredded cheeses until sauce is smooth. Add the salt, hot sauce and then the macaroni, stirring to combine. Finally, stir in 1 cup of the croutons, and remove from heat.
- Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with the rack in position A for 5 minutes.
- 5. Pour the macaroni and cheese into the prepared pan. Scatter the remaining ½ cup of croutons on the top and loosely cover with aluminum foil. Bake for 30 minutes. Carefully remove the foil and switch the oven to Broil and cook for an additional 5 minutes to brown the top.

Nutritional information per serving:

Calories 319 (44% from fat) • carb. 32g • pro. 12g • fat 15g • sat. fat 10g • chol. 43mg • sod. 429mg • calc. 260mg • fiber 1g

Sole with Lemon and Capers

A guick and impressive light meal – all made in your toaster oven.

Makes 2 servings

2

- 1/2 pound fillet of lemon sole (or other similar white fish)
- 1 tablespoon extra virgin olive oil juice of ½ of a medium lemon (about 1 to 1½ tablespoons)
- 1/2 teaspoon grated lemon zest
- 1/4 teaspoon kosher salt pinch freshly ground black pepper
 - garlic cloves, smashed
- 1/2 cup halved grape tomatoes
- 2 tablespoons drained capers chopped parsley, for garnish
- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position C for 5 minutes. Line baking tray with aluminum foil.
- Rinse and pat the fish dry. Drizzle with the olive oil, lemon juice, zest, salt and pepper.
- 3. Place the seasoned fish on the baking pan, and then scatter the garlic, tomatoes and capers around it.
- 4. Bake until the fish is just cooked through, about 8 to 10 minutes, depending on the thickness of the fish. (Fish will be opaque and flake easily with fork.)
- 5. Remove, garnish with parsley and serve immediately.

Nutritional information per serving:

Calories 156 (53% from fat) • carb. 4g • pro. 15g • fat 9g • sat. fat 2g • chol. 31mg • sod. 735mg • calc. 38mg • fiber 1g

Baked Pork Chops with Hot Cherry Peppers

If spicy is not your thing, buy sweet cherry peppers instead of the hot variety. You will still have that great vinegar tang, without the heat.

Makes 2 servings

- 2 pork chops (each 1½-inches thick)
- 1 tablespoon vegetable oil
- 1 teaspoon kosher salt
- 1 teaspoon freshly ground black pepper
- 3 ounces hot cherry peppers (about 2 to 4 peppers), halved
- 2 to 3 garlic cloves, smashed
- 1 small onion, cut into ½-inch pieces
- Preheat the Compact Toaster Oven Broiler set to Bake at 375°F with the rack in position B for 5 minutes. Line the baking tray with foil.
- Pat chops dry with paper towels. Rub chops evenly with the oil, salt and pepper. Lay the chops on the lined tray; surround with the cherry peppers, garlic and onion.
- 3. Bake for 20 to 25 minutes or until internal temperature is 145°F.

Nutritional information per serving:

Calories 292 (42% from fat) • carb. 8g • pro. 35g • fat 14g • sat. fat 3g • chol. 76mg • sod. 1146mg • calc. 35mg • fiber 3g

Chicken Parmesan

Panko-style breadcrumbs add texture and make a crisp crust, but feel free to use regular seasoned breadcrumbs if that's what you have on hand.

Makes 2 to 4 servings

- 8-ounce chicken breasts, pounded to ½-inch thickness
- 1/4 to 1/2 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- 1 large egg
- 1 cup Italian-seasoned panko-style breadcrumbs
- 2 tablespoons grated Parmesan
- 1/4 cup prepared tomato or marinara sauce
- 3 ounces fresh mozzarella, sliced
- 1 tablespoon thinly sliced (chiffonade) basil (optional)
- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 425°F with the rack in position A for 5 minutes. Line the baking tray with aluminum foil.
- 2. Season the chicken breasts with the salt and pepper.
- 3. In shallow dish, lightly beat the egg. In another shallow dish, combine the breadcrumbs and Parmesan.
- Dredge the chicken breasts in the egg, then in the breadcrumbs. Press the chicken into the breadcrumbs to fully coat on both sides and shake off any excess.
- Place the chicken on the prepared pan and bake for 25 minutes. Carefully remove from the oven, flip chicken and top each with even amounts of the sauce, then mozzarella. Bake for 5 minutes, until the cheese is melted.
- 6. Garnish with basil, if desired, and serve.

Nutritional information per serving (based on 4 servings):

Calories 400 (44% from fat) • carb. 21g • pro. 35g • fat 19g • sat. fat 7g • chol. 140mg • sod. 1148mg • calc. 235mg • fiber 1g

California Sandwich

Using the freshest and highest quality ingredients that you can find makes this sandwich shine.

Makes 2 sandwiches

- 2 slices whole-grain bread
- 2 teaspoons Dijon mustard
- 4 ounces sliced turkey or chicken breast
- ½ avocado, pitted and sliced
- 4 to 6 slices plum tomato
- 4 slices cooked bacon
- 2 ounces Monterey Jack
- Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position B for 5 minutes. Line the baking tray with foil, if desired, and fit with the broiling rack.
- 2. While oven is heating, lay both pieces of bread on the prepared tray.
- 3. Spread the Dijon evenly on the tops of the slices, and then evenly distribute the remaining ingredients, in the order listed.
- Put the sandwiches into the oven and cook on Bake for 5 minutes. Switch to Broil and cook for an additional 2 minutes, or until the cheese is fully melted.
- 5. Serve immediately.

Nutritional information per sandwich:

Calories 356 (47% from fat) • carb. 20g • pro. 27g • fat 19g • sat. fat 7g • chol. 65mg • sod. 1091mg • calc. 308mg • fiber 7g

Hummus and Vegetable Sandwich

This sandwich has it all and is packed with flavor – from the smooth and nutty hummus to the tangy radishes – and healthy to boot!

Makes 2 sandwiches

- 2 slices whole-grain bread
- 3 to 4 tablespoons hummus, homemade or purchased
- 2 small radishes, thinly sliced
- 4 slices plum tomato
- 1/4 cup sprouts (alfalfa, broccoli, whatever is your favorite and available)
- tablespoons shredded carrots

1 to 1½ ounces sliced feta

- Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position B for 5 minutes. Line the baking tray with foil, if desired, and fit with the broiling rack.
- 2. While oven is heating, lay both pieces of bread on the assembled tray.
- 3. Spread the hummus evenly on the tops of both slices, and then evenly distribute the remaining ingredients, in the order listed.
- 4. Put the sandwiches into the oven and cook on Bake for 5 minutes. Switch to Broil and cook for an additional 2 minutes, or until the cheese is lightly browned.
- 5. Serve immediately.

Nutritional information per sandwich:

Calories 187 (31% from fat) • carb. 26g • pro. 9g • fat 7g • sat. fat 3g • chol. 13mg • sod. 465mg • calc. 192mg • fiber 5g

Open-Faced Reuben

A homemade version of the deli favorite. We also provide you with a very simple recipe for a quick Russian dressing.

Makes 2 sandwiches

- 2 slices rye bread
- 2 tablespoons Russian dressing*
- ½ cup sauerkraut, drained
- 4 ounces very thinly sliced corned beef (or you may substitute pastrami if you prefer)
- 3 ounces sliced Swiss cheese (about 4 slices)
- Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position B for 5 minutes. Line the baking tray with foil, if desired, and fit oven with the broiling rack.
- 2. While oven is heating, lay both pieces of bread on the assembled tray.
- 3. Spread the Russian dressing evenly on the tops of both slices, and then evenly distribute the remaining ingredients, in the order listed.
- Put the sandwiches into the oven and cook on Bake for 5 minutes. Switch to Broil and cook for an additional 2 minutes, or until the cheese is fully melted.
- 5. Serve immediately.
 - *For a simple Russian dressing, put the following in a small bowl and stir until fully combined:
- 1/3 cup mayonnaise
- 21/2 tablespoons ketchup
- 2 tablespoons relish
 - salt and pepper to taste

Nutritional information per sandwich:

Calories 456 (56% from fat) • carb. 24g • pro. 25g • fat 28g • sat. fat 12g • chol. 94mg • sod. 1562mg • calc. 410mg • fiber 4g

Pizza Bagels

Whether it is an-after school snack or weekend lunch, there are few kids who will not be excited about having pizza on a bagel.

Makes 2 servings

- 1 bagel, halved
- 1/4 cup pizza or marinara sauce
- 2 teaspoons grated Parmesan
- 2 ounces mozzarella, sliced pinch kosher salt
- Preheat the Compact Toaster Oven Broiler set to Bake at 400°F with the rack in position C for 5 minutes. Line the baking tray with foil, if desired, and fit with the broiling rack.
- 2. While oven is heating, lay both bagel halves, cut side up, on the assembled tray.
- Evenly distribute the sauce and spread on top of each half, then top with the Parmesan and the mozzarella.
- Put the assembled bagels into the oven and cook on Bake for 5 minutes. Switch to Broil and cook for an additional minute, or until the cheese is fully melted and lightly browned.
- 5. Serve immediately.

Nutritional information per serving:

Calories 260 (30% from fat) • carb. 32g • pro. 13g • fat 9g • sat. fat 5g • chol. 23mg • sod. 563mg • calc. 230mg • fiber 2g

Bittersweet Espresso Brownies

A sugary outside and a fudge-like interior make these the richest brownies.

Makes 16 brownies

nonstick cooking spray

- 3/4 cup unsalted butter, cubed
- 4 ounces unsweetened chocolate, chopped
- 4 ounces bittersweet chocolate, chopped
- 2 tablespoons cocoa powder
- 2 teaspoons espresso powder
- 3 large eggs
- 1½ cups granulated sugar
- 2 teaspoons pure vanilla extract
- ½ cup unbleached, all-purpose flour
- 3/4 teaspoon kosher salt
- 1. Preheat the Compact Toaster Oven Broiler set to Bake at 350°F with the rack in position A for 5 minutes. Lightly coat a 9-inch square baking pan with nonstick cooking spray; line with parchment paper. Reserve.
- Put the butter and chocolates into a heatproof bowl and place over a pot of simmering water. Once they are almost completely melted, stir in cocoa powder and espresso powder. Set aside to cool to room temperature.
- Using a hand or stand mixer, beat eggs to break up and then gradually add the sugar. Mix until light and thickened, about 1 to 2 minutes. Add vanilla; beat until well combined.
- Stir the flour and salt into the cooled chocolate mixture; mix until just incorporated. Fold the chocolate mixture into the egg mixture and stir until the mixture is no longer streaky.
- Pour into prepared pan. Bake for about 22 to 25 minutes, or until edges are just dry. These are the best after chilling overnight.

Nutritional information per brownie:

Calories 249 (54% from fat) • carb. 28g • pro. 3g • fat 16g • sat. fat 9g • chol. 57mg • sod. 87mg • calc. 12mg • fiber 2g

Fall Fruit Cobbler

Add a dollop of freshly whipped cream to top off this delicious autumn treat.

Makes 8 to 10 servings

Filling:

- nonstick cooking spray
- 3/4 pound pears, peeled, cored and cut into 1-inch pieces
- 34 pound apples, peeled, cored and cut into 1-inch pieces
- 1/2 to 3/4 pound Italian plums, pitted and cut into eighths
- ½ cup granulated sugar
- 1/4 cup unbleached, all-purpose flour
- 34 teaspoon ground cinnamon
- teaspoon grated orange zest pinch kosher salt

Topping:

- 1 cup plus 1 tablespoon unbleached, all-purpose flour
- 1/4 cup granulated sugar
- 3/4 teaspoon baking powder
- 1/4 teaspoon baking soda
- 1/4 teaspoon kosher salt
- 1/4 teaspoon ground cinnamon
- 1/4 teaspoon grated orange zest
- 4 tablespoons (1/2 stick) unsalted butter, cold, cut into small cubes
- cup buttermilk*
- ½ teaspoon pure vanilla extract
- * If you don't have buttermilk, you can add 2 teaspoons lemon juice or white vinegar to enough milk to make $\frac{2}{3}$ cup. Let stand 5 minutes; proceed with recipe.
- Preheat the Compact Toaster Oven Broiler set to Bake at 325°F with the rack in position A for 5 minutes. Lightly and evenly coat a 9-inch round or square pan with cooking spray.

- Prepare the filling: Put the cut fruit in a large mixing bowl with the sugar, flour, cinnamon, zest and salt. Mix ingredients very well. Pour into prepared pan. Bake for 20 minutes (you want the fruit to be able to be pierced easily with the tip of a paring knife, but not mushy).
- 3. While the filling is baking, prepare the topping: Put the flour, sugar, baking powder, baking soda, salt, cinnamon and orange zest in the bowl of a food processor fitted with the metal chopping blade. Process dry ingredients for 10 seconds. Add the cubed butter to the dry ingredients and pulse until mixture resembles coarse crumbs. Combine the buttermilk and vanilla in a liquid measuring cup. While pulsing, slowly add the buttermilk mixture to the dry ingredients through the feed tube. Pulse until just combined. (This process can also be done by hand. Put all dry ingredients into a large mixing bowl, or on a parchment-lined work surface. Add the butter and either using your fingers or a pastry blender, combine until the mixture resembles coarse crumbs. Make a well in the dry/butter mixture and add the buttermilk/vanilla. Mix with hands or the pastry blender until just combined.)
- Remove fruit from oven. Scoop the cobbler batter evenly spaced over the fruit –
 do leave some space in between each scoop. The batter will expand when
 baked so it is not necessary to cover absolutely everything.
- 5. Bake for about 25 to 30 minutes, until top is a deep golden and baked through.

Nutritional information per serving (based on 10 servings):

Calories 211 (20% from fat) • carb. 40g • pro. 3g • fat 5g • sat. fat 3g • chol. 13mg • sod. 95mg • calc. 37mg • fiber 3g

WARRANTY

LIMITED THREE-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Compact Toaster Oven Broiler that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® Compact Toaster Oven Broiler will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, **www.cuisinart.com** for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warrantv Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund of nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If your Cuisinart® Compact Toaster Oven Broiler should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 7811 North Glen Harbor Blvd, Glendale, AZ 85307. To facilitate the speed and accuracy of your return, enclose \$10.00 for shipping and handling. (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions.) Please be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. **NOTE:** For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® Compact Toaster Oven Broiler has been manufactured to the strictest specifications and has been designed for use only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.













Griddlers

Blenders

Rice Cookers

Food Processors

Slow Cookers

Discover the complete line of Cuisinart[®] brand premier kitchen appliances including food processors, mini food processors, hand mixers, blenders, toasters, coffeemakers, cookware, ice cream makers and toaster ovens at

www.cuisinart.com

©2012 Cuisinart 150 Milford Road East Windsor, NJ 08520 Printed in China 12CE125892

IB-11247

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com