


MODEL NO. iP1002

PORTABLE DOCKING STATION FOR IPOD

OWNER'S MANUAL

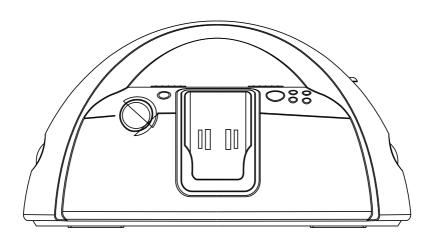

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT.


To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

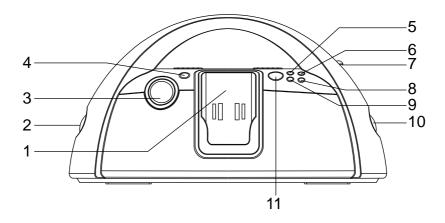

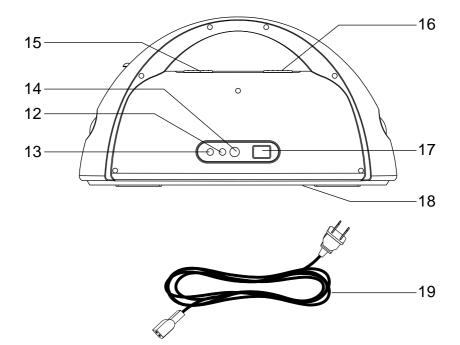

3

Features Defined

1 iPod Docking Station Connect your iPod, iPod mini, or iPod nano.

2 VOLUME Press the up arrow to increase the volume, and the down arrow to decrease volume.

3 LCD Display View the Time, AM Indicator, iPod Indicator, and Radio Frequency through this Liquid Crystal Display.

4 POWER Press the POWER button to turn the radio off or on.

5 RADIO/AUX Press the FUNCTION button to switch between radio and Aux-in control.

6 MEM/CLK SET Press the MEM/CLK SET button to program a radio station into the presets, or to adjust the clock.

7 FM Antenna The FM Rod Antenna provides flexibility and range when adjusting the FM reception. An AM Antenna is built into the player.

8 I POD Press the I POD button to power on an i Pod and enable control through the player.

9 BAND/STOP Press the BAND button to switch between AM or FM radio stations, or stop i Pod playing.

10 Tuning/NEXT/PREV. Press the Tuning/NEXT/PREV. button to increase/decrease the radio frequency, or to increase/decrease the clock time when adjusting the clock. When iPod playing, press this button to skip to previous/next track or press & hold the button to backwards/forwards through a song.

11 PLAY/PAUSE/M-UP Press the PLAY/PAUSE/M-UP button to play or pause an i Pod, or to cycle up through the preset radio stations.

12 Line-Out Use the Line-Out jack to connect the player to external speakers.

13 Aux-In Use the Aux-in jack to connect an iPod shuffle or other audio device to the player.

14 Video Out Plug the yellow connector of an AV Cord in the Video Output to send a video signal from a Video i Pod to a source (TV) with a Video Input.

15 FM ST Toggle the FM ST switch between FM ST & FM MONO.


16 DBBS Press the DBBS button to switch BBS modes between On/Off.

17 AC Connector Plug in the detechable AC cord here.

18 Battery Compartment (8-C Batteries) The Battery Compartment allows the unit to run DC power.

19 AC Cord (120V / 60 Hz) The attached AC (Alternating Current) Cord provides power to the player.

Peripherals

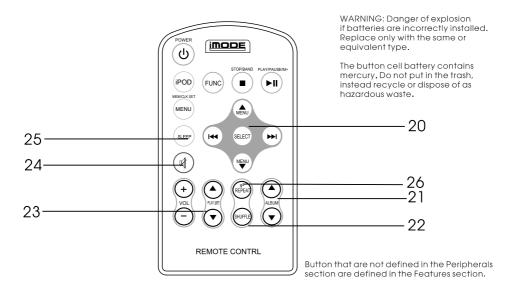

Peripheral Defined

20 Navigation Controls/SELECT Use the Navigation Controls to move through an i Pod menu system, or change the radio station. Press the SELECT button to select a song, photo, or video on your i Pod.

21 ALBUM Press up on the ALBUM button up or down to cycle through the different albums.

22 SHUFFLE Press the SHUFFLE button to randomly play songs on an i Pod.

23 PLAYLIST Press up on the PLAYLIST button up or down to cycle through the different playlists.

24 MUTE Press the MUTE button to cancel the volume entirely.

25 SLEEP Press the SLEEP button to set the player to turn off after 0-90 minutes.

26 REPEAT / M- Press the REPEAT button to switch between REPEAT 1,REPEAT ALL or off. Press the M- button to cycle down through preset radio stations.

iPod Inserts





1. iPod nano 2GB/4GB





2. iPod nano 2GB/4GB/8GB





3. iPod mini 4GB/6GB



4. iPod w/video 30GB



5. iPod w/video 60GB/80GB



6. iPod photo & color U2 iPod 20GB/30GB 4G iPod & U2 iPod 20GB 3G iPod 10GB

Notes: Connect your iPod w/o inserts for below version iPod photo 40GB/60GB

4G iPod 40GB 3G iPod 30GB/40GB

Operations

Setting the Clock

- a. Press and hold the CLK SET button.
- b. Press the Next/Prev button to toggle between 12HR and 24HR time, and press the CLK SET button to select either option.
- c. Press the Next/Prev button to cycle up/down through the hours. Press the CLK CLK SET button to select the hour.
- d. Press the Next/Prev button to cycle up/down through the minutes. Press the CLK SET button to select the minute, and finish setting the time.

continued

Operations

Viewing Video or Photos from your iPod on an External Device

- a. Using a video cable, connect an external device such as a TV to the Video Out port on the player.
- b. Insert your iPod with video or photo capabilities into the iPod Docking Station with the appropriate insert.
- c. You will now be able to control your iPod from the player's control panel. Using the PLAY/PAUSE, NEXT/SEARCH, and PREV/SEARCH buttons you can move from one video or photograph to the next, play, and pause.

Connecting Other Digital Audio Devices

- a. Use a line-in cord to connect an iPod shuffle or other audio device to the line-in port.
- b. Press the RADIO/AUX button to activate the Aux-in.
- c. The iPod shuffle or other audio device will now play through the speakers of the player.

Operations

How to using radio

- 1. Plug the AC Power cord into a power outlet and press the POWER button.
- 2. If necessary, press the RADIO/AUX button to radio mode.
- 3. Press the BAND button to switch between AM / FM radio station.
- 4. Automatic Tuning Press and hold the TUNING UP or DN buttons until the display begins to move, then release the buttons. The tuner will scan up or down the band until it finds the first strong station, and then stop on that station. Repeat this process until the tuner stops on your desired station.
- 5. Manual Tuning Press and release the TUNING UP or DN buttons repeatedly until the display is showing the frequency of your desired station. Use the manual tuning method to tune to weaker stations that are bypassed during Automatic Tuning.

Antennas AM - If reception is weak, turn the unit to improve reception. FM - If reception is weak, adjust FM Rod Antenna length and the angle to improve reception.

Programming radio station presets

You can program as many as 10 FM and 10 AM radio station presets.

- 1. During power on mode, press RADIO/AUX button to select AM/FM band.
- 2. Press the TUNING UP/DN buttons to desire station you want store.
- 3. Press and hold the MEM/CLK SET button to activate the programming mode.
- 4. Press the TUNING UP/DN buttons to select the preset number you want to store.
- 5. Press and hold the MEM/CLK SET button to store the station.
- 6. Repeat Steps 2 through 5 to program additional presets.

Operations

To recall the radio station preset

- 1. Plug the AC Power cord into a power outlet and press the POWER button.
- 2. Press the RADIO/AUX Button on the front panel to radio mode.
- 3. Press the BAND button on the front panel to select AM/FM band.
- 4. Press the MEM-DN (button on the remote "M-") or PLAY/PAUSE/M-UP Button repeatedly until the preset number you want appears on the display.



LIMITED PRODUCT WARRANTY



Audio Product Telecom Product TV DVD Plaver

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at www.curtisint.com before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 1 year on parts and 90 days on labor.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statue is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

- 1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
- 2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
- 3. The warranty does not cover cabinets and accessories.
- 4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
- 5. The defective product should be taken or mailed to:

Canada
C.I. Service Dept.
315 Attwell Drive
Etobicoke, Ontario.

M9W 5C1

U.S.A C.I. Service Dept. 181 Cooper Avenue

Unit 104

Tonawanda, N.Y.

14150

- 5. If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.
- 6. C.I. reserves the right to repair or replace the parts which have become defective.

	D . D	0 111	
Model No.	Date Purchased	Serial No.	

GARANTIE LIMITEE DE PRODUIT

Ce produit de qualité est mérité pour être libre du défauts en fabrication dans le matériel et sur le travail, fourni que l'unité est utilisée sous les conditions d'opération normales voulues par le fabricant.

Devrait vous a n'importe quel problème avec ce produit, s'il vous plaît visiter notre site web à www.curtisint.com avant que vous prenez aucunes autres étapes comme nous avons des copies supplémentaires de manuels d'instruction, fonctionnant des manuels et ennuie les pointes de fusillade sur notre site web qui vous donne la réponse sur la plupart des questions que vous pourrait avoir dans l'opération de l'unité.

LES TERMES DE GARANTIE

Le Département. De Service C.I. mérite ce produit pour être libre des défauts dans les matériels et de l'exécution pendant 1 an sur les parties et 90 jours sur le travail.

Rien dans cette garantie impliquera que C.I. sera responsable ou est responsable de n'importe quels dommages à n'importe quels articles placés dans ce produit, si en raison de n'importe quel défaut du produit, ou son usage.

EXCLUSIONS

Comme en ceci fourni, pour Le Département de Service C.I.. (Canada) ou le Département de Service C.I. (USA), Il n'y a pas d'autres garanties, ni conditions, ni représentations ou d'autres garanties, expriment ou implicite, fait ou voulu par C.I. ou ses distributeurs autorisés et toutes autres garanties, n'importe quelles conditions, n'importe quelles représentations ou n'importe quelles garanties sous n'importe quelle Vente d'Articles Agissent ou comme la législation expressément sont exclues par la présente.

Comme en ceci fourni, le Département. de Service(Canada) ou le Département de Service C.I. (USA), ne sera pas responsable des dommages aux personnes ou de la propriété, y compris l'unité lui-même, causé de le ou les dommages conséquents résultant de la mauvaise fonctionnement de l'unité et par l'achat de l'unité, l'acheteur consent par la présente à indemniser et sauver C.I. innocente de la réclamation pour les dommages aux personnes ou de la propriété causé par l'unité.

POUR OBTENIR DES RÉPARATIONS EN VERTU DE CETTE GARANTIE

- 1. L'acheteur original doit présenter une copie de l'acte de vente original et la carte de garantie de service.
- 2. N'importe quels changements, abus, usage impropre, corrosion de pile ou les dommages accidentels annule la garantie.
- 3. Les cabinets de couverture et les accessoires ne sont pas garantie.
- 4. Aucune garantie s'appliquera quand endommage ou réparation est nécessaire causé par la panne d'électricité ; les dommages en déplaçant l'unité ; l'alimentation ; l'usage industriel ou pour les buts industriels ; ou pour les appels de service pour l'éducation clientèle, etc.
- 5. Le produit défectueux devrait être pris ou devrait être envoyé à :

U.S.A
C.I. Service Dept.
181 Cooper Avenue
Unit 104
Tonawanda, N.Y.
14150

5.	Si envoyer le produit, les frets o	loit être payé d'avance et un mandat pou	ur \$7,00 devrait être inclus pour			
couvrir le coût d'assurance et le retour du produit.						
6. C.I. réserve la droite pour réparer ou remplacer les parties qui sont devenus défectueuses.						
Mc	odèle	Date Acheté	Numéro Série			

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com