

## Value 400E-GP/600E-GP/800E-GP User's Manual

K01-0000055-00

### SAFETY WARNINGS

#### (SAVE THESE INSTRUCTIONS)

This manual contains important safety instructions. Please read and follow all instructions carefully during installation and operation of the unit. Read this manual thoroughly before attempting to unpack, install, or operate your UPS.

This equipment can be operated by any individuals with no previous training.

The socket-outlet shall be installed near the equipment and easily accessible.

During the installation of this equipment it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.

Attention, hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole at the quick connectors of the battery when maintenance or service work inside the UPS is necessary.

Do not dispose of batteries in a fire, the battery may explode.

Do not open or mutilate the battery or batteries, released electrolyte is harmful to the skin and eyes.

### INSTALLING YOUR UPS SYSTEM

#### UNPACKING

Inspect the UPS upon receipt. The box should contain the following:  
UPS Unit×1; IEC Power Cord×1;USB Cable×1;User Manual×1; Management software Disk×1

#### HOW TO DETERMINE THE POWER REQUIREMENTS OF YOUR EQUIPMENT

1. Insure that the equipment plugged into the battery power-supplied outlets does not exceed the UPS unit's rated capacity (400VA/240W for Value 400E, 600VA/360W for Value 600E, 800VA/480W for Value 800E). If rated unit capacities are exceeded, an overload condition may occur and cause the UPS unit to shut down or the fuse blow.
2. If the power requirements of your equipment are listed in units other than Volt-Amps (VA), convert Watts (W) or Amps (A) into VA by doing the calculations below. Note: The below equation only calculates the maximum amount of VA that the equipment can use, not what is typically used by the equipment at any one time. Users should expect usage requirements to be approximately 60% of below value.

#### TO ESTIMATE POWER REQUIREMENTS



1. \_\_\_\_\_ Watts (W) x 1.67 = \_\_\_\_\_ VA or \_\_\_\_\_ Amps (A) x 230 = \_\_\_\_\_ VA
2. Add the totals up for all pieces of equipment and multiply this total by 0.6 to calculate actual requirements. There are many factors that can affect the amount of power that your computer system will require. The total load that you will be placing on the battery-powered outlets should not exceed 80% of the unit's capacity.

#### HARDWARE INSTALLATION GUIDE

Before installation, please read and understand the following instructions:

##### 1. Placement

The UPS must be installed in a protected environment away from heat-emitting appliances such as a radiator or heat register. Do not install this product where excessive moisture is present.

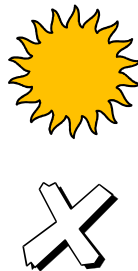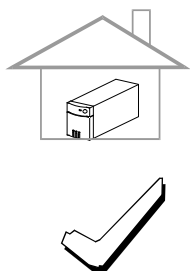

##### 2. Ventilation

The location should provide adequate air flow around the UPS with one inch minimum clearance on all sides for proper ventilation.

##### 3. Charge the Battery

Your new UPS may be used immediately upon receipt. However charge loss may occur during shipping and storage. So charging the battery for at least 8 hours is recommended to insure that the battery is fully charged. (To recharge the battery, simply leave the unit plugged into an AC outlet.)


**This UPS can be charged even when UPS is not turn on.**

##### 4. Connect to AC

Use German power cord to connect the UPS to a wall outlet. Please avoid using extension cords and adapter plugs. (To maintain optimal battery charge, leave the UPS plugged in at all times.)

##### 5. Connect the Load

Connect the equipment to your UPS outlets. The IEC power cord coming with the unit are used to connect your computer and monitor to the UPS. **Items such as copiers, laser printers, vacuums, space heaters, or other large electrical devices SHOULD NOT be connected to the UPS.** Please make sure that the total loads of your equipments are less than the maximum total power load of your UPS.

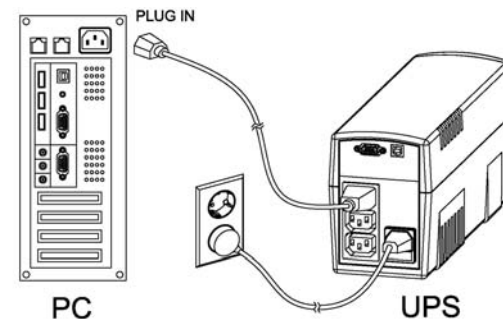


##### 6. Connect to Computer:

Install your software and accessories. To use the software, simply use the enclosed serial interface or USB cable to connect the UPS unit and your computer.

### BASIC OPERATION


#### FRONT PANEL DESCRIPTION

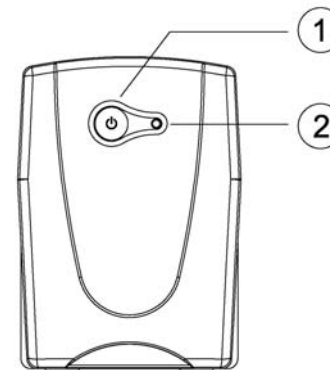


##### 1. Power Switch

 Press the power switch to turn the UPS ON or OFF.

##### 2. Power On Indicator

 This LED is illuminated when the utility condition is normal and the UPS outlets are providing "clean power", free of surges and spikes.

#### REAR PANEL DESCRIPTION

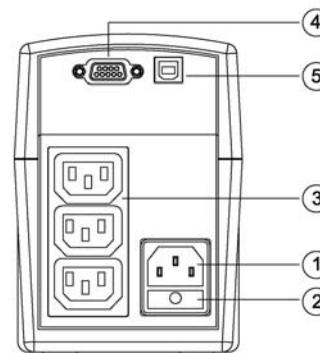

##### 1. AC Inlet

Connect to utility power through the input power cord

##### 2. Input Fuse


The fuse provides optimal overload protection.

##### 3. AC outlet

The UPS provides 3 outlets for connected equipment to insure temporary uninterrupted operation during a power failure and against surges and spikes.


##### 4. Serial Port to PC

This port allows connection and communicates from the DB-9 serial on the computer to the UPS unit. The UPS communicates its status to the PowerPanel® software. This interface is also compatible with the UPS service provided by **Windows 98, Windows ME, Windows NT, Windows 2000, Windows XP, Windows Server 2003/ Vista.**

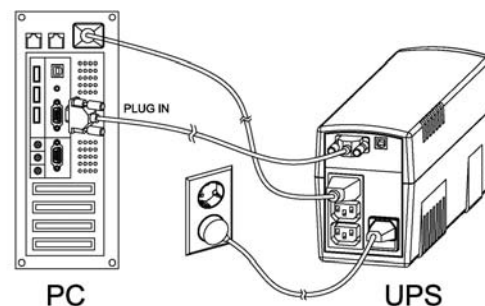

### 5. USB Port to PC

This port allows connection and communication from the USB port on the computer to the UPS unit. The UPS communicates its status to the **PowerPanel® Personal Edition** software. This interface is also compatible with the UPS service provided by **Windows 98, Windows ME, Windows NT, Windows 2000, Windows XP, Windows Server 2003.**

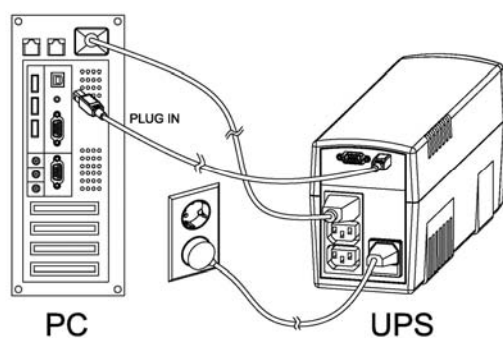

**NOTE:** Only one of these two ports can be used as communication and control of the UPS unit at one time.

## Functional Test

### AC Mode

The UPS delivers power to the loads derived from the utility and maintains proper battery charge. It also regulates the output voltage to within a narrow range.

### On-Battery Mode

The UPS operates on battery when the line voltage or frequency has fallen outside the limits. Local users are alerted to this mode of operation by visual and audible indicators. The UPS provides power to the load from the battery and through its inverter and the output voltage and frequency of the UPS are regulated within a narrow range.

#### 1. Switch On

Press the power switch on the front panel then the green LED will light up.

#### 2. Switch Off

Press again the power switch, the LED on the front panel will go off.

#### 3. Cold Start / Start on Battery:

This UPS can be turned on even when AC is not present.

Press the power switch on the front panel then the green LED will light up and flashing.

## ROUTINE MAINTENANCE AND STORAGE

### ROUTINE MAINTENANCE

- Use dry soft clothes to clean the front panel and plastic parts. Do not use any detergent that contains alcoholic ingredient.
- The expected lifetime of the battery is around 3 years. Improper operation and harsh environment will reduce the actual lifetime.
- Unplug the UPS from power inlet if the UPS will not operate for long period of time.

### STORAGE

- First turn off your UPS and disconnect its power cord from the wall outlet. Disconnect all cables connected the UPS to avoid battery drain.
- The UPS should be stored in a cool dry location.
- Make sure the battery is fully charged before the UPS is stored.
- For extended storage in moderate climates, the battery should be charged for 12 hours every 3 months by plugging the power cord into the wall receptacle and turning on the main switch. Repeat it every 2 months in high temperature locations.

## TROUBLE SHOOTING

Problem	Possible Cause	Solution
The UPS does not perform expected runtime.	Batteries are not fully charged.	Recharge the battery by leaving the UPS plugged in.
	Battery is slightly worn out.	Contact CyberPower Systems at <a href="mailto:service@cyberpower-eu.com">service@cyberpower-eu.com</a>
The UPS will not turn on.	The on/off switch is designed to prevent damage by rapidly turning it off and on.	Turn the UPS off. Wait 10 seconds and then turn the UPS on.
	The unit is not connected to an AC outlet.	The unit must be connected to a 220-240V 50/60Hz outlet.
	The battery is worn out.	Contact CyberPower Systems at <a href="mailto:service@cyberpower-eu.com">service@cyberpower-eu.com</a>
Outlets do not provide power to equipment	Mechanical problem.	Contact CyberPower Systems at <a href="mailto:service@cyberpower-eu.com">service@cyberpower-eu.com</a>
	Fuse is blown due to overload	Turn the UPS off and unplug at least one piece connected equipment. Unplug the power cord of the UPS then remove the fuse compartment beneath the power inlet of the UPS and replace the blown fuse with a spare one. Lock the compartment back to the UPS. Connect power cord then turn the UPS on. Make sure that your spare fuse meets the specification.
	Batteries are discharged	Allow the unit to recharge for at least 4 hours.
	Unit has been damaged by a surge or spike.	Contact CyberPower Systems at <a href="mailto:service@cyberpower-eu.com">service@cyberpower-eu.com</a>
PowerPanel® Personal Edition is inactive (all icons are gray).	The serial/USB cable is not connected.	Connect the serial/USB cable to the UPS unit and an open serial port on the back of the computer. You must use the cable that came with the unit.
	The serial/USB cable is connected to the wrong port.	Try another serial/USB port of your computer.

	The unit is not providing battery power.	Shutdown your computer and turn the UPS off. Wait 10 seconds and turn the UPS back on. This should reset the unit.
	The serial cable is not the cable that was provided with the unit.	You must use the cable included with the unit for the software.

## TECHNICAL SPECIFICATIONS

Model	Value 400E-GP	Value 600E-GP	Value 800E-GP
Capacity (VA)	400VA	600VA	800VA
Capacity (Watts)	240W	360W	480W
<b>Input</b>			
Input Voltage Range	165-270Vac		
Frequency Range	45~65 Hz (Auto Sensing)		
<b>Output</b>			
On Battery Output Voltage	Simulated Sine Wave at 230Vac +/-10%		
On Battery Output Frequency	50/60 Hz +/-1%		
Overload Protection	On Utility: Fuse, On Battery: Internal Current Limiting		
<b>Physical</b>			
Total # of UPS Receptacles	(3) IEC 320 C13		
Maximum Dimensions	32cm(L)*10cm(W)*14cm(H)		
Weight	4.2 Kgs / 9.3 Lbs	5.3 Kgs / 11.7 Lbs	6.1 Kgs / 13.4 Lbs
<b>Battery</b>			
Sealed Maintenance Free Lead Acid Battery	12V / 4.5Ah x1	12V / 7Ah x1	12V / 9Ah x1
Typical Recharge Time	8 Hours		
<b>Warning Diagnostics</b>			
Indicators	Power On / Using Battery		
Audible Alarms	On Battery, Low Battery, Overload		
<b>Environmental</b>			
Operating Temperature	+32°F to 95°F ( 0°C to 35°C )		
Operating Relative Humidity	0 to 95% NON-CONDENSING		
<b>Communication</b>			
PowerPanel® Personal Edition Software	Windows2000/NT/XP/Server 2003/Vista,Mac OS, Linux		
<b>Management</b>			
Auto-Charger	Yes		
Auto-Restart	Yes		
USB	Yes		
<b>Other Features</b>			
Green Power	Yes (Energy saving technology)		

## DEFINITIONS FOR ILLUMINATED LED INDICATORS

LED	Alarm	Fuse	Condition
On	Off	Normal	Normal
Flash	Two Beeps	Normal	Utility Failure - The UPS is providing battery power to outlets.
Flash	Rapid Beeps	Normal	Utility Failure - The UPS is providing battery power. The rapid beeps indicate the battery will run out of power shortly.
On/Flash	Long Beep	Normal/Blown	Overload - Occurs when connected equipment exceeds the rating of the unit. Turn the UPS off and unplug at least one piece of equipment from the UPS. Check the fuse and do the replacement if necessary. Turn the UPS on.

For more information, visit [eu.cyberpowersystems.com](http://eu.cyberpowersystems.com) or contact

**CyberPower Systems B.V.**

Flight Forum 3545 5657DW Eindhoven The Netherlands

Tel: +31 40 2348170, E-MAIL: [sales@cyberpower-eu.com](mailto:sales@cyberpower-eu.com)

**CyberPower Systems Inc. (USA)** 4241 12th Avenue East Suite 400 Shakopee, MN 55379, U.S.A.

Tel: +1 952 4039500, Fax: +1 952 4030009, E-MAIL: [sales@cyberpowersystems.com](mailto:sales@cyberpowersystems.com)

Entire contents copyright ©2004 CyberPower Systems B.V., All rights reserved. Reproduction in whole or in part without permission is prohibited. PowerPanel® and PowerPanel® Plus are trademarks of CyberPower Systems (USA) Inc.



CyberPower warrants to you, the original purchaser, that CyberPower UPS will be free from defects in design, assembly, materials and workmanship for two years ( battery is only one year) from the date of original purchase. Any warranty services, please contact your local dealers or distributors.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>