

# USER MANUAL

DCS-2102/2121

VERSION 1.0



**D-Link**<sup>®</sup>

**NETWORK CAMERA**

# Table of Contents

Package Contents .....	1
Minimum System Requirements.....	2
Introduction .....	3
Features and Benefits.....	4
Hardware Overview .....	5
Hardware Installation .....	7
Attach the Antenna (DCS-2121 only) .....	7
Connect the camera base .....	7
Connect the Ethernet Cable .....	8
Connect the Power Adapter .....	8
Autorun Installation .....	9
Software Installation.....	10
Adjusting the Camera Focus .....	19
Setting up a Wireless Connection with WPS (DCS-2121 only).....	20
Using the Configuration Menu .....	21
LIVE VIDEO.....	22
LIVE VIDEO > Camera .....	22
SETUP .....	23
SETUP > Wizard .....	23
SETUP > Network Setup.....	24
SETUP > Wireless (DCS-2121 only).....	25
SETUP > Dynamic DNS.....	26
SETUP > Image Setup.....	27
SETUP > Audio and Video .....	28
SETUP > Motion Detection .....	30
SETUP > Time and Date .....	31
SETUP > Recording .....	32
SETUP > Snapshot .....	34
SETUP > Digital Output.....	35
MAINTENANCE .....	36
MAINTENANCE > Device Management.....	36
MAINTENANCE > Backup and Restore .....	37
MAINTENANCE > Firmware Upgrade .....	38
STATUS .....	39
STATUS> Device Info.....	39
STATUS> Log.....	40
HELP .....	41
Installing the DCS-2102/2121 Behind a Router.....	42

1) Identify Your Camera on the Network .....	42
2) Assign a Local IP Address and Port for Your Camera .....	43
3) Open the HTTP Port .....	44
4) Open Virtual Server Ports to Enable Remote Image Viewing .....	46
Viewing Your Camera Over the Internet .....	47
Viewing Your Camera Over the Internet Behind a Router.....	47
Frequently Asked Questions.....	48
Internet Camera Features .....	48
Internet Camera Installation .....	49
How to Ping Your IP Address.....	51
Time Zone Table .....	53
DI/DO Input specifications .....	54
Technical Specifications.....	55

# Package Contents

If any of the below items are missing from your package, please contact your retailer.

## DCS-2102 Megapixel Internet Camera

- D-Link DCS-2102 Megapixel Internet Camera
- CAT 5 Ethernet Cable
- Power Adapter
- Mounting Kit
- Quick Installation Guide
- CD-ROM with Software and Product Documentation



## DCS-2121 Megapixel Wireless Internet Camera

- D-Link DCS-2121 Megapixel Wireless Internet Camera
- Detachable antenna
- CAT 5 Ethernet Cable
- Power Adapter
- Mounting Kit
- Quick Installation Guide
- CD-ROM with Software and Product Documentation



**WARNING:** Using a power supply with a different voltage than the one included with your product may cause damage, and will void the warranty for this product.

# Minimum System Requirements

- Wired (10/100 Fast Ethernet) network
- Wireless 802.11g network (for DCS-2121 only, for wireless use only)
  
- PC with:
  - 1.3 GHz processor or higher
  - 128 MB memory or more
  - Windows XP SP2 or Vista
  - Internet Explorer 6 or higher
  
- Multiple camera operation requires:
  - 2.4 GHz processor or higher
  - 512 MB memory or more
  - Video card/chipset with 32 MB RAM
  - Windows XP SP2 or Vista
  - Internet Explorer 6 or higher
  
- Wireless use requires (DCS-2121 only):
  - 802.11g Wireless Router or Access Point (for wireless use)

# Introduction

Congratulations on your purchase of the DCS-2102/2121 Megapixel Internet Camera! The DCS-2102/2121 is a versatile and unique solution for your small office or home. Unlike a standard webcam, the DCS-2102/2121 is a complete system with a built-in CPU and web server that transmits high quality video images for security and surveillance. The DCS-2102/2121 can be accessed remotely, and controlled from any PC/Notebook over local network or through the Internet via a web browser. The simple installation and intuitive web-based interface offer easy integration with your Ethernet/Fast Ethernet or 802.11g wireless network. The DCS-2102/2121 also comes with remote monitoring and motion detection features for a complete and cost-effective home security solution.

- Remotely Monitor Your Home or Office over the Internet
- Web-based Recording to Local hard Drive – no software required
- Includes D-ViewCam 2.0 for multi-camera monitoring and Management
- Motion detection to trigger recording and send e-mail alerts
- DDNS support for web access using an easy to remember domain name
- Administrator/User password protection
- UPnP support for network setup and configuration
- Megapixel CMOS sensor (1280x1024)
- .5 lux CMOS sensor for low light environments
- 3GPP mobile surveillance
- SD card slot for front-end storage
- DI/DO interface
- Simultaneous MJPEG and MPEG-4 streams allows optimization of both image quality and bandwidth efficiency
- WPS support for easy network setup (DCS-2121)
- 802.11g wireless connectivity (DCS-2121)

# Features and Benefits

- **Simple to Use:** The DCS-2102/2121 is a stand-alone system with a built-in CPU, requiring no special hardware or software such as PC frame grabber cards. The DCS-2102/2121 supports ActiveX mode for Internet Explorer. All that is required is a computer with Internet Explorer 6.0 or above.
- **Supports a Variety of Platforms:** Supports TCP/IP networking, HTTP, and other Internet related protocols. It can also be integrated easily into other Internet/Intranet applications because of its standards-based features.
- **Remote Snapshot Images and Recording:** Using the Snapshot and recording features, you can save snapshots and record video and audio directly from the Web browser to a local hard drive without installing any software, making it convenient to instantly capture any moment from a remote location.
- **Record Directly to a NAS:** The DCS-2102/2121 allows you to record directly to a local network area storage device without the use of a dedicated PC for storing recorded video.
- **Low Light Recording:** The DCS-2102/2121's 0.5 lux light sensitivity allows you to capture video in rooms with minimal lighting, making it ideal for use in low-light environments.
- **Web Configuration:** Using a standard Web browser, Administrators can configure and manage the Internet Camera directly from its own Web page via the Intranet or Internet. This means you can access your DCS-2102/2121 at anytime from anywhere in the world!
- **Remote Monitoring Utility:** The D-ViewCam application adds enhanced features and functionality for the Internet Camera and allows administrators to configure and access the Internet Camera from a remote site via Intranet or Internet. Other features include image monitoring, recording images to a hard drive, viewing up to 32 cameras on one screen, and taking snapshots.
- **Broad Range of Applications:** With today's high-speed Internet services, the Internet Camera can provide the ideal solution for live video images over the Intranet and Internet for remote monitoring. The Internet Camera allows remote access from a Web browser for live image viewing and allows the administrator to manage and control the Internet Camera at anytime, from anywhere in the world. Many applications exist, including industrial and public monitoring of homes, offices, banks, hospitals, child-care centers, and amusement parks.
- **Record Directly to an SD Card:** Save motion triggered video directly to an SD card with the built in SD slot.

## For the DCS-2121 Megapixel Wireless Internet Camera:

- **802.11g Wireless or Ethernet/Fast Ethernet Support:** The DCS-2121 offers both 802.11g wireless and Ethernet/Fast Ethernet connectivity, making the DCS-2121 easy to integrate into your existing network environment. The DCS-2121 works with a 10Mbps Ethernet based network or 100Mbps Fast Ethernet based network for traditional wired environments and works with 802.11g routers or access points for added flexibility. The Site Survey feature also allows you to view and connect to nearby wireless networks.

# Hardware Overview

Front



1. Camera lens
2. Focus ring
3. Status LED
4. Microphone
5. Wireless antenna (DCS-2121 only)
6. SD Card slot
7. Reset button


Back



8. Antenna connector (DCS-2121 only)
9. WPS button and LED (DCS-2121 only)
10. Camera base mount



## Bottom

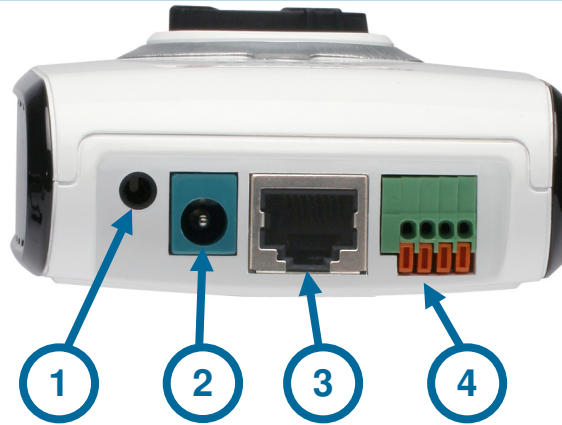

1. External speaker jack
2. Power jack
3. Ethernet port
4. DI/DO port

## Hardware Installation

### Attach the Antenna (DCS-2121 only)


Screw the wireless antenna onto the antenna connector.



### Connect the camera base

1. Screw the base stem into the base.
2. Take the hinge bracket and tighten the wheel.
3. Screw the hinge bracket into the base stem.
4. Screw the collar onto the hinge bracket.
5. Screw the camera onto the completed base and tighten the collar.

You can adjust the angle and pivot of the camera by loosening the wheel and retightening it after moving it to the desired position.

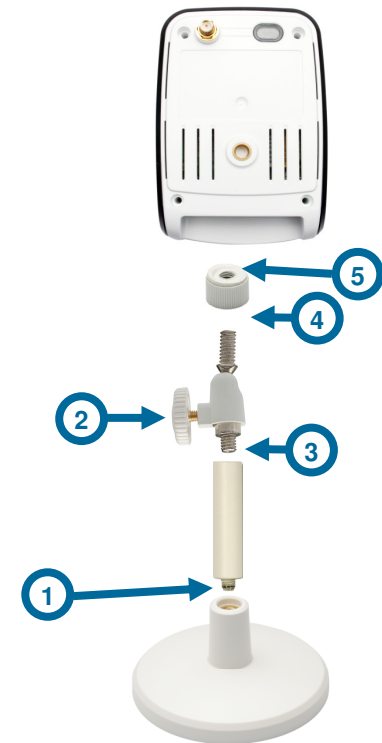

## Connect the Ethernet Cable

Connect the included Ethernet cable to the network cable connector located on the bottom of the DCS-2102/2121 and attach it to your network switch or router.



## Connect the Power Adapter

Attach the power adapter to the power jack located on the bottom of the DCS-2102/2121 and connect the power adapter to a power outlet. After connecting the power adapter, you should see the Status LED on the front of the camera turn on.

The Status LED will light red when it receives power, will light green after the camera connects to the network, and will flash green when the camera is being accessed.



# Autorun Installation

Insert the Installation CD-ROM into your computer's CD-ROM drive to initiate the autorun program.

The content of the Installation CD-ROM includes:

- **View QIG:** Click here to view the *Quick Installation Guide* for a quick step-by-step guide to installing the DCS-2102/2121.
- **View Manual:** Click here to view the *User Manual* for detailed information about the DCS-2102/2121.
- **Installation Wizard:** Click here to install the DCS-2102/2121's initial configuration software.
- **D-ViewCam:** Click here to install D-ViewCam, which lets you manage multiple cameras by enabling you to search, configure, and monitor all your DCS-2102/2121 cameras from one location.
- **ffdshow:** Click here to install the ffdshow codec, which will allow you to view recorded camera video. The source code for this program is available on the CD.
- **Acrobat Reader:** Click here to install Acrobat Reader, which is needed to view the *QIG* and *User Manual*.
- **Support** – Click to display the information on how to get further support for your product.
- **Exit** – Click to close the Auto-Run program.




# Software Installation


Click the **Installation Wizard** button from the autorun program on the CD.




Follow the simple steps below to run the Setup Wizard to guide you quickly through the installation process. Click **Next**.

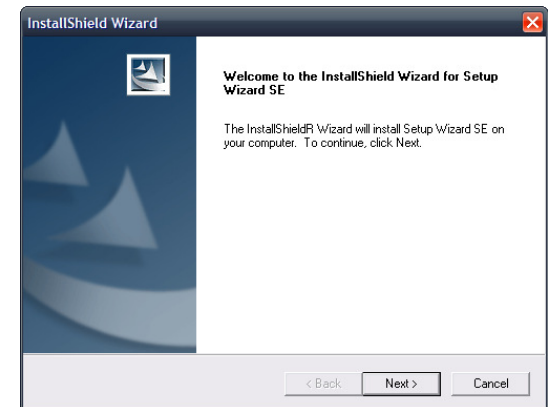


Click **Yes**.

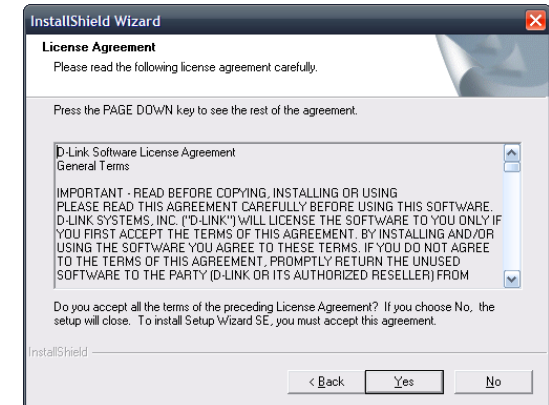

Click **Next**.

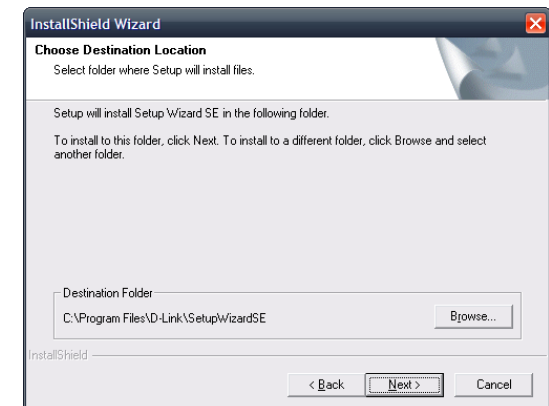


Click **Finish**.

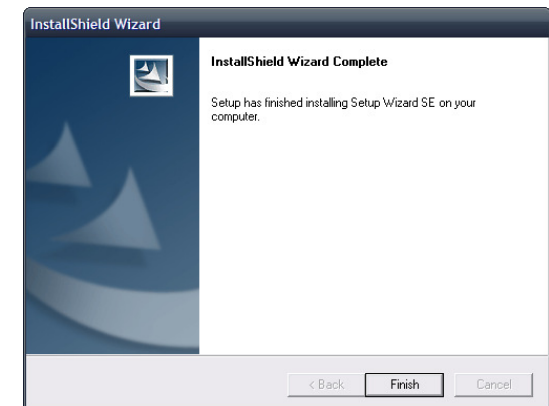


Now, click on **ffdshow** from the autorun screen. This will install the proper codecs that will allow you to playback video taken by the DCS-2102/2121.




Click **I Agree**.

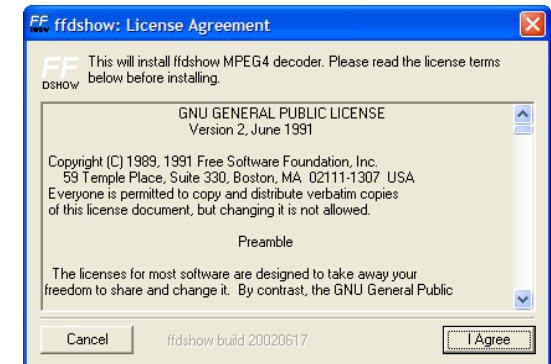


Click **Next**.

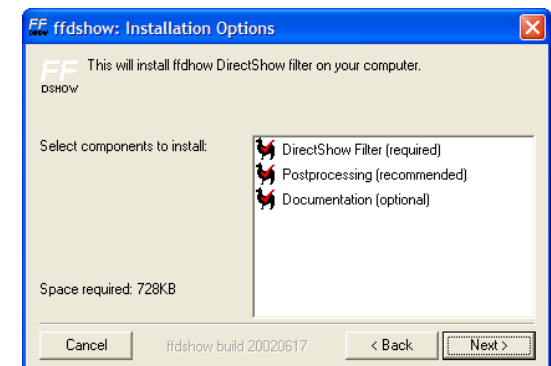

Click **Install**.

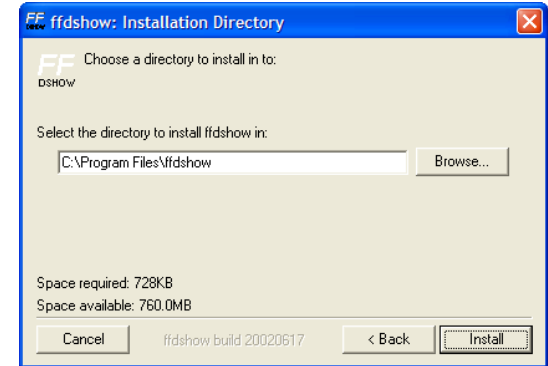

Click **Close**.

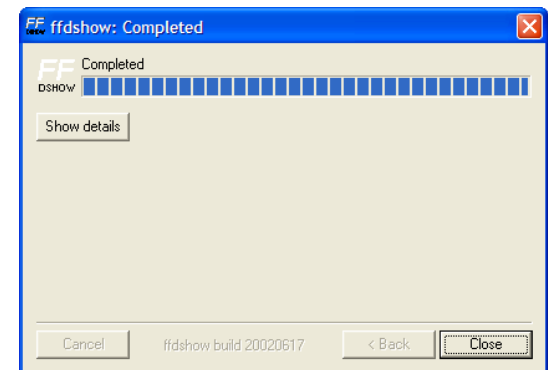





Before using **ffdshow**, you must configure its properties. From your computer, please click on **Start**→ **Programs**→ **ffdshow**→ **Configuration**.



At the **ffdshow** properties window, scroll to the bottom and click **Miscellaneous**. Be sure that **Autodetect** is checked and that **Error resilience** and **Error concealment** are set to "none". Click **OK** and close the window.

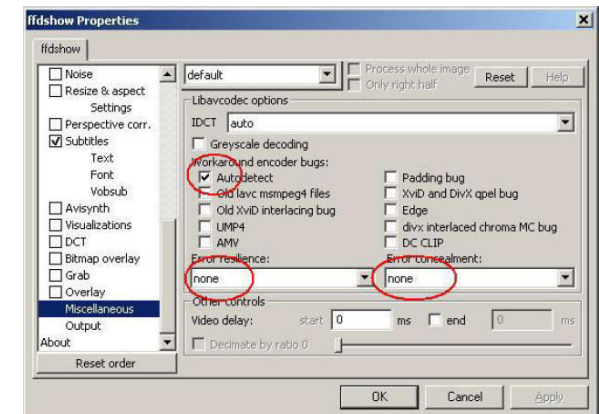

 
To run the **Setup Wizard**, click on **Start→ Programs→ D-Link Setup Wizard SE**.

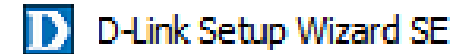

The Setup Wizard will then scan for all available cameras connected to your wired network. Each camera will appear with its MAC address, current IP address, and camera name.

You can choose from the following options from the buttons on the left:

- Wizard:** This will guide you through initial network setup of the selected camera.
- Search:** This will refresh the list of cameras after rescanning for cameras on your wired network.
- Link:** This will open the configuration web interface for the selected camera.
- About:** This gives information about the Setup Wizard, such as version information.
- Exit:** This closes the Setup Wizard program.

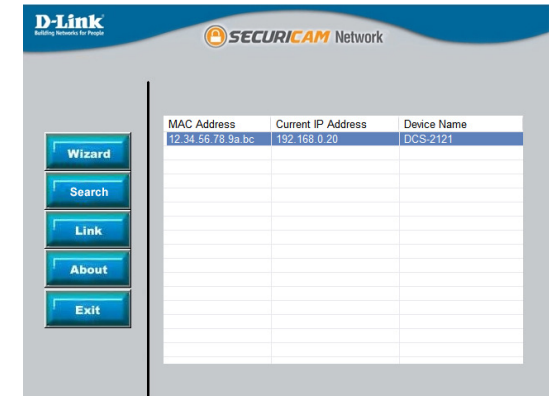

### Wizard

Clicking on Wizard will open the setup wizard, which will guide you through your camera's network setup.

By default, the login information is:

- Admin ID:** admin
- Password:** [the password is blank]

Here, enter this information for **Admin ID** and **Password**. It is also highly recommended that you change your password at this time in order to keep your camera secure. To change the password, check the **Change** checkbox, then enter the password you want to use in both the **New Password** and **Reconfirm** text boxes.



Here, you can set whether the camera should use a direct or static IP. If you use a static IP, the camera's IP Address, Subnet Mask, Gateway, and DNS addresses must correspond with your network settings for you to access the camera. If you are unsure of what these settings should be, please check with your network administrator or Internet service provider. After entering your settings, click **Next**.



The screenshot shows the 'Set IP Address' configuration page in the D-Link SECURICAM Network interface. At the top, there are logos for 'D-Link Building Networks for People' and 'SECURICAM Network'. The main heading is 'Set IP Address'. Below this, there are two radio buttons: 'DHCP' (which is selected) and 'Static IP'. Under the 'Static IP' option, there are five input fields: 'IP Address', 'Subnet Mask', 'Default Gateway', 'Primary DNS', and 'Secondary DNS'. At the bottom right, there are three buttons: 'Back', 'Next', and 'Exit'.

**(DCS-2121 only)**

The availability of a wireless connection mode depends on how your camera is connected to your network. Click Infrastructure for use with a router or Adhoc for a peer-to-peer connection. The Network Name, Wireless Channel, Security Mode, and Authentication type MUST correspond with your wireless network settings for the camera to work. Click **Next**. Enter the Encryption Mode, Key Format, and Encryption Keys for your wireless network. Click **Next**.



The screenshot shows the 'Wireless Interface' configuration page in the D-Link SECURICAM Network interface. At the top, there are logos for 'D-Link Building Networks for People' and 'SECURICAM Network'. The main heading is 'Wireless Interface'. Below this, there are two radio buttons: 'Enable' (which is selected) and 'Disable'. Under the 'Enable' option, there are two radio buttons: 'Infrastructure' (which is selected) and 'Adhoc'. Below these are several configuration fields: 'Network Name (SSID)' with a text input field containing 'default', 'Wireless Channel' with a dropdown menu showing '6', 'Authentication' with a dropdown menu showing 'Open', 'Encryption' with a dropdown menu showing 'Disable', and 'Key' with a text input field. At the bottom right, there are three buttons: 'Back', 'Next', and 'Exit'.

If you need to make any changes, click **Back** to modify your camera settings. Otherwise, click **Restart** to save and apply your settings. This may take a few minutes.  
(Wireless settings are for DCS-2121 only)

Camera setup is now complete! Wait until the Link LED on the camera turns green, then click **Link** to launch your Web browser and view your images.

**D-Link**  
Building Networks for People


**SECURICAM** Network

Admin ID	<input type="text" value="admin"/>	Wireless	<input type="text" value="Disable"/>
Password	<input type="password" value="****"/>	SSID	<input type="text" value="Default"/>
IP Address	<input type="text"/>	Channel	<input type="text" value="6"/>
Subnet Mask	<input type="text"/>	Key	<input type="text"/>
Default Gateway	<input type="text"/>		
Primary DNS	<input type="text"/>		
Secondary DNS	<input type="text"/>		

The Setup Wizard has completed. Click on 'Back' to modify your settings. Click 'Restart' to save your current settings and reboot the Internet Camera.

[Back](#) [Restart](#)

After you click the **Link** button, the Installation Wizard will automatically open your Web browser to the IP address of the DCS-2102/2121 and prompt you for a user name and password. Enter “admin” into the User name field, then click OK. If you changed your password in the Setup Wizard, enter your password then click OK.

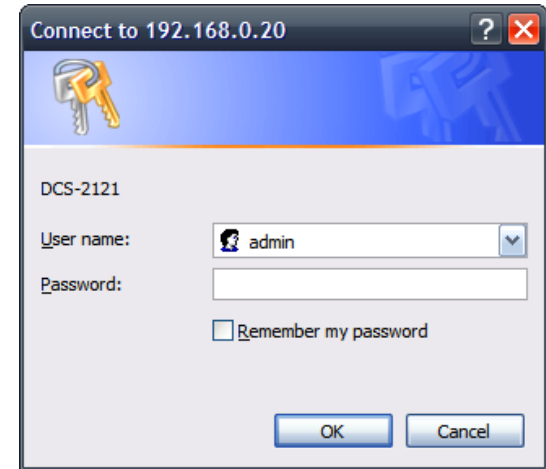

After you successfully log in, your camera's video will be displayed inside the web browser window.



## Adjusting the Camera Focus

After opening the web interface, turn the focus ring left or right until the area you want to view is in focus. You can use the video feed of the web interface as a guide.

**Note:** You can adjust other settings such as brightness, contrast, orientation in the SETUP > Image Setup section of the web interface.

**Warning:** Direct exposure to sunlight may cause permanent damage to the CMOS sensor. Therefore, do not expose the DCS-2102/2121's lens to direct sunlight. The camera is designed for indoor usage.



## Setting up a Wireless Connection with WPS (DCS-2121 only)

If your wireless access point or router supports push-button Wireless Protected Setup (WPS), you can quickly configure your wireless network and camera without using the camera's web interface.

After plugging the power adapter to your camera and the front status LED lights up, hold down the WPS button on the back of the camera for 3 seconds. After pressing the button, it should start flashing blue.

Now press the WPS button on your router or access point within 1 minute to activate WPS and allow your devices to automatically configure a wireless connection. After WPS is successfully activated, the WPS LED on your camera will stop flashing, and will light up solid blue, then reboot.


**Note:** On some routers/access points, you may need to enter the web interface to activate WPS. Consult your product's user manual for further assistance.



# Using the Configuration Menu

After completing the Setup Wizard, you are ready to use your camera. The Web configuration utility is designed to easily access and configure your DCS-2102/2121. Click the “Link” button will open up the main configuration page.

If you would like to open the configuration page from a Web Browser, enter the IP address that you assigned to your DCS-2102/2121. In this example, the IP address of the camera is 192.168.0.20. Your DCS-2102/2121 may have a different IP Address assigned to it by your router or Internet service. You will need to enter your User name and Password (User name is “admin”, and Password is blank by default) to log in.

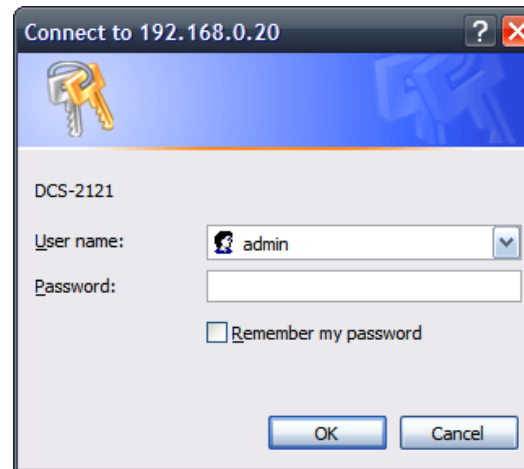

After logging in to the web interface, the home screen will show up. Use the following displayed sections to set up and view your Internet Camera:

- LIVE VIDEO
- SETUP
- MAINTENANCE
- STATUS
- HELP



## LIVE VIDEO

This section allows you to set up your IP camera's live video by using the buttons below.

### LIVE VIDEO > Camera



**Screen Size:** You can change the video screen size to Small, Medium, or Large.



**Full Screen:** This allows you to view the video in full screen mode. To exit full screen mode, press the ESC key on your keyboard.



**Snapshot:** Click it to capture a snapshot image. The image will pop up in a new window. Then you may save this image to a local hard drive.



**Record Video:** Click this button will start or stop recording video to the file path specified with the Set Path button (to the right).



**Set Path:** You can change the folder your manual recordings will be saved to.



**Start/Stop Audio:** This button toggles the built-in microphone on and off, allowing you to hear audio from the area surrounding your camera. Audio is on by default.



**Start/Stop Talking:** This will toggle sending audio to a speaker (not included) connected to the camera's Audio Out port. This can be used to talk with others near the camera.



**Start/Stop GP Output:** This will toggle the GP DO output on and off.



# SETUP


This section allows you to further set up or change the configuration of your IP camera.

## SETUP > Wizard

The setup wizards guide you through initial setup of your IP camera. You can use the Internet Connection Setup Wizard for initial network setup, and you can use the Motion Detection Setup Wizard to set up motion detection and snapshots. Simply follow the instructions given in each step of the wizard to quickly set up your camera.

Alternatively, you can manually set up your Internet connection by clicking **Manual Internet Connection Setup**, and you can manually set up motion detection options by clicking on **Manual Motion Detection Setup**. You can also see these settings by clicking on their categories on the left side (**Network Setup** / **Wireless Setup** / **Motion Detection** / **Snapshot**).

**Note:** If the camera is set to SXGA mode in **Audio and Video**, Motion Detection and Motion Triggered Snapshots are disabled.

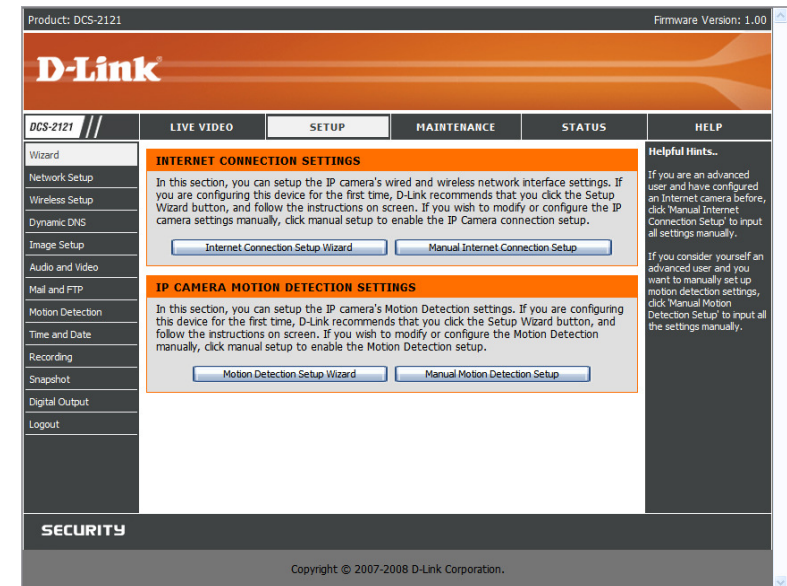

## SETUP > Network Setup

This option, **Network Setup**, allows you to configure your LAN and Internet configuration, including the settings for LAN, PPPoE, and port.

**DHCP Connection:** This allows the camera to get an IP address automatically from your router or Internet service. If you are not sure which LAN settings to use, try using DHCP mode first.

**Static IP Address:** This allows you to manually set the IP address information for your camera. This may be required to connect to your Internet connection.

**IP Address:** Enter the IP address the camera should use.

**Subnet Mask:** Enter the subnet mask that the camera should use.

**Default Gateway:** Enter the default gateway that the camera should use.

**Primary DNS:** Enter the IP of the primary DNS server that the camera should use.

**Secondary DNS:** Enter the IP of the secondary DNS server that the camera should use.

**Note:** If you need to use a static IP address and you do not know what information to use, contact your Internet service provider (ISP) for assistance.

**Enable UPnP:** Universal Plug & Play (UPnP) allows Windows PCs to find this camera under "Network Neighborhood" without configuration.

**Enable UPnP port forwarding:** This allows the camera to add a port forwarding entry into your router automatically when checked, if your router supports UPnP port forwarding.

**PPPoE Settings:** If you are using a PPPoE connection, enable it and enter the User Name and Password for your PPPoE account. You can get this information from your Internet service provider (ISP).

**HTTP Port:** This is the port that allows the user to connect to the camera's user interface. By default the port is set to 80. You may change the port number if using multiple cameras.

**RTSP Port:** This is the port that the camera uses to stream video to. By default the port is set to 554. You may change the port number if using multiple cameras.

**Note:** You MUST also set up your router/gateway for Port Forwarding/Mapping; this will enable remote viewing of your camera via the Internet. Please refer to your router's instruction manual on how to open up ports. For additional help on configuring your camera to work with your router, please refer to **Installing the DCS-2102/2121 Behind a Router** later in the User Manual. For installing multiple cameras, ONE port per camera must be opened on your router, the Web server (HTTP) port.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

**NETWORK SETUP**  
You can configure your LAN and Internet settings here.  
Save Settings Don't Save Settings

**LAN SETTINGS**

LAN

DHCP Connection  
 Static IP Address

IP Address: 192.168.0.20  
Subnet Mask: 255.255.255.0  
Default Gateway: 192.168.0.1  
Primary DNS:   
Secondary DNS:   
 Enable UPnP  
 Enable UPnP port forwarding  
 Enable PPPoE

User Name:   
Password:   
Confirm password:   
Save Settings Don't Save Settings

**PORT DETAIL SETTINGS**

HTTP port: 80  
RTSP port: 554  
Save Settings Don't Save Settings

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

**Helpful Hints...**  
Select DHCP Connection if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically.  
-Enabling UPnP settings will allow you to configure your camera as an UPnP device in the network.  
Port Detail Settings allow you to specify the ports you reserve for both HTTP and RTSP Streaming.  
-HTTP Port is the port you allocate in order to connect to the camera via a standard web browser.  
-RTSP Port is the port you allocate in order to connect to a camera by using streaming mobile device(s), such as a mobile phone or PDA.

## SETUP > Wireless (DCS-2121 only)

To set up your IP camera's wireless network interface settings, enable **Wireless Settings** in this window first. Then continue the further configuration next.

**Site survey:** Clicking this button will scan for available wireless networks. After scanning, you can use the dropdown box to select an available wireless network, and related information(SSID, Wireless Mode, Channel, Authentication, Encryption) will be automatically filled in for you.

**SSID:** Enter the SSID of the wireless access point you wish to use.

**Channel:** If you are using Ad Hoc mode, select the channel of the wireless network you wish to connect to, or select Auto.

**Wireless Mode:** Use the dropdown box to select the mode of the wireless network you wish to connect to. Infrastructure is normally used to connect to an access point or router. Ad-Hoc is usually used to connect directly to another computer.

**Authentication:** Select the authentication you use on your wireless network - Open, Shared(WEP), WPA-PSK, or WPA-PSK2.

**Encryption:** If you use WPA-PSK or WPA-PSK2 authentication, you will need to specify whether your wireless network uses TKIP or AES encryption. If you use Open or Shared authentication, this setting will be automatically set for you.

**Key:** If you use WEP, WPA-PSK, or WPA-PSK2 authentication, enter the Key(also known as password) used for your wireless network.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

The screenshot shows the D-Link DCS-2121 web interface. At the top, it displays 'Product: DCS-2121' and 'Firmware Version: 1.00'. The main header features the D-Link logo. Below this is a navigation menu with tabs for 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' tab is active, and the 'WIRELESS SETUP' section is highlighted. The interface is divided into a left sidebar with a 'Wizard' menu (including Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Time and Date, Recording, Snapshot, Digital Output, and Logout) and a main content area. The 'WIRELESS SETUP' section contains a 'WIRELESS CONFIGURATION' form with the following fields: 'Enable Wireless' (checked), 'Site Survey' (D-Link dropdown with a 'Rescan' button), 'SSID' (D-Link text input), 'Wireless Mode' (Infrastructure dropdown), 'Channel' (Auto dropdown), 'Authentication' (Open dropdown), 'Encryption' (Disable dropdown), and 'Key' (empty text input). A 'Signal' field shows the value '20'. At the bottom of the form are 'Save Settings' and 'Don't Save Settings' buttons. To the right of the form is a 'Helpful Hints...' section with text explaining SSID, Authentication (Open, Share), and WPA-PSK/WPA2-PSK. The bottom of the page features a 'SECURITY' header and a copyright notice: 'Copyright © 2007-2008 D-Link Corporation.'

## SETUP > Dynamic DNS

If you have a DSL or Cable service provider that changes your modem IP address periodically, Dynamic DNS (Domain Name Service), a method of keeping a domain name linked to a dynamic IP address, is useful. With most Cable and DSL connections, you are assigned a dynamic IP address and that address is used only for the duration of that specific connection. With the DCS-2102/2121, you can set up your DDNS service and the DCS-2102/2121 will automatically update your DDNS server every time it receives a different IP address. Depending on the service, this update may take a few hours.

**Enable DDNS:** Check this checkbox to enable the DDNS function of the camera.

**Server Address:** Use the dropdown box to the right to select a DDNS service to use.

**Host Name:** Type in the Host Name of the DDNS service you wish to use.

**User Name:** Enter your User Name for the DDNS service you wish to use.

**Password:** Enter the password for the DDNS service you wish to use.

**Verify Password:** Retype the password for the DDNS service you wish to use.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Time and Date  
Recording  
Snapshot  
Digital Output  
Logout

**DYNAMIC DNS**

The Dynamic DNS feature allows you to use a domain name that you have purchased (www.yourdomain.com) to access your camera with a dynamically assigned IP address. Most broadband Internet service providers assign dynamic (changing) IP addresses. By using a DDNS service, you can enter your domain name to connect to your camera no matter what your IP address is.

[Sign up for D-Link's Free DDNS service at www.DLinkDDNS.com.](http://www.DLinkDDNS.com)

Save Settings Don't Save Settings

**DYNAMIC DNS SETTING**

Enable DDNS

Server Address  << Select Dynamic DNS Server

Host Name

User Name

Password

Verify Password

Status:Failure

Save Settings Don't Save Settings

**Helpful Hints...**

Dynamic DNS is useful if you have a DSL or Cable service provider that changes your modem IP address periodically. This will allow you to assign a website domain name to your camera instead of connecting through an IP address.

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

## SETUP > Image Setup

The options in **Image Setup** allow you to adjust the settings for your IP camera sensor and image.

**Brightness:** This adjusts the brightness of the camera image. This is set to 60 by default.

**Saturation:** This adjusts the color saturation of the camera image. This is set to 60 by default.

**Contrast:** This adjusts the contrast of the camera image. This is set to 0 by default.

**Frequency:** This option adjusts the camera sensor's setting to avoid the image flickering under certain light sources, such as florescent lights. This is set to Auto by default.

**White balance:** You can change the white balance of the camera image by selecting a setting from the dropdown box. This is set to Auto by default.

**B/W:** Ticking this checkbox will change the camera image into black and white.

**Flip:** This will flip the image vertically.

**Mirror:** This will flip the image horizontally in such a way that your left side will be on the left side of the screen and vice versa.

**Note:** Mirror and Flip can be used if you choose to mount the DCS-2102/2121 upside down on the ceiling.

The screenshot displays the D-Link web interface for the DCS-2121 camera. At the top, the product name 'DCS-2121' and 'Firmware Version: 1.00' are shown. The main navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' menu is expanded to show 'IMAGE SETUP', which is highlighted. Below the navigation, a 'Helpful Hints...' section states: 'Each field ranged from 0 to 100. You can fine-tune the image.' The 'LIVE VIDEO' section shows a real-time camera feed of an office interior. Below the video, the 'IMAGE SETTINGS' section contains the following controls:

Brightness	60	Saturation	60
Contrast	0	Frequency	Auto
White balance	Auto	B/W	<input type="checkbox"/>
Flip	<input type="checkbox"/>	Mirror	<input type="checkbox"/>

A 'Reset to Default' button is located at the bottom of the settings section. The footer of the page includes the 'SECURITY' logo and the copyright notice: 'Copyright © 2007-2008 D-Link Corporation.'

## SETUP > Audio and Video

This **Audio and Video** option allows you to set up your IP camera's video quality, resolution, and frame rate.

### Video Sensor

**Sensor Output:** You can set the camera's sensor output to VGA quality (640x640), XGA quality (1024x768), or SXGA quality (1280x1024).

**Note:** When using SXGA mode, please note that motion detection and motion triggered snapshots will be disabled and that recordings will be done at a maximum of Medium resolution.

### IE Browser Video Setup (uses MPEG-4)

**Max frame rate:** This sets the maximum frame rate of the video feed when viewing your camera through Internet Explorer. The allowable maximum frame rate will vary depending on the currently selected sensor output setting.

**Fixed bit rate:** This will set the bit rate of the video.

### Non-IE Browser Video Setup (uses MJPEG)

**Max frame rate:** This sets the maximum frame rate of the video feed when viewing your camera through a non-IE web browser.

**Resolution:** This sets the resolution of the video feed when viewing your camera through a non-IE web browser.

**Fixed quality:** This sets the quality of the video.

### Mobile Video Setup (uses MPEG-4)

**Max frame rate:** This sets the maximum frame rate of the video feed when viewing your camera through a mobile device such as a phone or PDA.

**Resolution:** This sets the resolution of the video feed when viewing your camera through a mobile device such as a phone or PDA.

**Fixed bit rate:** This sets the bit rate of the video feed when viewing your camera through a mobile device such as a phone or PDA.

### Audio Setup

**Enable Speaker:** Checking this box will enable you to send audio to an external speaker (not included) attached to the external speaker jack of your camera. This will allow you to speak with another person through your camera.

**Volume:** This sets the volume level of the external speaker.

**Enable Microphone:** Checking this box will enable you to listen to audio picked up by the camera's microphone. This will allow you to hear what is happening near your camera.

**Volume:** This sets the volume level of the incoming audio.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Time and Date  
Recording  
Snapshot  
Digital Output  
Logout

**AUDIO AND VIDEO**  
Select the audio and video settings that best suit your network environment.  
Save Settings Don't Save Settings

**VIDEO SENSOR**  
Sensor Output  
 VGA (640x480)  
 XGA (1024x768)  
 SXGA (1280x1024)

**IE BROWSER VIDEO SETUP (CAN CHANGE RESOLUTION ON INDEX PAGE)**  
Max Frame Rate: 10  
Fixed Bit Rate: 2 Mbps

**NON-IE BROWSER VIDEO SETUP**  
Max Frame Rate: 5  
Resolution: 1024x768  
Fixed Quality: Excellent

**MOBILE VIDEO SETUP**  
Max Frame Rate: 5  
Resolution: 256x192  
Fixed Bit Rate: 256 Kbps

**AUDIO SETUP**  
Enable Speaker:   
Volume: 100  
Enable Microphone:   
Volume: 100  
Save Settings Don't Save Settings

**SECURITY**  
Copyright © 2007-2008 D-Link Corporation.

**Note:** Higher frame size, frame rate and bit rates will give you better video quality, but they will also require more network bandwidth. For best viewing results on a mobile phone, we suggest setting the Frame Rate to 5 fps and bit rate to 20 Kbps.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.



## SETUP > Motion Detection

This option allows you to set up Motion Detection on your IP camera. In order to use motion detection you must first check the **Enable Video Motion** checkbox. You can then click on the video window and draw motion detection zones by clicking and dragging your mouse. Red areas indicate areas that will be monitored for motion.

**Sensitivity:** This setting adjusts how sensitive the camera will be to motion, where 100% will be the most sensitive setting and 0% will be the least sensitive setting.

**Drawing Mode:** This will allow you to draw motion detection zones when clicking and dragging, or erase motion detection zones when clicking and dragging depending on which option you have selected.

**Clear:** Clicking this button will clear all motion detection zones.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

**Note:** If the camera is set to SXGA mode in **Audio and Video**, Motion Detection is disabled.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Time and Date  
Recording  
Snapshot  
Digital Output  
Logout

**MOTION DETECTION**

In order to use motion detection, you must first check the checkboxes, then draw the areas you want to monitor for motion.

Save Settings Don't Save Settings

**LIVE VIDEO**

Enable Video Motion  
1970/01/03 16:47:08 DCS-2121

Sensitivity  
90 0~100%

Drawing Mode  
 Draw motion area  
 Erase motion area  
Clear

Save Settings Don't Save Settings

**Helpful Hints...**

Sensitivity - Sets the sensitivity for motion detection.

Percentage - The recommended setting for the percentage is low. Low percentage means that motion does not have to totally cover the selected area of detection; any small movement inside the selected area will set off detection.

High sensitivity and low percentage make the motions easier to detect.

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

## SETUP > Time and Date

This option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight Saving can also be configured to automatically adjust the time when needed.

**Time Zone:** Select your time zone from the drop down menu.

**Enable Daylight Saving:** If your region uses a Daylight Saving adjustment, check this checkbox.

**Auto Daylight Saving:** This option will adjust Daylight Saving Time automatically.

**Set date and time manually:** Selecting this will let you set the Daylight Saving Time adjustment manually:

**Daylight Saving Offset:** This will set the Daylight Saving adjustment that will be used.

**Daylight Saving Date:** This will set the beginning and ending dates of the Daylight Saving period.

You can have the camera's clock set automatically, or manually.

**Synchronize with NTP Server:** Checking this checkbox will allow the camera to synchronize its clock with an NTP server.

**NTP Server:** Use the dropdown box to the right to select an NTP server to use, or you can type one in.

**Set date and time manually:** Check this checkbox to set the time and date manually. You can then use the dropdown boxes to select the current Year, Month, Day, Hour, Minute, and Second. You can also click the **Copy Your Computer's Time Settings** button to automatically fill in the dropdown boxes with the current time and date from your computer.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Time and Date  
Recording  
Snapshot  
Digital Output  
Logout

**SYSTEM SETUP**

You can configure the camera's network name and set the current time for the camera to display.

Save Settings Don't Save Settings

**TIME CONFIGURATION**

Time Zone (GMT-12:00) International Date Line West

Enable Daylight Saving

Auto Daylight Saving

Set date and time manually

Offset: +1:00

Month Week Day of week Hour Minutes

Start time 3 2 Sunday 2 00

End time 11 1 Sunday 2 00

**AUTOMATIC TIME CONFIGURATION**

Synchronize with NTP Server

NTP Server pool.ntp.org << Select NTP Server

**SET DATE AND TIME MANUALLY**

Set date and time manually

Year 1969 Month 12 Day 31

Hour 12 Minute 51 Second 36

Copy Your Computer's Time Settings

Save Settings Don't Save Settings

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

**Helpful Hints...**  
Setting the correct time and time zone will allow you to have accurate logs and proper scheduling for recordings.

## SETUP > Recording

This option allows you to configure recording settings and scheduling. You can record video to a Secure Digital card inserted into the SD card slot, or you can have video saved to a Samba network drive.

**Enable recording:** Check this checkbox to enable the recording feature. After enabling recording, you will need to select a location to record to (SD Card or Samba network drive), and you will need to select a scheduling method.

### Record to:

**SD Card:** Selecting this will allow you to record to an SD Card inserted into the SD slot on the right side of the unit.

**Samba network drive:** Selecting this will allow you to record to a Samba network drive on your wired or wireless network.

**Samba Auth:** Here, select Anonymous if no user name or password is required to access your Samba drive. If you require a user name and password to log in to your Samba drive, select Account and fill in the following information:

**User name:** Enter the user name required to access your Samba drive.

**Password:** Enter the password required to access your Samba drive.

**Password confirm:** Re-enter the password required to access your Samba drive for verification.

**Server:** Enter the name of the server your Samba drive is on.

**Shared Folder:** Enter the path that points to the shared folder e.g. \\DNS-G121\share.

### Recording Options

**Resolution:** This will let you set the resolution of the video that will be recorded.

**Record until:** You can use this setting to adjust how much free space must remain when recording. It is suggested that you set this to at least 32M to allow for enough buffer space for the camera to record with.

**When storage is full:** When your storage device is full or has reached the free space limit specified in Record until, you can choose to stop recording, or you can have the camera delete old recordings to free space for new recordings to be saved.

**Note:** If the camera is set to SXGA mode in **Audio and Video**, recordings will be made at a maximum of Medium resolution only.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

**RECORDING SETTINGS**  
In this section, you can set up the camera's recording settings.  
[Save Settings] [Don't Save Settings]

**RECORDING SETUP**

Enable recording

Record to:

SD Card  
SD Card status: disabled [Get status]

Samba network drive  
Samba Auth: Anonymous  
User name: [ ]  
Password: [ ]  
Password confirm: [ ]  
Server: [ ]  
Shared folder: [ ]  
[Test]  
Samba status: disabled [Get status]

Recording Options  
Resolution: Large  
Record until: 100 M of free space is left (minimum is 32M)  
When storage is full:  
 Stop recording  
 Overwrite older recordings

Scheduling  
 Event Based  
 Motion detection triggered recording  
 Digital input triggered recording  
Prerecord: 0 seconds (range 0 to 15 seconds)  
Postrecord: 0 seconds (range 0 to 15 seconds)  
 Continuous (Samba only)  
 Scheduled (Samba only)

		Hours	Minutes	Hours	Minutes
<input checked="" type="checkbox"/> Sun	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Mon	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Tue	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Wed	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Thu	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Fri	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Sat	Start	0	: 0	End	24 : 0

[Save Settings] [Don't Save Settings]

**SECURITY**  
Copyright © 2007-2008 D-Link Corporation.

## Scheduling

**Event Based:** Event based recording will allow you to record video when specific events happen.

**Motion detection triggered recording:** Enabling this option will set the camera to record video when motion is detected by the camera.

**Digital input triggered recording:** When the camera receives a signal from its DI input, it will start recording. You can find more information about the DI/DO interface at the end of this document.

**Prerecord:** This will set how many seconds of video before the event takes place will be recorded.

**Postrecord:** This will set how many seconds of video after the event takes place will be recorded.

**Example:** Using motion detection triggered recording and setting Prerecord to 5 seconds and Postrecord to 9 seconds, the camera will save video from 5 seconds before motion was detected to 9 seconds after motion was detected.

**Continuous:** This will set the camera to record continuously. This scheduling method can only be done when recording to a Samba drive.

**Scheduled Recording:** This will set the camera to automatically record video during the specified times in the table below. This scheduling method can only be done when recording to a Samba drive.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

Product: DCS-2121 Firmware Version: 1.00

# D-Link

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

## RECORDING SETTINGS

In this section, you can set up the camera's recording settings.

[Save Settings](#) [Don't Save Settings](#)

### RECORDING SETUP

Enable recording

Record to:

SD Card  
SD Card status : disabled [Get status](#)

Samba network drive

Samba Auth: Anonymous

User name:

Password:

Password confirm:

Server:

Shared folder:

[Test](#)

Samba status : disabled [Get status](#)

Recording Options

Resolution: Large

Record until: 100 M of free space is left (minimum is 32M)

When storage is full:

Stop recording

Overwrite older recordings

Scheduling

Event Based

Motion detection triggered recording

Digital input triggered recording

Prerecord: 0 seconds (range 0 to 15 seconds)

Postrecord: 0 seconds (range 0 to 15 seconds)

Continuous (Samba only)

Scheduled (Samba only)

		Hours	Minutes	Hours	Minutes
<input checked="" type="checkbox"/> Sun	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Mon	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Tue	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Wed	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Thu	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Fri	Start	0	: 0	End	24 : 0
<input checked="" type="checkbox"/> Sat	Start	0	: 0	End	24 : 0

[Save Settings](#) [Don't Save Settings](#)

SECURITY

Copyright © 2007-2008 D-Link Corporation.

## SETUP > Snapshot

Here, you can set the camera to take snapshots when motion is detected and/or when a signal is sent to the DI input. Snapshots can be sent to an e-mail address and/or to an FTP server.

**Enable Snapshot:** Check this box to enable the snapshot feature.

### Trigger Event:

**Motion detection:** This will set the camera to take a snapshot whenever motion is detected.

**D/I:** This will set the camera to take a snapshot whenever a signal is sent to the D/I input. You can find more information about the DI/DO interface at the end of this document.

### Send to:

**E-mail Address:** When checked, the camera will send the snapshots it takes to the e-mail address specified in the following text boxes. If you do not know what to enter for the User Name, Password, or SMTP Mail Server, contact your e-mail service provider for details.

**User Name:** Enter the username or login name for your e-mail account.

**Password:** Enter the password for your e-mail account.

**SMTP Mail Server:** Enter the SMTP server for your e-mail account.

**Sender E-mail Address:** Enter the e-mail address you want to appear as the "From:" e-mail address in the snapshot e-mail.

**Recipient E-mail Address:** Enter the e-mail address you want to send your snapshots to.

**FTP Server:** When checked, the camera will send the snapshots it takes to the e-mail address specified in the text fields. If you do not know what information to enter, contact the administrator of the FTP server for details.

**User Name:** Enter the User Name of your FTP account.

**Password:** Enter the Password of your FTP account.

**Host Name:** Enter the Host Name of your FTP account.

**Path:** Enter the file path to the location on the FTP server you want to send snapshots to.

**Filename Prefix:** Enter the prefix you want to attach to your snapshot files.

**Port:** Enter the port used by the FTP server.

**Passive Mode:** If your FTP server requires you to use passive mode, check this box.

After making any changes, click the **Save Settings** button to save your changes, or click the **Don't Save Settings** button to discard your changes.

**Note:** If the camera is set to SXGA mode in **Audio and Video**, Motion Triggered Snapshots are disabled.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Time and Date  
Recording  
Snapshot  
Digital Output  
Logout

**SNAPSHOT**

In order to enable your camera to take snapshots, you must select the checkbox of Enable Snapshot. Then, you can determine the trigger event(s) and FTP and/or email notification(s).

Save Settings Don't Save Settings

**TRIGGER**

Enable Snapshot

Trigger Event

Motion Detection  
 D/I Signal

Send to:

E-mail Address

User Name  
Password  
SMTP Mail Server  
Sender E-mail Address  
Recipient E-mail Address  
Port: 25  
Test

FTP Server

User Name  
Password  
Host Name  
Path  
Filename Prefix: DCS-2121  
Port: 21  
Passive Mode:

Save Settings Don't Save Settings

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

## SETUP > Digital Output

This screen allows you to enable the Digital Out (D/O) port, and allows you to select what events will trigger the Digital Out signal.

**Enable D/O:** Check this box to enable the D/O port.

**Motion Detection:** When checked, the D/O port will send a signal whenever motion is detected by the camera. (When motion detection has been enabled)

**D/I:** When checked, the D/O port will send a signal whenever a signal is detected on the Digital In (D/I) port.

**Note:** If the camera is set to SXGA mode in **Audio and Video**, Motion Detection is disabled.

The screenshot displays the D-Link web interface for the DCS-2121 camera. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' menu is expanded, showing options like Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Time and Date, Recording, Snapshot, Digital Output, and Logout. The 'Digital Output' page is active, featuring a 'DIGITAL OUTPUT' section with a 'Save Settings' and 'Don't Save Settings' button. Below this is a 'TRIGGER' section with an 'Enable D/O' checkbox and two options: 'Motion Detection' and 'D/I', each with its own checkbox. A 'Helpful Hints...' sidebar on the right explains that users can choose between Motion Detection or D/I as the trigger event. The footer contains the 'SECURITY' logo and copyright information for 2007-2008 D-Link Corporation.

# MAINTENANCE

## MAINTENANCE > Device Management

Here you can change the Admin password, add and manage Users, and adjust some camera settings.

**Admin Password Setting:** This section lets you change the admin password used to log in to the camera and adjust settings. **After installing the camera for the first time, it is highly recommended that you change the admin password for security purposes.**

**New Password:** Enter the new admin password to use.

**Retype Password:** Enter the new admin password again for verification. After entering the new password again, click on the **Save** button to save your changes.

**Add User Account:** User accounts allow others to log in to your camera to view the live camera feed. Users cannot change any settings however, as that is only permitted for the administrator through the admin login.

**User Name:** Enter the User Name you wish to use for the new user account.

**New Password:** Enter the password for the new user account.

**Retype Password:** Re-enter the password for the new user account for verification. After entering the password again, click **Add** to add the new user account.

**User List:** Here, you can view the current list of users by using the dropdown box. You can also delete a user by selecting them with the dropdown box, then by clicking the **Delete** button.

**Device Setting:** Here, you can change various other settings for your camera.

**Camera Name:** Here, you can change the name of your camera. This will be seen in

**Enable OSD:** This will enable the information bar On Screen Display (OSD) to appear when viewing video.

**Label:** This is the text label that will appear on the OSD.

**Show time:** If checked, the current time will be displayed on the OSD.

**LED light:** This will turn the camera's front LED indicator on or off.

After making any changes to this section, click the **Save** button to save your changes.

Product: DCS-2121 // Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO // SETUP // **MAINTENANCE** // STATUS // HELP

Device Management  
Backup and Restore  
Firmware Upgrade  
Logout

**DEVICE MANAGEMENT**

Here you can change the administrator's password for your camera as well as add and/or delete user account(s). You can configure the information, such as camera's name and time via this page. You can also enable the OSD (On-Screen Display) feature in order to display the camera name and time stamp for your video recordings.

**ADMIN PASSWORD SETTING**

New Password   
Retype Password

**ADD USER ACCOUNT**

User Name  20 users maximum  
New Password   
Retype Password

**USER LIST**

User Name

**DEVICE SETTING**

Camera Name   
 Enable OSD  
Label   
Show time   
LED light  On  Off

**Helpful Hints...**

Enabling OSD, the camera name and time will be displayed on the video screen for the user.

For security purposes, it is recommended that you change the password for your administrator account. Be sure to write down the new password to avoid having to reset the camera in the event that it is forgotten.

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

## MAINTENANCE > Backup and Restore

This screen allows you to save and restore the camera's current configuration. You can also reset all settings to factory default, and reboot the device.

**Save To Local Hard Drive:** Click on the **Save Configuration** button to save the current configuration to a hard drive.

**Load From Local Hard Drive:** To load a saved configuration, click on the **Browse...** button to select a configuration file from your hard drive, then click the **Load Configuration** button to load the new configuration.

**Restore To Factory Defaults:** Clicking this button will reset all settings to their factory defaults. If you choose to reset your settings, you will need to set up your camera again.

**Reboot Device:** Clicking the Reboot button will reboot your device

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Device Management  
Backup and Restore  
Firmware Upgrade  
Logout

**MAINTENANCE**  
Here you may backup, restore, and reboot your camera.

**SYSTEM**

Save To Local Hard Drive

Load From Local Hard Drive

Restore To Factory Defaults

Reboot Device

**Helpful Hints...**  
After the factory's default settings have been restored, use the installation wizard software provided with your camera to search and connect to the camera.

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.



## MAINTENANCE > Firmware Upgrade

Here, you can see your current firmware version and you can also upgrade your firmware with a new version. Firmware upgrades are made available at [support.dlink.com.tw](http://support.dlink.com.tw).

To upgrade your firmware, go to [support.dlink.com.tw](http://support.dlink.com.tw) and download the latest firmware to your computer's hard drive. Click on **Browse...**, select the firmware file, then click the **Upload** button. While the firmware is being upgraded, do not turn off your computer or camera, and do not disconnect your network connection from your computer or camera. Upgrading the firmware will not change any of your system settings, but it is recommended that you save your system configuration before doing a firmware upgrade.

**Note:** It is recommended that you use a wired connection for your computer and camera when upgrading the firmware.

The screenshot shows the D-Link web interface for a DCS-2121 camera. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'MAINTENANCE' tab is active, displaying the 'FIRMWARE UPGRADE' section. This section contains instructions on how to upgrade the firmware, a 'FIRMWARE INFORMATION' table showing the current version (1.00) and product name (DCS-2121), and a 'FIRMWARE UPGRADE' form with a 'File Path' input field, 'Browse...' and 'Upload' buttons. A 'Helpful Hints...' sidebar on the right provides additional guidance. The footer includes a 'SECURITY' section and a copyright notice for 2007-2008 D-Link Corporation.

Product: DCS-2121	Firmware Version: 1.00
-------------------	------------------------

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Device Management  
Backup and Restore  
Firmware Upgrade  
Logout

### FIRMWARE UPGRADE

A new firmware upgrade may be available for your IP camera. It is recommended to keep your IP camera firmware up-to-date to maintain and improve the functionality and performance of your internet camera. Click here [D-Link Support Page](#) to check for the latest firmware version available.

To upgrade the firmware on your IP camera, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the Browse button. Once you have found and opened the file using the browse button, click the "Upload" button to start the firmware upgrade.

#### FIRMWARE INFORMATION

Current Firmware Version: 1.00
Current Product Name: DCS-2121

#### FIRMWARE UPGRADE

File Path:

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

**Helpful Hints...**  
Firmware updates are released periodically to improve the functionality of your IP camera and also to add new features. If you run into a problem with a specific feature of the IP camera, check our support site by clicking [here](#) to check for an upgrade and see if updated firmware is available for your IP camera.

# STATUS

The Status section provides the detail information about your IP camera.

## STATUS > Device Info

This screen shows you various information about your camera and its current settings.

The screenshot displays the web interface for a D-Link camera. At the top, it shows 'Product: DCS-2121' and 'Firmware Version: 1.00'. The D-Link logo is prominently displayed. Below the logo is a navigation menu with tabs for 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'STATUS' tab is selected, and the 'Device Info' sub-tab is active. The main content area is titled 'DEVICE INFORMATION' and contains a table of network and system details. A 'Helpful Hints...' sidebar on the right explains that this page shows camera and network settings. At the bottom, there is a 'SECURITY' section and a copyright notice for 2007-2008 D-Link Corporation.

INFORMATION	
Camera Name	DCS-2121
Time & Date	Sat Jan 3 16:56:29 GMT 1970
Firmware Version	1.00, 1615
MAC Address	12:34:56:78:9A:BC
IP Address	192.168.0.20
IP Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
Primary DNS	
Secondary DNS	
PPPoE	Disabled
DDNS	Disabled

## STATUS> Log

The log shows you a list of events that have happened recently. You can download the log by clicking the **Download** button, or you can empty the log by clicking the **Clear** button.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Device Info

Log

Logout

**SYSTEM LOG**

The system log records camera events that have occurred.

**CURRENT LOG**

1969-12-31 14:45:59 System is booted up.  
1969-12-31 14:48:50 System is rebooting.  
1969-12-31 14:49:37 System is booted up.  
1969-12-31 15:27:02 System is booted up.  
1969-12-31 15:53:54 System is rebooting.  
1969-12-31 15:54:39 System is booted up.  
1969-12-31 17:11:05 System is booted up.  
1969-12-31 17:13:20 System is rebooting.  
1969-12-31 17:17:08 System is booted up.  
1969-12-31 17:19:53 System is rebooting.  
1969-12-31 17:28:38 System is booted up.  
1969-12-31 17:32:14 System is rebooting.  
1969-12-31 17:33:00 System is booted up.  
1970-01-03 12:18:32 System is booted up.  
1970-01-03 16:25:36 System is booted up.  
1970-01-03 16:34:20 System is booted up.  
1970-01-03 16:46:41 System is booted up.

**Helpful Hints..**

You can save the log to your local hard drive by clicking the Download button, and you can clear the log by clicking on the Clear button.

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

# HELP

The **Help** screen provides you with support information about the DCS-2102/2121 for your reference.

Product: DCS-2121 Firmware Version: 1.00

**D-Link**

DCS-2121 // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Help Menu  
Logout

**HELP MENU**

- LIVE VIDEO
- SETUP
- MAINTENANCE
- STATUS

**LIVE VIDEO**

- Camera

**SETUP**

- Network Setup
- Wireless Setup
- Dynamic DNS
- Image Setup
- Audio And Video
- Mail And Ptp
- Time and Date
- Motion Detection
- Recording
- Snapshot

**MAINTENANCE**

- Device Management
- Backup and Restore
- Firmware Upgrade

**STATUS**

- Device Info
- Log

**SECURITY**

Copyright © 2007-2008 D-Link Corporation.

# Installing the DCS-2102/2121 Behind a Router

If you connect your cameras to an Internet router, follow these steps to allow remote access to your cameras, so you can access your cameras from any Internet-connected PC:

- 1) Identify your camera on the network
- 2) Assign a local IP address and port for your camera
- 3) Determine your router's WAN IP Address (Enable Remote Viewing)
- 4) Open virtual server ports for your router (Enable Remote Viewing)

## 1) Identify Your Camera on the Network

- Log into your camera's web interface from a computer on the same local (home) network
- Click on the **MAINTENANCE** tab, and select **Device Management**
- Enter a unique Camera Name for your camera

**Note:** Giving your camera a unique name is important when setting up multiple cameras on your network.

The screenshot displays the D-Link DCS-2121 web interface. At the top, it shows 'Product: DCS-2121' and 'Firmware Version: 1.00'. The D-Link logo is prominent. Below the logo is a navigation bar with tabs for 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'MAINTENANCE' tab is selected. On the left side, there is a sidebar menu with options: 'Device Management', 'Backup and Restore', 'Firmware Upgrade', and 'Logout'. The main content area is titled 'DEVICE MANAGEMENT' and contains several sections: 'ADMIN PASSWORD SETTING' with input fields for 'New Password' and 'Retype Password' and a 'Save' button; 'ADD USER ACCOUNT' with input fields for 'User Name', 'New Password', and 'Retype Password', and an 'Add' button; 'USER LIST' with a dropdown menu for 'User Name' and a 'Delete' button; and 'DEVICE SETTING' with input fields for 'Camera Name' and 'Label', checkboxes for 'Enable OSD' and 'Show time', radio buttons for 'LED light' (On/Off), and a 'Save' button. A 'Helpful Hints...' sidebar on the right provides additional information about enabling OSD and password security. At the bottom, there is a 'SECURITY' section and a copyright notice: 'Copyright © 2007-2008 D-Link Corporation.'

## 2) Assign a Local IP Address and Port for Your Camera

- Click on the **SETUP** tab, and select **Network Setup**

A Local IP Address is required to configure your camera and to view your camera within your local network. You may use the default camera IP Address of 192.168.0.20. If you wish to use a different IP Address, be sure that the camera settings correspond to your network settings. The Default Gateway will be the IP Address of your router's Local IP Address (e.g.192.168.0.1, if you are using a D-Link router)

The screenshot displays the D-Link DCS-2121 camera's web interface. At the top, it shows 'Product: DCS-2121' and 'Firmware Version: 1.00'. The main navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' tab is active, and the 'NETWORK SETUP' sub-tab is selected. The interface is divided into three main sections: a left sidebar with navigation options, a central configuration area, and a right sidebar with helpful hints.

**Left Sidebar:** Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Time and Date, Recording, Snapshot, Digital Output, Logout.

**Central Configuration Area:**

- NETWORK SETUP:** You can configure your LAN and Internet settings here. Buttons: Save Settings, Don't Save Settings.
- LAN SETTINGS:**
  - LAN:  DHCP Connection,  Static IP Address
  - IP Address: 192.168.0.20
  - Subnet Mask: 255.255.255.0
  - Default Gateway: 192.168.0.1
  - Primary DNS: [ ]
  - Secondary DNS: [ ]
  - Enable UPnP
  - Enable UPnP port forwarding
  - Enable PPPoE
  - User Name: [ ]
  - Password: [ ]
  - Confirm password: [ ]
- PORT DETAIL SETTINGS:**
  - HTTP port: 80
  - RTSP port: 554

**Right Sidebar: Helpful Hints...**

- Select DHCP Connection if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically.
- Enabling UPnP settings will allow you to configure your camera as an UPnP device in the network.
- Port Detail Settings allow you to specify the ports you reserve for both HTTP and RTSP Streaming.
- HTTP Port is the port you allocate in order to connect to the camera via a standard web browser.
- RTSP Port is the port you allocate in order to connect to a camera by using streaming mobile device(s), such as a mobile phone or PDA.

**Bottom:** SECURITY, Copyright © 2007-2008 D-Link Corporation.

### 3) Open the HTTP Port

The HTTP Port option is used when multiple cameras are being installed behind a single public IP address and will be accessed remotely OR for using a port other than the default port for image viewing. For each additional camera that is installed, you must assign the appropriate Web server port for each camera to enable remote viewing.

By default, port 80 (Web server port) is open. If these ports are available for use, you DO NOT have to open a second port and can proceed to the next section.

**If port 80 is not available** (for example, if you are already using port 80 to run a Web server or your ISP blocks access on port 80\*) you MUST open a second port and designate a new Web server port (800, 801, 802, etc.). Similarly, if port 554 is not available, you will need to open a different port for RTSP.

**Note:** Be sure to take note of these settings since these same settings will be used to configure your router.

**Note:** Some ISPs block traffic on commonly used ports like port 80 to disallow consumers from putting a server on their network. Be sure to check with your ISP so that you can open the appropriate ports accordingly. If your ISP does not pass traffic on port 80, you will need to change the Web server port the camera uses from 80 to something else, like 800. If you are behind a residential gateway, you will need to open a corresponding port on your gateway as well. Not all gateways are the same, please refer to your gateway's user's manual for specific instructions on how to forward ports.

The screenshot displays the D-Link DCS-2121 web interface. At the top, it shows 'Product: DCS-2121' and 'Firmware Version: 1.00'. The main navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' menu is expanded, showing options like Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Time and Date, Recording, Snapshot, Digital Output, and Logout. The 'Network Setup' page is active, featuring a 'NETWORK SETUP' header and a 'Save Settings' / 'Don't Save Settings' button. Below this is the 'LAN SETTINGS' section, which includes a 'LAN' sub-section with radio buttons for 'DHCP Connection' (selected) and 'Static IP Address'. Fields for IP Address (192.168.0.20), Subnet Mask (255.255.255.0), Default Gateway (192.168.0.1), Primary DNS, and Secondary DNS are present. There are also checkboxes for 'Enable UPnP' (checked), 'Enable UPnP port forwarding' (checked), and 'Enable PPPoE' (unchecked). User Name, Password, and Confirm password fields are also visible. Below the LAN settings is the 'PORT DETAIL SETTINGS' section, which has input fields for 'HTTP port' (80) and 'RTSP port' (554), with 'Save Settings' and 'Don't Save Settings' buttons. At the bottom, there is a 'SECURITY' section and a copyright notice: 'Copyright © 2007-2008 D-Link Corporation.' On the right side of the interface, there is a 'Helpful Hints...' section with several paragraphs of text providing additional information about DHCP, UPnP, HTTP, and RTSP ports.

## Router Setup

The following steps generally apply to any router that you have on your network. The D-Link DIR-300 is used as an example to clarify the configuration process. Your WAN IP Address information will be listed on following window.

The screenshot displays the D-Link DIR-300 web interface. At the top, it shows 'Product Page : DIR-300' and 'Firmware Version : 1.02'. The main navigation bar includes 'DIR-300', 'SETUP', 'ADVANCED', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'STATUS' page is active, showing 'DEVICE INFORMATION' with the text: 'All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.' Below this, it states 'Firmware Version : 1.02 , Thu 04 Oct 2007'. The interface is divided into three sections: LAN, INTERNET, and WIRELESS 802.11G. The LAN section shows: MAC Address : 00:19:5b:9c:ac:65, IP Address : 192.168.0.1, Subnet Mask : 255.255.255.0, and DHCP Server : Enabled. The INTERNET section shows: MAC Address : 00:19:5b:9c:ac:66, Connection : Static IP, IP Address : 61.222.67.100, Subnet Mask : 255.255.255.128, Default Gateway : 61.222.67.1, and DNS : 168.95.1.1 168.95.192.1. The WIRELESS 802.11G section shows: SSID : DIR-300 test, Channel : 3, and Encryption : 64 bits. On the left sidebar, there is a 'Reboot' button and an 'Internet Offline' indicator. A 'Helpful Hints..' section on the right provides additional information about LAN, Internet, and WIRELESS 802.11G connection details.

LAN
MAC Address : 00:19:5b:9c:ac:65 IP Address : 192.168.0.1 Subnet Mask : 255.255.255.0 DHCP Server : Enabled

INTERNET
MAC Address : 00:19:5b:9c:ac:66 Connection : Static IP IP Address : 61.222.67.100 Subnet Mask : 255.255.255.128 Default Gateway : 61.222.67.1 DNS : 168.95.1.1 168.95.192.1

WIRELESS 802.11G
SSID : DIR-300 test Channel : 3 Encryption : 64 bits

**Note:** Because a dynamic WAN IP address can change from time to time depending on your ISP, you may want to obtain a Static IP address from your ISP. A Static IP address is a fixed IP address that will not change over time and will be more convenient for you to use to access your camera from a remote location. You can use DDNS to obtain an IP address, please refer to page 27 for more information.



## 4) Open Virtual Server Ports to Enable Remote Image Viewing

The Virtual Server Ports of your router must be opened for remote access to your camera. This is also referred to as port forwarding. Please proceed as follows:

- Select Enabled to enable virtual server settings.
- Select a camera name.
- Enter your camera's Local IP Address in the private/local IP field.
- Select TCP under Protocol Type.
- Enter 80 for your public port, and whatever port your camera's HTTP port is set to use (80 is the default).
  - **Note:** If you are using more than one camera, you will need to select a different public port for each camera.  
If you cannot use port 80 for your public port (for example, if you are already running a web server), select a different public port for your camera.
- The schedule should be set to Always so that the camera images can be accessed at any time.
- In the Virtual Servers List, a check mark appearing before the camera name will indicate that the ports are enabled.
- Click Apply to save your settings.

You will need to repeat these steps to open an RTSP port for your camera (port 554 by default).

## Viewing Your Camera Over the Internet

After all settings have been entered correctly, a user inside or outside your network will have access to the camera through a standard Web browser. To access your camera, simply type in the IP Address of the router given to you by your ISP, a colon, and the HTTP port number that you gave your camera.

`http://<ip address>:<port>`

To access your camera's video streams directly, open your PC's/device's web browser or media player and type in the IP Address of the router given to you by your ISP, a colon, the RTSP port number that you gave your camera, then the type of video stream you want to view as follows:

3gpp stream (mobile phone / pda): `rtsp://<ip address>:<port>/3gpp`  
MPEG-4 stream (PC): `rtsp://<ip address>:<port>/mp4`  
MJPEG stream (PC): `rtsp://<ip address>:<port>/jpeg`

To access your camera from a computer on your local (home) network, simply enter the local IP Address of your camera (i.e. 192.168.0.35). If using a port other than port 80, you must enter the IP address followed by a colon and the assigned port number.

## Viewing Your Camera Over the Internet Behind a Router

If you want to view one of your cameras over the Internet and your PC is behind a router or firewall, you may need to activate port triggering. This will allow you to open the necessary ports in order to view video from your camera. Consult your router/firewall's User Manual, and use the following information to set up port triggering:

- Port trigger: 554 (if you have changed the RTSP port on your camera, use that number here)
- Ports to open: 6970-6990

# Frequently Asked Questions

## Internet Camera Features

### **1 What is an Internet Camera?**

An Internet Camera is a standalone system that connects directly to an Ethernet or Fast Ethernet network and supported by the wireless transmission based on the IEEE 802.11g standard, whereas conventional PC Cameras require connection to a powered PC to function. An Internet Camera is an all-in-one system with a built-in CPU, providing a low cost web-based solution that can transmit high quality video images for monitoring. The Internet Camera can be managed remotely, and can be accessed and controlled from any PC locally or through the Internet via a Web browser.

### **2 What is the maximum number of users that can be allowed to access DCS-2102/2121 simultaneously?**

The maximum number of users that can log onto the Internet Camera at the same time is 10. Please keep in mind that overall video performance will slow down when multiple users are logged on.

### **3 What algorithm is used to compress the digital image?**

MPEG-4 and MJPEG are used to provide high quality images at low bandwidths.

### **4 Can I capture still images from the Internet Camera?**

Yes. You may record snapshots using the snapshot feature on the Home page. When viewing this page, press the "snapshot" button to capture the image and save it to your hard drive.

### **5 Can the Internet Camera be used outdoors?**

The Internet Camera is not weatherproof and is not recommended for outdoor use.

### **6 What network cabling is required for the Internet Camera?**

The Internet Camera uses Category 5 UTP Twisted-pair cable for 10 Base-T and 100 Base-T networking.

### **7 Can the Internet Camera be used as a webcam for my computer?**

No, the Internet Camera only functions through an Ethernet or wireless (DCS-2121 only) network. Other cameras such as the D-Link DSB-C110 and DSB-C310 can be used as a PC Camera (webcam).

### **8 Can the Internet Camera be connected to a network if it consists of only private IP Addresses?**

Yes, the Internet Camera can be connected to a LAN with private IP Addresses.

### **9 Can the Internet Camera be installed if a firewall exists on the network?**

If a firewall exists on the network, port 80 needs to be opened for data communication. You will need to do port forwarding by opening a port to the camera. Please refer to your firewall's product manual for detailed instructions.

### **10 Why can't I access the Internet Camera from a web browser?**

A possible cause might be that the IP Address for the Internet Camera is already being used by another device. To correct the possible problem, you need to first disconnect the Internet Camera from the network. Then try to PING (follow the instructions in the section titled How to PING Your IP Address:) the IP address your Internet Camera is set to use. If there is a reply, it indicates that there is another device on the network with the same IP address. You will need to run the Install Wizard again and change the IP address of the camera.

Other possible problems might be due to the network cable; try using another network cable. Test the network interface of the product by connecting a local computer directly to the unit, utilizing a standard Crossover Cable, and run the PING utility. If the problem is not solved, the Internet Camera might be faulty.

## **Internet Camera Installation**

### **11 Why does the Power LED not light up?**

Make sure that you are using the provided 5V DC power supply for the Internet Camera and verify that the power supply is securely connected.

### **12 Why does the Internet Camera work locally but not externally?**

This might be caused by a firewall. Check with your system administrator; the firewall may need to have some settings changed in order for the Internet Camera to be accessible outside your local LAN. Refer to page 42 for more information about installing your camera behind a router.

Make sure that the Internet Camera isn't conflicting with any web server you may have running on your network.

The default router setting might be a possible reason. Check that the configuration of the router settings allows the Internet Camera to be accessed outside your local LAN.

### **14 Why does a series of broad vertical white lines appear through out the image?**

It could be that the CMOS sensor used to record video has become overloaded from exposure to bright lights, such as direct exposure to sunlight or halogen lights. Reposition the Internet Camera into a more shaded area immediately, as prolonged exposure to bright lights will damage the CMOS sensor.

### **15 The video image is blurry, how can I correct it?**

Adjust the Internet Camera focus manually as described in the section titled "Adjusting the Camera Focus" on this manual.

### **16 The video image is noisy(has small colored dots). How can I solve the problem?**

The video images might be noisy if the Internet Camera is used in a very low light environment.

### **17 The images are low quality or blocky. How can I improve the image quality?**

Make sure that your computers display properties are set to at least 6-bit color. Using 16 or 256 colors on your computer will produce dithering artifacts in the image, making the image look as if it is of poor quality.

You can also adjust image settings in the camera's web interface. In the Image Setup section of the web interface, you can adjust image related parameters including brightness, contrast, and saturation. Please refer to the Setup > Image Setup section for detailed information.

### **18 Why are no images available through the Web browser?**

ActiveX might be disabled on your web browser. If you are viewing the images from Internet Explorer, make sure ActiveX has been enabled in the Internet Options menu. You may also need to change the security settings on your browser to allow the ActiveX plug-in to be installed.

If you are using Internet Explorer version 5 or lower, then you will need to upgrade your Web browser software in order to view the streaming video transmitted by the Internet Camera.


Also, make sure that your anti-virus program is not blocking ActiveX controls.

# How to Ping Your IP Address

The PING (Packet Internet Groper) command can determine whether a specific IP Address is accessible by sending a packet to the specific address and waiting for a reply. It is a very useful tool to confirm if the IP Address conflicts with the Internet Camera over the network.

Follow the step-by-step procedure below to utilize the PING command.

- Start a **DOS** window **Start**→ **Program**→ **Accessories**→ **Command Prompt**.
- Type **ping x.x.x.x**, where **x.x.x.x** is the IP Address of the Internet Camera.
- A successful connection to the camera will be indicated by 4 reply statements (below).

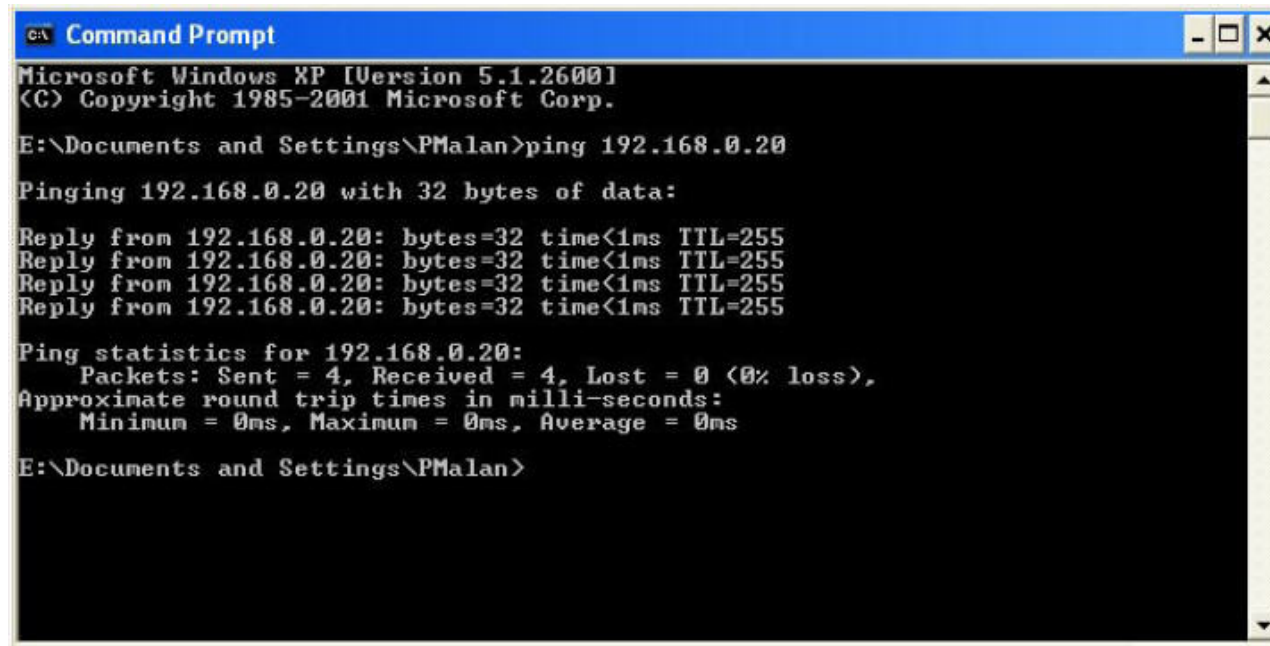

```
c:\ Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

E:\Documents and Settings\PMalan>ping 192.168.0.20


Pinging 192.168.0.20 with 32 bytes of data:

Reply from 192.168.0.20: bytes=32 time<1ms TTL=255
Reply from 192.168.0.20: bytes=32 time<1ms TTL=255
Reply from 192.168.0.20: bytes=32 time<1ms TTL=255
Reply from 192.168.0.20: bytes=32 time<1ms TTL=255

Ping statistics for 192.168.0.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

E:\Documents and Settings\PMalan>
```

If you fail to connect to your camera you will see the following:

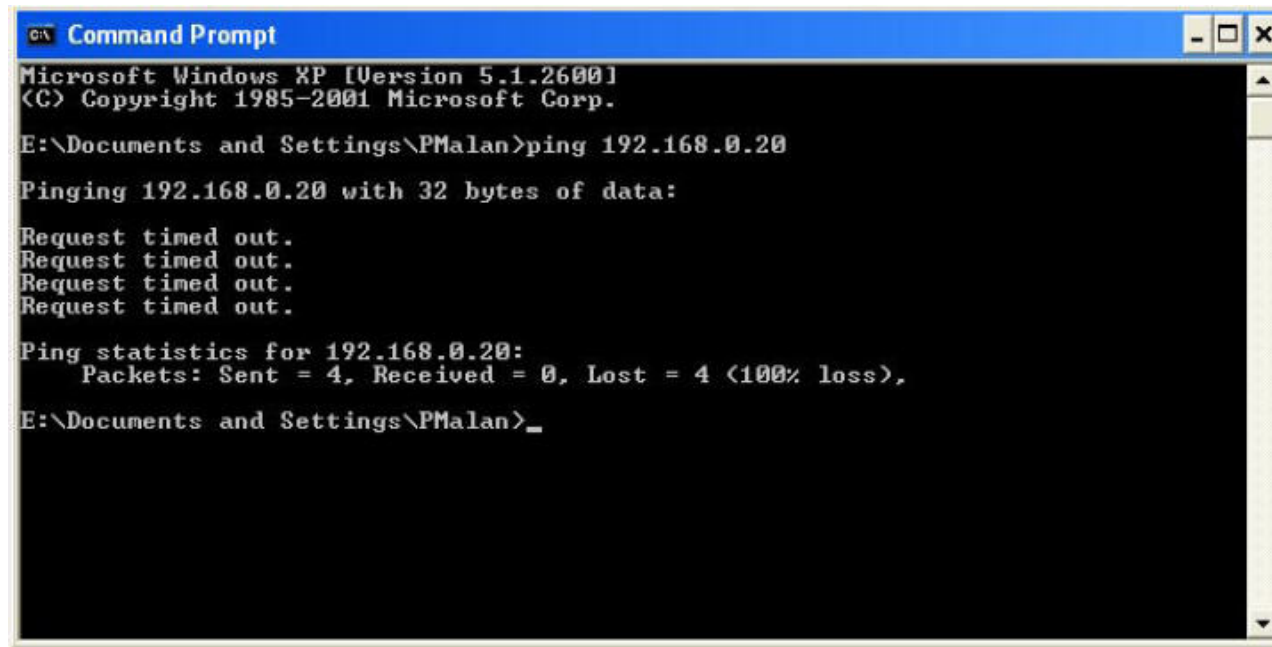A screenshot of a Windows XP Command Prompt window. The title bar reads "Command Prompt". The text inside the window shows the following: "Microsoft Windows XP [Version 5.1.2600] (C) Copyright 1985-2001 Microsoft Corp." followed by the command "E:\Documents and Settings\PMalan>ping 192.168.0.20". The output shows "Pinging 192.168.0.20 with 32 bytes of data:" followed by four lines of "Request timed out." and then "Ping statistics for 192.168.0.20: Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),". The prompt ends with "E:\Documents and Settings\PMalan>\_".

```
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

E:\Documents and Settings\PMalan>ping 192.168.0.20

Pinging 192.168.0.20 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.0.20:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

E:\Documents and Settings\PMalan>_
```

Check to see if you have entered your camera's IP Address correctly or reassign your camera's IP Address.

# Time Zone Table

(GMT -12:00) International Dateline West
(GMT -11:00) Midway Island, Samoa
(GMT -10:00) Hawaii Island
(GMT -09:00) Alaska
(GMT -08:00) Pacific Time (US & Canada); Tijuana
(GMT -07:00) Mountain Time (US & Canada)
(GMT -06:00) Central Time (US & Canada)
(GMT -05:00) Eastern Time (US & Canada)
(GMT -04:00) Atlantic Time (Canada)
(GMT -03:00) Buenos Aires, Georgetown
(GMT -02:00) Mid-Atlantic
(GMT -01:00) Cape Verde Is.
(GMT +00:00) Casablanca, Monrovia
(GMT +00:00) Greenwich Mean Time Dublin, Edinburgh, Lisbon, London
(GMT +01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
(GMT +02:00) Athens, Bucharest, Istanbul, Minsk
(GMT +03:00) Moscow, St. Petersburg, Volgograd
(GMT +04:00) Abu Dhabi, Muscat
(GMT +05:00) Islamabad, Karachi, Tashkent
(GMT +06:00) Almaty, Novosibirsk
(GMT +06:30) Rangoon
(GMT +07:00) Bangkok, Hanoi, Jakarta
(GMT +08:00) Beijing, Chongqing, Hong Kong, Urumqi
(GMT +09:00) Osaka, Sapporo, Tokyo
(GMT +10:00) Canberra, Melbourne, Sydney
(GMT +11:00) Magadan, Solomon Is., New Caledonia
(GMT +12:00) Auckland, Fiji, Kamchatka, Marshal Is.
(GMT +13:00) Nuku'alfoa



# DI/DO Input specifications

## DO Digital Output:

- Normal: open circuit
- Trigger: short circuit

After powering on or rebooting the DCS-2121, the camera will be in Normal mode by default.

## DI Digital Input:

- Normal: no current
- Trigger: 12V current

As the Digital Input signal is controlled by an external device, we recommend that you set your device to feed no current normally, and feed a 12V current only to trigger a DI event on the DCS-2121.

# Technical Specifications

## Video Codec

MPEG-4 / MJPEG

## Audio Codec

GSM-AMR: 8kbps, ADPCM: 8Kbps

## Sensor

1/4" color 1.3MP CMOS sensor

## SDRAM

64 Mbytes

## Flash Memory

8 Mbytes

## SD-Card Slot

Supports SD Cards up to 16GB

## Lens

5.01mm, F2.8

## LAN

- 10/100BASE T port
- IEEE 802.3 compliant
- IEEE 802.3u compliant
- Supports Full-Duplex operation
- MDI/MDIX auto-negotiation
- 802.3x Flow Control support for Full-Duplex mode

## MIC

50dB +/- 3dB, Omni-directional

## I/O Connector

1 Input (photo relay, active high 12V +/- 3V, dropout: 0 VDC)

1 Output (photo relay, Close circuit current: AC 70mA or DC 100mA; 40Ohm; Open circuit voltage: 240 VAC or 350VDC)

**Audio Out**

Yes

**Reset Button**

Reset to factory default

**Dimension (WxDxH)**

71.9mm x 110.0mm x 37mm (without bracket and stand)

**Weight**

DCS-2121: 281.4g (without bracket and stand)

DCS-2102: 265.3g (without bracket and stand)

**Max Power Consumption**

- 6W
- Input: 100-240VAC, 50/60Hz
- Output: 5VDC, 2.5A

**Networking****Protocol**

- IPV4, ARP, TCP, UDP, ICMP
- DHCP Client
- NTP Client
- DNS Client
- DDNS Client
- SMTP Client
- FTP Client
- HTTP Server
- Samba Client
- PPPoE
- RTP
- RTSP
- RTCP
- 3GPP

**Connectivity**

- 802.11b/g Wireless with WEP/WPA/WPA2 security (DCS-2121 only)
- 10/100Mbps Fast Ethernet Auto Negotiation

## Video

### Algorithm Supported

- MPEG-4/MJPEG simultaneous dual-format compression
- JPEG for still image

### Features

- Adjustable image size and quality
- Time stamp and text overlay
- Configurable motion detection zones

### Resolution

1.3M:

1280 x 1024 at up to 10fps

1024 x 768 / 512 x 384 / 256 x 192 at up to 10fps

300K:

640 x 480 / 320 x 240 / 160 x 120 at up to 30fps

### Low Lux

0.5 lux @ F2.8

### 3A control

AGC, AWB, AES

## Audio

### Sample rate

AMR: 8Kbps, PCM: 8Kbps

## Microphone

### Direction

Omni-directional

### Frequency

50~16000Hz

### S/N ratio

50dB +/- 3dB, Omni-directional

## **OS Support**

### **Device**

Windows 2000 / Windows XP / Windows Vista / 3GPP Mobile Phone

### **Utility**

Windows 2000 / Windows XP / Windows Vista

## **Physical Environment**

### **Power**

- 5V 2.5A switching power adapter
- External AC-to-DC Switching Power Adapter
- Type: USA / UK / EUR / AUS / CN

### **Operation Temperature**

0 to 40 °C (32 to 104°F)

### **Storage Temperature**

- 20 to 70 °C (-4 to 158 °F)

### **Humidity**

20-80% RH non-condensing

## **Emission (EMI), Safety & Other Certifications**

- FCC
- IC
- C-Tick
- CE

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>