



User Manual

2-Bay Professional Network Video Recorder (NVR)

DNR-326

Manual Overview

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. Information in this document may become obsolete as our services and websites develop and change. Please refer to the www.mydlink.com website for the most current information.

Manual Revisions

Revision	Date	Description
2.00	October 24, 2013	DNR-326 A2 with firmware version 2.00, various updates
2.10	September 22, 2014	add power usage

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2014 by D-Link Corporation.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

Power Usage

This device is an Energy Related Product (ErP) designed to be always on. It can be turned off through a power switch to save energy when it is not needed.

Switched Off: 0.36 watts

Table of Contents

Manual Overview	i	Event Setup.....	30
Manual Revisions.....	i	E-mail Setup.....	31
Trademarks	i	Time and Date.....	32
Package Contents.....	1	Maintenance	33
Features.....	4	User Management.....	33
Hardware Overview.....	7	System	35
Front View.....	7	Firmware Upgrade.....	36
Rear Panel (Connections).....	8	RAID.....	37
Installation	9	Dynamic DNS	39
Install the Hard Drives.....	9	Status	40
Getting Started.....	12	Camera Status	40
D-Link NVR Search Utility	13	System Info	41
Web UI Login.....	15	Logs	42
Auto Search Camera.....	16	NVR Log.....	43
Web UI	18	Support	44
Setup.....	19	Live Video	45
Configuring the NVR.....	19	LiveView Setting	48
Network Setup.....	20	Multiple View	51
Camera Search.....	21	Playback.....	52
Camera Setup.....	22	Record and Playback Settings.....	55
Audio and Video.....	23	Search the Recorded Video For Playback.....	56
2nd Stream Settings	24	Smart Search from the Recorded Video	58
Live and Playback Setup	25	Recorded Video Enhancement	60
Recording Schedule.....	26	Save Video	61
Auto Backup	29	Save Image.....	62

Print Image.....	63
Print Setup.....	63
Back Up Recorded Video	64
Multi-NVR Viewer Application.....	65
Playback Manager Application.....	67
Set Connections	69
Backup System	70
Verification Tool.....	72
Troubleshooting	73
Choose a RAID Level	75
Replacing or Adding a New Hard Drive.....	77
Technical Specifications	78

Package Contents

- D-Link DNR-326 2-Bay Professional Network Video Recorder (NVR)
- CAT5 Ethernet Cable
- Power Adapter
- Cable Holder
- Manual and Software on CD
- Quick Installation Guide

Note: Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.

If any of the above items are missing, please contact your reseller.



System Requirements

Hardware Requirements	<ul style="list-style-type: none"> • One or two 3.5" SATA hard disk drive(s)*
Network Requirements	<ul style="list-style-type: none"> • Broadband Internet connection (for remote access) • Network camera(s) (refer to the D-Link website for a list of supported cameras) • 10/100/1000 Mbit Gigabit Ethernet switch or router
Web-based Configuration Utility Requirements/Remote PC Minimum Requirements	<p>Computer with the following:</p> <ul style="list-style-type: none"> • Microsoft Windows® 8/7/Vista, or XP (32-bit) • Pentium 4 - 2.4 GHz or higher • 512 MB or higher <p>Browser Requirements:</p> <ul style="list-style-type: none"> • Windows: Internet Explorer or Chrome • Mac OS: Safari <p>Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.</p>
Optional	<ul style="list-style-type: none"> • UPS with USB interface

*Hard disk drives should be from the same manufacturer. To ensure maximum performance, identical drives are recommended for RAID 1 configurations.

Introduction

Congratulations on your purchase of the DNR-326 2-bay Professional NVR. The DNR-326 is a standalone wired Network Video Recorder (NVR) which supports D-Link multi-channel network cameras, as well as those of other top brands, with M-JPEG, MPEG4, or H.264 recording with capacity for two high-speed 3.5-inch SATA hard disks for long-term recording. Thanks to the powerful embedded system, the NVR can record video from network cameras located in local or remote sites to a dedicated HDD storage without requiring a PC to be turned on.

The DNR-326 can be easily set up for Internet access through PPPoE and DDNS. It supports real-time monitoring and playback from anywhere via a web browser. The triplex function allows the DNR-326 to keep recording while the user is viewing live footage or searching playback at the same time. With complete video management and a full set of display and playback functionality, the DNR-326 is a convenient and stable video recorder.

The DNR-326 is a professional NVR designed for small and medium businesses; it supports all D-Link network cameras and those of other top brands including Axis, Panasonic, Sony, Mobotix, Arecont Vision, IQinVision, Cisco, and ACTi. The Smart Search feature dramatically increases the convenience and efficiency of searching through recorded video footage. Furthermore, the bundled software – D-ViewCam NVR – can connect and group footage from multiple NVRs, and displays them in a split window.

Features

Comprehensive IP Surveillance Solution

- **Total Solution:** The D-Link NVR is a standalone SATA RAID network video recorder capable of 24/7 recording without a PC. The NVR can manage multiple network cameras, providing direct access to viewing live video and playing recorded data through the Internet from anywhere anytime. The device itself is compact in size and incorporates a physical security lock.
- **Easy to Use:** A user-friendly GUI simplifies network and camera setup, allowing users to easily access multiple cameras for viewing, recording, playback, and configuration.
- **Centralized Interface for Configuration:** The NVR provides a flexible and economic alternative to manage and configure multiple network cameras on a centralized web interface.
- **Megapixel Resolution Support:** The major advantage of digital over analog video is its higher resolution support. The NVR supports high-resolution megapixel recording for vivid video with high clarity.

Complete Network Functionality

- **PPPoE Support:** The D-Link NVR utilizes ADSL services. It can connect to the Internet via an ADSL modem over Ethernet.
- **DDNS Support:** Dynamic DNS is a solution for users without a fixed IP address. With DDNS service, users can connect to the NVR from the Internet using an easy-to-remember domain name.
- **NTP Support:** Maintaining an accurate record of time is essential if recorded data is to be used as evidence. To ensure that the time recording is always accurate, the NVR can update the system clock from an Internet server using the Network Time Protocol (NTP).
- **DHCP Server:** The NVR can act as a DHCP server for easy deployment when the network environment is very simple and there is no existing DHCP server.

Fully Functional Recording

- **Flexible Recording Schedule:** Once cameras have been set up, a highly configurable scheduling system allows for continuous recording or recording during specifically allotted time frames. Each camera can be set to record

independently at preset intervals. It also provides event recording based on specific triggers.

- **Recording Automatic Overwrite:** The NVR can be configured to overwrite the oldest data automatically when Hard Disk space runs out, allowing for continuous and uninterrupted recording. Users can specify the number of days the recording should be kept (within the limits of the Hard Disk capacity). For example, if the NVR has the capacity to store 7 days of recording, using the overwrite option, the NVR will record the 8th day and delete the 1st day.
- **Recording Stop Alert:** The NVR also provides the option to stop recording when the Hard Disk is full. When the disk reaches full capacity, a notification can be sent via email or to an external device such as an audible alarm or LED display.

Comprehensive Data and Hardware Security

- **Secure Data:** RAID 1 duplicates the recordings database onto two separate drives. In the event of a Hard Disk failure, data integrity is maintained on the secondary Hard Disk.
- **Auto Boot after Power Recovery:** The NVR will boot up automatically once the power is recovered after a power outage.
- **Access List Control:** Users can specify safe and blocked IP addresses to filter the external connections; this feature increases data security.
- **Multiple User Privilege Control:** Administrators may also choose access privileges for users by specifying the cameras they may have access to for live view, playback, audio, and PTZ functions.
- **UPS Status Monitor:** A UPS can be used as an emergency power supply for the NVR. The UPS uses a USB interface to notify the NVR to perform a proper shutdown before battery power runs out.
- **Backup Recording Data:** Recorded data is stored in a secure database. This recorded data can be backed up to additional storage locations periodically or whenever needed.

Powerful Event Management

- **Camera Status:** The camera status page will show the connection, recording, frame rate, and bit rate information of each camera. Meanwhile, the estimated available recording time is also displayed for quick reference.
- **Flexible Event Management:** Event setup is another key configuration feature of the NVR. The NVR can monitor all of the camera triggers from motion detection. One of the most powerful functions is the notification application. The NVR centrally controls the email and recording of all the connected cameras.

Instant Live View

- **Full Screen:** The display can be enlarged to full screen for live view and recorded video.
- **Drag and Drop GUI:** With multiple channels enabled, users can change channels by drag and drop.
- **Camera Name and Status on OSD:** Camera name and recording status are displayed via OSD to aid in identification.
- **PTZ:** Users can control pan/tilt/zoom (PTZ) functions from within the interface using the provided interface buttons or by directly clicking on the video.
- **Audio Support:** A single camera may be viewed on full-screen with optional audio.
- **Preset Point:** Presets from within the interface can be set to instantly restore a previously saved view.
- **Digital Zoom:** Videos can be enlarged by digital zoom.
- **Multi-NVR Viewer:** Up to 128 channels of live video footage can be simultaneously viewed.

Intelligent Playback

- **AVI/ASF Outputs:** During playback, if a user uncovers video that needs to be exported, two formats are available. The AVI format will export raw video. The ASF file format will transpose a timestamp on the exported video.
- **Playback Speed Control:** Playback speed control allows for up to 16x speed fast forward or fast backward play. The step playback option displays one frame at a time.
- **Video Enhancement:** Users can enhance the recorded video with controls such as brightness, contrast, and sharpness.
- **Print Picture:** If a printer is connected to the user's PC, the NVR can also print the selected still image.
- **Smart Search:** Users can search through footage by setting specific criteria such as motion detection or lost focus.
- **Four-channel Playback:** Four channels of video footage can be played and viewed simultaneously.


Hardware Overview

Front View



COMPONENT	DESCRIPTION
Power Button	Press once to power on the NVR. Press and hold the button until the LED begins to blink to power down the NVR.
Power LED	Power LED will blink when boot, turn steady when working normal.
Drive LED	These LEDs will be solid blue when the drives are connected but inactive. The LEDs will blink when the drives are being accessed, formatted or synchronized. They will illuminate orange if a drive has failed.
USB Port	USB port for UPS status updates.

Rear Panel (Connections)

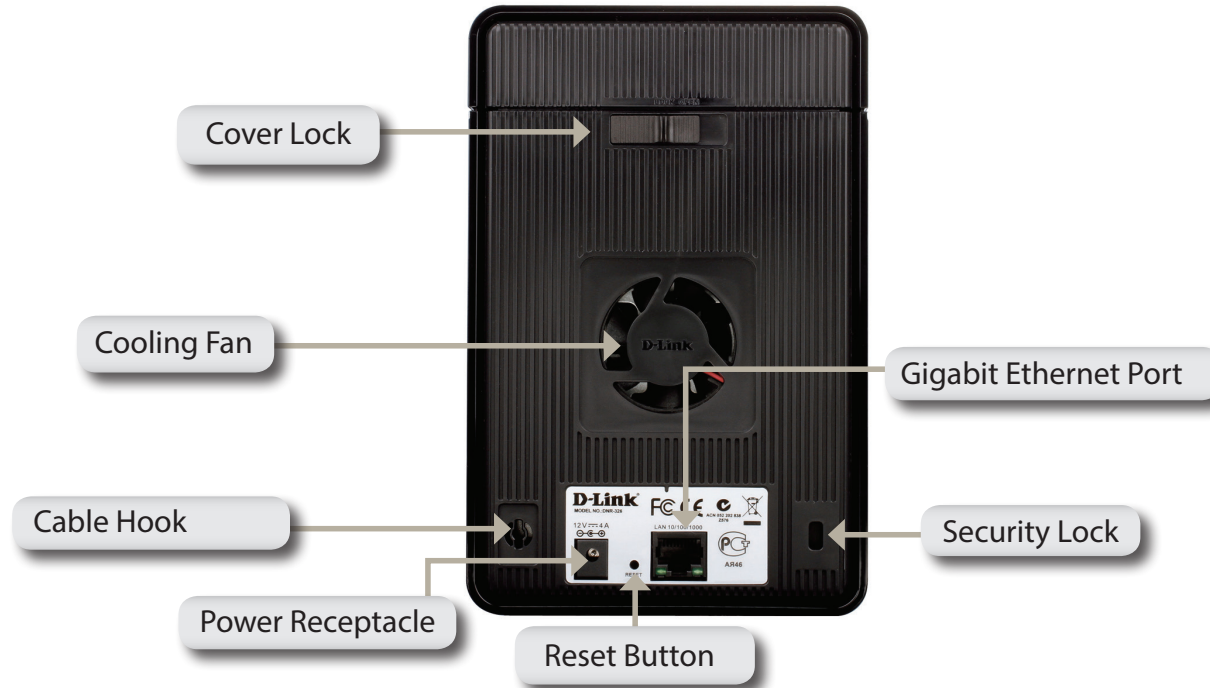

COMPONENT	DESCRIPTION
Cover Lock	This lock is used to remove the cover when unlocked. Locking it will restrict the removal of the top cover.
Cooling Fan	The cooling fan is used to cool the hard drives and features speed control. When the unit is first powered on, the fans rotate at a low speed. The fans will rotate at a high speed when the temperature rises above 49 °C.
Reset Button	Press this button for more than 5 seconds to reset the unit to the factory defaults.
Power Receptacle	Connect the supplied power cord to the receptacle.
Gigabit Ethernet Port	Use the Gigabit Ethernet Port to connect the device to the local network. The port is equipped with both a LAN LINK (R) and Traffic LED (L) to indicate connectivity and traffic respectively to the local LAN.
Security Lock	This lock can be used to tie the DNR-326 to a desk to prevent theft. Cables are sold separately.

Installation

Install the Hard Drives

You must first open your NVR so that you can install one or two hard drives. Access the DNR-326's hard drive bays by sliding the top cover back until it unlatches from the device. Once the faceplate is unlatched, pull it off the device bay.



Slide either one or two hard drives into the open hard drive bays of your device. Align the drives with the grooves in the enclosure and insert one or two 3.5" SATA hard drives into the drive bays until they are firmly in place.



Once the hard drives are installed, you can reattach the top cover.



Use a standard CAT5E Ethernet cable with a RJ-45 connector to connect your NVR to your network.



Connect the power adapter to the power receptor on the back of the device. Press the power button located under the faceplate LEDs to turn on the device.



Getting Started

Make sure the NVR is connected to a network via a router or a switch, or directly connected to a PC.

Step 1: Insert the DNR-326 CD in the CD-ROM drive. If the CD Autorun function does not automatically start on your computer, go to **Start > Run**. In the Run box, type **D:\autorun.exe** (where D represents the drive letter of your CD-ROM drive) and click **OK**. When the autorun screen appears, click **NVR Search Utility**.

Step 2: Highlight an available NVR and click **Configuration** to access the NVR's web User Interface. For more detailed configuration instructions, please refer to the user manual on the CD-ROM.

D-Link NVR Search Utility

When first powered on, during the initial boot sequence, the device will wait to be assigned an IP address via DHCP. If it does not receive a DHCP-assigned IP address, the Auto-IP process will assign a 169.254.xxx.xxx address to the device. If you want to change the IP address before login or are unable to connect to the NVR IP address, you can use the NVR Search Utility provided on the product CD to locate the device on your network and make any needed changes.

Network Video Recorder: The D-Link NVR Search Utility displays any NVR devices it detects on the network.

Refresh: Click to refresh the device list.

Configuration: Click **Configuration** to access the Web-based configuration of the NVR.

LAN: Configure the LAN Settings for the NVR here.


Apply: Click **Apply** to save and activate the changes to the LAN Settings.

Drive Mapping: Volumes available for mapping are displayed here.

Available Drive Letters: Select an available drive letter. Click **Connect** to map the selected volume. Click **Disconnect** to disconnect the selected mapped volume.

About: Click **About** to view the software version of the NVR Search Utility.

Exit: Click **Exit** to close the utility.

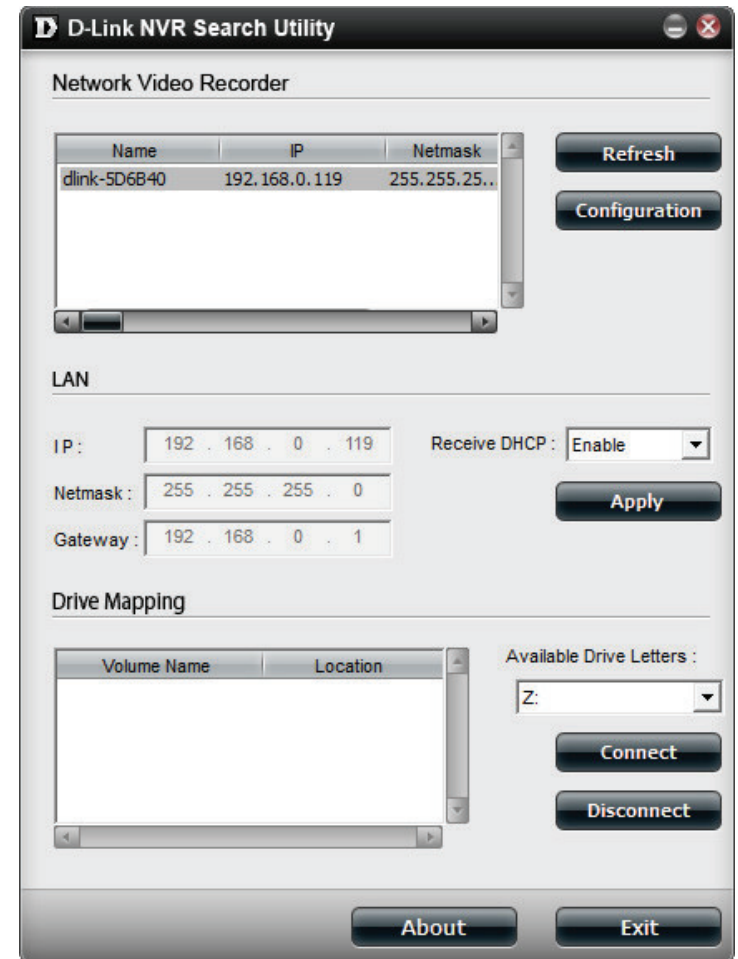


Select the device from the list and click **Configuration**. This will launch the computer's default web browser and direct it to the IP address listed for the device. Make sure the browser is not configured to use a proxy server.

Note: The computer used to access the NVR web-based configuration manager must be on the same subnet as the NVR. If your network is using a DHCP server and the computer receives IP settings from the DHCP server, the NVR will automatically be in the same subnet.

Web UI Login

This section will show you how to configure your new D-Link NVR using the Web-based Configuration Utility. To access the configuration utility, click the NVR name or IP on the **NVR Search Utility** or manually open a web browser (Internet Explorer only) and enter the IP address of your NVR.

The Login screen will appear:

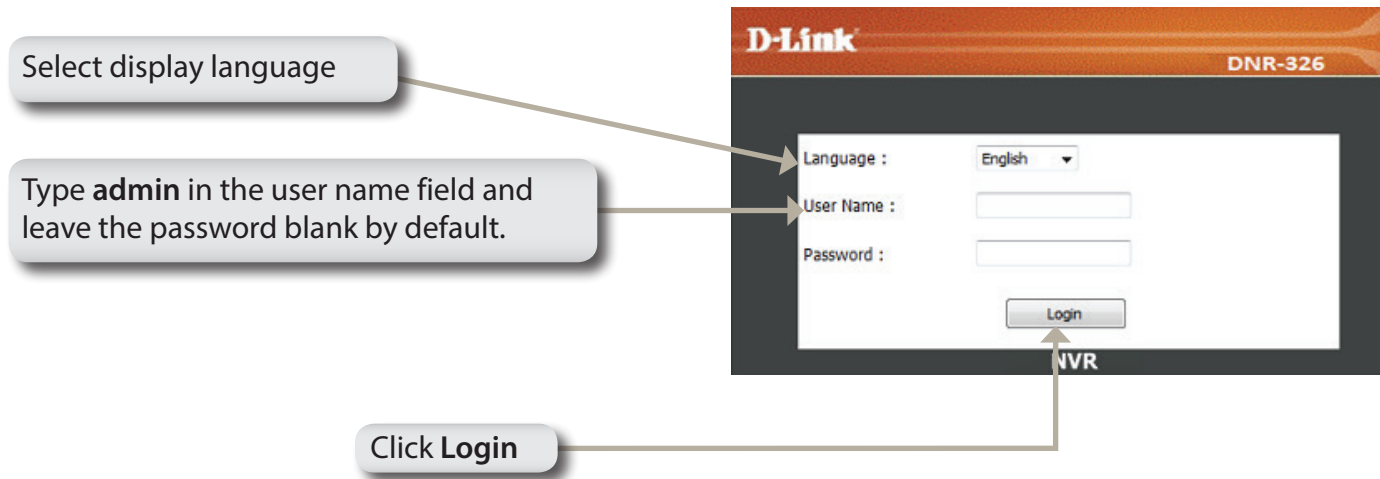

When logging in to the NVR for the first time, you will be asked to choose a drive configuration type and format the drives. There are four options: **Standard**, **JBOD**, **RAID 0**, and **RAID 1**. **Standard** configures each disk as a separate volume, while **JBOD** combines both disks into a single volume. See page 38 for more details on using the RAID configurations.

Note: Refer to page 34 for instructions on how to change the password of your admin account.

Auto Search Camera

Please connect your network camera(s) to the network and power them on.

The NVR will search for your available camera(s) in the local network (LAN) and add them to the NVR List in the NVR automatically.

The NVR will use the default login ID **admin** and a blank password to add new camera(s).

If there are camera(s) found, the NVR will start manual recording at the last step.

Note: If you have an existing camera(s) with different ID and password, NVR will add the the camera(s) but it will not be able to connect and record. You can change the settings in the NVR Setup page.

D-Link DNR-326

NVR CAMERA CONFIGURATION

New Camera Configuration

1. The NVR will automatically search for any available network cameras.
2. Cameras will be added in order based on their default ID, password, and name.
3. Once the search finishes, if the NVR has found any cameras, they will now be available for recording and live display.
4. If the wizard does not find any cameras, please first make sure that your cameras are properly connected. Click Live View to try again.

Search Camera...

Add Camera1: D-Link DCS-930 (192.168.1.7)

Add Camera2: D-Link DCS-3430 (192.168.1.3)

Start Manual Recording

Add Camera3: D-Link DCS-5605 (192.168.1.8)

Click **Exit Wizard** to finish the auto search.

Type **admin** for the username and leave the password field blank.

Click **Login**


Language

User Name

Password

NVR

After login, you will be redirected to the NVR web UI:

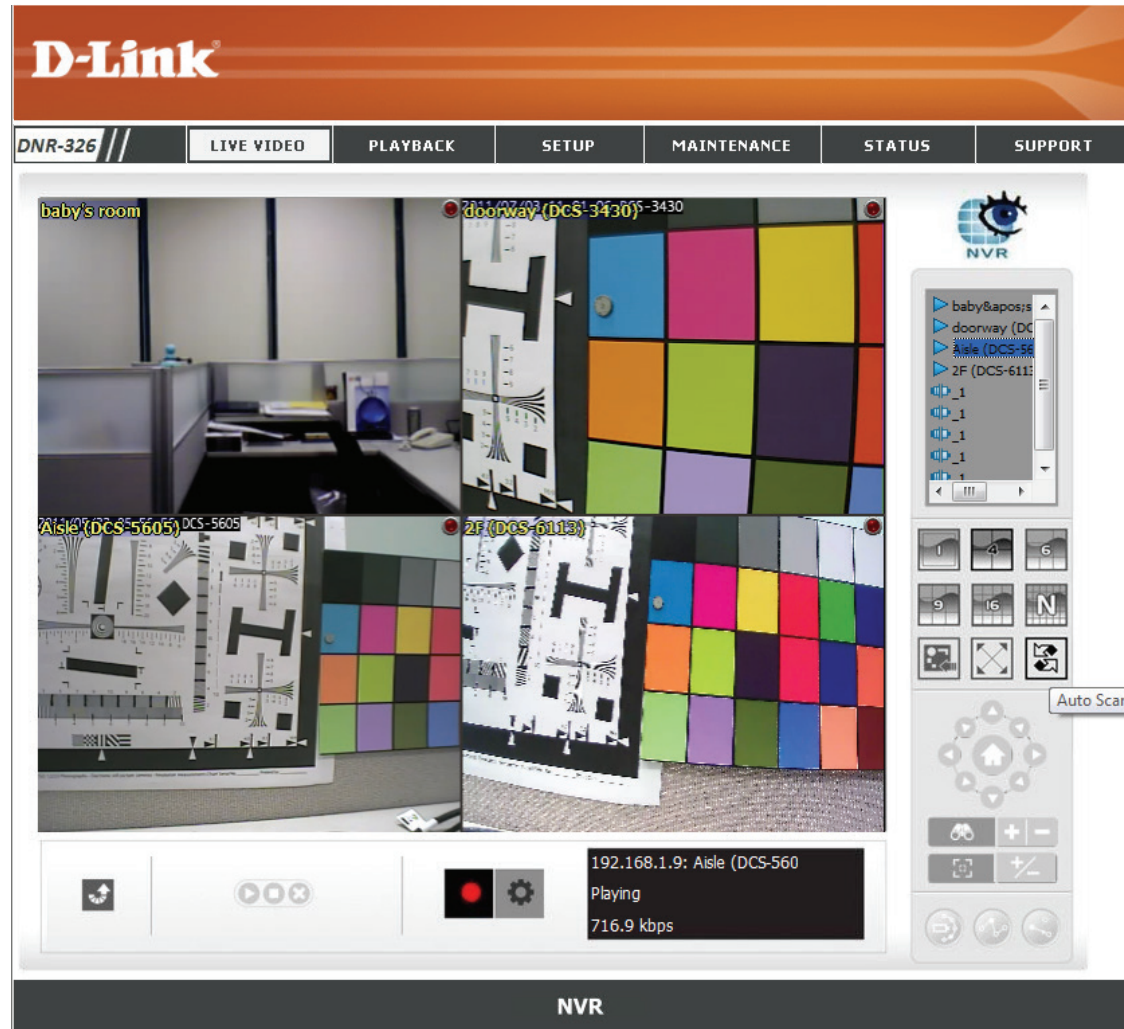

Web UI

The main categories for configuration are located on the menu tabs at the top of the page. These categories include:

- **LIVE VIDEO** - Shows the live video of network cameras and controls PTZ functions.
- **PLAYBACK** - Displays recorded video and exports snapshots or video.
- **SETUP** - Contains the NVR setup wizard, as well as the LAN configuration settings, camera search, camera settings, recording schedule, auto backup, event settings, time and system settings, and device settings.
- **MAINTENANCE** - Contains the Administrator account configuration options, Hard Disk management options and RAID configuration options. System configuration, backup, and restore functions are also available.
- **STATUS** - Contains system, NVR, and event logs.

These categories and their configuration options will be discussed in detail in the following pages of this manual.

Setup

Configuring the NVR

BASIC OPERATION

You may run the wizard to configure the setup for your NVR. There are basic and advanced operations. You must first configure the basic operations in order to activate and utilize the features of the NVR.

Step 1: **Camera Search** - Search for a network camera using UPnP and add it to the NVR camera list.


Step 2: **Recording Schedule** - Configure a camera for recording and create a detailed schedule. Users can also simply choose **Always Record** and select connected cameras.

After completing the above settings, the NVR will be fully functional.

ADVANCED OPERATION

Step 1: **E-mail Setup** - Configure the email address and messages for event notification.

Step 2: **Event Setup** - Configure event options with various combinations. Events can be triggered in the event of camera motion detection or full hard disk warning. An event action can be configured to send email.

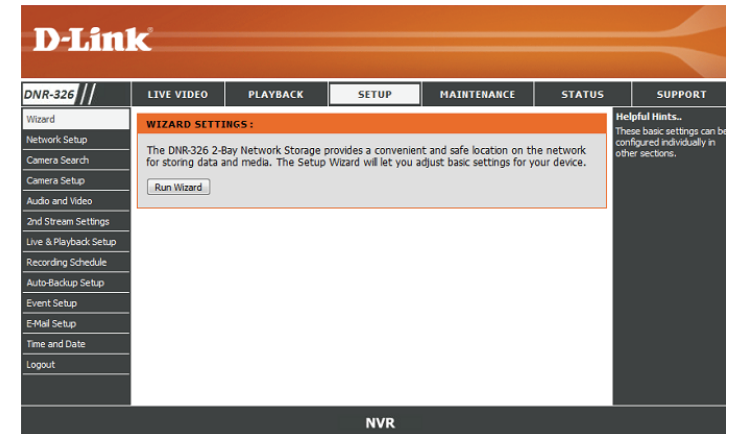

Network Setup

Network Setup allows you to configure the LAN settings for your NAS device.

DHCP: Select this connection if you have a DHCP server running on your network and would like a dynamic IP address to be automatically updated to your NVR.

Static IP: You may obtain a static or fixed IP address and other network information from your network administrator for your NVR. A static IP address will simplify access to your NVR in the future.

IP Address: The fixed IP address.

Subnet Mask: The default value 255.255.255.0 is used to determine if the destination is in the same subnet.

Gateway IP Address: The gateway forwards frames to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.

DNS1: Primary domain name server that translates names to IP addresses.

DNS2: Secondary domain name server to backup the primary one.

PPPoE Settings: Enable this setting if your ISP (DSL service) is using PPPoE. You may already have a Username and Password provided by your ISP, or you may need to contact your ISP. The connection status will be determined automatically by the system.

DHCP server: Enable or disable the DHCP server. If your network doesn't have DHCP server, enable NVR DHCP server for easier local network setup.

The screenshot displays the D-Link NVR's network configuration page. At the top, there's a navigation bar with 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The 'SETUP' tab is selected. On the left, a sidebar menu lists various setup options like 'Wizard', 'Network Setup', 'Camera Search', etc. The main content area is titled 'NETWORK SETUP' and contains a sub-header: 'Here you can configure the LAN Settings for your NVR device.' Below this are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'NETWORK SETUP' section has two radio buttons: 'DHCP Client' and 'Static IP'. The 'Static IP' option is selected. Under 'Static IP', there are input fields for 'IP Address' (172.17.5.101), 'Subnet Mask' (255.255.255.0), 'Gateway IP Address' (172.17.5.254), 'DNS1' (192.168.168.249), and 'DNS2' (192.168.168.201). Below this is the 'PPPOE SETTINGS' section, which has 'Enable' and 'Disable' radio buttons. The 'Disable' option is selected. There are input fields for 'User Name' (with a placeholder 'e.g. name@isp.com') and 'Password'. The 'Connection Status' is displayed as 'Not Available'.

Camera Search

Step 1: Click the **Search** button to search for UPnP cameras. The system will list all the available cameras at this moment. Click the **+** icon to add this camera into your camera list. If the cameras are already added, it will be marked red.

Step 2: After clicking the icon, the camera setting page will pop-up. Click on the camera that you want to add.

Step 3: Enter the camera name, user name, and password of the camera.



Note

- Some cameras will limit the login authority to the administrator only.
- To add cameras without the UPnP function, please go to the camera Setup menu and enter the IP address manually.
- You may not be able to see all the cameras on your first search. It may take a moment for the devices to respond to the UPnP request. Please click **Search** again if cameras are not immediately displayed.

Step 4: Click **Add** to add the selected camera.

Step 5: After clicking **Add**, the updated information will be displayed in the camera list.

Step 6: Repeat steps 2 through 5 to add other cameras onto your list.

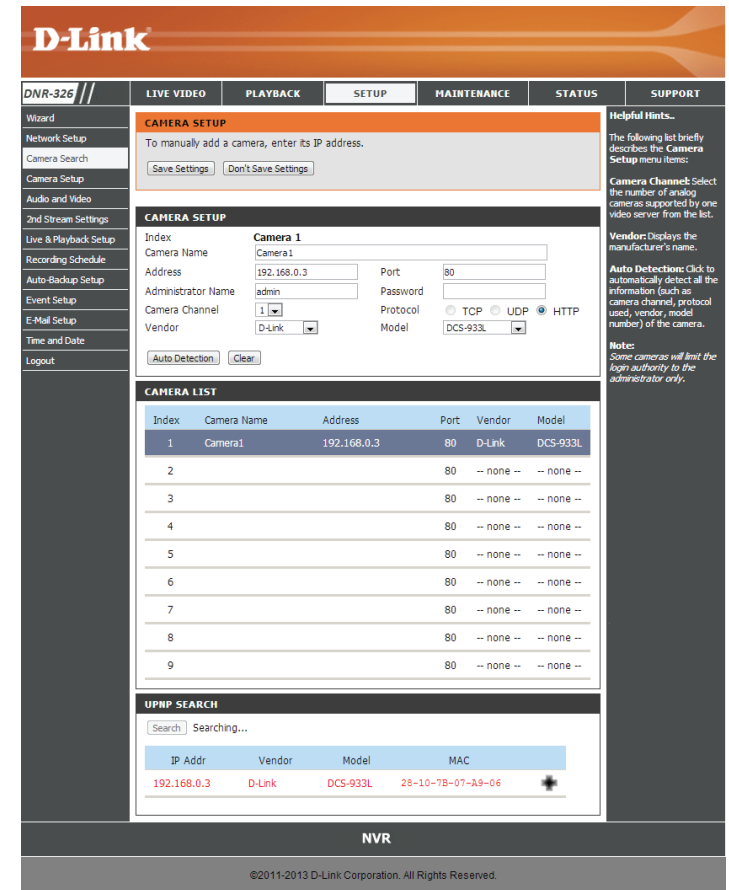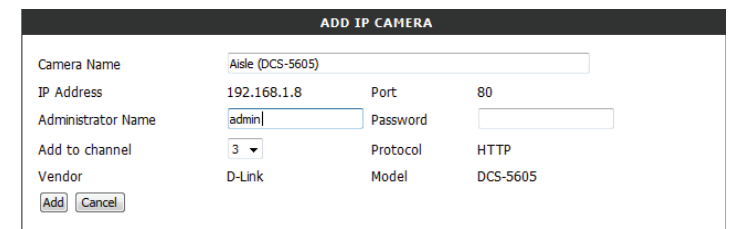Camera Setup

Step 1: Select the camera which you would like to modify.

Step 2: Modify its information on the top of the page.

Step 3: Click **Save Settings**.

Step 4: If you would like to replace a camera, select that camera, modify its address, port, user name, and password, and then click **Save Settings**.

Camera Name: Enter a name to identify the camera.

Address: Enter the camera's IP address.

Port: Enter the port used by your camera.

Administrator Name/Password: Enter the administrator name and password used to log in to the selected camera.

Camera Channel: Enter which channel this camera should use.

Protocol: Select which protocol this camera should use.

Vendor: Select a manufacturer from the dropdown list.

Model: Select a model from the dropdown list.

Auto Detection: If you have already entered the camera IP, you may simply click this button to try to automatically detect camera information (such as the channel, protocol, vendor, and model number).

Note:

Some cameras will limit the login authority to the administrator only.

The screenshot shows the D-Link DNR-326 web interface. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The left sidebar lists various configuration options: Wizard, Network Setup, Camera Search, Camera Setup, Audio and Video, 2nd Stream Settings, Live & Playback Setup, Recording Schedule, Auto-Backup Setup, Event Setup, E-Mail Setup, Time and Date, and Logout. The main content area is titled 'CAMERA SETUP' and contains the following fields:

- Index:** Camera 1
- Camera Name:** Camera1
- Address:** 192.168.0.3
- Port:** 80
- Administrator Name:** admin
- Password:** [Empty]
- Camera Channel:** 1
- Protocol:** TCP UDP HTTP
- Vendor:** D-Link
- Model:** DCS-933L

There are 'Save Settings' and 'Don't Save Settings' buttons at the top of the setup area, and an 'Auto Detection' button at the bottom. Below the setup area is a 'CAMERA LIST' table:

Index	Camera Name	Address	Port	Vendor	Model
1	Camera1	192.168.0.3	80	D-Link	DCS-933L
2			80	-- none --	-- none --
3			80	-- none --	-- none --
4			80	-- none --	-- none --
5			80	-- none --	-- none --

On the right side, there are 'Helpful Hints' and a 'Note' section. The 'Note' states: 'Some cameras will limit the login authority to the administrator only.'

Audio and Video

This section will allow you to configure and modify the audio and video parameters for each camera.

Step 1: Select the camera which you would like to modify in the camera list.

Step 2: The NVR will display the parameters for the selected camera. You can modify the information at this page.

Camera Name: The name of the selected camera will be displayed here.

Video Format: Select the video format you want to use for this camera.

Frame rate: Select the frame rate you want to use for this camera.

Resolution: Select the resolution you want to use for this camera.

Quality: Select the image quality you want to use for this camera.

Audio: Check the **Enable Audio** option allow for audio during live view and playback for this camera.

Go to Web: Click on the **Go To Web** link for a camera to connect to the web page of the selected network camera for advanced setup. For example, setting up motion detection for the camera so that the NVR can receive motion detection alerts from the camera.

Step 3: Click **Save Settings**.

Note: The system will adjust the frame rate automatically based on the maximum frame rate which that camera can support.

The screenshot shows the D-Link NVR web interface. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The 'SETUP' tab is active, and the 'AUDIO AND VIDEO' sub-tab is selected. The page title is 'D-Link' and the model is 'DNR-326'. The main content area is divided into two sections: 'CAMERA PARAMETER' and 'CAMERA LIST'. The 'CAMERA PARAMETER' section includes fields for 'Video Format', 'Frame Rate', 'Resolution', 'Quality', and an 'Audio' checkbox labeled 'Enable Audio'. The 'CAMERA LIST' section is a table with columns for 'Index', 'Name', 'Address', 'Vendor', 'Model', and 'Original Web'. The table contains 7 rows of camera information. On the right side, there is a 'Helpful Hints...' section with explanatory text for the 'Video Format', 'Frame Rate', 'Resolution', 'Quality', and 'Audio' settings.

Index	Name	Address	Vendor	Model	Original Web
1	Camera1	192.168.0.3	D-Link	DCS-933L	Go to Web
2			-- none --	-- none --	Go to Web
3			-- none --	-- none --	Go to Web
4			-- none --	-- none --	Go to Web
5			-- none --	-- none --	Go to Web
6			-- none --	-- none --	Go to Web
7			-- none --	-- none --	Go to Web

2nd Stream Settings

This section will allow you to assign a secondary streaming profile for your cameras, optimized for mobile clients.

Step 1: Select the camera which you would like to modify in the camera list.

Step 2: The NVR will display the profiles for the selected camera. You can enable or disable the profiles on this page.

Channel: The channel being used by the selected camera.

Camera Name: The name of the selected camera.

Stream Profile: Enable or disable stream profiles for the selected camera.

- **Low Profile:** This stream profile is under 300 kbps, and is designed for viewing by a single mobile client.
- **Minimum Profile:** This stream profile is under 100 kbps, and is designed for viewing by multiple mobile clients.

Step 3: Click **Save Settings**.

The screenshot shows the D-Link NVR web interface. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The left sidebar contains a menu with options like 'Wizard', 'Network Setup', 'Camera Search', 'Camera Setup', 'Audio and Video', '2nd Stream Settings', 'Live & Playback Setup', 'Recording Schedule', 'Auto-Backup Setup', 'Event Setup', 'E-Mail Setup', 'Time and Date', and 'Logout'. The main content area is titled '2ND STREAM SETTINGS' and contains the following information:

2ND STREAM SETTINGS
 Enable stream profile to support low and minimum profile for remote live viewing.
 Save Settings | Don't Save Settings

2ND STREAM SETTINGS
 Channel
 Camera Name
 STREAM PROFILE Enable Disable

STREAM PROFILE

Profile	Format	Frame Rate	Resolution
Low Profile			
Minimum Profile			

CAMERA LIST

Channel	Camera Name	Camera Vendor	Camera Model	Sub-Streaming
1	Camera1	D-Link	DCS-933L	Enable
2		-- none --	-- none --	Disable
3		-- none --	-- none --	Disable
4		-- none --	-- none --	Disable
5		-- none --	-- none --	Disable
6		-- none --	-- none --	Disable

Helpful Hints...
 The following list briefly describes the 2nd Stream Setting menu items:
Stream Profile: The default status is Disable. If you want mobile client user to access to this camera, you can select Enable, and click Save button in the middle of the page.
Low Profile: The stream profile, under 300kbps, is designed for mobile client single-view.
Minimum Profile: The stream profile, under 100 kbps, is designed for mobile client multi-view.

Live and Playback Setup

Live Streaming Server

Port: Enter the live streaming transmission port.

Maximum Connections: Enter the maximum number of connections for remote access. The maximum number allowed is 36.

Playback Server

Port: Enter the playback transmission port.

Maximum Users: Enter the maximum number of users who can access playback functions at the same time. The maximum number of users for the playback server is 8.

CMS Server: The NVR supports 3rd party* CMS (Central Management System). It is able to be connected to CMS as a client.

CMS Server: Check the Enable option to enable CMS service.

Port: The port number through which the CMS connects to this NVR.

Maximum Connections: The maximum number of allowed CMS connections.

Note: For detailed 3rd party information, please contact your local D-Link office.

Emap: You can upload map with your camera locations to the NVR. You can use a BMP or JPG file up to 20 KB.\

Allowed/ Blocked List: Select whether you want to enable or disable the allowed and blocked lists:

Allowed List: IP addresses in this list can always access your NVR.

Blocked List: IP addresses in this list will always be blocked.

You can add an IP address to a list by entering the IP in the corresponding text box and clicking its Add button.

Note: When setting Maximum Connections in Live Streaming Server settings, 1 connection means that 1 user can connect to 1 camera only. If the maximum number of connections is 16 and if each user connects to 4 cameras, then the maximum number of connected users is 4 and not 16.

The screenshot shows the D-Link NVR configuration interface for the 'LIVE AND PLAYBACK SETUP' section. The interface is divided into several tabs: LIVE VIDEO, PLAYBACK, SETUP (selected), MAINTENANCE, STATUS, and SUPPORT. The main content area is titled 'LIVE AND PLAYBACK SETUP' and contains the following sections:

- LIVE AND PLAYBACK SETUP:** A message states: 'For live viewing and playback over the internet, you need to dedicate a port for the streaming server.' Below this are 'Save Settings' and 'Don't Save Settings' buttons.
- LIVE STREAMING SERVER:** Contains fields for 'Port' (set to 5150) and 'Maximum Connections' (set to 16).
- PLAYBACK SERVER:** Contains fields for 'Port' (set to 5160) and 'Maximum Users' (set to 4).
- CMS SERVER:** Contains a checkbox for 'Enable' (checked), a 'Port' field (set to 5170), and a 'Maximum Connections' field (set to 8).
- E-MAP UPLOAD:** Contains a 'File Path' field with a 'Choose File' button and 'Upload' and 'Delete E-Map' buttons.
- ALLOWED/BLOCKED LIST:** Contains checkboxes for 'Allowed List' and 'Blocked List' (both checked). Below these are input fields for IP addresses and 'Add to Allowed List' and 'Add to Blocked List' buttons. At the bottom, there is a table with columns: Index, IP Range, Access, and Delete.

On the right side of the interface, there are 'Helpful Hints' and 'Note' sections. The 'Helpful Hints' section states: 'If NVR is placed behind a NAT router, open the port on the router for the Live and Playback streaming server. The following list briefly describes the Live and Playback Setup menu items:'. The 'Note' section states: 'If the maximum number of connections is 16 and if a user connects to 4 cameras, the number of connected users is 4 and not 16.'

Recording Schedule

Set Recording Mode

No Record: Turn off recording.

Record by Schedule: Record according to the schedule.

Manual Record: Manual record will record video by default as it has the highest priority. It can be enabled/disabled at the Live Video page.

Automatic Overwrite: Select this option to automatically empty disk space when the disk space is full. This will overwrite the earliest recorded video with the latest video one day at a time.

Store Videos by Schedule: Set the duration to store recorded video clips. After the duration, the clips will be purged.

D-Link

DNR-326 // LIVE VIDEO | PLAYBACK | **SETUP** | MAINTENANCE | STATUS | SUPPORT

Wizard
Network Setup
Camera Search
Camera Setup
Audio and Video
2nd Stream Settings
Live & Playback Setup
Recording Schedule
Auto-Backup Setup
Event Setup
E-Mail Setup
Time and Date
Logout

RECORDING SCHEDULE

You can set up individual cameras to record at specific times, day or night, one time or each day of the week.

Save Settings Don't Save Settings

RECORDING MODE

No Record
 Record by Schedule

Manual Record: **Enabled**

VIDEO DATA

Automatic Overwrite Enable
Store Videos Store Videos by Schedule Days

RECORDING SCHEDULE

Camera List	Schedule
Camera1	<input checked="" type="radio"/> Day <input type="radio"/> Week 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
Camera2	Cam1
Camera3	Cam2
Camera4	Cam3
Camera5	Cam4
Camera6	Cam5
Camera7	Cam6
Camera8	Cam7
Camera9	

Helpful Hints...

The following list briefly describes the **Recording Schedule** menu items:

Automatic Overwrite: Select this option to automatically empty disk space when the disk space is full. This will overwrite the earliest recorded video with the latest video one day at a time.

Store Videos by Schedule: Set duration to store recorded video clips. After the duration, the clips will be purged and cannot be recovered.

Insert: Insert new schedules.

Delete: Delete the selected schedule.

Configure: Modify the schedule and recording mode setting.

Notes

- The **Always Record** option will start recording immediately.
- When configuring the **Motion Detection** event, ensure to setup the motion detection function in your camera first.
- When changing the motion detection settings of your camera, ensure to disconnect the NVR and then re-connect to update the settings in your NVR.

Set Recording Schedule

Set Recording Schedule

Day: Schedule the cameras to turn the recorder on and off at the same time every day according to your preference.

Week: Schedule the cameras differently for each day of the week.

Setup the Schedule: **Step 1:** Click the schedule of the camera which needs to be modified.

Step 2: Click the column at the bottom of the page.

Step 3: The default recording schedule is from 00:00 to 24:00. If you would like to modify the time slot, click the **Configure** button to modify the default settings first.

Insert: Insert new schedules.

Delete: Delete the selected schedule.

Configure: Modify the schedule and recording mode setting.

Copy: Copy the current Day Schedule to other channel(s); copy the current Week Schedule to other day(s) of a week or to other channel(s).

D-Link

DNR-326 // LIVE VIDEO PLAYBACK SETUP MAINTENANCE STATUS SUPPORT

Wizard
Network Setup
Camera Search
Camera Setup
Audio and Video
2nd Stream Settings
Live & Playback Setup
Recording Schedule
Auto-Backup Setup
Event Setup
E-Mail Setup
Time and Date
Logout

RECORDING SCHEDULE

You can set up individual cameras to record at specific times, day or night, one time or each day of the week.

Save Settings Don't Save Settings

RECORDING MODE

No Record
 Record by Schedule

Manual Record: **Enabled**

VIDEO DATA

Automatic Overwrite Enable
Store Videos Store Videos by Schedule Days

RECORDING SCHEDULE

Camera List	Schedule
Camera List	<input checked="" type="radio"/> Day <input type="radio"/> Week
Camera1	00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
Cam1	[Recording Schedule]
Camera2	[Recording Schedule]
Camera3	[Recording Schedule]
Camera4	[Recording Schedule]
Camera5	[Recording Schedule]
Camera6	[Recording Schedule]
Camera7	[Recording Schedule]
Camera8	[Recording Schedule]
Camera9	[Recording Schedule]
Cam7	[Recording Schedule]

Helpful Hints.

The following list briefly describes the Recording Schedule menu items:

Automatic Overwrite: Select this option to automatically empty disk space when the disk space is full. This will overwrite the earliest recorded video with the latest video one day at a time.

Store Videos by Schedule: Set duration to store recorded video clips. After the duration, the clips will be purged and cannot be recovered.

Insert: Insert new schedules.

Delete: Delete the selected schedule.

Configure: Modify the schedule and recording mode setting.

Notes:
- The Always Record option will start recording immediately.
- When configuring the Motion Detection event, ensure to setup the motion detection function in your camera first.
- When changing the motion detection settings of your camera, ensure to disconnect the NVR and then reconnect to update the settings in your NVR.

Recording Schedule

Set Recording Schedule Configuration

Step 1: Enter the desired **Start Time** and **End Time**.

Step 2: Enter the pre-record period and post-record for event trigger recording.

Step 3: Check the **Enable Audio** box to record audio from your camera (if supported).

Step 4: Choose the recording mode and the trigger source.

Step 5: Click **OK** to add this new schedule.

Step 6: If you would like to add another new schedule, click the **Insert** button.

Note:

- When configuring the Motion Detection event, be sure to set up the motion detection function on your camera first.
- After changing the motion detection settings of your camera, be sure to disconnect the camera from the NVR and then re-connect it to update all new changes.
- Alternatively users can drag the time bar to change the recording period. The red bar represents the **Always Record** feature and the blue bar represents the **Event Recording** feature.

Schedule Configuration

Time
Start Time: 00:00
End Time: 08:00
Pre-record 5 sec. (Max: 180)
Post-record 5 sec. (Max: 180)

Audio
 Enable Audio

Mode
 Always Record
 Record on Event

Motion
 Motion on baby's room
 Motion on doorway (DCS-34)
 Motion on Aisle (DCS-5605)

Ok Cancel

Auto Backup

This feature enables you to automatically back up the recorded video from the previous date to an FTP site. There are two ways to enable this function. One is to set up a Backup Schedule and the other is to set up a Backup Server.

Auto Backup: Check the Enable option to enable this function.

Daily Backup Time: The daily scheduled time to start the backup process.

Start Time: The start time of the recorded video of the previous date.

End Time: The end time of the recorded video of the previous date.

Camera: Select the channel(s) to back up.

Note:

The system backs up recorded video files one by one. If the connection between the unit and FTP server is normal, but there are some FTP problems that are preventing the system from being able to write files on FTP, the system will attempt to back up each file three times before backing up the next file. If the connection is lost, the system will wait for the connection to be resumed so no file would be skipped.

D-Link

DNR-326 // LIVE VIDEO PLAYBACK **SETUP** MAINTENANCE STATUS SUPPORT

Wizard
 Network Setup
 Camera Search
 Camera Setup
 Audio and Video
 2nd Stream Settings
 Live & Playback Setup
 Recording Schedule
Auto-Backup Setup
 Event Setup
 E-Mail Setup
 Time and Date
 Logout

AUTO-BACKUP SETUP
 Backup the recorded data to remote server in a pre-defined daily schedule.
 Important: The performance of live view and recording will be impacted during backup.
 Save Settings Don't Save Settings

AUTO-BACKUP SCHEDULE
 Auto Backup Enable
 Daily Backup Time 00 : 00
 Start Time 00 : 00
 End Time 00 : 00
 select: all / none
 Camera Camera 1 Camera 2 Camera 3 Camera 4
 Camera 5 Camera 6 Camera 7 Camera 8
 Camera 9

BACKUP SERVER
 FTP Site
 FTP Port 21
 User Name
 Password
 Backup to Remote Folder
 Test Backup Server

Helpful Hints...
 To backup recorded video to remote server require certain amount of upload bandwidth. It varies with camera numbers and recorded data size.
 Daily Backup Time: Begin to backup the recorded data of prior day from this time.
 Start Time: Backup the data of recorded video/audio from start time to end time.
 Camera: Only selected camera(s) will be backup.
 Important: During uploading data, NVR performance might be affected with network traffic.
 If it's not able to backup data of prior day within 24 hours, new backup schedule will start and ignore the rest of data.

Event Setup

Step 1: Select an event below.

- **Connection Lost:** If the connection between the camera and the DNR-326 is lost, this event will be triggered.
- **Motion from Camera:** If motion is detected by this camera, this event will be triggered.
- **Input:** Any external input can be used to trigger this event.
- **Hard Disk Space Full:** When the Overwrite function is not enabled, the NVR will stop recording when the HDD is full.

Step 2: Click **Add** to select an action for the event:

- **Output:** When an event occurs, a signal will be sent to other connected devices.
- **Email:** When an event occurs, an e-mail notification will be sent to the specified e-mail address.
- **CMS:** When an event occurs, a signal will be sent to CMS.
- **Push Notification:** When an event occurs, an instant message will be sent to the registered mobile clients. Mobile users can view recorded video of the event through their mobile clients.
- **E-map Popup:** When an event occurs, an E-map will pop up with an event indicator to show the location of the event.

Step 3: Click the action you want to use, and then click **Configure** to modify the details of that action if necessary.

Step 4: Repeat steps 2 and 3 to add more actions, or click the **Save** button to save your changes.

The screenshot shows the D-Link DNR-326 web interface. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The 'SETUP' tab is active, and the 'EVENT SETUP' section is highlighted. Below this, there are instructions for selecting an event from a 'Camera List' and choosing one of three events: Connection Lost, Motion Detected, or External Input. The 'EVENT ACTION MANAGER' section is also visible, showing a 'Camera List' with cameras 1 through 9 and a 'System' option. The 'Event & Action' section has 'Add', 'Delete', and 'Configure' buttons. A table with 'Action' and 'Options' columns is present. On the right side, there are 'Helpful Hints' and 'Notes' sections providing additional information about the events and actions.

E-mail Setup

Server Address: SMTP (Simple Mail Transport Protocol) server IP address.

Port: Specify the port number of the email server.
The default number is 25.

Use SSL: Check this if your email server uses SSL protocol.

Sender: Enter the sender's name.

Subject: Enter the email subject.

Body of Message: Enter the email content.

SMTP Authentication: Provide the user name and password to the SMTP server for identification before sending email.

User Name: Input the SMTP server login user name.

Password: Input the SMTP server login user password.

Send Testing Mail: Click this button and the system will send a test email to the sender.

Mail: Please check it after testing.

Add Contacts

Step 1: Insert the name of a new contact.

Step 2: Insert the email address of this new contact.

Step 3: Click **Add Contact**.

Step 4: Click **Save Settings** to save the new contact list.

D-Link

DNR-326 // LIVE VIDEO PLAYBACK SETUP MAINTENANCE STATUS SUPPORT

Wizard

Network Setup

Camera Search

Camera Setup

Audio and Video

2nd Stream Settings

Live & Playback Setup

Recording Schedule

Auto-Backup Setup

Event Setup

E-Mail Setup

Time and Date

Logout

E-MAIL SETUP

You can set up your SMTP server to send e-mail alerts to notify you when an event occurs.

Save Settings Don't Save Settings

SMTP SERVER

Server Address

Port 25 use SSL

Sender

Subject

Body of Message

SMTP Authentication

User Name Password

Send Testing Mail

CONTACT

User Name Email

Name	Email	Delete

Helpful Hints...

The following list briefly describes the SMTP Server settings menu items:

Body of Message: Enter your e-mail message.

SMTP Authentication: Before sending out an e-mail, enter the user name and password for SMTP authentication.

Add Contact: Add a new contact into the contact list.

Time and Date

There are three options to set the time in Time and Date.

Set the Time and Date Manually: Enter the complete time and date settings manually, or you can click the **Set Time From My Computer** button to copy your computer's time settings. Click **Save Settings** to apply the settings.

Time Zone Settings: Select your time zone from the pull-down list. Click **Save Settings** to apply the settings.

NTP Server: Select or enter an **NTP Server** here. An **NTP Server** is a server on the Internet that maintains time. The NVR will contact the server you entered and receive the correct time. Click **Save Settings** after entering an **NTP Server**.

The screenshot shows the D-Link DNR-326 web interface. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The 'SETUP' menu is expanded, showing options like Wizard, Network Setup, Camera Search, Camera Setup, Audio and Video, 2nd Stream Settings, Live & Playback Setup, Recording Schedule, Auto-Backup Setup, Event Setup, E-Mail Setup, Time and Date, and Logout. The 'Time and Date' option is selected.

The main content area is titled 'SYSTEM TIME SETTINGS:'. It contains the following text: 'The Time configuration option allows you to configure, update, and maintain the correct time on the internal system clock. In this section you can set the time zone that you are in, and set the NTP (Network Time Protocol) Server in order to periodically update your system time from the NTP Server. You can also use your computer's time as the system time.'

Current Time: 07:42:18 AM 02/24/2012
 Current Time Zone: (GMT+08:00) Beijing, Chongqing, Hong Kong, Taipei

SET THE DATE AND TIME MANUALLY:

Date: 02/24/2012 Time: 7:42:17

Buttons: Set Time From My Computer, Save Settings

TIMEZONE:

Time Zone: (GMT+08:00) Beijing, Chongqing, Hong Kong, Taipei

Button: Save Settings

NTP SERVER:

NTP Server: << Select NTP Server

Button: Save Settings

Helpful Hints: Using the NTP option will guarantee the time to be accurate provided that the DNR-326 is connected to the Internet and your DNS values (in SETUP > Network Setup) are valid.

Maintenance

User Management

User Management enables you to create user accounts to access your NAS device and set user privileges for them.

Adding a New User

Step 1: Input the new user name.

Step 2: Input a password. Type the password again to confirm.


Step 3: Select the live view cameras and **PTZ/ IO Control** functions which this user can access.

Step 4: Select the playback channels and **Backup Data** function which this user can access.

Step 5: Click **Finish** to create a new user.

Note:

The Administrator account can configure all functions of the NVR. This account cannot be deleted. The default password for the **admin** user is blank. Setting a password after the first login is strongly recommended. If the administrator password is lost, you may press and hold the reset button on the rear panel of the device to reset the NVR to factory defaults. Please note this will erase all the previously saved settings.

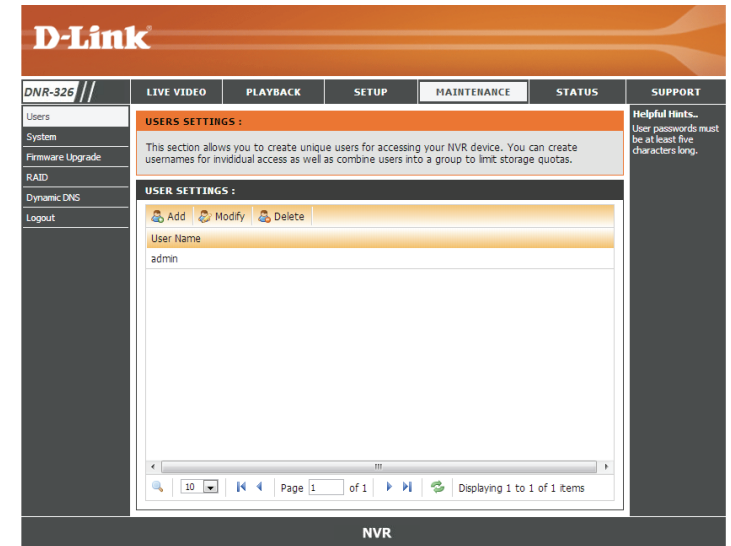

Changing A User's Password

Step 1: Select the user name and click the **Modify** button.


Step 2: Input the password of the user. Type the password again to confirm.

Step 3: Click the **Finish** button to save. Click **Exit** to abort.

Deleting A User

Step 1: Select the user name you want to delete and click **Delete** button.

Step 2: In the confirmation box, click the **OK** button.

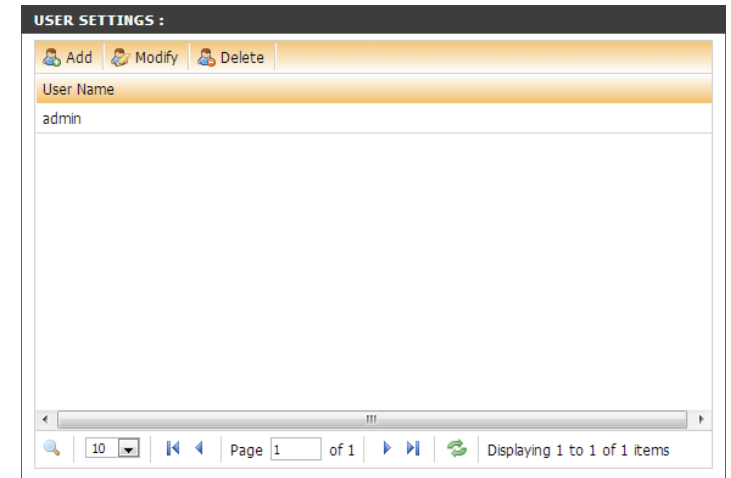

System

Users can save the NVR configuration to a file and restore it when necessary. Occasionally, restarting the NVR can keep the system running smoothly. Reset the NVR to restore all configurations to factory default.

Restart: If the NVR is malfunctioning or crashes unexpectedly, click **Restart** on the NVR. Restarting the NVR will take about one and a half minutes.

Restore: This will reset all configurations to factory default.

Shutdown: This will shut down the NVR.

Save Configuration Settings: All the configurations can be saved as a file to the specified location. Click **Save** to save the file to your local PC.

Load Configuration Settings: The user can restore the configuration file if they have reset the system to the factory default file. Click **Choose File** to select the configuration file and restore it by clicking **Load**.

Idle Time: When the administrator enters the Setup pages, except the Live Video and Playback pages, the NVR will keep track of the idle time when there is no action taken by the user. After a certain period of time, it will then force the user to log out and request the user to log in again for security concerns. Change the idle time period here.



Firmware Upgrade

The device firmware can be upgraded from this page. The firmware update must be saved on the local hard drive of your computer. Click **Browse** to search the local hard drive for the firmware update file. Click **Apply** to upgrade. You can check for firmware updates on the D-Link Support Page at <http://support.dlink.com>.

The screenshot displays the D-Link web interface for a DNR-326 NVR. The top navigation bar includes 'D-Link' and a menu with 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The 'MAINTENANCE' tab is active. On the left, a sidebar menu lists 'Users', 'System', 'Firmware Upgrade', 'RAID', 'Dynamic DNS', and 'Logout'. The main content area is titled 'FIRMWARE UPGRADE :'. It contains the following text:

A new firmware upgrade may be available for your DNR-326. It is recommended to keep your DNR-326 firmware up-to-date to maintain and improve the functionality and performance of your storage device.

Click [D-Link Support Page](#) to check for the latest available firmware.

To upgrade the firmware on your DNR-326, please download and save the latest firmware version from the [D-Link Support Page](#) to your local hard drive. Locate the file on your local hard drive by clicking the Browse button. Once you have found and opened the file using the browse button, click the Apply button to start the firmware upgrade.

Below this text is a section titled 'CURRENT FIRMWARE INFORMATION :'. It displays:

- Current NVR Firmware Version : 1.00
- Firmware Date : 11/01/2011
- Firmware Path : no file selected

On the right side of the main content area, there is a 'Helpful Hints..' section with the following text:

Firmware updates are released periodically to maintain and improve the functionality of your DNR-326 and also to add new features. If you run into a problem with a specific feature of the DNR-326, check our support site by clicking on the [D-Link Support Page](#) link and see if an updated firmware is available for your DNR-326.

At the bottom of the interface, the text 'NVR' is displayed.


RAID

RAID Configuration enables you to format a newly inserted hard drive or set up a RAID configuration on your current hard drive. You can choose from four different hard drive configurations.

Step 1: Begin by clicking **Set RAID Type and Re-Format**. Information about the installed HDD will then be displayed.

Step 2: Click **Next** to select a new RAID configuration.

Note: All data will be lost during this process.

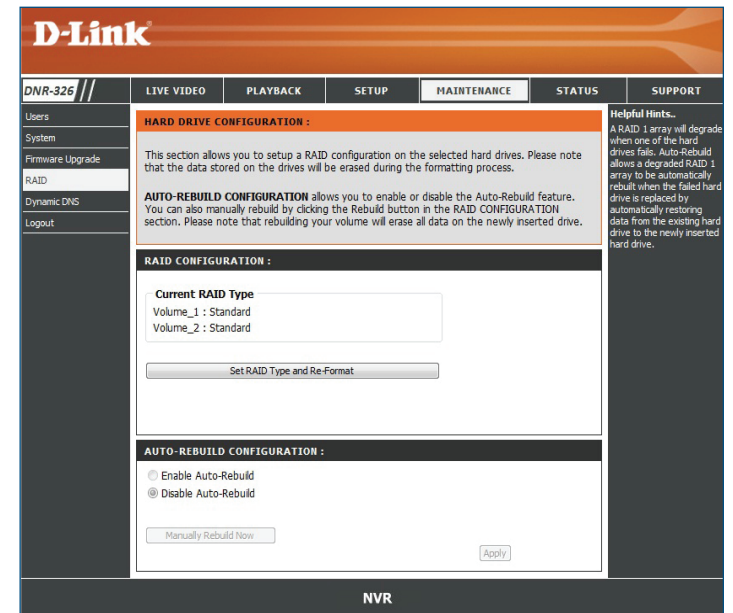

The four RAID configurations are:

Standard: Creates two separate volumes (or one volume if only one hard drive is present). The second volume will function as a File Server. Each hard drive has its own volume.

Note:

Only Standard mode can create the Volume2, which is available as a File (Samba) Server. Use the NVR Search utility to mount the File Server to your Windows system.

JBOD: Combines both hard drives in a linear fashion which will create one large volume geared towards maximum available space.


RAID 0: Combines both hard drives in a striped fashion which will create one large volume geared towards maximum performance.

Note: If one drive fails, all the data will be lost.

RAID 1: Mirrors the hard drives for redundancy. If one hard drive fails, the other still has all of the data. Replace the failed hard drive and it will re-mirror, restoring maximum data protection.

The main RAID page has an Auto-Rebuild Configuration that allows you to enable or disable the Auto-Rebuild feature. Please see the image on page 38. You can also manually rebuild by clicking the Rebuild button in the RAID Configuration section.

Note: Rebuilding the volume will erase all data on the newly inserted drive.

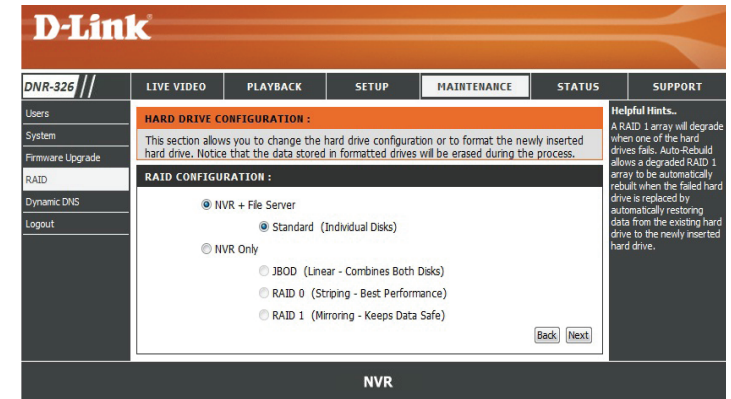

Dynamic DNS

Enable this option only if you have purchased a domain name and registered with a dynamic DNS service provider. The following parameters are displayed when the option is enabled.

Server Address: Select a dynamic DNS service provider from the pull-down list.

Host Name: Enter your host name. For example: myhost.mydomain.net.

Username or Key: Enter the username or key provided by your service provider. If the Dynamic DNS provider supplies only a key, enter that key in all three fields.

Password or Key: Enter the password or key provided by your service provider.

Verify Password or Key: Re-type the password or key provided by your service provider.

Status: Displays the current status of connection to the DDNS server.

The screenshot shows the D-Link NVR configuration interface. At the top, there is a navigation bar with the D-Link logo and tabs for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and SUPPORT. The main content area is titled 'DDNS SETTINGS :'. It contains the following information:

- Dynamic DNS:** A toggle switch currently set to 'Disable' (radio buttons for 'Enable' and 'Disable').
- Server Address:** A dropdown menu with a '<<' icon and the text 'Select Dynamic DNS Server'.
- Host Name:** An empty text input field.
- Username or Key:** An empty text input field.
- Password or Key:** An empty text input field.
- Verify Password or Key:** An empty text input field.
- Status:** An empty text input field.

On the right side of the page, there is a 'Helpful Hints' section with the text: 'To use this feature, you must first have a Dynamic DNS account from one of the providers in the drop down menu.'

Status

Camera Status

This page displays the connection and recording status of your cameras.

Connection Shows the camera connection status. The user can click **Connect** or **Status: Disconnect** to change the connection status.

Recording Shows the recording schedule and current recording status of the cameras. Please note that if the camera is disconnected, the recording may continue but will produce blank video.

Frame Rate: Displays the frame rate of the camera.

Bit Rate: Displays the transmission bit rate of the camera.

Note: If the Frame Rate or Bit Rate is too low, please check your network configuration between the cameras and the NVR. If the bit rate is too high, it will cause the Live Video display to slow or lag. Please modify the quality or bitrate setting in the camera web GUI accordingly.

Disk Status: Shows the hard drive space and estimated remaining recording time status.

Note: The recording time information is estimated by current bit rate. This may change each time a user refreshes this page.

The screenshot shows the D-Link NVR-326 web interface. The main content area is titled "CAMERA STATUS" and contains a table with the following data:

Index	Name	Address	Connection Status	Recording Status	Frame Rate	Bit Rate
1	Camera	192.168.0.3	Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
2			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
3			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
4			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
5			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
6			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
7			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
8			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps
9			Disconnect Connect	No Recording	0.0 fps	0.0 Kbps

Below the table, it says "Last Update at 10/17/2013 4:10:15 PM". At the bottom of the page, there is a "DISK STATUS" section and the text "NVR".

System Info

This section displays the summary information of your NVR.

LAN Information: Displays the local network settings of the NVR.

Device Information: Displays the device name and current temperature of the NVR.

Hard Drive Information: Displays the hard drive information, including the disk mode, total size, and the used and remaining drive space.

The screenshot shows the D-Link NVR-326 web interface. The top navigation bar includes links for LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and SUPPORT. The main content area is titled 'SYSTEM INFORMATION' and provides a summary of device information. The interface is organized into several sections:

- SYSTEM INFORMATION:** View a summary of the device information here.
- LAN INFORMATION:**
 - IP Address : 192.168.0.5
 - Subnet Mask : 255.255.255.0
 - Gateway IP Address : 192.168.0.1
 - Mac Address : 1C:7E:E5:5D:6B:45
 - DNS1 : 192.168.0.1
 - DNS2 :
- DEVICE INFORMATION:**
 - Workgroup : workgroup
 - Name : dlink-5D6B45
 - Description : DNR-326
 - System Temperature : 104°F/40°C
 - Current Rx/Tx : 25375/42123
 - System Up Time : 3 Days 0 Hours 55 Minutes
- VOLUME INFORMATION:**

The bottom of the page displays 'NVR'.

Logs

This page displays the system event list of your NVR. This log is different from the **NVR Log** as it includes the following items:

- User login/logout
- Modify/delete account
- System restart
- System reset to default
- System firmware update

The screenshot shows the D-Link NVR web interface. The top navigation bar includes 'D-Link' and menu items: 'DNR-326', 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The left sidebar contains 'Camera Status', 'System Info', 'Logs', 'NVR log', and 'Logout'. The main content area is titled 'LOGS' and contains a message: 'The screen displays the system event list of your DNR-326.' Below this is a 'Clear Log' button and a table of system events.

Date	Time	Info
Oct 14	06:47:19	System has been restored to factory default settings.
Oct 14	06:48:59	System Time Is Updated By RTC.
Oct 14	06:49:11	Set Fan Speed To "Stop".
Oct 14	06:49:12	Set Fan Speed To "Low".
Oct 14	06:49:17	System is rebooted or power up successfully.
Oct 14	06:49:17	Set Fan Speed To "High".
Oct 14	06:50:05	System is shutting down.
Oct 14	07:15:35	System Time Is Updated By RTC.
Oct 14	07:15:47	Set Fan Speed To "Stop".
Oct 14	07:16:05	System is rebooted or power up successfully.

At the bottom of the log list, there is a pagination control showing 'Page 1 of 3' and 'Displaying 1 to 10 of 22 items'. The footer of the interface is labeled 'NVR'.

NVR Log

The NVR Log displays the event log information for your NVR device.

NVR Log: Displays the NVR log information such as stop recording or NVR system start.

NVR Event Log: Displays the event log information such as motion detection or lost camera connection.

The screenshot displays the D-Link web interface for an NVR-326. The top navigation bar includes 'LIVE VIDEO', 'PLAYBACK', 'SETUP', 'MAINTENANCE', 'STATUS', and 'SUPPORT'. The left sidebar contains 'Camera Status', 'System Info', 'Logs', 'NVR log', and 'Logout'. The main content area is divided into two sections: 'NVR LOG' and 'NVR EVENT LOG INFORMATION'. Both sections show a 'Query' dropdown, navigation arrows, and a table with columns for 'Date', 'Time', and 'Log'. The message 'There are no NVRlogs yet...' is displayed in both sections. A 'Helpful Hints...' sidebar on the right provides additional context for the NVR Log and NVR Event Log.

D-Link

DNR-326 // LIVE VIDEO PLAYBACK SETUP MAINTENANCE STATUS SUPPORT

Camera Status
System Info
Logs
NVR log
Logout

NVR LOG
The screen displays the system event list of your NVR.

NVR LOG INFORMATION
Query
<< >>
Date Time Log
There are no NVRlogs yet...
<< >>

NVR EVENT LOG INFORMATION
Query
<< >>
Date Time Log
There are no NVRlogs yet...
<< >>

Helpful Hints...
The following list briefly describes the NVR Event list items:
NVR Log: Displays the log information of NVR, for example stop recording or NVR system start.
NVR Event Log: Displays the event log information, for example motion detection or when a camera connection is lost.

NVR

Support

The NVR Help page provides a list of support topics.

The screenshot displays the D-Link NVR web interface. At the top, the D-Link logo is visible. Below it, a navigation bar contains the following tabs: DNR-326 //, LIVE VIDEO, PLAYBACK, SETUP, MAINTENANCE, STATUS, and SUPPORT. The SUPPORT tab is currently selected. On the left side, a vertical menu lists the following options: Menu, Live Video, Playback, Setup, Maintenance, Status, and Logout. The main content area is divided into several sections:

- HELP MENU**
 - Live Video
 - Playback
 - Setup
 - Maintenance
 - Status
- LIVE VIDEO**
 - Live Video
- PLAYBACK**
 - Playback
- SETUP**
 - Wizard
 - Network Setup
 - Camera Search
 - Camera Setup
 - Audio and Video
 - Live & Playback Setup
 - Recording Schedule
 - Auto-Backup Setup
 - Event Setup
 - E-Mail Setup
 - Time and Date
- MAINTENANCE**
 - Users
 - System
 - Firmware Upgrade
 - RAID
 - Dynamic DNS
- STATUS**
 - Camera Status
 - System Info
 - Logs
 - NVR log

At the bottom of the interface, the text "NVR" is displayed.

Live Video

This section will enable you to configure and view the live video from your network cameras.

Set Up Live View



Step 1: Click the **LIVE VIDEO** button at the top of the menu.


Step 2: Select a camera(s) from the camera list on the right and then drag it to the location to where you wish the image to be displayed.

Step 3: You can change the video display position by dragging it to another position.

Note

1. The selected video will be marked with a green line.
2. Enable Digital PTZ: Right-click on the video and enable Digital PTZ, then click the + or – button to zoom in or zoom out the view. The lower right square flashing on the video grid indicates the correspondent view of the camera.
3. If the camera supports PTZ, users can control the selected camera from the PTZ panel. Users can also right-click on the video and check **Enable Move** to control the PTZ function directly. Please note that when **Enable Move** is checked, the video will be marked with a red outline. This indicates that another camera cannot be adjusted until the PTZ function has been deactivated.
4. If the camera supports audio, users can check **Enable Audio** from the right click menu and listen to live audio of this channel.
5. Snapshot: Right-click on the video and select the snapshot function to capture a specific video image immediately.
6. Right-clicking on the video will show the option to **Toggle to Full Screen**. Press the ESC key on the keyboard to return to normal display.

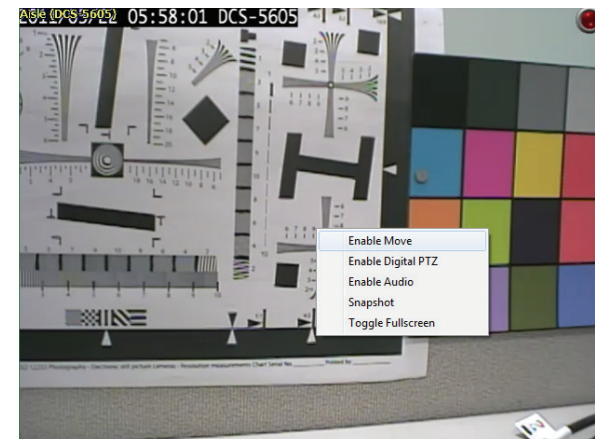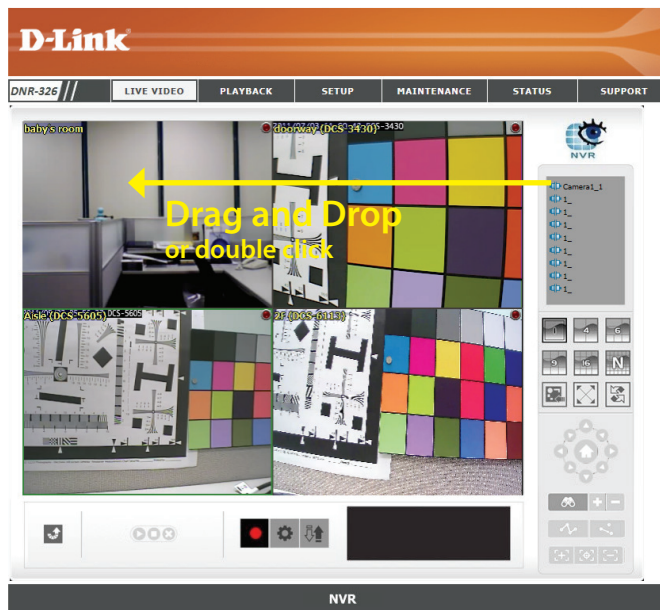

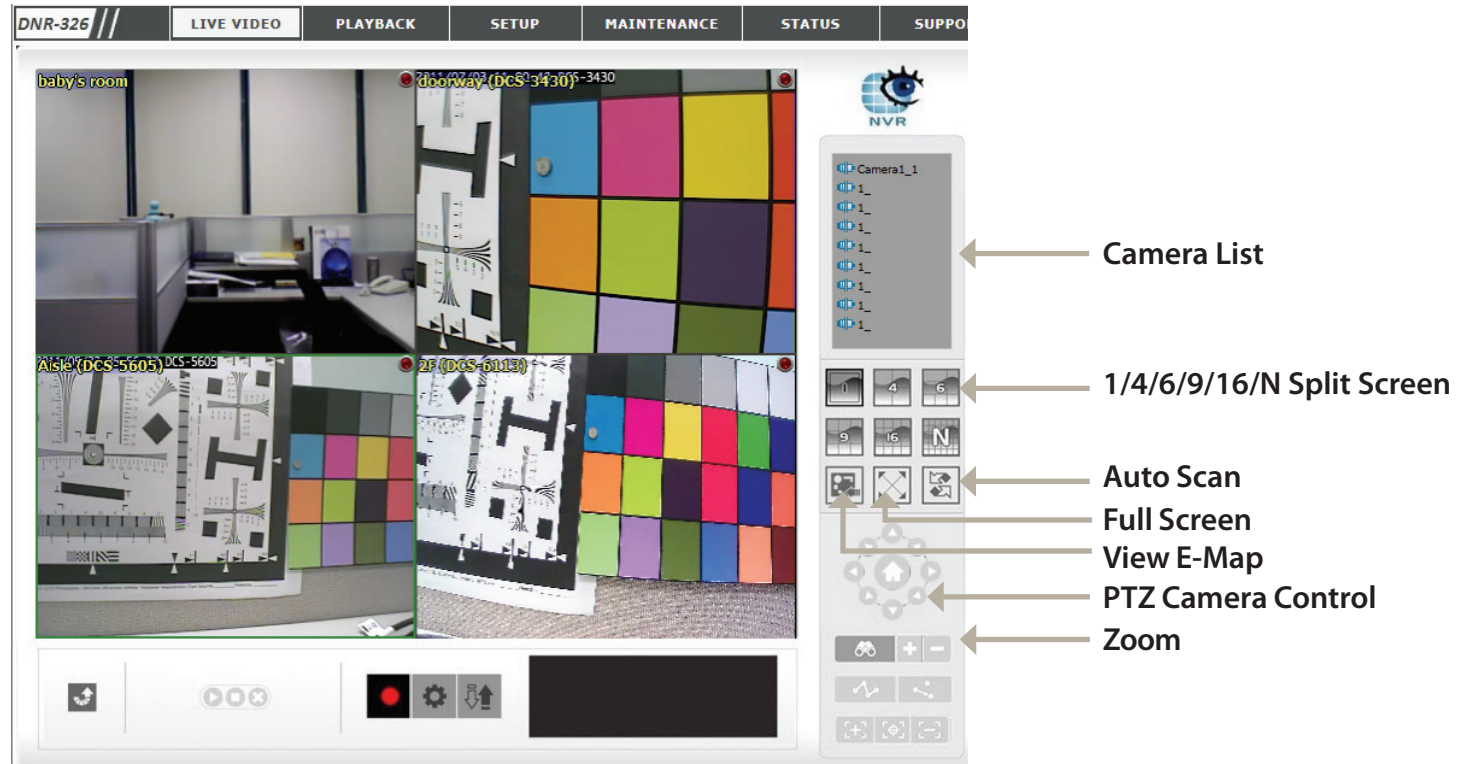

1/4/6/9/16/N You can choose to view 1/4/6/9/16 or $n \times n$ cameras at a time.

Split Screen: **Note:** Only 9 physical camera channels are supported; any more channels must be duplicate channels.


View E-Map: Display your emap file. The file has a max. size of 20 K and is in a BMP or JPG file format.

Auto Scan: Activate auto scan to rotate the channels on the display screen. For instance, you may select to show only 4-split screen on the live view, while connecting 16 channels to the system. With the auto scan function, you are able to see all 16 channels in turn.

Full Screen: Select to display the video with full screen. Press the **ESC** key on the keyboard to return to normal display.

PTZ Camera Control: You may control the camera view by utilizing the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.

Zoom: Click the + or - button to zoom in or zoom out. This option is only available with cameras that support the optical zoom function.

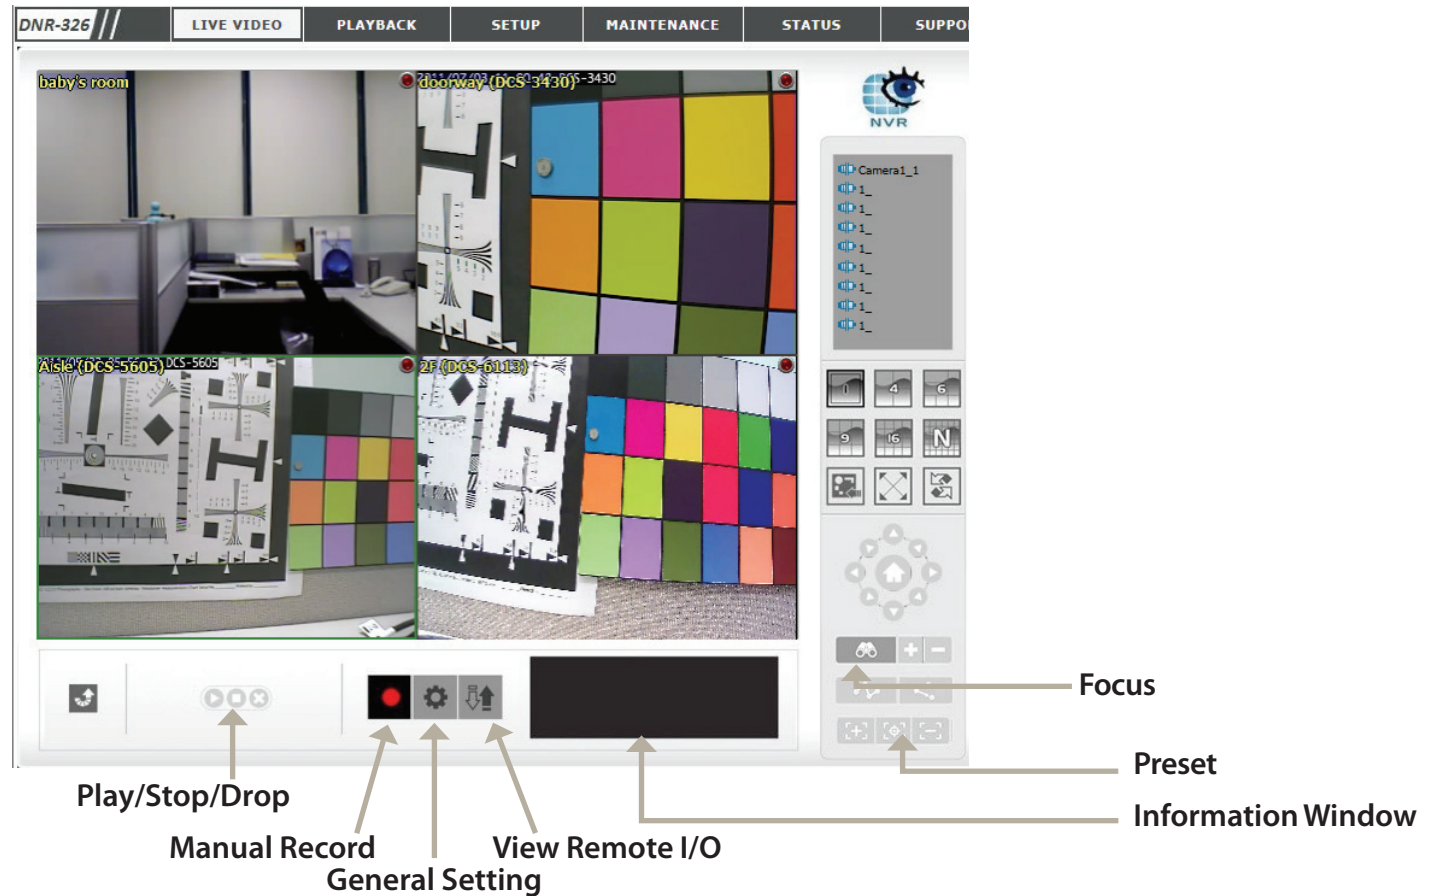

Preset: Click the **Set** button to set a preset position for a camera with PTZ support. Users can give the specified position a name and store it in the preset position list. Click the **Go** button to go to the preset position. (for PTZ cameras only)

Focus: Click the + or - buttons to adjust focus or select auto focus.

Play/Stop/Drop: Select a camera/video and click this button to play/stop/disconnect a particular channel.

Information Window: Display video information including camera name, video status, and bit rate for a selected channel.


Manual Record: Click to start recording immediately. Click again to stop recording.

LiveView Setting

The LiveView Setting enables you to configure options including audio, monitor display, and notification. To access this setting, click on the General Setting icon on the Live Video screen.

General

1. Check the **Enable audio on active channel** option to enable audio streaming on active channel. This function synchronizes with right click on camera to enable audio.
2. Check the **Synchronize video frames** option to avoid video footage lagging occurring in video display.

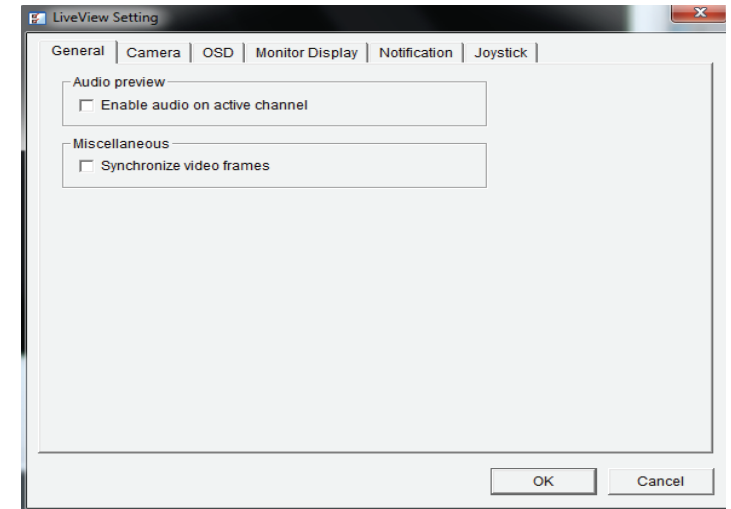


Camera Setting

The DNR-326 allows you to adjust the stream for remote live streaming in order to conserve bandwidth.


Note: Stream Profile is the second stream of the camera. Not all cameras feature a second stream.

1. Select your camera device from the list on the left.
2. Select the **Stream Profile** from Original, Low, and Minimum. Low streams at a rate of under 300 Kbps while Minimum streams at under 100 kbps. If you would like to use this option for another camera on the list, click **Copy To**.
3. Click **OK** to save this setting.

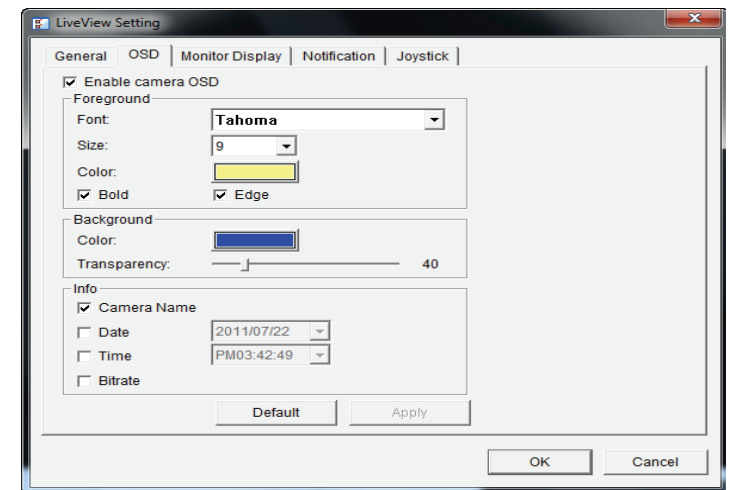


OSD (On-screen display) Setting

1. Check the **Enable camera OSD** option.
2. Set the foreground and background settings of the OSD.
3. Select which kinds of information will be displayed on the screen.
4. Click **Apply** to preview the result.
5. Click **Default** to back to the default settings if necessary.

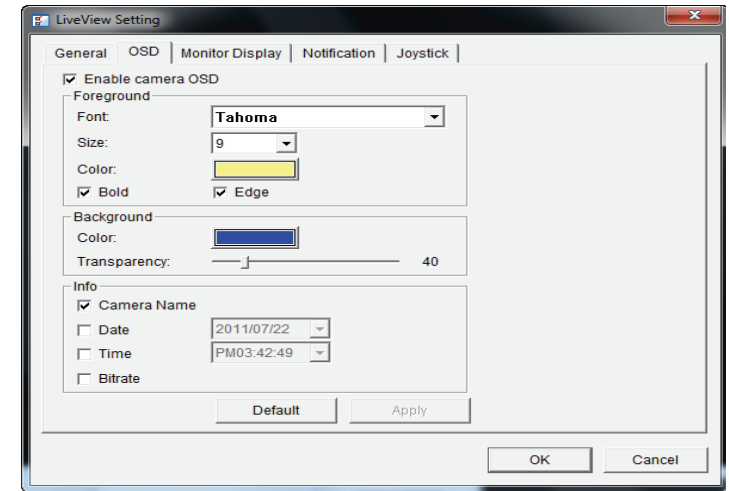


Monitor Display Setting

1. Select the primary channel which will always be on the screen when activating auto scan; then select the secondary channel which has second priority when activating auto scan. Enter the time interval for auto scan.
2. Choose the desired screen division ($n \times n$).

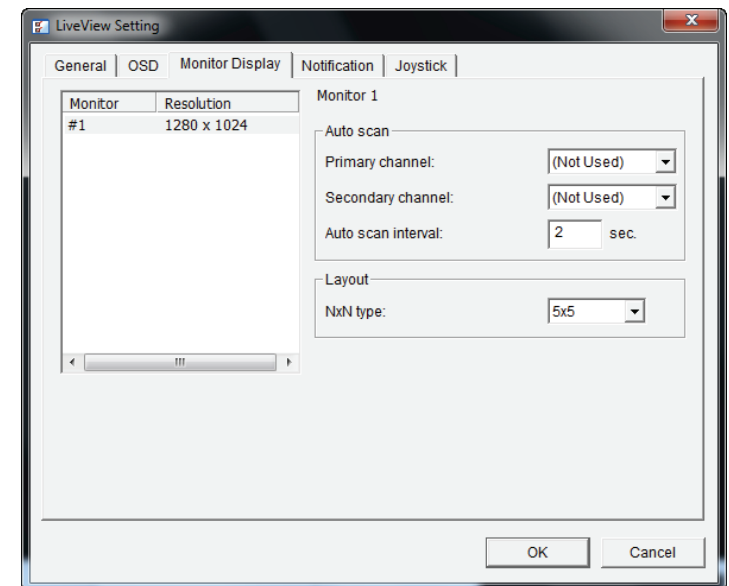

Notification

1. Check **Show recording status** to show the recording status on the monitor display.
2. Check **Show camera event** to display messages for detected camera events.
3. Check **Popup system event** to have the system event message dialog pop up as a warning when a system event occurs.

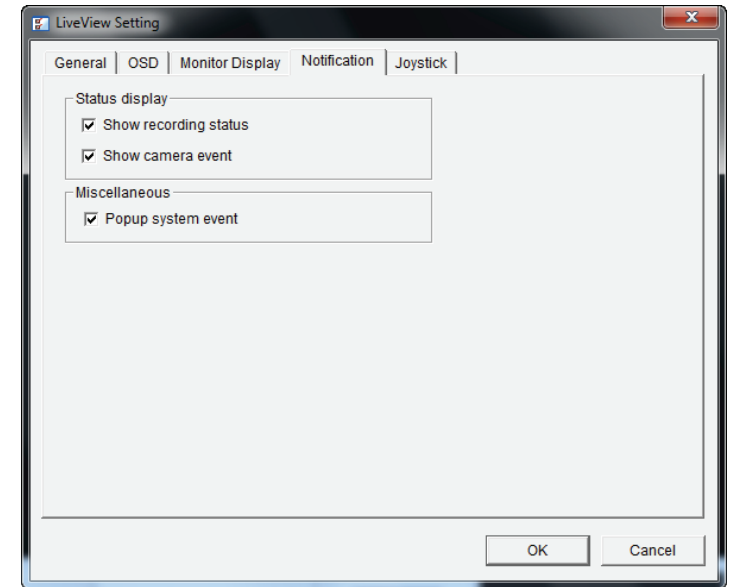

Set up Joystick Control


Function: You can choose the function from the drop-down menu to link with the joystick button.

Parameter: Choose the preset point from the drop-down menu.

Default: Click to go back to default settings.

Import: Click to import the settings.

Export: Click to export the settings.

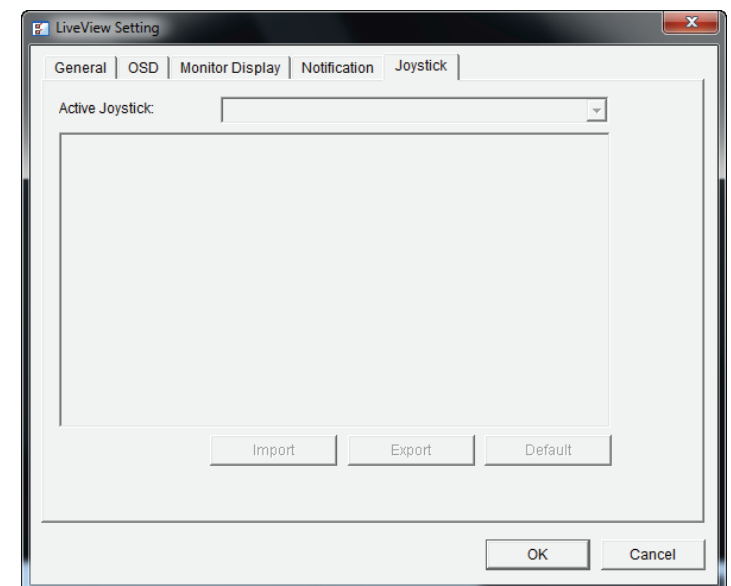


Multiple View

You can right-click on camera list to duplicate and connect/disconnect designated cameras and do other functions.

Duplicate Camera: Select the duplicate camera function to create multiple views. The duplicated camera will be shown with a green indicator. If you combine this function with digital PTZ, users are able to enlarge different spots and view them in different channels while recording the whole view.

Connect/Disconnect: Click to connect or disconnect the designated camera.

Connect All/Disconnect All: Click to connect or disconnect all cameras.

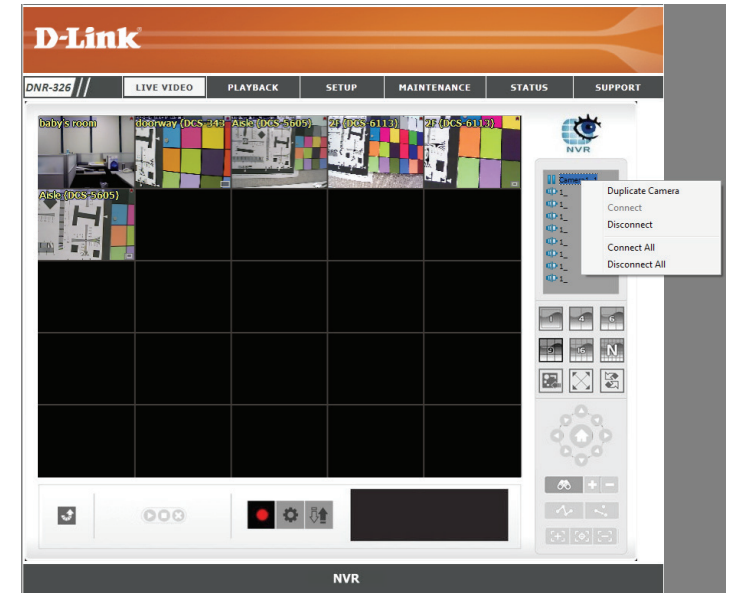

Playback

This feature allows you to search and play back the recorded video.

To play the recorded video:

Step 1: Be sure that you have set the schedule/recording event first.

Step 2: Click the **PLAYBACK** tab at the top of the menu.


Step 3: Click **Open Record**.

Step 4: The **Record Display Window** will show information about the available video clips. Select the date you would like to find the video records.

Step 5: Highlight the video records that you would like to review.

Step 6: Click **OK**.



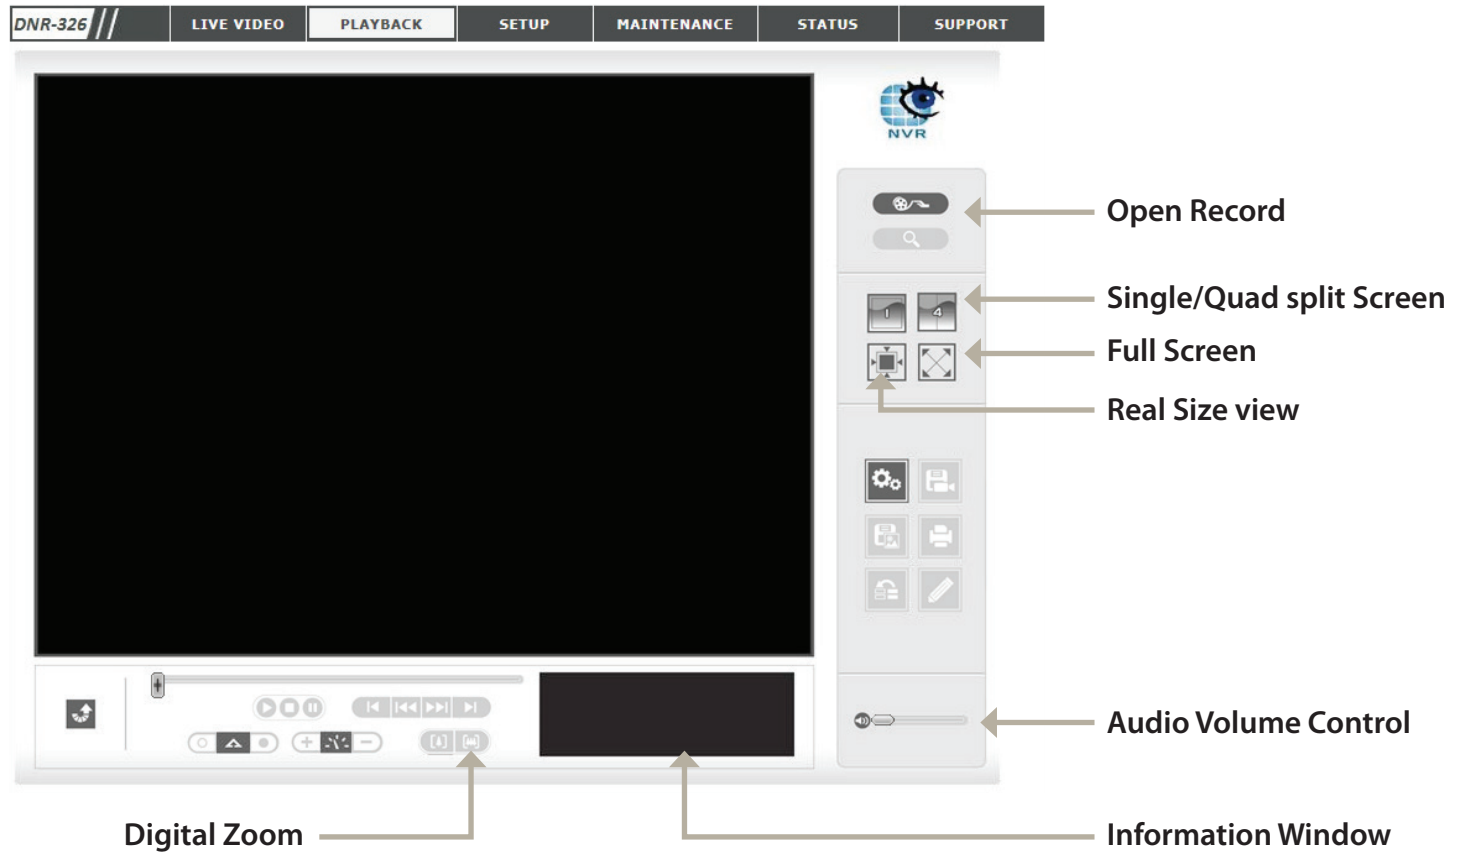


Single/Quad split Screen: Users may view a single camera or 4 cameras at a time.

Full Screen: Select to display the video with full screen. Press the **ESC** key on the keyboard to exit full screen.

Information Window: Display video date and time, cue in/out points, and speed.

Audio Volume Control: Use the slider to adjust the sound level.

Digital Zoom: Click the icon to digitally zoom in or out. Each camera can use this function independently.

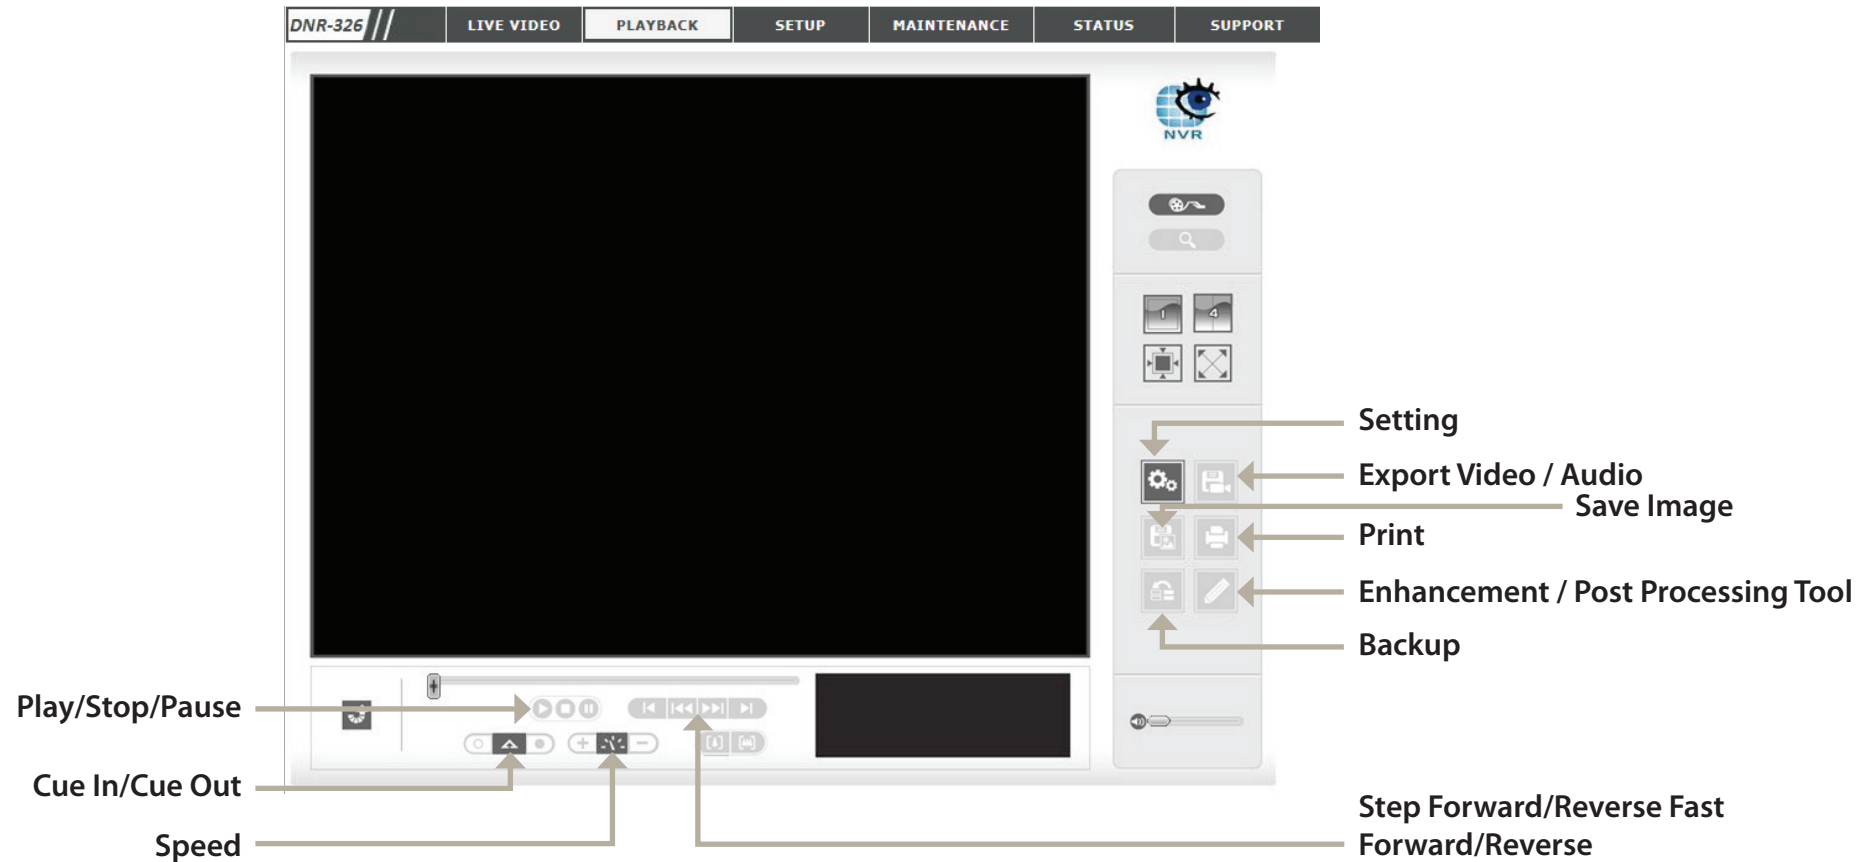

Play/Stop/ Pause: Select a camera/video and click this button to play/stop/pause a particular channel.

Speed: Click the + or - button to increase or decrease the playback speed.

Cue In/Cue out: Click the **Cue In** or **Cue Out** button to set the part of the video to save.

Step Forward/ Reverse: Click to pause the playback and move to next frame or last frame.

Fast Forward/ Reverse: Click to pause the playback and move to previous/next minute.

Record and Playback Settings

Click the **Setting** icon to access and change the playback settings.

Calendar View: Recordings are displayed on a calendar.

List Control: Recordings are displayed as a list.

Play when open: When selecting this option, the system will start playing the video clip whenever a record is withdrawn.

Auto skip when record motion only mode: Check the option to set up the system to automatically skip to the points where motion is recorded.

Next Interval: Set the interval for the video to go forward when you click the **Forward** button on the control panel.


Previous Interval: Set the interval for the video to go back when you click the **Reverse** button on the control panel.

Save in Clipboard: The image will be saved in the clipboard and can be pasted to other applications.

Manually save the image file: You can manually select where you would like to save the image, name the saved file, and choose the desired format for the image.


Automatically save the image file: By pre-setting a path/URL and the image format, the system will automatically save the image accordingly when you click **Save Image** in the control panel.

Synchronize video frames: Check the **Synchronize video frames** option to prevent the video footage from lagging in the video display.

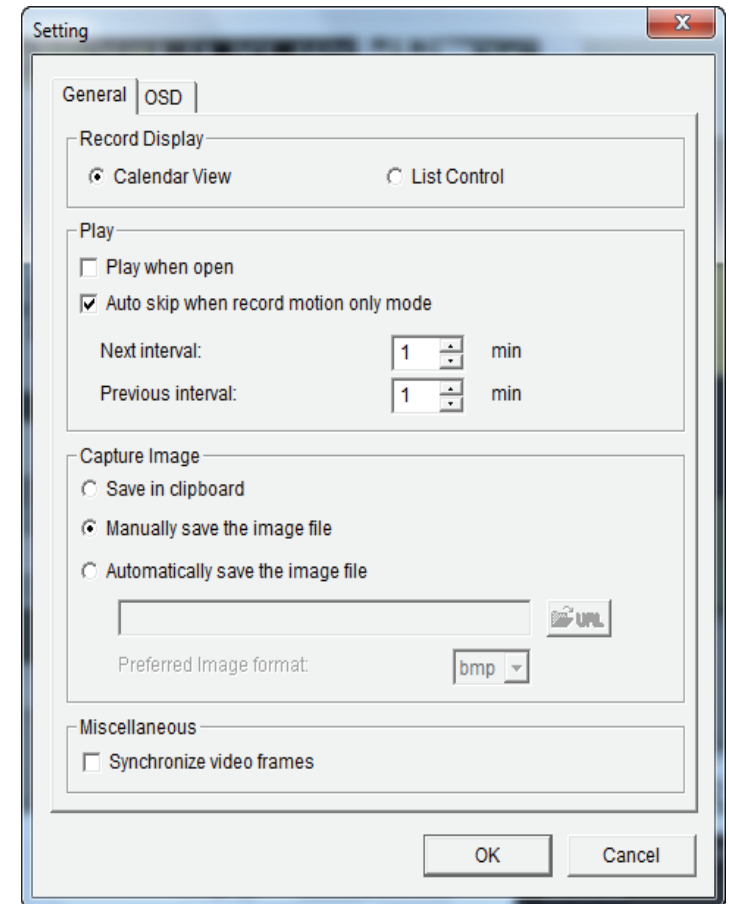

Search the Recorded Video For Playback

Click the **Open Record** button to access the Date-Time Panel and select the video records which you would like to review. Users can refresh the **Date Time Search Dialog Window** or go to the previous or next recording date by clicking the upper-left corner buttons.

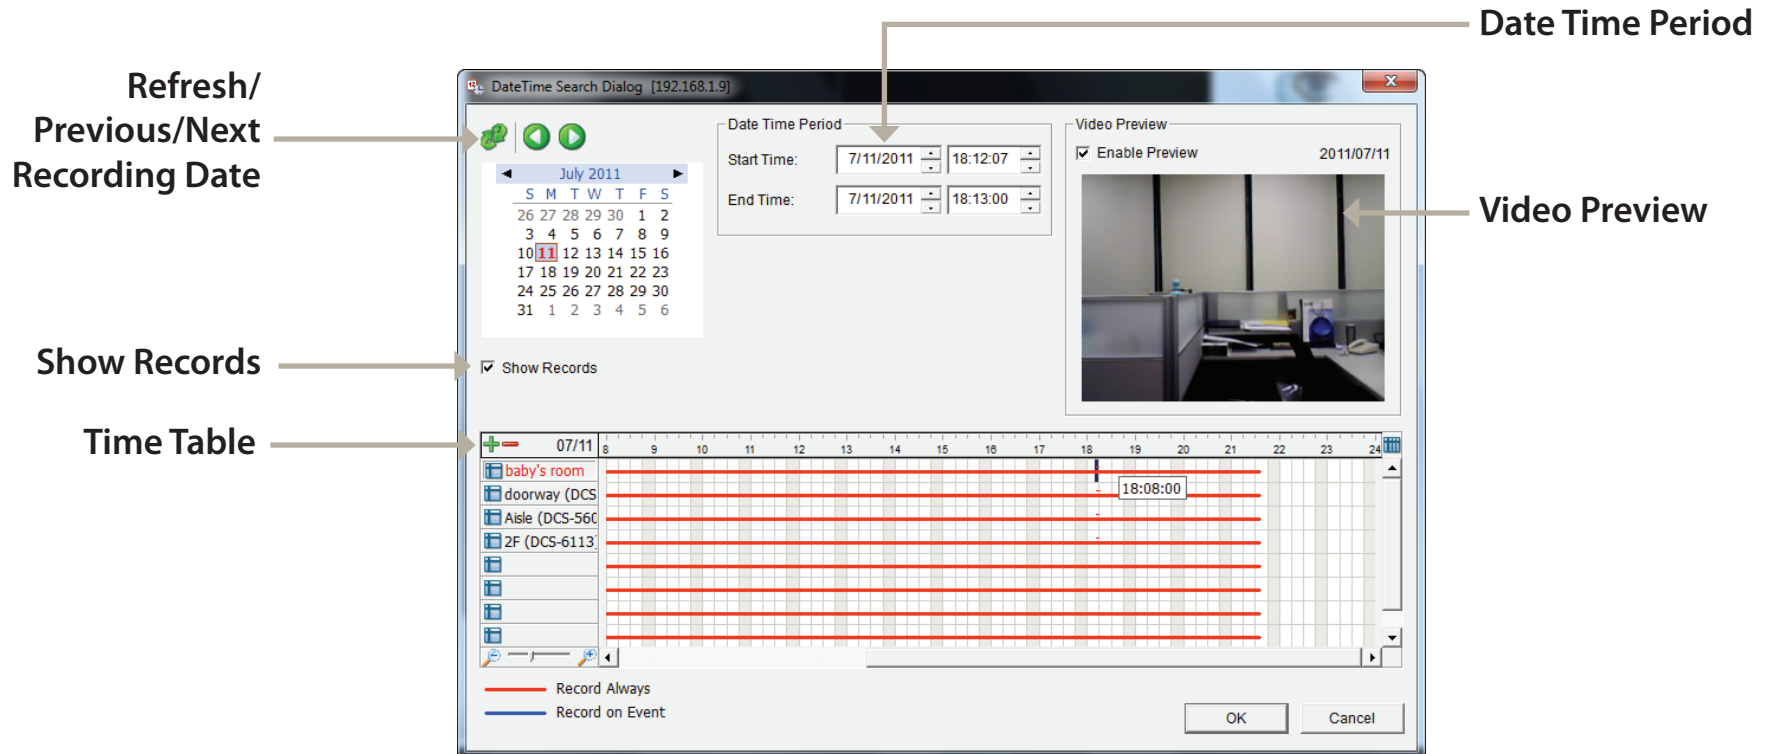

Record Display Window: Display the available recorded video records.

Date Time Period: Select the start and end points that indicate the time period you would like to view.
Note: The time period cannot exceed two days.

Video Preview: Check the **Enable Preview** option to view the selected video.

Time Table (pre-set recording schedule): Click the + icon to select all channels, or click the – icon to deselect all channels. The scale bar can be used to modify the scale of the time table. There are two recording modes: **Record Always** and **Record on Event**. The timetable will display these two modes in different colors.

Show Records: Displays the recording data in a timetable.

Step 1: From the **Record Display Window** at the top left of the **Date Time Panel**, select the date you would like to search the record from. The red lines shown on the timetable indicate available recorded video records.

Step 2: Use color bars to differentiate recording types from each other. This will help you select video clips.

Step 3: Highlight the video clip you would like to review by left-clicking and dragging the time period. You may also utilize the **Start Time** and **End Time** in the **Date Time Period Section** after choosing the camera. The scale of the timetable can be modified using the icon at the bottom-left corner.

Step 4: Select the **Enable Preview** option to get the preview of the video you select.

Step 5: Click the camera name to select the cameras you would like to play back.

Step 6: Click **OK** to begin playback.

Note:

The Record Display Window can be shown in (a) calendar view or (b) list control view. To modify the settings of the record display window, click the **Setting** button at the right of the page.

Smart Search from the Recorded Video

Smart Search allows users to search for specific unusual events based on certain criteria.

There are 5 types of unusual events: **General Motion**, **Foreign Object**, **Missing Object**, **Lose Focus**, and **Camera Occlusion**. Users can refresh the **Date Time Search Dialog Window** or go to the previous or next recording date by pressing the upper left corner buttons. After opening the recorded video, click the **Search Mode** button to obtain the **Intelligent Search Tool** panel and select the type of event in the **Alarm Event Type** pulldown menu you would like to search for.

General Motion


Detect all movements in the defined area.

1. Define a detection zone by clicking and dragging to draw an area on the image. You may define more than one zone by repeating this step.
2. Modify the sensitivity setting by adjusting the slider control. Moving the slider toward the right will increase the sensitivity level, which means a relatively small movement will trigger the alarm.
3. Set the interval. Moving the slider toward the right will increase the time interval so that the alarm will only be triggered when the movement lasts for a longer period of time.
4. Select the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event was found.
5. Click **Search**.

Foreign Object

The alarm will trigger when any additional object appears in the defined area on the screen.

1. Define the detection zone by clicking and dragging to draw an area on the image.
2. Modify the sensitivity setting.

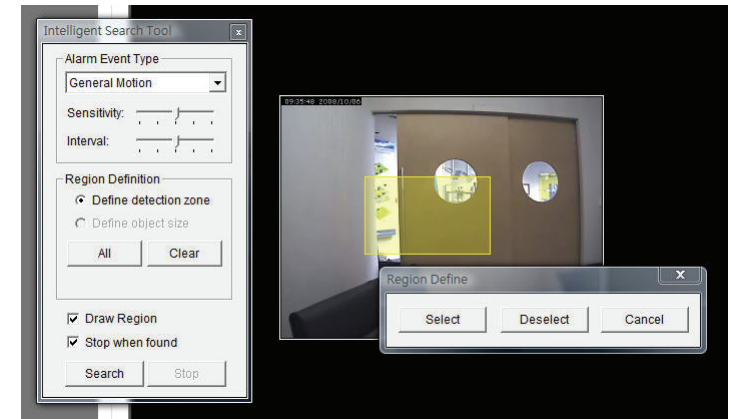

3. Set the interval.
4. Select the **Stop when found** option. If unchecked, the search tool will list all the events it finds, instead of stopping at the moment an event is found.
5. Click **Search**.

Missing Object

The alarm will trigger when the selected object is removed from the defined area on the screen.


1. Define the detection object by clicking and dragging to draw an area on the image.
2. Modify the sensitivity setting.
3. Set the interval.
4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it finds, instead of stopping at the moment the event is found.
5. Click **Search**.

Lose Focus

The system will inform you when the camera loses focus.

Camera Occlusion

The alarm will be triggered when the camera is blocked.

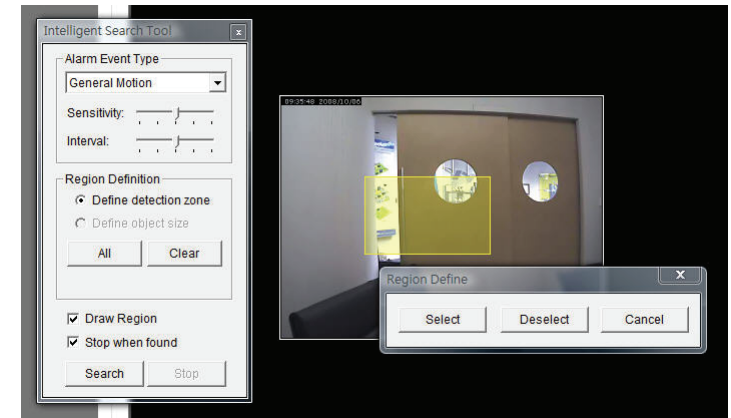

Recorded Video Enhancement

During playback, users can click the **Enhancement** button to enable post-processing of the selected video.

General Setting

Apply active channel: The settings will be applied only to the selected channel.

Apply all channels: The settings will be applied only to those currently shown on the screen.

Filter Setting

Visibility: Select this option and adjust the gamma to change the luminance.

Sharpen: Select this option to activate the function. Move the slider control to the right or left to sharpen or soften the image.


Brightness: Select this option and move the slider control to the right or left to make the image brighter or dimmer.

Contrast: Select this option and move the slider control to the right or left to increase or decrease the contrast.

Greyscale: Select this option to display the image in black and white.

Default: Reset settings to their defaults.

OK: Apply the modifications.

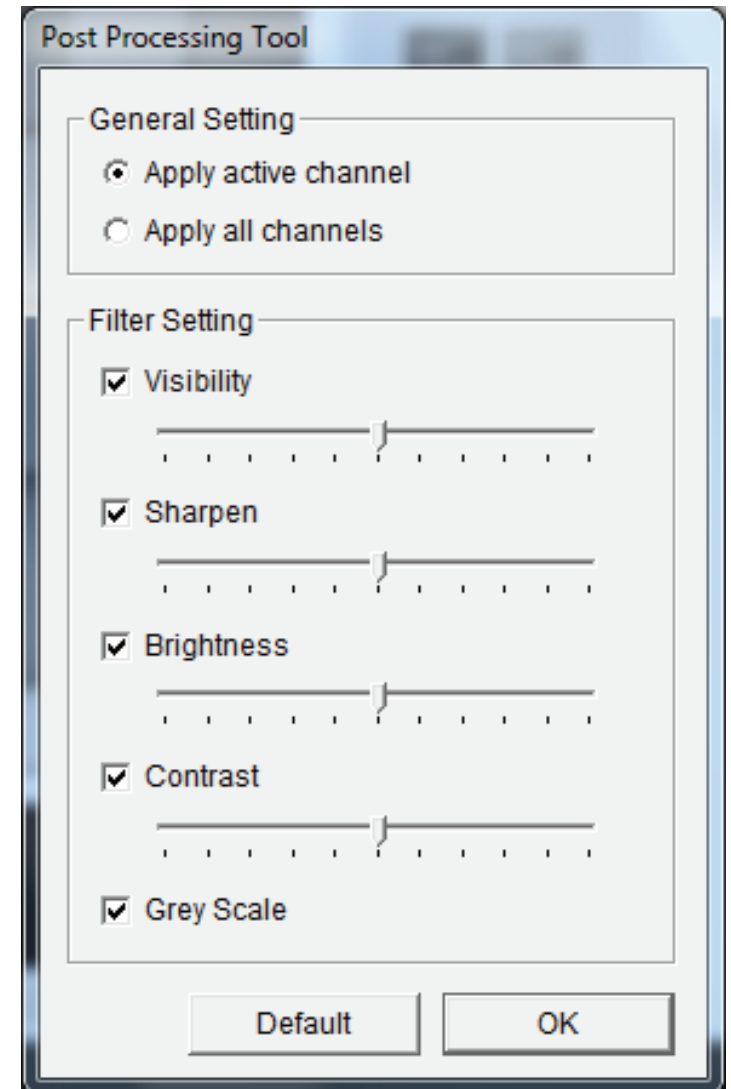

Save Video

Step 1: During playback, users can choose the camera where they would like to save a video clip from.

Step 2: Set the cue in and cue out points; the cue in and cue out time will be shown on the information window. Then click **Save Video**.

Step 3: Choose the folder where you would like to save the file.

Step 4: Input the file name and click **Save**.


Step 5: Choose the export format.

Step 6: Choose the user profile.

Step 7: Select the **Export Audio** option if the video has audio and you would like to export the audio with the video.

Step 8: Click **OK**.

Note: The .asf format is recommended for exporting video.

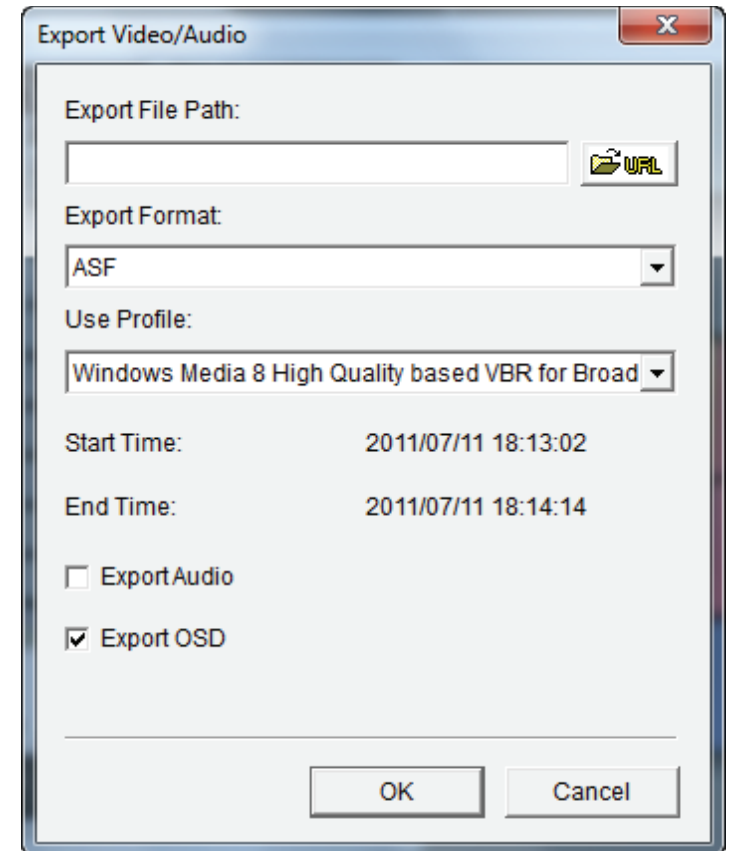


Save Image

- Step 1:** During playback, you can choose to save an image from a selected camera.
- Step 2:** Click **Save Image** when the desired image is shown on the screen.
- Step 3:** Click **Save Image** again to choose the folder where you would like to save the file to.
- Step 4:** Choose the desired image format (BMP or JPEG).
- Step 5:** Input the file name.
- Step 6:** Click **Save**.

Note:

You may skip step 3 by pre-selecting a folder and format for images. See the **Setting** option for more details.

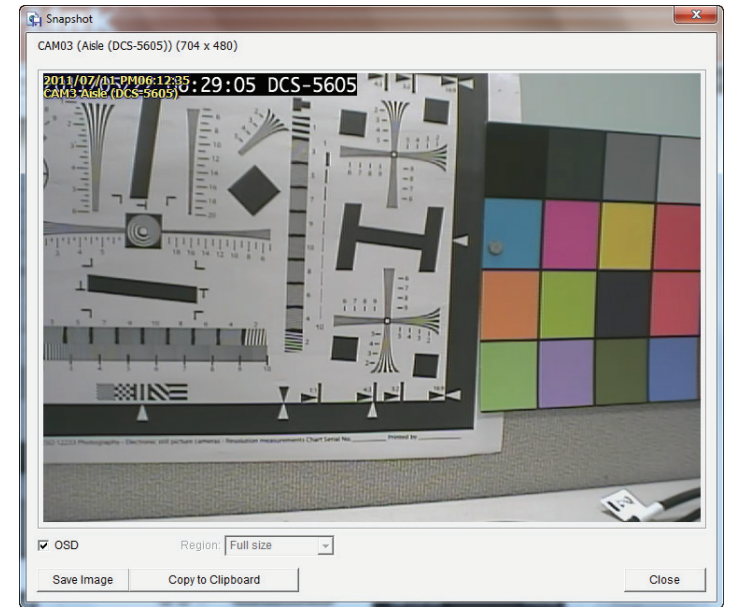

Print Image

Step 1: During playback, you can choose to print a selected image.

Step 2: Click **Print** when the desired image is shown on the screen.

Step 3: Select the desired print settings.

Print Setup


Print Content: Print the image from the currently selected channel or all the channels shown on the screen.

Print in original size: Select this option to have the image print in the original size.

Fit the page: Select this option to fit the image to the page.

Align Image: Align to the top, center, or bottom of the page.

Step 4: Click **Print**.

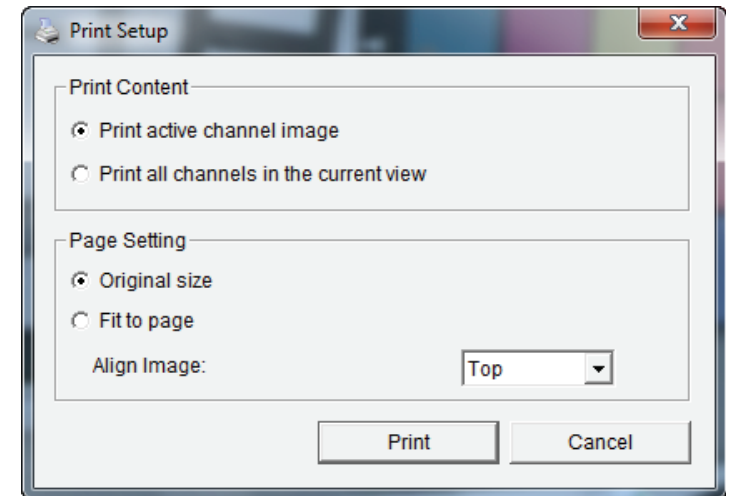

Back Up Recorded Video

Unlike the Save Video function, the Backup function will save all the recorded videos during the time period you select, instead of a single video clip.

Step 1: Use the **Open Record** button to select the desired data.

Step 2: Click **Backup**.


Step 3: Set the **Start Time** and **End Time** that you would like to back up.

Step 4: Select the cameras that you would like to back up.

Step 5: Select the directory where you would like to back up the data to.

Step 6: Click **Backup**.

The system will then begin the backup process automatically.

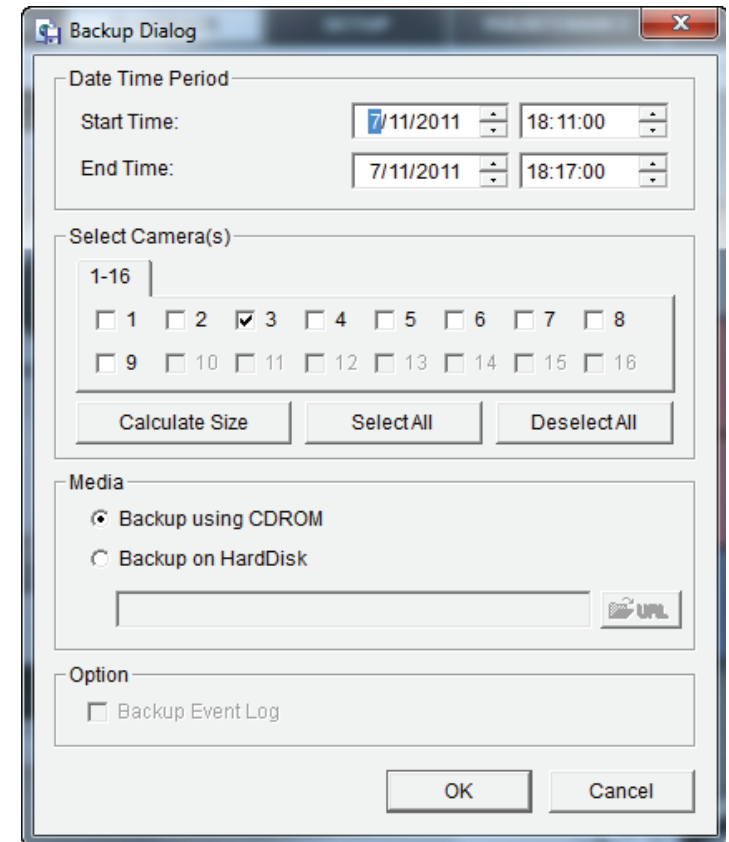

Multi-NVR Viewer Application

Step 1: Please insert the product CD.

Step 2: Install the **D-ViewCam NVR Pro** application from the CD.

Step 3: Run the **Multi-NVR Viewer** application from Start -> Programs -> D-Link -> D-ViewCam NVR Pro -> Multi-NVR Viewer

PTZ Camera Control: Control the camera view by utilizing the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.

Zoom: Click the + or - button to zoom in or zoom out the view.

Minimize: Minimize the Remote Live Viewer window.

Exit: Shut down the application.

Digital Zoom: Click the icon to digitally zoom in or out.


Play/Stop/Drop: Select the camera/video and click this button to play/stop/disconnect a particular channel.

Information Display Window: Display video information including server name, video current status, and bit rate for a selected channel.

Playback: View playback video remotely.

Snapshot: Select the snapshot function to capture a specific video image immediately.

Remote I/O: Users can remotely adjust the external I/O device.

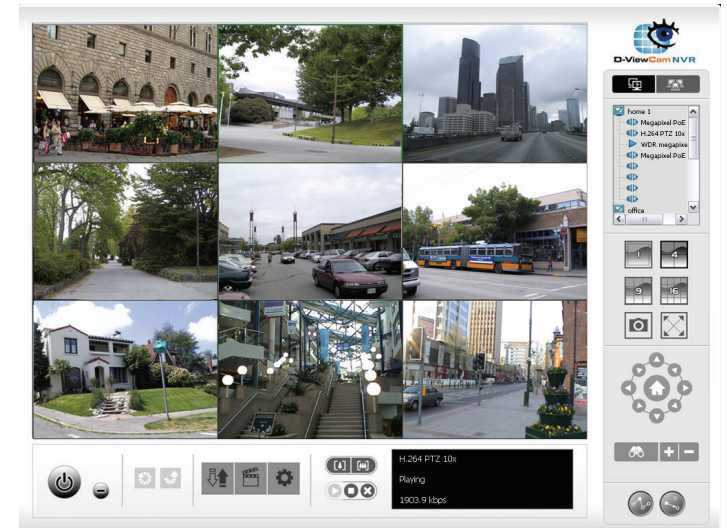

Set Connections to the Units

Step 1: Click the **Site Setup** button.

Step 2: Input the unit name.

Step 3: Input the IP address.

Step 4: Modify the port if necessary.

Step 5: Input the user name.

Step 6: Input the password.

Step 7: Check the **Save Password/Auto Login** option.

Step 8: Click the **Test Server** button to test the connection between the local application and the remote unit.

Step 9: Click the **Add** button to add this unit into your remote server list.

Step 10: Click **OK**.



Set Groups for Cameras

Step 1: Click the **Group** tab.

Step 2: Log in to all the servers that contain the camera(s) you would like to put into group(s).

Step 3: Click the **Insert** button to create a new group.


Step 4: Name this group.

Step 5: Highlight the camera(s) that you would like to add into this group and then click the <- button.

Step 6: Repeat step 4 to establish the group.

Step 7: Repeat steps 1 through 6 to establish other groups.

Step 8: Click **OK**.

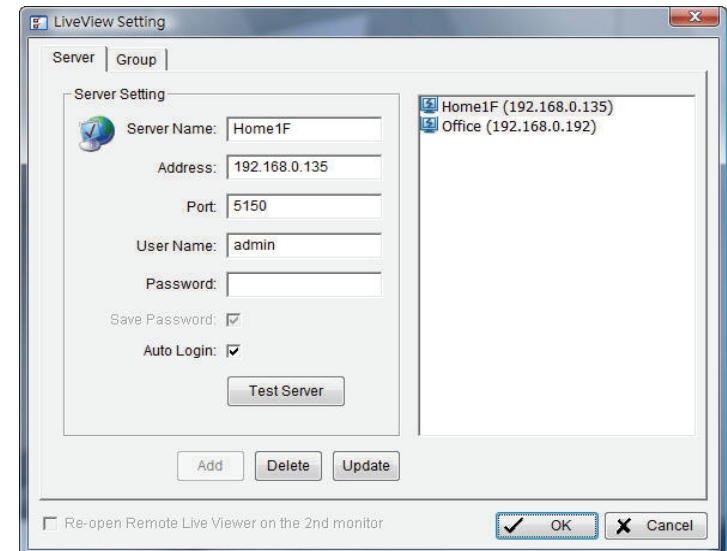

Playback Manager Application

Step 1: Please insert the product CD.

Step 2: Install the **D-ViewCam NVR Pro** application from CD.

Step 3: Run the **Playback Manager** application from the Start -> Programs -> D-Link -> D-ViewCam NVR Pro ->Playback Manager

The Playback System control panel is similar to the playback panel in the web interface. See "Playback" on page 52 for more details.

1/4/9/16 Split Screen: Users can select to view a single camera or 4 cameras at a time.

Screen:

Select to display the video with full screen. Press the ESC button on the

Full Screen: keyboard to return to normal display.

Information Window: Display video date and time, cue in/out points, time, and speed.

Audio Volume Control: Adjust the sound level.


Digital Zoom: Click the icon to digital zoom in or digital zoom out from the view. Every camera can use this function.

Play/Stop/ Pause: Select a camera/video and click this button to play/stop/pause a particular channel.

Speed: Click the + or - button to increase or decrease the playback speed.

Cue in/Cue out: Click the Cue In or Cue Out button to set the part of the video to save.


Step forward/ Reverse: Click to pause the playback and move to the next frame or last frame.

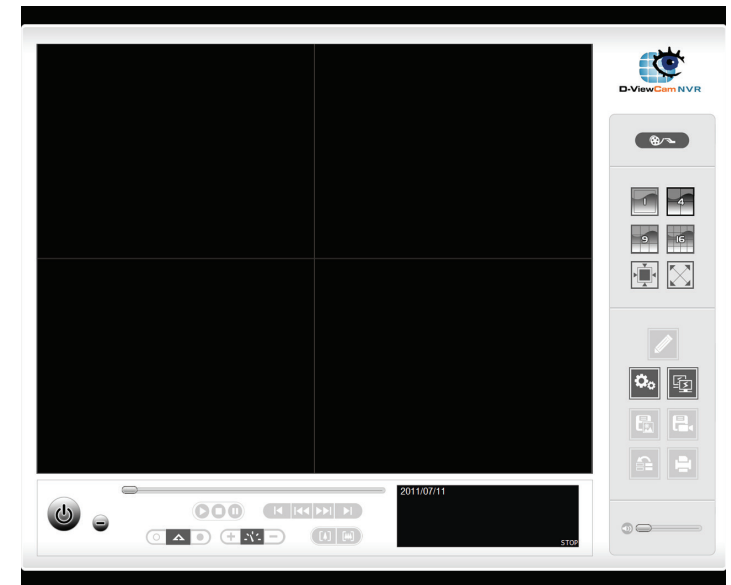

Fast forward/ Reverse: Click to pause the playback and move to the next/previous minute.

Remote Server: See the next page for details.


The Search, Playback, Video Enhancement, Print Image, Save Video, Save Image, and Backup functions are the same as the steps for the web interface.

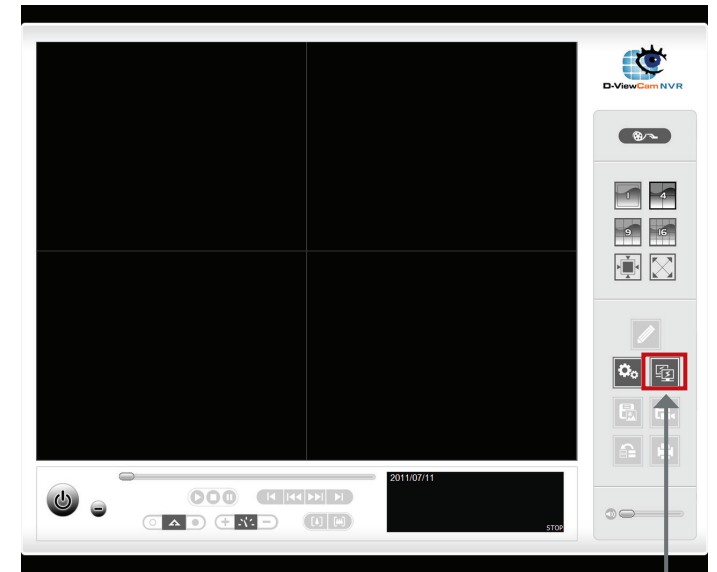

Remote Server


Set Connections

- Step 1:** Click the **Remote Server** button.
- Step 2:** Input the name of your unit.
- Step 3:** Input the IP address of that unit.
- Step 4:** Modify the port if necessary.
- Step 5:** Input the user name.
- Step 6:** Input the password.
- Step 7:** Check the **Save Password** option.
- Step 8:** Click the **Test Server** button to test the connection between the local application and the remote unit.
- Step 9:** Click the **Add** button to add this unit into the remote server list.
- Step 10:** Click **OK**.

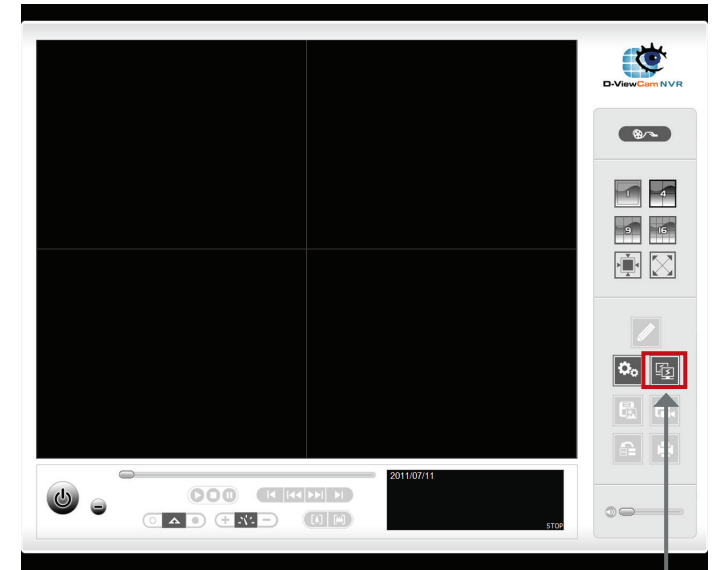

Remote Server

The remote server can now be opened from the Date Time Search Dialog.

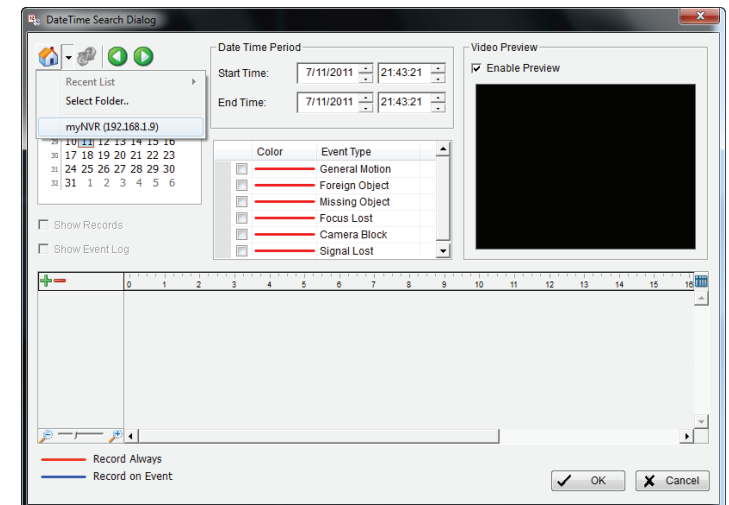

Backup System

In addition to the ways mentioned in the previous chapters, you can apply the application to backup your files.

Run the Backup System application from the **Start -> Programs -> D-Link -> D-ViewCam NVR Pro -> Backup System**

Step 1: Input the IP address of your unit.

Step 2: Input the user name.

Step 3: Input the password.

Step 4: Click **OK**.

Step 5: Click the **New Period** button.

Step 6: Select the record date.

Step 7: Set the **Start Time** and **End Time** you would like to back up (or highlight the video records that you would like to back up).


Step 8: Select the cameras you would like to back up.

Step 9: Click **OK**.

Step 10: Select the time slot which you would like to back up.



Step 11: Click the **Backup** button.

Step 12: Select the location where you would like to save the backup data.

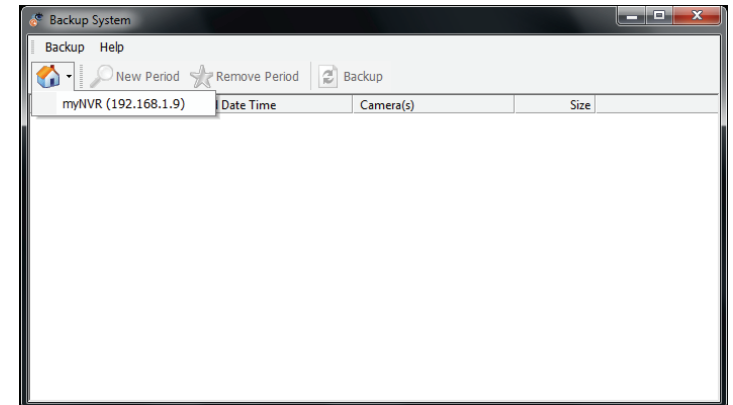

Step 13: Check the **Include Playback application** option, which will add **Playback** application into the backup folder.

Step 14: Click **OK**.

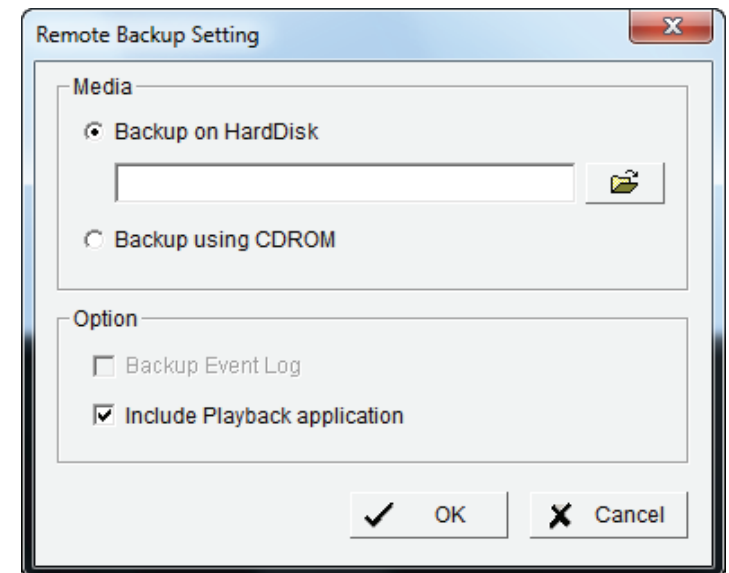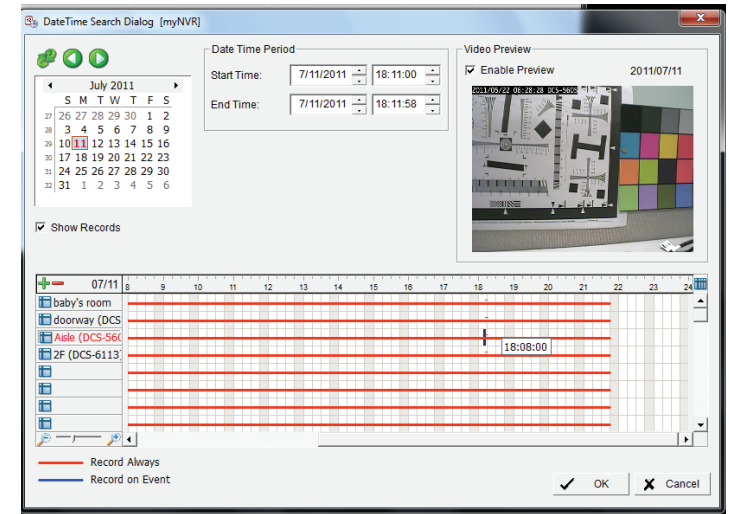

Verification Tool

The Verification Tool verifies whether the data created by the system has been tampered with. It is the process by which a digital watermark (a digital signature) is added to each recorded video frame to ensure its authenticity.

There are two types of data that can be verified by Verification Tool:

1. Files in .avi or .asf formats.
2. Files in .bmp or .jpg formats.

Add File: Insert a single file to list for verification.


Add Folder: Choose a folder with multiple files to list for verification.

Remove File: Remove indicated file(s) from list.

Select All: Select all files in the list for verification.

Note:

Choose the file type first before selecting files.

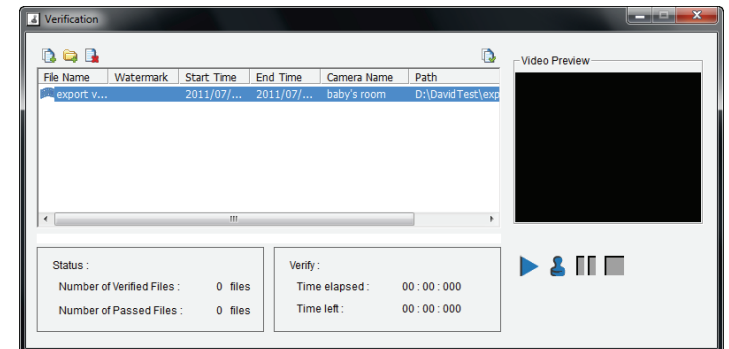

Troubleshooting

Check Disk Status LEDs to verify the condition of the NVR

The disk status LEDs report the condition of the disk drives:

These lights will be solid BLUE when drives are connected but inactive.

The lights will blink when the drives are being accessed, formatted, or synchronized.

They will illuminate AMBER if a drive has failed.

Replace a Failed Disk Drive

If a disk drive fails, the Disk Status LED will turn amber. If the disk drive belongs to a RAID Volume, the Volume will go Critical or Offline.

Replace the failed disk drive with a new disk drive of the same or slightly greater capacity. Please make sure you have powered down the unit.

Step 1: Open the unit's front cover.

Step 2: Pull out the failed disk drive.

Step 3: Install a new disk drive into the slot.

If the failed drive belonged to a RAID Volume, the RAID Volume will begin rebuilding as soon as the new drive is installed. During the rebuilding, the Disk Status LED will blink. If the replacement drive is free, i.e. not assigned to a RAID Volume or as a spare, the Disk Status LED remains dark after you install the new drive.

Respond to a Critical RAID Volume

How the unit responds to a critical RAID Volume depends on the RAID level of your Volume and whether you have a spare drive available:

For **RAID 1** Volumes, if a spare drive is available, the RAID Volume will begin rebuilding itself automatically.

For **RAID 1** Volumes, when no spare drive is available, you must replace the failed disk drive. The RAID Volume will begin rebuilding itself when you install the new disk drive.

For **RAID 0** Volumes, the RAID volume goes offline after a disk drive failure. A **RAID 0** volume cannot be rebuilt. All data on the volume will be lost.

Restore the Default Administrator's Password

If you forget the password, you can reset the password for "admin" to the default password: <empty>. Press and hold the reset button for 5 seconds until the Power LED flashes three times. The Administrator password will now be blank.

Caution when resetting or recovering unit

When you reset or recover your unit, sometimes it will cause data corruption. Back up your recorded data before resetting your unit.

Install ActiveX

If you cannot see the complete page of the system when using Internet Explorer, the ActiveX installation process may not be complete.

Step 1: Click the **Live View/Playback** button on the top right.

Step 2: The browser will ask whether to install ActiveX.

Step 3: Click the upper bar to begin the installation process.

Step 4: Click **Install** to complete the process.

Cannot Log in to the Unit through Internet Explorer

1. Check the settings of your anti-virus software.
2. Adjust the settings of or disable anti-virus software.

Choose a RAID Level

There are several issues to consider when choosing the RAID level. The following summarizes some advantages, disadvantages, and applications for each choice.

RAID 0

Advantage

- Implements a striped disk RAID Volume, meaning the data is broken down into blocks, and each block is written to a separate disk drive
- I/O performance is greatly improved by spreading the I/O load across many channels and drives
- No parity calculation overhead is involved

Disadvantage

- Not a true RAID because it is not fault tolerant
- The failure of just one drive will result in all data in a RAID Volume being lost
- Should not be used in mission critical environments

RAID 1

Advantage

- Simplest RAID storage subsystem design
- Can increase read performance by processing data requests in parallel since the same data resides on two different drives

Disadvantage

- Very high disk overhead - uses only 50% of total capacity


What is RAID?

RAID, or Redundant Array of Independent Disks, is a combination of two or more disks with the aim of providing fault tolerance and improving performance. There are several different levels of RAID, with each providing a different method of sharing or distributing data amongst the drives. The NVR supports RAID levels 0 and 1.

RAID 0 RAID 0 provides data striping, which spreads out blocks of data over both drives, but does not provide data redundancy.

Although performance is improved, the lack of fault tolerance means that if one drive fails, all data in the array will be lost.


RAID 0

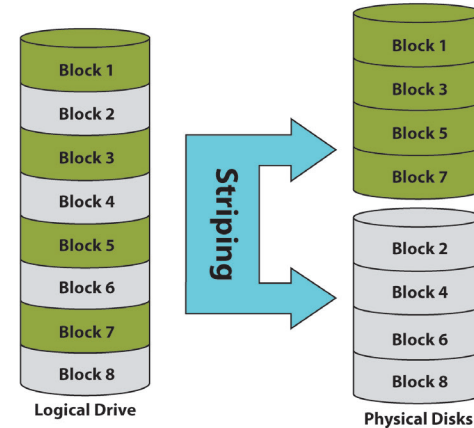

RAID 1 RAID 1 provides mirroring over both disks, with the same read/write speed of a single disk. A RAID 1 array can only be as large as its smallest member disk.

Because the data is stored on both disks, RAID 1 provides fault tolerance and protection, in addition to performance advantages.

RAID 1

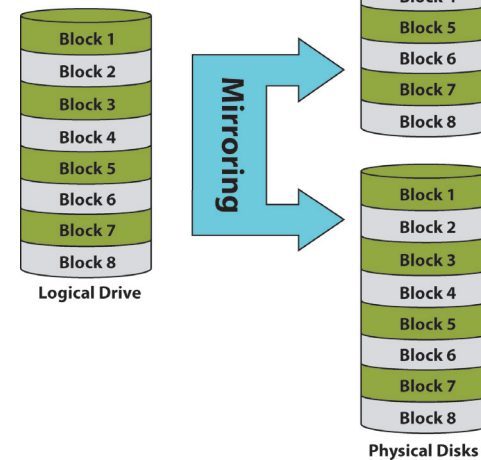

Replacing or Adding a New Hard Drive

It is recommended that you back up your important files before replacing or adding a new hard drive to the NVR.

Replacing a Hard Drive:

Please make sure the power is off before replacing a hard drive. After you have installed the new drive, turn on the NVR, and then connect to the Web UI. The NVR will prompt you to format the new drive (Standard, RAID 1 mode) or both drives (JBOD, RAID 0 mode).

Adding a New Hard Drive:

The NVR is able to work with one single hard drive under Standard mode. Please make sure the power is off before installing a second hard drive.

After you have installed the new drive, turn on the NVR and then connect to the Web UI. The NVR will prompt you to format the new drive.

Note: Formatting a hard drive will erase the data stored on the hard drive. Please back up important data before formatting a hard drive.

Technical Specifications

Firmware Specifications

OS

- Linux

CAMERAS SUPPORT

- Supports all D-Link network cameras as well as those for Axis, Panasonic, Sony, Mobotix, Arecont Vision, IQinVision, Cisco, and ACTi. Includes support for auto-discovery and megapixel resolution.

RECORDING PERFORMANCE

Max. capacity (NVR mode only):

- H.264 1080P (bitrate): 90 Mbps
- H.264 720P (bitrate): 90 Mbps
- MJPEG 1080P (frame rate): 90 fps
- MJPEG 720P (frame rate): 192 fps

Max. capacity (NVR+File Server mode):

- H.264 1080P (bitrate): 68 Mbps
- H.264 720P (bitrate): 68 Mbps
- MJPEG 1080P (frame rate): 70 fps
- MJPEG 720P (frame rate): 150 fps

Note: To enable the File Server function will affect the recording performance. It also differs by video compression.

CAMERA SEARCH

- UPnP

AUDIO & VIDEO RECORDING

- Synchronized audio & video recording

COMPRESSION FORMAT

- H.264, MPEG-4, M-JPEG (for supported network cameras)

VIDEO SETTING

- Resolution, quality, frame rate, enable audio, go to camera interface

RECORDING TYPE

- Record by schedule, manual record and event recording (DI trigger, motion detection from camera)

REMOTE LIVE VIEW

- Supported via IE browser (Max. 9 simultaneous channels)

REMOTE LIVE VIEW CONTROL

- Live view, preset/go, patrol, focus, PTZ functions, snapshot, full screen, digital zoom

REMOTE PLAYBACK

- Supported via IE and NVR client
- Playback system with timeline GUI, search by event, area, cameras, date and time
- IE & NVR client support four channel simultaneous playback

REMOTE PLAYBACK CONTROL

- Playback with normal, fast forward/rewind and step forward/rewind
- Smart Search Intelligent detection function with general motion, missing object, foreign object, camera occlusion, lose focus

OVERWRITE RECORDING

- Auto recycling when disk storage is full

FILE EXPORT

- Export videos to AVI or ASF file
- Export images to BMP or JPG file

USER ACCOUNT

- Additional accounts can be created to allow user access to the system, and specify authorization for the camera channels, PTZ, etc.

DDNS

- D-Link DDNS server support

SYSTEM TIME

- Set the system time (D-Link NTP, Input time, Sync with computer, Daylight Saving Time)

REMOTE BACKUP

- Remote software can back up raw data to redundant storage
- Auto back up recorded video to remote FTP server by daily schedule

SYSTEM STATUS

- Camera status, System status

NETWORK SERVICE PROTOCOLS

- IPV4, ARP, TCP, UDP, ICMP
- DHCP Client
- DHCP Server
- NTP Client (D-Link)
- DNS Client
- DDNS Client (D-Link)
- SMTP Client
- HTTP Server
- PPPoE
- UPnP
- IP filtering
- Samba Server

USER INTERFACE

- HTTP Web browser - Internet Explorer 7 or later (32 bit OS only)

- NVR Search Utility
- Multiple language GUI

Hardware Specifications

STANDARDS

- IEEE 802.3/u/z
- Auto MDI/MDI-X
- SATA I, II

HARD DISK¹

- Hard Disk control & manage via PC
- Reformat Disk
- RAID 0
- RAID 1²
- JBOD

TWO RESET MODES

- Reset firmware GUI button
- HW reset button (press over 5 seconds)

FLASH ROM

- 128 MB

RAM

- 256 MB DDR II

NIC

- Gigabit Ethernet LAN port (10/100/1000 Mbps)

I/O PORTS

- RJ45 port
- DC-in jack
- USB port for UPS status update (optional)

POWER ADAPTER

- DC 12 V/4 A

RESET BUTTON

- Reset to factory default

SECURITY

- Security lock
- Cover lock

POWER CONSUMPTION

- Max. power consumption: 25.20 W
- Standby state max. power consumption: 0.23 W

DIMENSIONS (W x D x H)

- 178.5 x 146.4 x 115 mm (7.03 x 5.76 x 4.53 inches)

WEIGHT

- 875.1 g (1.93 lbs)

OPERATING TEMPERATURE

- Operating: 0 to 55 °C (32 to 131 °F)
- Storage: -20 to 70 °C (-4 to 158 °F)

HUMIDITY

- Operating: 5% to 90% (non-condensing)

PACKAGE CONTENTS

- 2-Bay NVR
- Power Adapter
- Ethernet Cable
- Quick Installation Guide
- Power Cable Holder
- CD-ROM with:
 - Software
 - Product Documentation

¹ An external SATA drive is required to store or share files. (Not included.)

² RAID1 mirroring requires the use of two internal SATA drives. To avoid data incompatibility in RAID 1 operation, use identical SATA drives from the same manufacturer. Formatted drive capacity for RAID 1 operation is dependant on the drive capacity of the lowest-sized drive. Some older generation SATA drives may not be compatible. For a list of SATA drives that have been tested to work with the NVR, visit the D-Link support web site.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>