





Cooktop and Range Models: ER30D, ER30G, EG366, ER36D, EG486 and ER48D



Griddle Placement and Use Griddle Models: AG1424 and AGDG14

INSTRUCTIONS

-  **WARNING:** Do not touch the griddle when hot.
-  **WARNING:** Do not use water on grease fires. A violent steam explosion may result. Smother any flames with a lid, cookie sheet or flat tray. Use baking soda or a foam extinguisher to extinguish flaming grease. Be careful to avoid getting burned.
-  **WARNING:** Non-stick coatings, when heated, can be harmful to birds. Remove birds to a separate, well-ventilated room during cooking.
-  **CAUTION:** Place the grill only in the position shown below. Do not turn the burners under the grill higher than the “**MAX GRIDDLE**” setting. Setting the burner flames too high or putting the grill in the wrong position may damage it permanently.

 
Griddle Placement and Use

Instructions


- STEP 1:** Before using the griddle for the first time, wash it in hot soapy water. Rinse it and allow it to dry thoroughly.
- STEP 2:** Make sure all burners are off and the cooktop or range is cool to the touch. Put the griddle over the top of the grates on the cooktop or range in the position shown. The grease trap goes toward the back. Fit the tabs that stick out of the bottom of the feet into the inside corners of the grate. When correctly installed, the griddle will rest securely about 1/2" above the top surface of the grate. It may rock back and forth slightly, which is normal.
- STEP 3:** Set one of the burners under the griddle to the light (high) position. Once lit, turn the knob to the **MAX GRIDDLE** position, or lower if desired. **DO NOT** keep the burner knobs higher than the **MAX GRIDDLE** setting after they are lit!
- STEP 4:** Repeat Step 3 for the other burner under the griddle.
- STEP 5:** During cooking be careful with metal utensils on the surface because they can scratch the non-stick coating. See back for cleaning instructions.

Cleaning the Griddle

After each use, wash the griddle thoroughly in hot soapy water to avoid stains from grease build-up. The griddle is coated with a non-stick coating for easy cleaning. Warm water and liquid detergent are all that are needed for cleaning. Remove stubborn spots with a non-abrasive plastic mesh pad. To prevent scratching, do not use abrasives or abrasive cleaners.

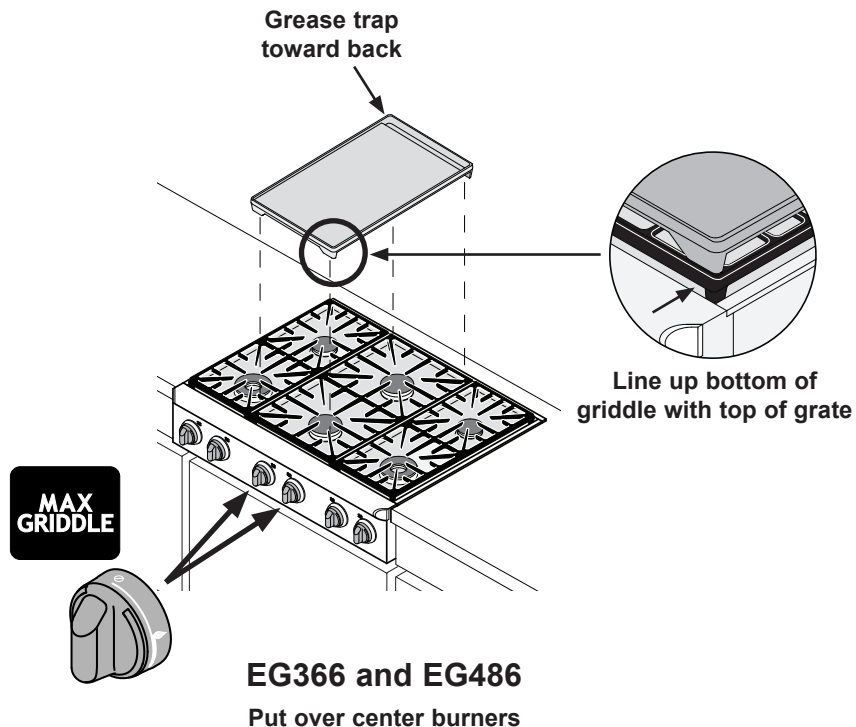

Griddle Placement and Use

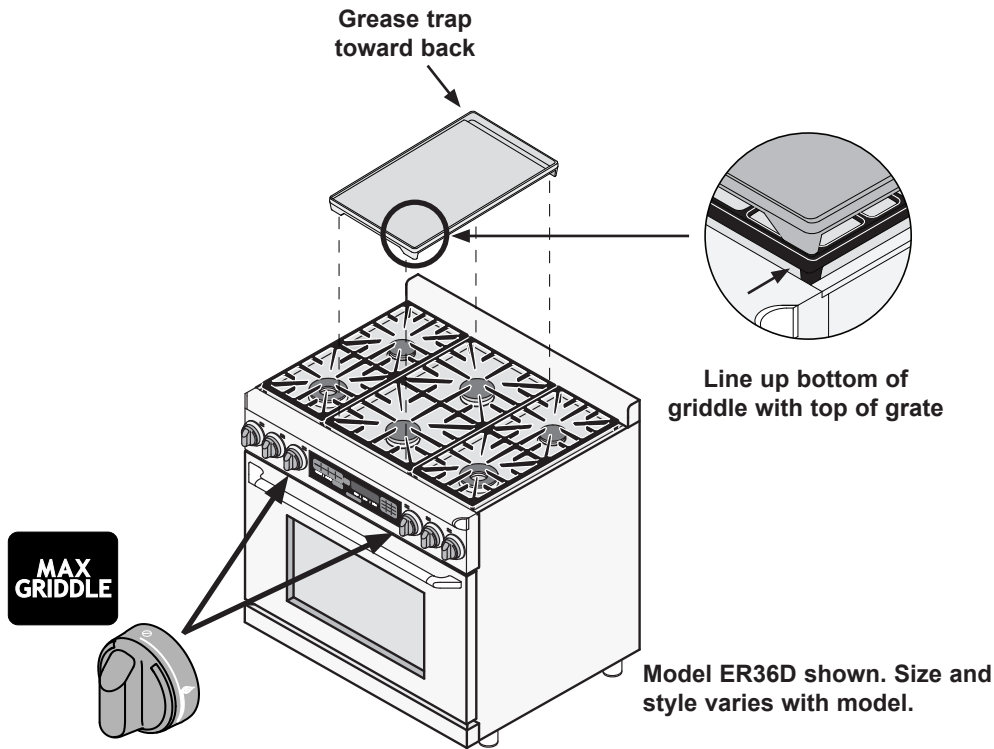 


ER36D and ER48D

Put over center burners

CAUTION: For griddles used with model ER30G, the kit comes with two extra knobs marked with the words "MAX GRIDDLE" that must be installed on the two right valve stems prior to griddle use:

 1. Remove the two existing right knobs by grasping them and pulling straight back.
2. Put the new knobs with the words "MAX GRIDDLE" on the shafts. When installing them, align the "D-shaped" opening on the back of the knob with the end of the valve shaft. Carefully push the knob on until it stops. The old knobs may be discarded.

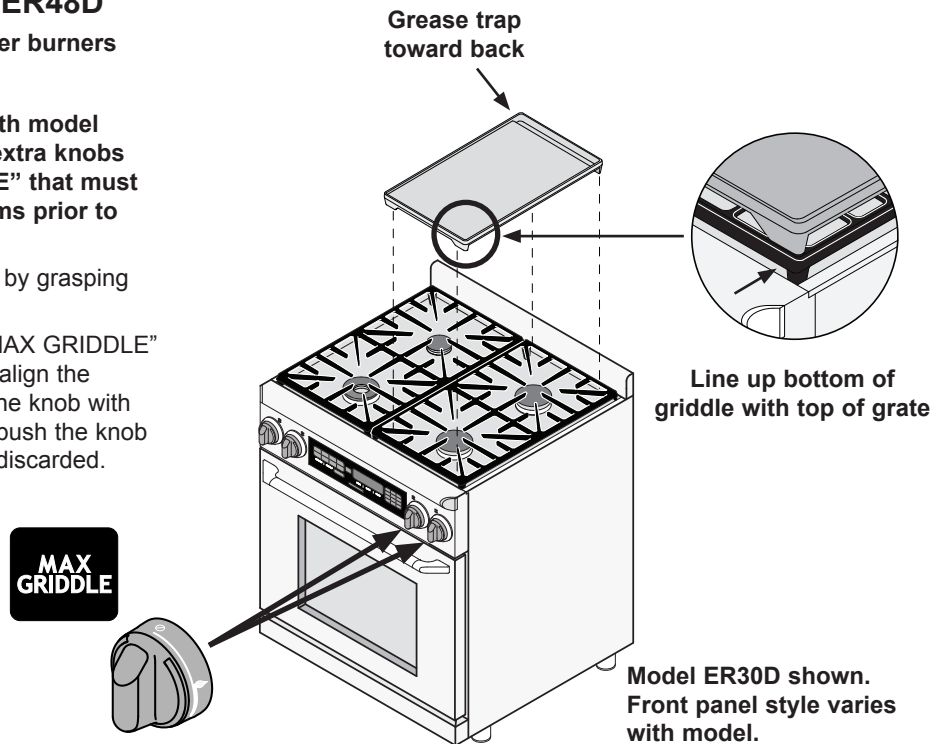

ER30D and ER30G

Put over right burners



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>