# ER30D/ER30DSR




103107

### **Epicure™ Ranges**

1/3

**PLANNING** GUIDE

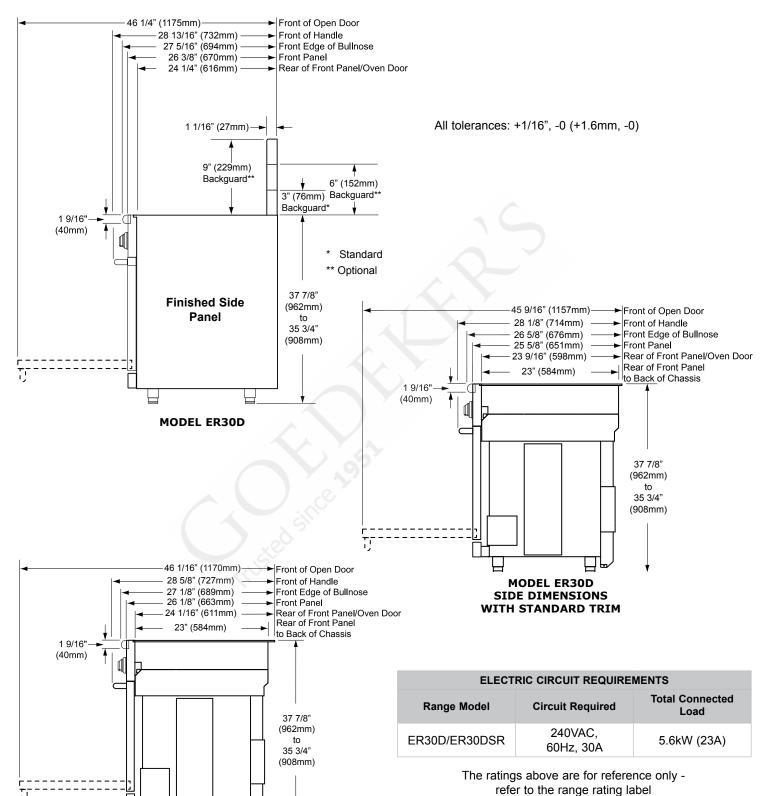

Web: http://www.Dacor.com

**MODEL ER30** SIDE DIMENSIONS **SELF RIMMING WITH ERV** 

Specifications are subject to change without notice. Corporate Phone: 800-793-0093 See installation instructions for additional details.

Download from Www.Somanuals.com. All Manuals Search And Download.


## ER30D/ER30DSR



**Epicure™ Ranges** 

2/3

**PLANNING** GUIDE

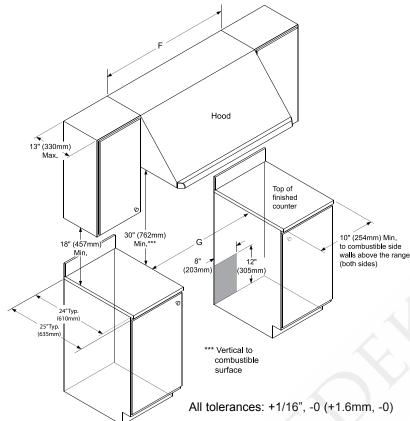

103107

CABINET CUT-OUT DIMENS	IONS	
------------------------	------	--


CUT-OUT DIMENSIONS				
"F"	"G"			
36" (914mm)* 30" (762mm)**	30 <sup>1</sup> / <sub>16</sub> " (916mm)*			
* Recommended				
** Minimum				

#### Gas and Electrical Service


- The shaded area shown denotes the location of the gas inlet and the electrical junction box/receptacle. This is the recommended location. For replacement purposes, the location of the existing utilities may be utilized provided they do not interfere with the sides or rear of the range. Check local building codes for permissible gas valve locations.
- An external manual shut-off valve must be installed between the gas inlet and the range, for the purpose of turning on or shutting off gas to the appliance.

#### The installation must allow for the following:

- Access to the gas shut-off valve when the unit is installed.
- $\Diamond$ Access to the remote circuit breaker panel/fuse box, when the range is in place.
- The gas supply piping and shut-off valve, and the electrical junction box/receptacle must be located so they do not interfere with the range when it is installed.
- The junction box and gas shut off valve must be located so that the range can be pulled out for service while the appliance remains connected.

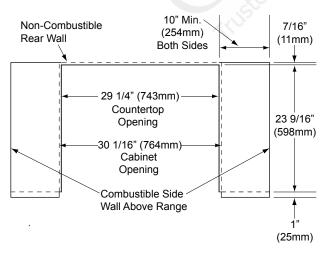

**CABINET CUT-OUT DIMENSIONS SELF RIMMING INSTALLATION** 

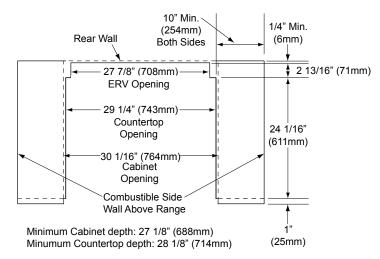

CABINET CUT-OUT DIMENSIONS **SELF RIMMING INSTALLATION** WITH ERV RAISED VENT

Web: http://www.Dacor.com

Specifications are subject to change without notice. Corporate Phone: 800-793-0093 See installation instructions for additional details.

Download from Www.Somanuals.com. All Manuals Search And Download.

5.8




082007

**Epicure™ Ranges** 

3/3

**PLANNING** 

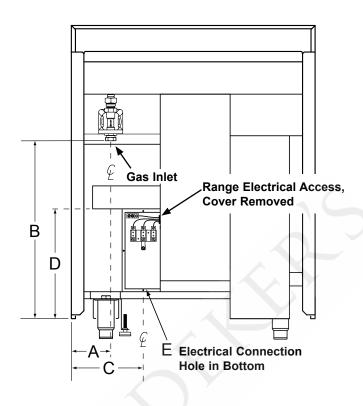

#### **BACK OF RANGE**

	GAS - ELECTRICAL ACCESS DIMENSIONS				
"A"	"B"	"C"	"D"	"E"	
4 7/8"	21 3/4"	8 5/8"	10 3/16"	7/8"*	
(124mm)	(552mm)	(219mm)	(259mm)	(22mm)	

<sup>\*</sup> The hole size can be increased to 1 1/8" by removing the conduit bracket inside the range electrical access box.

GAS SUPPLY PRESSURE REQUIREMENTS				
Gas Type	Manifold Pressure	Minimum Gas Supply Pressure		
Natural Gas	5" Water Column	6" Water Column		
Petroleum (LP)	10" Water Column	11" Water Column		

Web: http://www.Dacor.com Specifications are subject to change without notice. Corporate Phone: 800-793-0093 See installation instructions for additional details. Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com