

DAEWOO

ELECTRONICS

DTC-20,21
DTY-21,25,28,29
DTZ-24,28,29

HELPLINE NUMBER : 0870 100 2525

With queries, please quote the page number, reference number and model number



GB

SET-UP MANUAL
Colour Television

ADDITIONAL INFORMATION FOR TV'S SOLD IN GREAT BRITAIN

The appliance is supplied with a moulded three pin mains plug fitted with 5Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 5 amp and approved by ASTA or BSI to BS1362.

The plug contains a removable fuse cover that must be refitted when the fuse is replaced. In the event of the fuse cover being lost or damaged, the plug must not be used until a replacement cover has been obtained. Replacement fuse covers can be purchased from your nearest electrical dealer and must be the same colour as the original.

If the moulded mains plug is unsuitable for the socket outlet in your home or is removed for any other reasons, then the fuse should be removed and the cut off plug disposed of safely to prevent the hazard of electric shock.

There is a danger of electric shock if the cut off plug is inserted into any socket outlet. If a replacement plug is to be fitted, please observe the wiring code shown below. The wires in the mains lead are coloured in the accordance with the following code:

Brown-live









Blue-neutral

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not make any connections to the terminal in the plug which is marked by the letter E by the safety earth symbol or coloured green or green and yellow.

CONTENTS


	REMOTE CONTROL & TV CONNECTIONS	3
	IMPORTANT SAFEGUARDS	4
	INSTALLATION	4
	START UP	5
	CONNECTING EXTERNAL EQUIPMENT	5
	DAILY USE.....	6
	MENUS DESCRIPTION.....	9
	TELETEXT	14




REMOTE CONTROL & TV CONNECTIONS

LOCAL CONTROL

Front

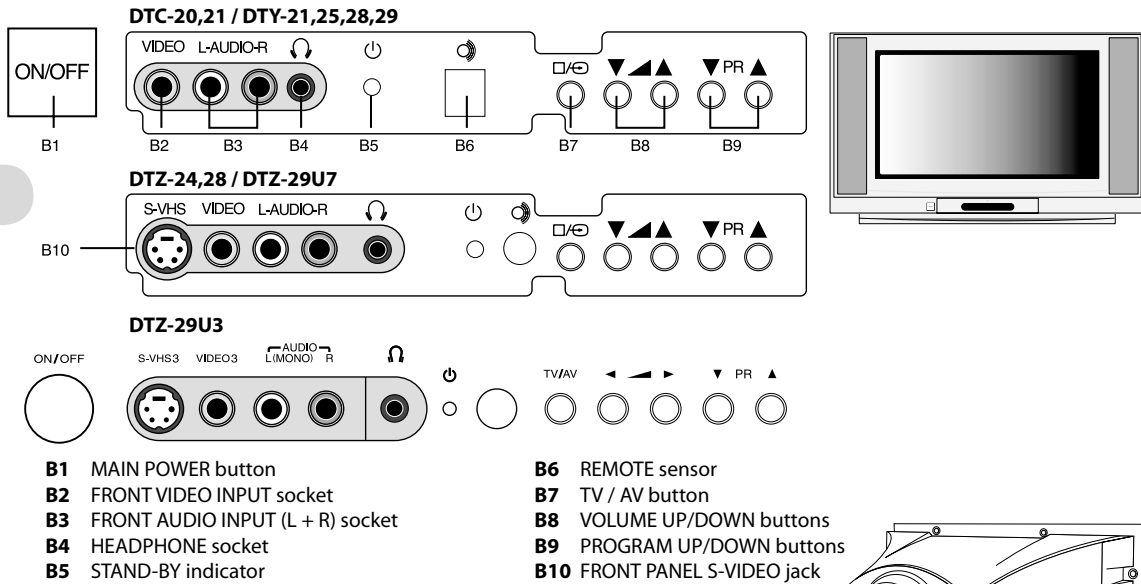


Rear

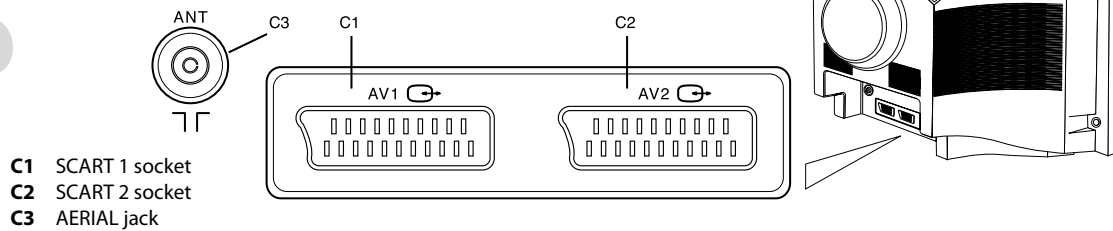

REMOTE CONTROL UNIT

TV mode

- A1 POWER
- A2 SOUND MUTE
- A3 NUMBER 0..9
- A4 SLEEP
- A5 TV / AV
- A6 PROGRAM UP (CURSOR UP)
- A7 VOLUME DOWN (CURSOR LEFT)
- A8 .
- A9 .
- A10 .
- A11 SKIP
- A12 MOVE
- A13 3D(SOUND EFFECT)
- A14 MODE
- A15 ZOOM
- A16 RECALL
- A17 NORMAL
- A18 OK/PRESET
- A19 MENU
- A20 VOLUME UP (CURSOR RIGHT)
- A21 PROGRAM DOWN (CURSOR DOWN)
- A22 TV → TELETEXT
- A23 .
- A24 .
- A25 .
- A26 DELETE / FREEZE

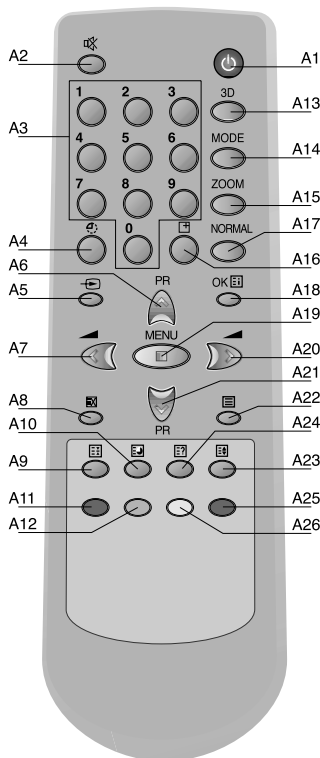

TELETEXT mode

- A1 POWER
- A2 SOUND MUTE
- A3 NUMBER 0..9
- A4 .
- A5 .
- A6 PAGE UP
- A7 VOL/BRIGHT
- A8 CANCEL
- A9 PAGE HOLD
- A10 SUBPAGE
- A11 RED
- A12 GREEN
- A13 .
- A14 .
- A15 .
- A16 .
- A17 .
- A18 INDEX
- A19 VOL/BRIGHT MENU SELECTION
- A20 VOL/BRIGHT
- A21 PAGE DOWN
- A22 TELETEXT → TV
- A23 HEIGHT
- A24 REVEAL
- A25 CYAN
- A26 YELLOW



IMPORTANT SAFEGUARDS



WATER AND MOISTURE

The apparatus shall not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.



HEAT

Never place the set near heat sources. Never put a naked flame, such as a candle, on the top of TV set.



VENTILATION

Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as in a bookcase or built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit.



OBJECT ENTRY

Do not insert foreign objects, such as needles and coins, in the ventilation openings.



LIGHTNING STRIKE

You should disconnect the set from the mains and the aerial system during thunderstorms.



CLEANING

Unplug the set from the mains while cleaning.




AFTER MOVING THE SET

If the set is moved or turned, the MAIN POWER button must be switched off for at least 15 minutes in order to take out colour patches on the screen.




INSTALLATION

Batteries

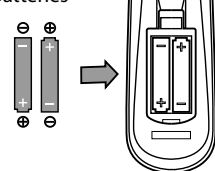


Open remote control battery compartment (at the rear) and insert two 1.5V type AAA batteries. Warning: be careful to respect battery polarities.

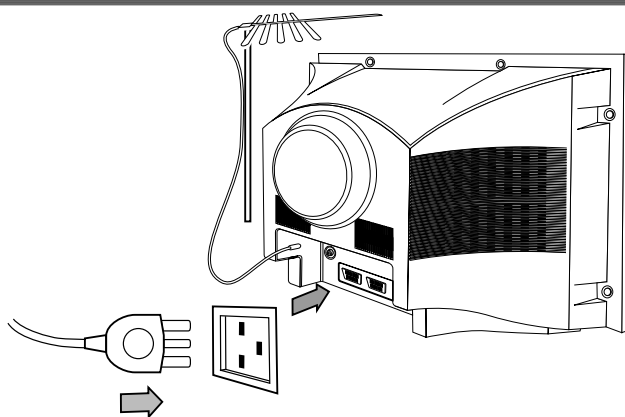


Insert the main plug into a 230V 50Hz AC power socket.

Connect aerial to aerial jack (C3).

SWITCHING ON AND OFF

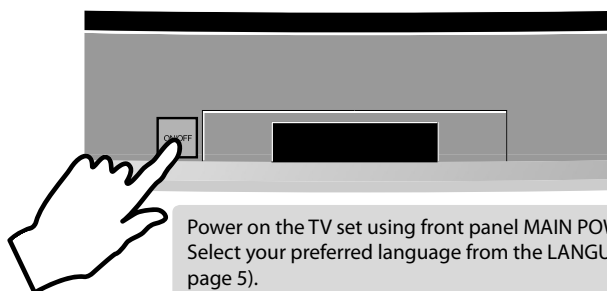

Power on the TV set using front panel MAIN POWER button (B1). Select your preferred language from the LANGUAGE menu (see section START UP on page 5). Press the remote control MENU button (A19) to enter the main menu. Select Install menu to tune and memorise TV programs.

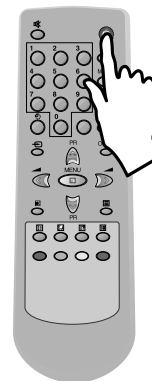



START UP


LANGUAGE MENU

The very first time that you turn on the TV, the LANGUAGE menu will appear on the screen. Its purpose is to enable you to select the language that will be used for all the OSD (On Screen Display) menus. The user must enter a choice of language before proceeding further.

The language entered at this stage can still be modified at any later time, by entering the LANGUAGE menu (accessed from the FEATURES menu: see later section under MENU DESCRIPTION).

The descriptions used in the menu are those of the country code (e.g. GB = English, NL = Holland etc).

LANGUAGE				
BG	CZ	D	DK	E
F	FIN	GB	GR	H
I	N	NL	P	PL
RO	RUS	S		

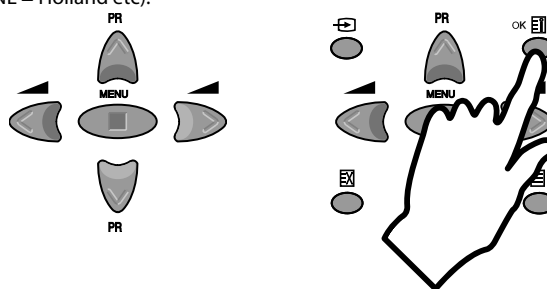

Selection is made by use of the remote control CURSOR UP (A6) / CURSOR DOWN (A21) keys and CURSOR RIGHT (A20) / LEFT (A7) keys.

Once you are satisfied with your selection, push the OK button (A18) to confirm your choice. The choice will briefly highlight in red, after which the menu will disappear.

Note : The languages shown are subject to modification without prior notice.

AUTOMATIC TUNING

Automatic Tuning System

If you have a satellite decoder: If your decoder is connected to the TV set by the aerial jack (C3), you must power on the demodulator and tune Sky News before starting ATSS.

ATSS = Automatic Tuning and Sorting System. To start the ATSS function:

- Select „ATSS„ function.
- Adjust to the required country.
- Press and hold the OK button (A18) to start the automatic tuning.

The ATSS function has started when the phrase „Please Wait !“ appears (in red characters) in the help instructions box, below the Install menu.

When the ATSS function is finished, the stored programs are displayed on screen using Edit menu presentation (to Exit tuning before automatic tuning is finished, press the remote control MENU button (A19)).



CONNECTING EXTERNAL EQUIPMENT

The rear Scart1 (C1), Scart2 (C2) sockets, the front AV socket (B2) (B3), and the S-VHS socket (B10, option: real flat TVs) are three dedicated sockets to connect audio-video equipment.

Rear

REAR SCART 1 SOCKET (AV1)

This socket (C1) has video / audio inputs and outputs. It is recommended to connect to this socket automatic AV switching equipment such as pay-TV decoders, video games, DVD players and most VCR's.


In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B7) to select AV1.

REAR SCART 2 SOCKET (AV2)

This socket (C2) has video / audio inputs and outputs. Automatic AV switching equipment (for example most VCR's) can be connected to this socket.


In most cases, when connecting powered equipment to this socket, the TV set switches automatically to AV mode. If not, then use the TV/AV buttons (A5) or (B7) to select AV2.

You can also receive an S-VHS signal with REAR SCART2 socket, by selecting SVHS2 with the TV / AV buttons (A5) or (B7).

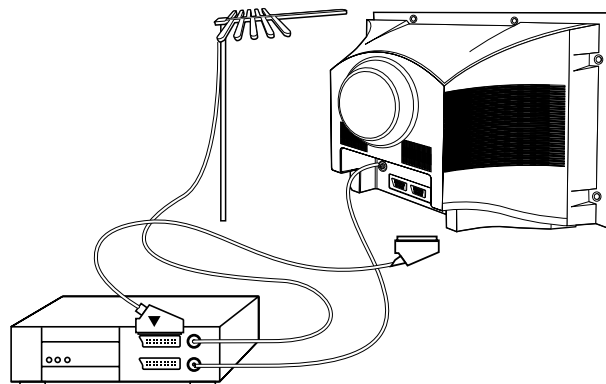

VCR / DVD / Video Game / Pay-TV decoder Important: If your video equipment does not have SCART socket(s), or if you wish to use only the aerial (RF) connection (not recommended), then you should make use of PR 00 on the TV set for best performance.

Front

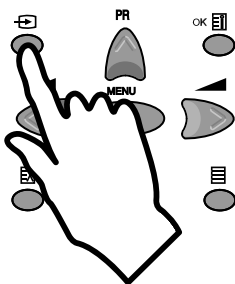

FRONT AV SOCKET (AV3)

The front AV socket (B2) - (B3) has audio and video inputs. To switch from TV to these inputs, use the TV / AV buttons (A5) or (B7) and select AV3.



TV/AV SELECTION

Allows to switch between TV and external modes.

By repeatedly pressing the remote control TV / AV (A5) or the TV front panel TV / AV (B7) button, the on-screen display is changed as shown (SVHS3 is an option):

AV1 > AV2 > SVHS2 > AV3 > SVHS3 > TV

Remark: If the signal source from the rear SCART1 socket (AV1) is RGB (e.g. normally from a DVD player) then AV1 RGB will be displayed.

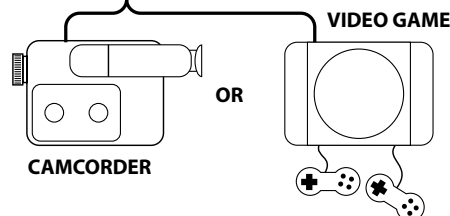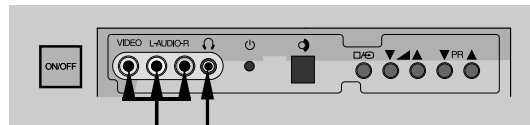

HEADPHONE SOCKET



To hear TV sound with headphones, insert a 3.5mm headphone plug into the headphone socket (B4). The speaker's sound will be automatically cut off.

FRONT S-VIDEO JACK (Option for DTZ-24,28,29)

The front S-VIDEO jack (B10) has video inputs only. It is necessary to connect the audio inputs to socket (B3) in order to have audio and video. To switch from TV to these inputs, use the TV / AV buttons (A5) or (B7) and select SVHS3.




 


DAILY USE

SWITCHING ON TV SET

1) If stand-by indicator (B5) is red, then the TV set is in stand-by mode.
You can switch on using the remote control POWER button (A1), the NUMBER 0...9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons.
The front panel PROGRAM UP/DOWN buttons (B9) can also be used.
Once on, the stand-by indicator turns to green and the picture appears on the screen.

2) If stand-by indicator (B5) is not lit, then the TV set is powered off.
You must press the TV set front panel MAIN POWER button (B1).
If a picture does not appear, then the stand-by indicator will be lighted red.
In this case, use the remote control as indicated in 1).

3) If stand-by indicator (B5) is flashing red, and green then the TV set is in child-lock mode. It is necessary to use the remote control POWER button (A1), NUMBER 0...9 buttons (A3), or PROGRAM UP (A6) / DOWN (A21) buttons.
The front panel PROGRAM UP/DOWN buttons (B9) will not function.
Once on, the stand-by indicator turns to green and the picture appears on the screen.

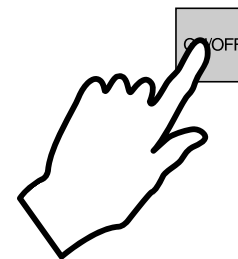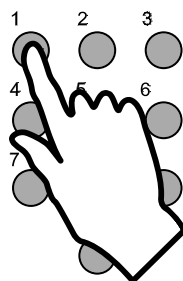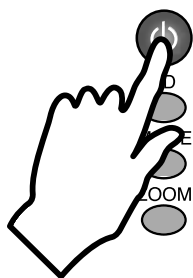

SWITCHING OFF TV SET

1) Pressing the remote control POWER button (A1), you can switch off to stand-by mode (low power consumption mode) which also allows quick restart by remote control (see above: SWITCHING ON TV SET).

2) Pressing the TV set front panel MAIN POWER button (B1), you can completely power off the TV set.
In this case, you must use the same front panel POWER button (B1) to switch on again (see above: SWITCHING ON TV SET).

Remark: If a broadcast signal is not present after 30 minutes, the TV set will be automatically turned to stand-by mode.

PROGRAM SELECTION (FROM 0 TO 99)

Direct selection

Use the remote control NUMBER 0...9 buttons (A3).
For two digits program numbers, enter the second digit within 2 seconds.


Up / Down selection

Use the remote control PROGRAM UP (A6) / DOWN (A21) buttons or the TV set front panel PROGRAM UP / DOWN buttons (B9).

SOUND CONTROL

Volume adjustment

Use the remote control VOLUME UP (A20) / DOWN (A7) buttons or the TV set front panel VOLUME UP / DOWN buttons (B8).

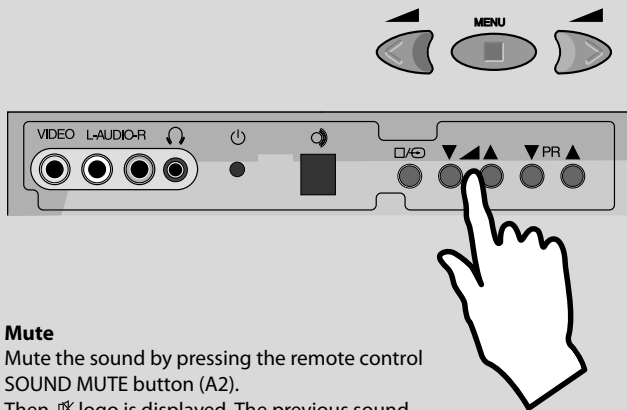


Mute

Mute the sound by pressing the remote control SOUND MUTE button (A2).

Then, logo is displayed. The previous sound setting is returned after pressing the same button a second time.

If a sound related function is used (e.g. VOLUME, 3D) then the MUTE will also be cancelled.

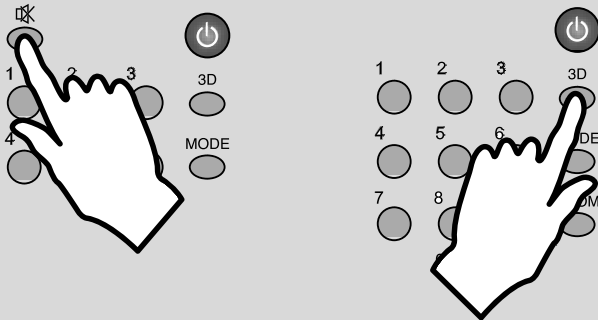


Mono forcing, dual language

- If you are unable to get good sound quality for a program due to poor reception, you can force a change from stereo to mono transmission by pressing the remote control MODE button (A14). Then the program status display will indicate „MONO“ with a icon.

- On the other hand, during a program with dual language transmission, the MODE button (A14) allows you to toggle between the first and second language. The program status display will indicate „DUAL 1“ or „DUAL 2“ (plus NICAM according to the received signal).


- To return to initial state, press again the MODE button (A14).

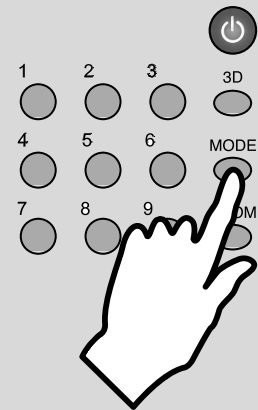

Sound effects


A SPATIAL sound effect is available, using the remote control 3D (A13) button.

The following display appears:

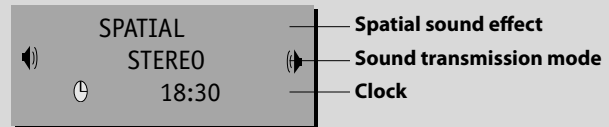

To return to initial sound effect, press again the 3D (A13) button.

The following display appears:

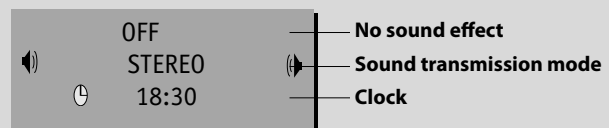

As an option, the sound effects PANORAMA and Dolby Virtual are available with the same button. For other adjustments such as BALANCE, EQUALIZER or AVL(option), use the SOUND menu (page10).




Manufactured under license from Dolby Laboratories, „Dolby“ and the double-D symbol are trademarks of Dolby Laboratories.

PICTURE CONTROL

You can select three pictures settings, by using the remote control NORMAL button (A17) :

- Normal I (standard hard picture)
- Normal II (standard soft picture)
- Favourite

For other adjustments: BRIGHTNESS, CONTRAST, COLOUR, SHARPNESS, NOISE REDUCTION, use the PICTURE menu.
If an NTSC signal is received, then the TINT adjustment will also be available.

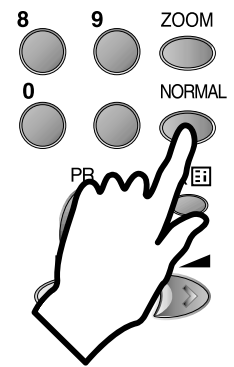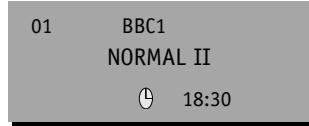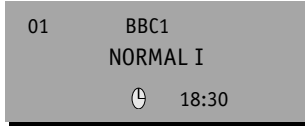

SLEEP FUNCTION

The set will turn off (to stand-by mode) after a period of time that you can select. By repeated use of the remote control SLEEP button (A4), you can enter one of the following settings :

OFF → 20 min → 40 min → 60 min → 80 min → 100 min → 120 min → OFF



Remaining time (minutes) before TV set switches off

The SLEEP time remaining (before TV turn-off) can be seen again at any time by one touch on the remote control SLEEP button (A4).
A second touch (while the status display is active) will modify the SLEEP time remaining.

FORMAT SELECTION

AUTO setting :

If picture format signalling data is received, then the most appropriate ZOOM format will be automatically selected. In the absence of this data, the default ZOOM format will be selected (see page 13, ZOOM AUTO function under FEATURES MENU).

Otherwise, the preferred mode of the user can be forced by repeated pressing of the remote control ZOOM button (A15):

Television Format 4:3

The following picture formats are available:
AUTO → 14:9 → 16:9 → FULL SCREEN → AUTO

Television Format 16:9

The following picture formats are available:
AUTO → 4:3 → ZOOM 14:9 → ZOOM 16:9 → FULL SCREEN → PANORAMA → AUTO

MENUS LANGUAGE SELECTION, CHILD LOCK, CLOCK SETTING, WAKE UP, NOISE REDUCTION

These functions are available in the Features menu (see description page 13).

CHILD LOCK

This function only allows the TV to be turned on using the remote control. Once the user has set this CHILD LOCK to ON or OFF, it will remain in this condition until the user changes it again.

WAKE UP

It is necessary to have set the clock (either manually or automatically) in order to be able to use this function. If the clock is not set (---:-- is shown) then the WAKE TIME and WAKE PROG. will not be selectable.

The default setting for WAKE TIME is in the „OFF“ position. After each use (the TV turns on according to the previous setting) the WAKE TIME will be returned to the „OFF“ position, conserving always the last time setting entered ready for re-use.

CLOCK SETTING

The TV will automatically attempt to set the clock when powered on (with the MAIN POWER button). It takes as reference information embedded in the teletext signal of the channel defined by CLOCK PROG. Therefore, automatic clock setting is only possible if teletext is available on this channel.

If no time is captured automatically (the clock will show - : - : -), then the TV will try again to set the clock whenever turning on from standby mode.

Alternatively, the user can enter the time manually using the CLOCK function. However, if this is done the clock will not be periodically updated as would happen if the time is set automatically. We recommend that the user choose (if available) a CLOCK PROG which allows the time to be updated automatically.

DEFAULT ZOOM CONTROL

If the ZOOM control is set to AUTO (A15, see page 8, FORMAT SELECTION), then the picture format presented is controlled by the received picture format signalling data embedded in the transmission. In the absence of this signalling data (as can often be the case) a default format must be used. This default format can be selected by the ZOOM AUTO function.

LANGUAGE

This can be changed at any time by the user in the LANGUAGE menu (accessed via the FEATURES menu).



MENUS DESCRIPTION



MAIN MENU

All menus are removed within 60 seconds if you don't press any button.

Press the remote control MENU button (A19) to display the main menu.

Then, you have the choice between several sub-menus:

- If you want to Exit the main menu, press the MENU button (A19) a second time.
- To select one of the sub-menus, use the remote control CURSOR UP (A6), DOWN (A21) buttons.
- To enter the selected sub-menu, press the remote control OK button (A18).

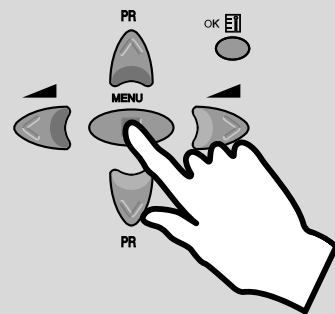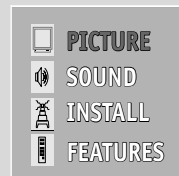


Remark: In AV mode the INSTALL menu is not available, and will not be selectable.


HOW TO USE THE SUB-MENUS

The sub-menus referred to here are: PICTURE, SOUND, INSTALL, FEATURES.


- Adjust the function using :

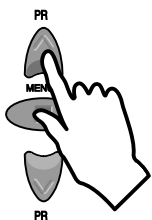


- Select the desired Position by using the remote control CURSOR UP (A6) or DOWN (A21) buttons.

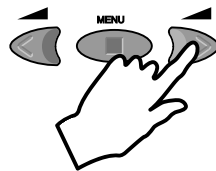


- The remote control CURSOR LEFT (A7) or RIGHT (A20) buttons if you want to modify the function value

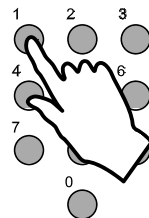

- The remote control NUMBER 0...9 buttons (A3) to enter directly new data.

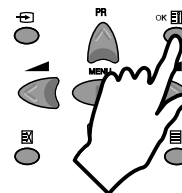

- Store (if needed) by pressing the remote control OK button (A18).

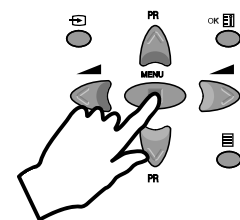


- Then Exit to main menu by pressing the MENU button (A19).

PICTURE MENU



(For operating instructions, see page 9, HOW TO USE THE SUB-MENUS)

- Select and adjust the level of each function : BRIGHTNESS, CONTRAST, COLOUR, SHARPNESS, TINT (if available).
- The above modified values are automatically stored in FAVOURITE mode.
- NOISE REDUCTION feature can be activated or not.
- The OK (A18) or NORMAL button will select the picture presets FAVOURITE, NORMAL I, NORMAL II. The currently selected preset is displayed in the menu header.
- The FAVOURITE preset contains the settings that you last entered.
- If the NTSC standard is detected (eg from VHS player connected to AV1), then TINT will be available. Otherwise TINT will be displayed, but not selectable.

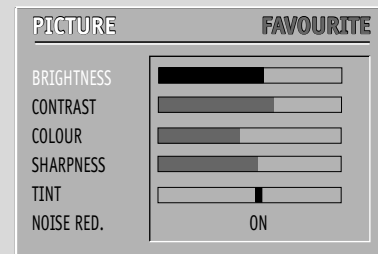


SOUND MENU

(For operating instructions, see page 9, HOW TO USE THE SUB-MENUS)

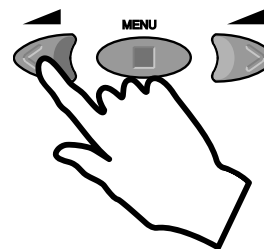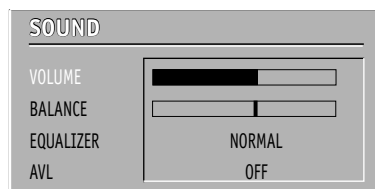

- Select VOLUME function to adjust the volume level.
- Select BALANCE function to adjust sound balance between the left and right speakers. If the indicator is highlighted in red, then the central balance position has been found.
- Use the EQUALIZER function to select the sound presets MUSIC, SPEECH, NORMAL, FAVOURITE by use of the CURSOR LEFT (A7), RIGHT (A20) buttons. The FAVOURITE preset contains the settings that you last entered into the EQUALIZER menu.
- The OK button (A18) will enter the EQUALIZER menu, and allow you to change the FAVOURITE settings.
- Automatic Volume Level (AVL, Option) feature has 4 levels according to your preference. This feature corrects for large volume level changes, such as occur when passing from a movie to advertisements. The AVL solves this problem by equalizing the volume level, over a SHORT MEDIUM or LONG period (referring to the time constant over which the equalizing effect lasts).


EQUALIZER MENU

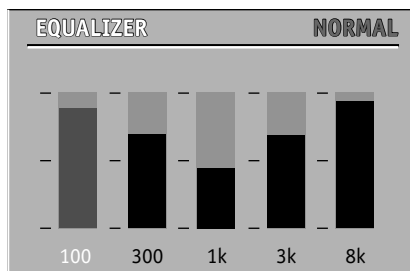

- Select the equalizer band by use of the CURSOR LEFT (A7) or RIGHT (A20) buttons.
- Adjust the level of each of the 5 equalizer bands, 100Hz, 300Hz, 1000Hz, 3000Hz, 8000Hz, by use of the CURSOR UP (A6) and DOWN (A21) buttons.
- The above modified values are automatically stored in FAVOURITE mode.
- The OK button (A18) will select the picture presets MUSIC, SPEECH, NORMAL, FAVOURITE. The currently selected preset is displayed in the menu header.
- The FAVOURITE preset always contains the settings that you last entered.

INSTALL MENU

(For operating instructions, see page 9, HOW TO USE THE SUB-MENUS)

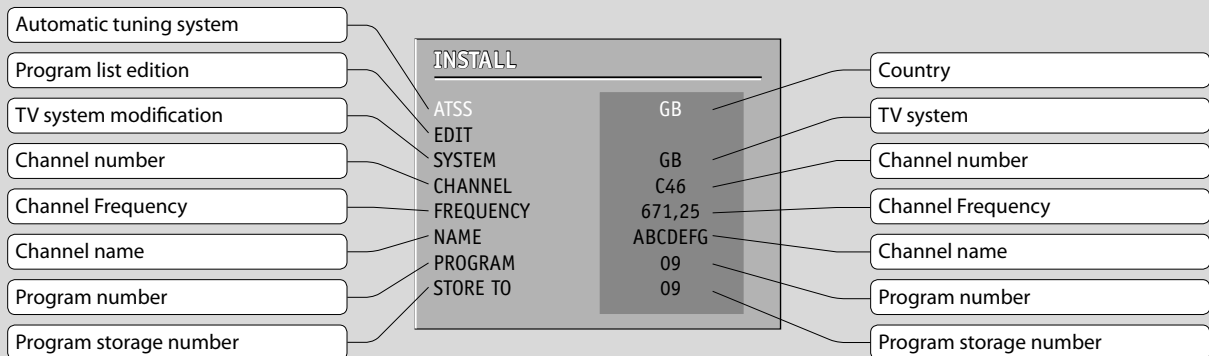

Automatic Tuning System

If you have a satellite decoder: If your decoder is connected to the TV set by the aerial jack (C3), you must power on the demodulator and tune Sky News before starting ATSS.

ATSS = Automatic Tuning and Sorting System. To start the ATSS function:


- Select „ATSS“ function.
- Adjust to the required country.
- Press and hold the OK button (A18) to start the automatic tuning.

The ATSS function has started when the phrase „Please Wait!“ appears (in red characters) in the help instructions box, below the Install menu.

When the ATSS function is finished, the stored programs are displayed on screen using Edit menu presentation (to Exit tuning before automatic tuning finished, press the remote control MENU button (A19))

Program List Edition

This allows you to easily manipulate the existing program order allocation, by using Edit menu functions described below.

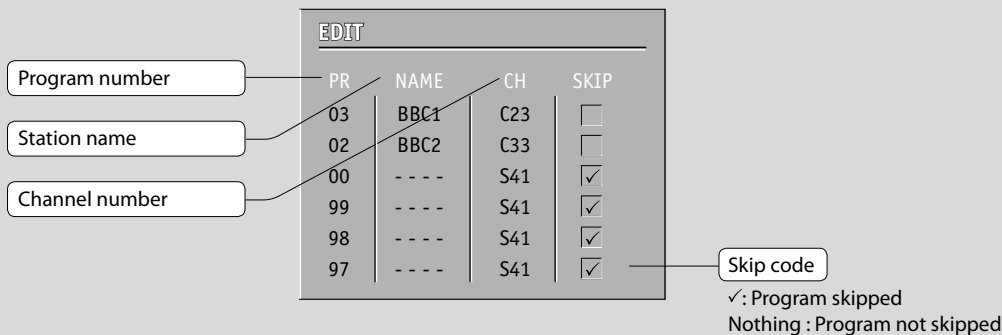


To enter the EDIT menu: From Install menu, select „Edit“, and press the OK button (A18): the EDIT menu appears.
 The current program being displayed is highlighted in blue (on the central line). In the above case, the current program is PR00. The 3 previous, and 3 following programs, are always displayed. Any program from 00 to 99 can be selected, by using the remote control CURSOR UP (A6) / DOWN (A21) buttons.
 The memorised programs can be modified as follows :




Channel skipping

- You can select skip „YES“ or „NO“ using the remote control RED „Skip“ button (A11). A program with skip „YES“ doesn't appear on screen when changing channels with the PROGRAM UP (A6) / DOWN (A21) buttons.

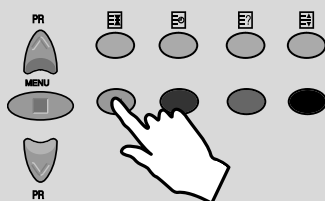


Channel deleting

- Select the program to delete using the remote control CURSOR UP (A6) / DOWN (A21) buttons.
- Press the remote control YELLOW „Delete“ button (A26). The deleted program is moved to program number 99 with skip changed to „YES“. The existing 99 program is moved to program number 98 and so on.

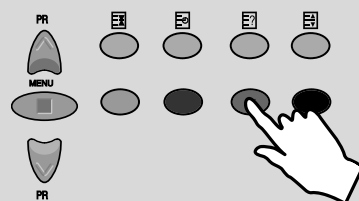


Channel order changing

- Select the program to move using the remote control CURSOR UP (A6) / DOWN (A21) buttons.
- Press the remote control GREEN „Move“ button (A12): the program line background is highlighted in green, and can be moved to another position using the remote control CURSOR UP (A6) / DOWN (A21) buttons.
- When the desired position is reached, confirm the new position pressing the remote control GREEN „Confirm“ button (A12). Then the program line background will return again to grey.

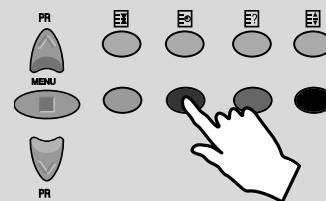

Manual Channel Tuning

- Choose a starting point
- Select with „Program“ the program from which you want to start manual tuning. Then the channel number, the frequency, the name and the program number of this program are displayed in the Install menu.

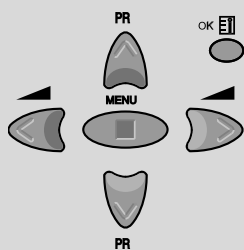

Channel searching

- Select the „Frequency“ function.
- Press, and hold for more than 1 second, the remote control CURSOR RIGHT (A20) [LEFT (A7)] buttons to start up [down] manual tuning.
- Searching will stop automatically at the next channel found (to stop tuning, press the remote control MENU button (A19)).

Note: You can directly locate a program by entering the data into the „channel“ or the „frequency“ function.

Enter station name

It is possible to enter your own choice of name for each program. You can change an existing name, or enter a name where none exists. If none exists, „-----“ will be shown in the Install menu, and program status display (see the section PROGRAM STATUS DISPLAY on page 8).

- Select the „NAME“ function.
- Select one of the 7 character positions by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons to move the cursor.
- Then use the CURSOR UP (A6) / DOWN (A21) buttons to select the desired character for that position.
- Repeat the last two instructions for other positions, as desired.
- Once the name has been entered, press the OK button (A18) to store it. The name will be memorised to the program number currently shown on the „Store To“ line. The „Store To“ program number will highlight in red briefly.

TV system modification

If necessary, you can modify the TV system :

- Select „system“ function.
- Adjust choosing between FRANCE (L/L), GB (I), EURO (B/G), E/ EURO (D/K) systems.

Then, the program displayed on the screen is changed to the chosen system.

Perform fine tuning

- If you are unable to get a good picture or reasonable quality sound due to poor reception, it is possible to perform fine tuning.
- Select the „frequency“ function.
- Press, for less than 1 second, the remote control CURSOR RIGHT(A20) [LEFT(A7)] buttons to perform up [down] fine tuning in steps of 0.05MHz (50 kHz).

Store program in memory

- Select the „store to“ function
- Enter the program number you want to store to either by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons, or directly by using the remote control NUMBER 0..9 buttons (A3).
- Press the OK button (A18) to confirm.

Remarks: this function can also be used if you want to copy a program already memorised to another program number.

FEATURES MENU

See section near the end of section DAILY USE for a more detailed explanation of these functions.

(For operating instructions see page 9, HOW TO USE THE SUB-MENUS)

The diagram shows the 'FEATURES' menu with the following options and values:

CHILD LOCK	OFF
WAKE TIME	OFF
WAKE PROG.	04
CLOCK	- :- -
CLOCK PROG	01
ZOOM AUTO	4:3
LANGUAGE	GB

1. When switched to ON:
Prevents the use of the TV set without remote control

2. Wake up function
This function is only selectable when the clock is set. The TV set turns on from stand-by at the WAKE TIME with the programme entered on the WAKE PROG. line. Put the TV set on stand-by with the remote control

3. Shared with WAKE TIME.

4. TV clock setting
This function allows user to enter the time manually.
Note : If you turn off the set with the main power button, the clock setting is lost. An automatic attempt is made to set the clock again at power on.

5. This function is only selectable when the default picture format is currently active (see also FORMAT SELECTION, AUTO setting, page 8). This selects the default format to be used only when the format selected with the ZOOM button (A15) is AUTO, and no picture format signalling data is received.

6. LANGUAGE menu entry.

1. Adjust this value ON or OFF.
- In stand-by mode, the stand-by indicator flashes red and green to indicate the CHILD LOCK is set.
- The front panel TV buttons (B7, B8, B9) become inactive and the TV will only respond to the remote control.

2. Switch the WAKE UP function OFF or 'ON' (the time will be shown e.g. 07:15) with the remote control CURSOR LEFT (A7) /RIGHT (A20) buttons
- Enter the wake up time with the remote control 0...9 NUMBER (A3) buttons.

3. Adjust TV turn-on program number

4. Adjust TV clock. Clock will start at 0 seconds upon entry of the 4th figure.
The prog. no. which can be used to automatically seize the time at turn on can be entered here.

5. Choose your preferred default format with the remote control CURSOR LEFT (A7) /RIGHT (A20) buttons.
Note : For 4:3 TVs FULL SCREEN is represented by 4:3. For 16:9 TVs FULL SCREEN is represented by 16:9.

6. The currently selected LANGUAGE is displayed.
Press the OK button (A18) to access the menu and change the selection.

LANGUAGE MENU

- Select the preferred LANGUAGE by use of the CURSOR LEFT (A7), RIGHT (A20) buttons, and the CURSOR UP (A6) or DOWN (A21) buttons.
- Press the OK button (A18) to confirm the selection (the choice will be highlighted in red).




Note : The languages shown are subject to modification without prior notice.


LANGUAGE				
BG	CZ	D	DK	E
F	FIN	GB	GR	H
I	N	NL	P	PL
RO	RUS	S		



TELETEXT

 ENTERING/LEAVING TELETEXT MODE

- Select the desired program with teletext.
- Press the remote control TELETEXT () button (A22) to select teletext mode. The initial page (or the last page viewed if you have already used teletext in the present channel) appears.
- Teletext And Teletext (TAT) function (OPTION): if you want to watch two teletext pages on same screen, press the TELETEXT () button (A22) again. When entering into TAT mode, the active teletext page is on the left hand part of the screen, at the base of the screen a menu coloured page links is available. The passive page, on the left hand part, is locked to the active page, usually it display the next page in the list. Using the remote control RIGHT (A20) / LEFT (A7) buttons, you can change the active page. For example, you can held the index page (press HOLD button (A9)); on one side of the screen and change the active page to the other side for navigation.
- Picture And Teletext (PAT) function (OPTION) : If you want to watch the TV program and use teletext at the same time, press the TELETEXT button (A22) again. Teletext will be displayed on the right hand part of the screen, and the whole TV picture will be compressed into left hand part of the screen.
- To return to TV mode, press again the TELETEXT () button (A22).

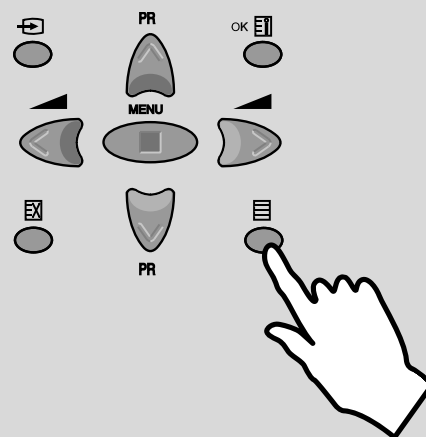



PAGE SELECTION


- You can directly enter the 3 figure page number by using the remote control NUMBER 0..9 buttons (A3).
- You can sequentially select teletext pages by pressing the remote control PAGE UP (A6) / DOWN (A21) buttons.
- At the base of the screen a menu of coloured page links is available, showing either page numbers or a title with headings (eg Sport, News) in RED, GREEN, YELLOW or CYAN colour. These pages can be accessed by using the corresponding coloured buttons (A11, A12, A26, A25) on the remote control.

Once a request is made, the page number is shown in the extreme top left corner of the screen. If the requested page is not immediately available the rolling header will be active until the page arrives.

 
USEFUL TELETEXT FUNCTIONS

 INDEX () button (A18): Allows you to return directly to the initial teletext page.

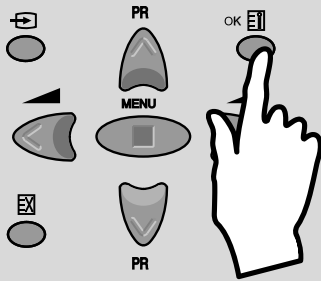

PAGE HOLD button () (A9): Any teletext page or subpage can be held on the screen by pressing the PAGE HOLD button.

- The page number shown in the extreme top left corner instead of page number the HOLD icon is shown in green.
- Press the HOLD button again to cancel hold mode (the page number will return to white).

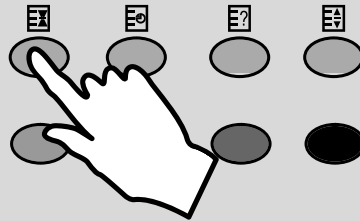



SUBPAGE () button (A10):

- Press the SUBPAGE button (A10). In the extreme top left corner, instead of the page number, "S. . ." will be displayed. This is ready to accept the subpage number.
- Enter directly the subpage number you want with the remote control NUMBER 0..9 buttons (A3): for example to request the 2nd subpage, type 0002.
- After a few seconds the subpage number is replaced by the page number in the header. You can press again SUBPAGE button (A10), to display the subpage number.
- If the requested page is not immediately available the rolling header will be active until the page arrives.


Warning: If the subpage is not available (does not exist), then the header will roll continuously and no new page will be found.

Note : Teletext specification allows for subpage numbers 0000 to 3979 (the first figure is limited to the range 0..3, and the third figure 0..7).

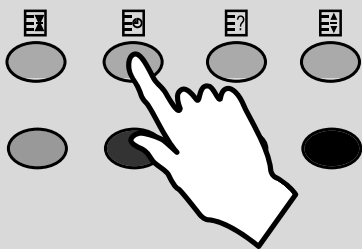


REVEAL () button (A24): Press this button to reveal, on certain pages, hidden information such as the answer to a quiz.

- Press the button again to hide the information.

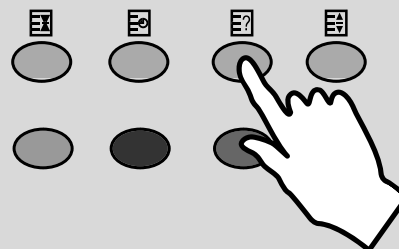

TELETEXT FORMAT PICTURE & SOUND CONTROL

 
Doubling character height

Repeatedly pressing the HEIGHT () button (A23) doubles the character height in the following order:

Upper half of the page (UP) > Lower half of the page (DOWN) > Return to normal height.

If the page is in UP or DOWN mode, then normal size is automatically set if :

- A new page request is made (e.g. CYAN, INDEX or PAGE UP/DOWN).
- CANCEL mode (A8) function is used.
- VOLUME menu is activated the with the MENU button (A19).

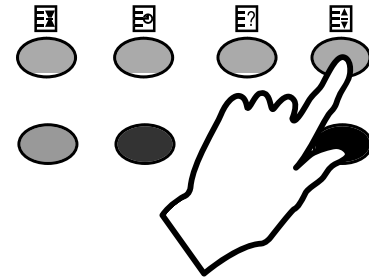


Note : The menu at the base of the screen is always visible

Volume and brightness control in teletext mode




VOLUME (and sound MUTE), BRIGHTNESS controls are all possible in teletext. The BRIGHTNESS control are dedicated to the teletext display.


- Access the VOLUME control by pressing the MENU button (A19) in teletext mode. A bargraph will appear in the lower part of the screen (as in TV mode). If MUTE is active a mute icon is also shown.
- A second press on the MENU button (A19) will access the BRIGHTNESS control.
- The active bargraph will timeout after 3-4 seconds (as in TV mode VOLUME control) or by pressing on the MENU button (A19) a third time after brightness control
- Each control can be adjusted by using the remote control CURSOR RIGHT (A20) / LEFT (A7) buttons.
- Mute can always be activated by pressing the SOUND MUTE button (A2).
- Any change to the VOLUME level will cancel the SOUND MUTE.

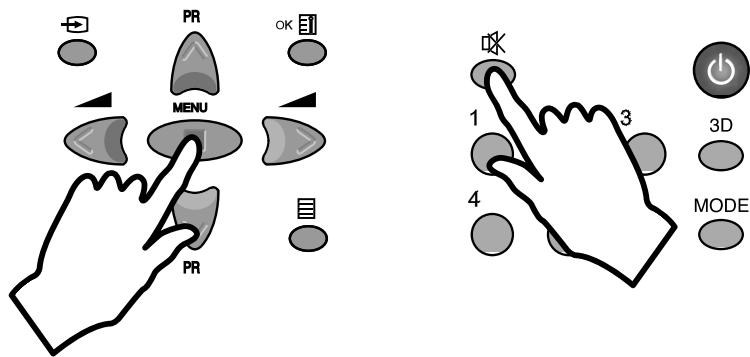

WATCHING TV WHILE PAGE SEARCHING

   The CANCEL function can be used to make the teletext page transparent, thus revealing the TV picture:

- To enter cancel mode, press the CANCEL () button (A8) while in teletext mode. The TV program will reappear on the screen, while only the teletext page number or the cancel icon remains at the top and left corner of the screen.
- You can enter a new page number in this mode only by using the remote control NUMBER 0...9 buttons (A3), or with the INDEX () button (A18).
- If a page has been requested, but has not yet arrived, cancel icon will be displayed until the page arrives. Once arrived the page number will be displayed.
- The teletext page can be made visible again by pressing the CANCEL () button (A8).
- It should be noted that the TV program cannot be changed while in cancel mode.
- The CANCEL function is not available in PAT and TAT mode.

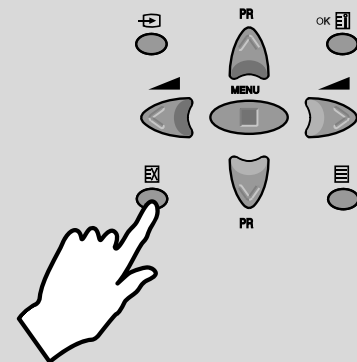

WATCHING TV WITH TELETEXT SUBTITLES

If the actual teletext page is a news flash or subtitle page, then most of the TV picture becomes visible. In this situation the ZOOM format chosen in TV mode is reactivated, where possible.

This is particularly useful while watching a program with the teletext subtitles. Only formats which do not allow the full height of the TV picture to be seen are not possible in teletext mode, as these would not allow all teletext lines to be displayed.

Therefore only the formats ZOOM 14:9 AND ZOOM 16:9 (available with wide screen TV models) cannot be preserved with teletext subtitles. In this situation the default format FULL SCREEN (equal to 16:9) will be used.



DMP3901900

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>