 


# DAEWOO


 
## INSTRUCTION MANUAL

### Color Television

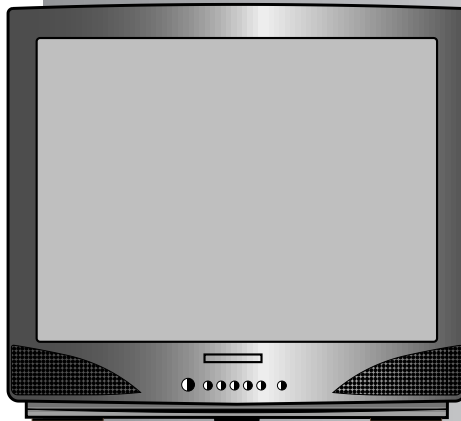

**DTQ 25S2FCV**

**DTQ 27S2FCV**

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## CAUTION

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## NOTE TO CATV SYSTEM INSTALLER

THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.

## CAUTION

The AC power cord provided with this product is polarized (one blade wider than the other). To provide power to the TV, insert the AC plug into a standard 120V 60Hz polarized outlet.

## NOTE

Never connect the plug to an electrical source other than one providing 120V 60Hz power. Use only the attached power cord. If the polarized AC cord does not fit into a non-polarized outlet, do not cut or file the blade. You are responsible for having the obsolete outlet replaced with a polarized outlet.

If you feel a static discharge when touching the unit, and the unit does not function, simply unplug the unit from the outlet. When you plug the unit back in, it should work normally.

Do not install power cords near any heating element or cooking appliances.

## **Daewoo Electronics Corporation of America**

120 Chubb Avenue,  
Lyndhurst, NJ 07071  
1-800-DAEWOO8 (1-800-323-9668)  
Fax:201-935-5284

Dear Customer :

Daewoo Electronics Corporation of America would like to thank you for choosing this color television receiver. It incorporates a host of features designed to give you excellent performance for many years to come.

We realize that you're eager to turn it on and begin enjoying the high-quality pictures it delivers just as quickly as possible, but we ask you to take a few minutes to read the instructions in the booklet to familiarize yourself with the receiver, its functions and some features which may be new to you. If you follow the instructions, this unit should give you many years of viewing pleasure.

If for any reason it does not, we want to hear about it. Please write to us at the address above. Daewoo always welcomes comments and suggestions on this or any of our other products.

On the other hand, when you discover the enjoyment, reliability and ease of use that is built into it, we hope that you will tell your friends, and consider Daewoo when you make your next purchase of home entertainment equipment.

In addition to TV receivers, Daewoo produces a full line of audiovisual products built to the same high design, engineering, and manufacturing standards as this unit.

Here are a few tips that will keep your TV receiver looking great and performing for years to come.

- Avoid putting it in excessively hot locations. Damage to the cabinet or premature component failures can result.
- There are ventilation holes in the bottom and rear of the cabinet. Make sure that they remain unobstructed. Do not place the receiver on top of a thick cloth.
- If you don't plan to use the receiver for several days, it's a good idea to unplug it from the power outlet.
- Many common household cleaning agents, sprays, solvents, and polishes will cause permanent damage to the surface of the cabinet. The best cleaning agents are mild soap and a damp cloth.

Again, thank you for choosing this Daewoo product. We have employed advanced engineering techniques in its design, and manufactured it in one of the world's most up-to-date production facilities. The result is a TV receiver that we know you will be as proud to own as we were to create.

Very truly yours,  
DAEWOO ELECTRONICS  
CORPORATION OF AMERICA

## Table of Contents

<b>Important Safeguards</b> .....	<b>2</b>
<b>Chapter 1: Overview of Your Equipment</b> .....	<b>4</b>
Your TV's Front Panel .....	4
Your TV's Back Panel .....	4
Your Remote Control .....	5
Installing your remote control batteries .....	6
Notes .....	6
<b>Chapter 2: Connecting an Antenna or Cable to Your TV</b> .....	<b>7</b>
Connecting an Antenna .....	7
Connecting a Cable System .....	8
Connecting Other Pieces of Equipment .....	9
Safety Note .....	9
<b>Chapter 3: Operating Your TV</b> .....	<b>10</b>
Turning your TV On .....	10
Programming Your TV's Channel Memory .....	10
Changing Channels .....	11
Changing the Volume .....	11
Changing The TV's Channel Memory .....	11
Adding a channel to memory .....	11
Erasing a channel from memory .....	12
Changing the TV's channel memory with the menus .....	12
Changing the TV's Input .....	13
Changing the TV's Input with the remote control .....	13
Displaying the Current Channel .....	13
Adjusting Video Settings .....	14
Returning to factory settings .....	15
Descriptions of video settings .....	15
<b>Chapter 4 : Setting the Sound</b> .....	<b>16</b>
Changing the Sound Mode .....	16
<b>Chapter 5: Using Timer Functions</b> .....	<b>17</b>
Accessing the Timer Menu .....	17
Setting the Clock .....	17
Setting the On Timer .....	18
Setting the Off Timer .....	18
Canceling the On Timer or Off Timer .....	19
Setting the Sleep Timer .....	19
<b>Chapter 6 : Additional Features</b> .....	<b>20</b>
Changing the Language of the On-Screen Menus .....	20
Captioning .....	20
About captions .....	21
Parental Control Settings .....	22
Protection Features .....	26
Automatic blue screen .....	26
Automatic power off .....	26
<b>Chapter 7 : Troubleshooting</b> .....	<b>27</b>
<b>Warranty</b> .....	<b>28</b>

## IMPORTANT SAFEGUARDS

 
PLEASE READ ALL THESE INSTRUCTIONS REGARDING YOUR TELEVISION EQUIPMENT AND RETAIN FOR FUTURE REFERENCE. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE TV RECEIVER.

- 1 Read all of these instructions.
- 2 Save these instructions for later use.
- 3 Unplug this television equipment from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4 Do not use attachments not recommended by the television equipment manufacturer as they may result in the risk of fire, electric shock or other personal injury.
- 5 Do not use this television equipment near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, or the like.
- 6 Do not place this television equipment on an unstable cart, stand, or table. The television equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Use only with a cart or stand recommended by the manufacturer, or sold with the television equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surface may cause the appliance and cart combination to overturn.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation and to ensure reliable operation of the television equipment; and to protect it from overheating, these openings, must not be blocked or covered. The opening should never be blocked by placing the television equipment on a bed, sofa, rug, or other similar surface. (This equipment should never be placed near or over a radiator or heat register.) This television equipment should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- 8 This television equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company.
- 9 This television equipment is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 10 Do not allow anything to rest on the power cord. Do not locate this television equipment where the cord will be abused by persons walking on it.
- 11 Follow all warnings and instructions marked on the television equipment.
- 12 For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.



- 13** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 14** Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- 15** Never push objects of any kind into this television equipment through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television equipment.
- 16** Do not attempt to service this television equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 17** Unplug this television equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged or frayed.
  - If liquid has been spilled, or objects have fallen into the television equipment.
  - If the television equipment has been exposed to rain or water.
  - If the television equipment does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV receiver to its normal operation.
  - If the television equipment has been dropped or the cabinet has been damaged.
- (f) When the television equipment exhibits a distinct change in performance - this indicates a need for service.
- 18** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 19** Upon completion of any service or repairs to this television equipment, ask the service technician to perform safety checks to determine that the television is in a safe operating condition.
- 20** If an outside antenna or cable system is connected to the television receiver, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA N0.70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

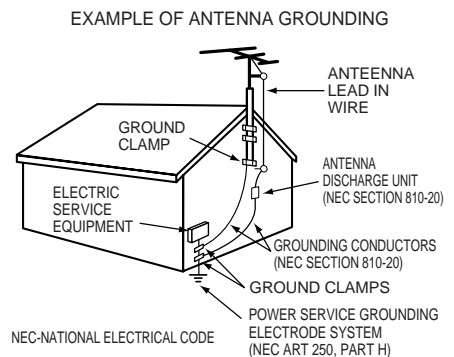

## Overview of Your Equipment

Your TV comes with a remote control. The section below summarizes the buttons, controls, and terminals that you will use with your TV.

### Your TV's Front Panel

#### 1 POWER

Use this button to turn your TV on or off.

#### 2 ▲CH▼

Use these buttons to change channels on your TV, or to select items in the menu system.

#### 3 ◀VOL▶

 
Use these buttons to change your TV's volume, to activate selections in the menu system, or to change audio and video settings.

#### 4 MENU


Use this button to turn the TV's menu system on and off.

#### 5 Remote control receiver

This receiver receives a signal from your remote control. Do not block it.

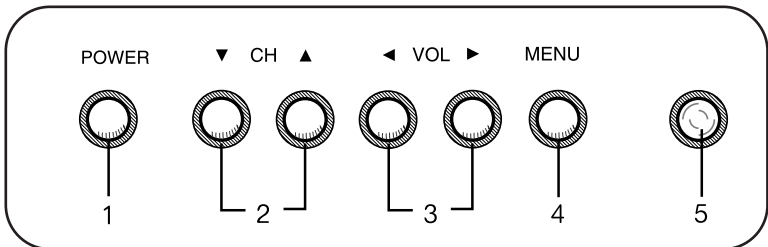

### Your TV's Back Panel

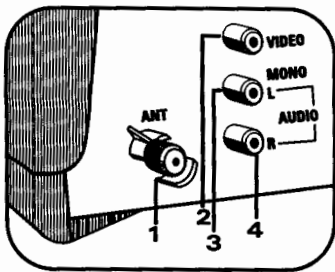 

#### 1 Antenna terminal (ANT)

Use this terminal to attach an antenna or cable system to your TV.

#### 2 Video IN

This terminal allows the TV to receive a video signal from another component, such as a VCR.

 
#### 3 Audio L/Mono IN

This terminal allows the TV to receive an audio L/mono signal from another component, such as a VCR.

#### 4 Audio R IN

This terminal allows the TV to receive an audio R signal from another component, such as a VCR.

## Your Remote Control

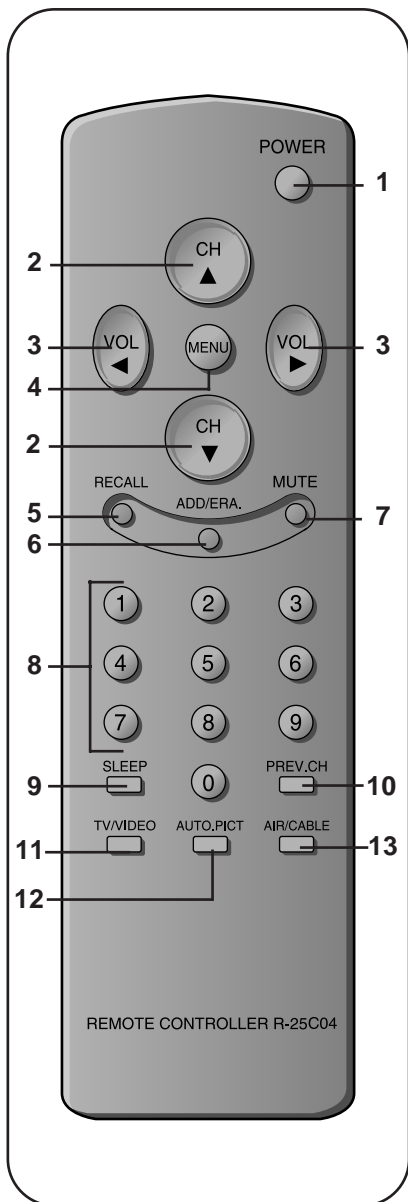

### 1 POWER

Use this button to turn your TV on or off.

### 2 ▲CH▼

Use these buttons to change channels on your TV, or select items in the menu system.

### 3 ◀VOL▶

Use these buttons to change your TV's volume, to activate selections in the menu system, or to change audio and video settings.

### 4 MENU

Use this button to turn the TV's menu system on and off.

### 5 RECALL

Press this button to display the channel number.

### 6 ADD/ERA

Use this button to add a channel to the TV's memory or erase the channel from memory.

### 7 MUTE

Use to turn the TV's sound on and off.

### 8 0-9

Use these buttons to change channels.

### 9 SLEEP

Use this button to program the TV to turn off after a certain time.

### 10 PREV. CH

Press this button to return to the previous channel you were watching.

### 11 TV/VIDEO

Press this button to select the TV's Input (TV or VIDEO).

### 12 AUTO. PICT

Press this button to return the TV's video settings to their original level.

### 13 AIR/CABLE

 
Use the button to set up your TV to receive signals from an antenna (AIR) or a cable system (CABLE).



---

### Installing your remote control batteries

- 1 Open the battery compartment on the back of the remote control.
- 2 Install two AAA-size batteries (not included) as shown. Make sure the “+” and “-” terminals are oriented correctly.
- 3 Replace the cover.

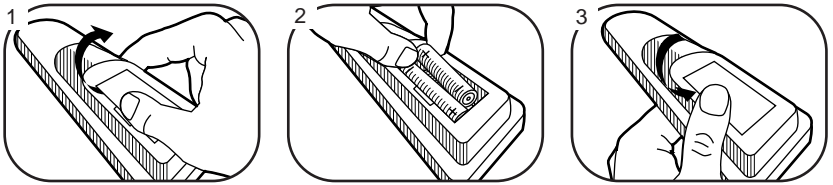

### Notes

Do not mix different types of batteries, or mix an old and a new battery.

Remove and replace weak batteries. Weak batteries can leak and damage your controller. Dispose of batteries properly; never throw them into a fire.

Point your remote at the receiver on the center of the front of the TV. Make sure the receiver is not blocked.

The remote control can operate up to 30 feet away from the TV, if you are directly facing the front of the TV. Operating distance diminishes as you move to the sides of the TV

 
## Connecting an Antenna or Cable to Your TV

Your TV will provide you with the best performance if you connect it to an external antenna or cable system. Follow the directions below make this connection. Please note that you will normally only have to make one of the connections shown below, not all of them.

All connections will be made to the antenna terminal on the back of your TV. The antenna terminal is a silver metal post partially surrounded by two plastic tabs. For help in locating the antenna terminal, see “Your TV’s Back Panel” on page 4.


There is no rod antenna (“rabbit ears”) provided with your TV.

### Connecting an Antenna

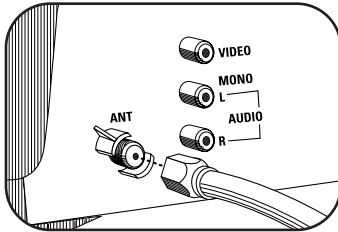

**If your antenna ends in a single coaxial lead, simply press or screw the cable onto the antenna terminal on the back of your TV.**

 
**If your antenna ends in a pair of 300 ohm twin leads, you must use a 300-ohm/75-ohm adaptor. Place the leads underneath the screws on the adaptor, tighten the screws, then press the adaptor onto the antenna terminal on the back of the TV.**

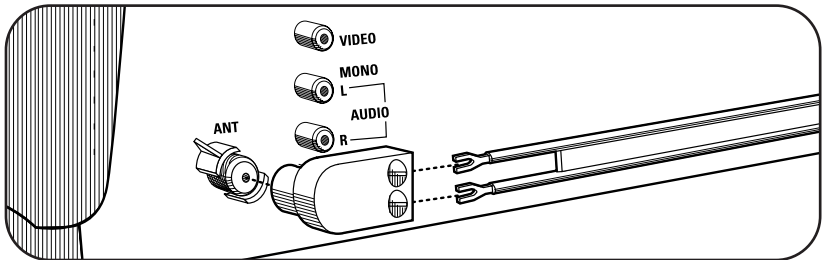


### Antennas with two sets of leads

You might have two sets of leads from your antenna system, especially if you have one antenna for VHF signals and one antenna for UHF signals.

 **If your antenna system has both a coaxial lead and twin 300-ohm leads,** you must obtain a combiner (available at your local electronics store). Press or screw the coaxial lead onto the combiner; place the twin leads underneath the screws on the combiner and tighten the screws. Press the cable from combiner onto the antenna terminal on the back of your TV.

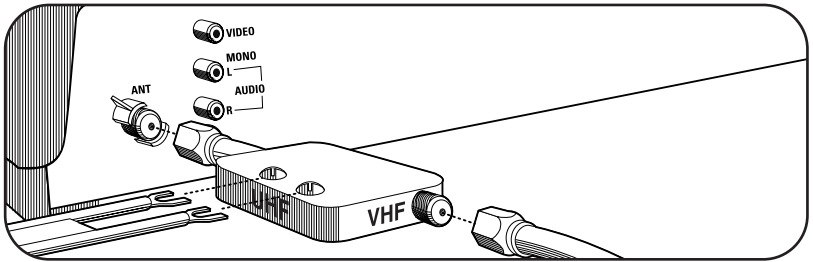


 **If your antenna system has two sets of twin 300-ohm leads,** you must obtain a combiner (available at your local electronics store). Place one set of twin leads underneath the screws on the combiner and tighten the screws. Do the same with the other set of twin leads. Press the cable from the combiner onto antenna terminal on the back of your TV.

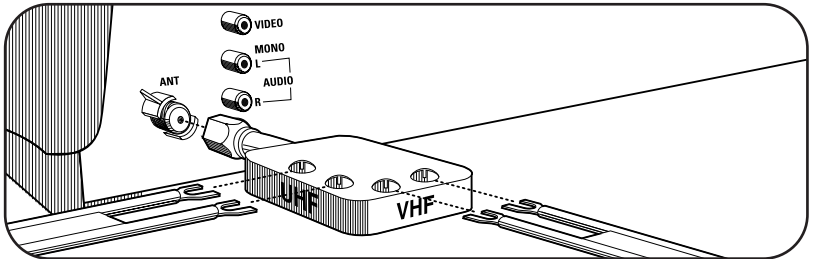


### Connecting a cable system

 If your cable set-up is not described below, please contact your cable company for more information.

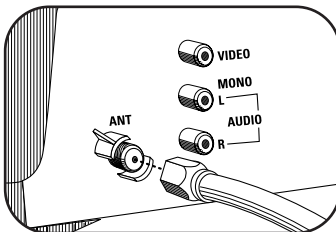


**If your cable system does not require the use of a cable box,** simply press or screw the incoming cable onto the antenna terminal on the back of your TV.

 If your cable system requires you to use a converter box for all channels, connect the incoming cable to the IN terminal on the converter box. Connect another cable between the OUT terminal on the converter box and the antenna terminal on the TV. You will need to keep your TV tuned to channel 3 or 4 and change channels using the converter box.

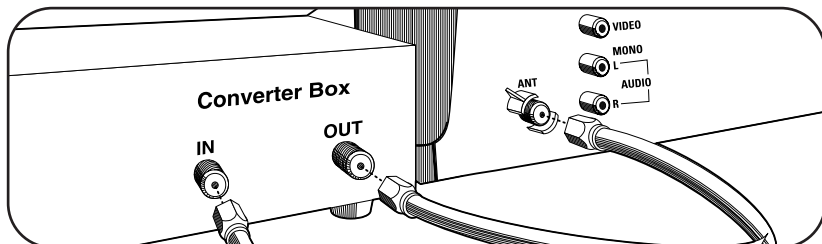

If your cable system only requires you to use a converter box for some channels (i. e. pay-TV channels), follow these steps: Find the primary incoming coaxial cable. Plug this cable into a splitter (available at your local electronics store). Connect one coaxial cable between one OUT terminal on the splitter and the IN terminal on the converter box. Connect another coaxial cable between the other OUT terminal on the splitter and the B-IN terminal on an A/B switch (available at your local electronics store.) Connect a third coaxial cable between the OUT terminal on the converter box and the A-IN terminal on the A/B switch. Finally, connect a coaxial cable between the OUT terminal on the A/B switch and the antenna terminal on the back of your TV.

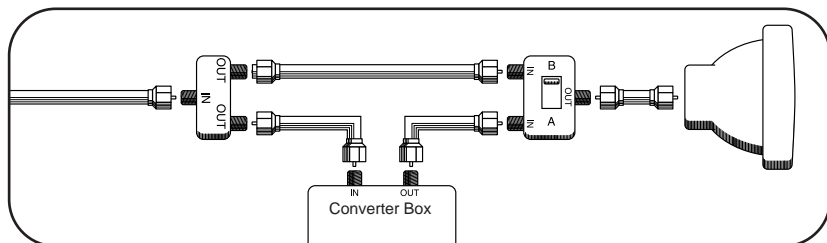 

When the A/B switch is in the A position, you need to change channels on the converter box (and your TV should be tuned to channel 3 or 4); when the A/B switch is in the B position you can change channels on the TV.

## Connecting Other Pieces of Equipment

You may want to connect a VCR, laser disc player, satellite receiver, or another type of equipment to your TV. We recommend that you follow the instructions included with the piece of equipment you wish to connect.

 
## Safety Note

If you plan on being away from your home for an extended period of time, or if a thunderstorm is approaching, you should unplug your television, and you may wish to disconnect your TV from a rooftop or satellite antenna. You do not need to disconnect your TV from a cable system.

## Operating Your TV

Once you have connected your TV to an antenna or cable system, plugged the TV in, and put batteries in the remote, you are ready to use the TV. The first thing you should do is program your TV so it memorizes all of the available channels.

### Turning Your TV On




- 1 To turn your TV on, press the POWER button on the remote control. You can also use the POWER button on the front panel. Make sure your TV is plugged in before you try to turn it on.

### Programming Your TV's Channel Memory

 Your TV's memory determines the channels that are available using the ▲CH▼ buttons. If a channel is not in memory, you can tune to it with the number buttons, but not with the ▲CH▼ buttons. Follow these steps to program your TV's memory:

- 1 With the TV on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select SETUP and press ◀VOL▶.
- 3 Use the ▲CH▼ buttons to select ANTENNA, then use the ◀VOL▶ buttons to select AIR or CABLE. If you connected an antenna to your TV, select AIR; if you connected a cable system, select CABLE.
- 4 Use the ▲CH▼ buttons to select AUTO PROGRAM, then use the ◀VOL▶ buttons to begin the AUTO PROGRAM process. This process takes a few minutes.
- 5 Press the MENU button to return to normal TV viewing.


Your TV's channel memory will not be affected by a power outage. You will not need to re-program the memory unless you change the type of cable antenna connected to your TV.

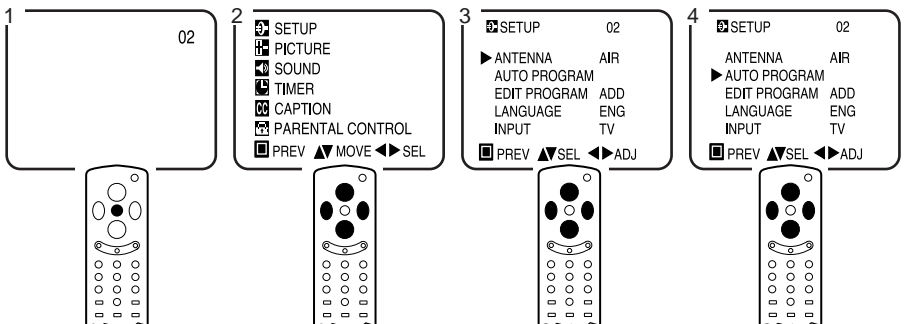

---


## Changing Channels

 You can change channels in three ways:

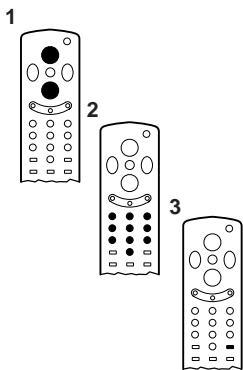

- 1 The ▲CH▼ buttons will take you through all memorized channels, one by one. The ▲CH▼ buttons will not access channels that have not been programmed into the TV's memory. For more information about programming channels into memory, see the section "Programming your TV's Channel Memory," above.
- 2 The number buttons (0-9) will take you to any channel, even if it has not been memorized. To change to a channel, enter its number; the TV will tune to the new channel when you enter the second digit of the channel.
- 3 The PREV. CH button will take you instantly to the last channel you were watching.

## Changing the Volume

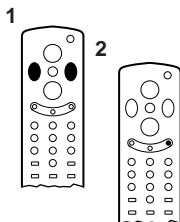 


- 1 To change the volume of the TV set, use the ◀VOL▶ buttons on the remote or on the front panel.
- 2 To quickly turn off the sound, press the MUTE button on the remote. The volume bar will appear on screen, colored red. To return the volume to its previous level, press MUTE again.

## Changing the TV's Channel Memory


 
Your TV's memory determines the channels that are available using the ▲CH▼ buttons. You can add channels to this memory or remove them from memory. If a channel is removed from memory, you can tune to it with the number buttons, but you cannot tune to it with the ▲CH▼ buttons.

### Adding a channel to memory

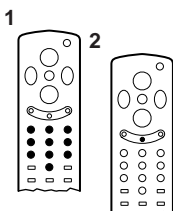

- 1 Use the number buttons to tune to the channel.
- 2 Press the ADD/ERA button on the remote control. The channel will turn from magenta to green to show it has been added.


## Erasing a channel from memory

  -  1 Tune to the channel you want to erase.
-  2 Press the ADD/ERA button on the remote control. The channel will turn from green to magenta to show it has been erased.

## Changing the TV's channel memory with the menus

 You can also use the menu system to add or erase channels from memory:


- 1 Use the number buttons to tune to the channel, then press MENU.
- 2 Use the ▲CH▼ buttons to select SETUP and press ◀VOL▶.
- 3 Use the ▲CH▼ buttons to select EDIT PROGRAM. If the channel is in memory, it will be labeled “ADD,” and the number in the corner will be green. If the channel is not in memory, it will be labeled “ERASE,” and the number in the corner will be magenta.
- 4 Use the ◀VOL▶ buttons to change the ADD or ERASE setting.
- 5 Wait 7 seconds, or press MENU twice to exit.

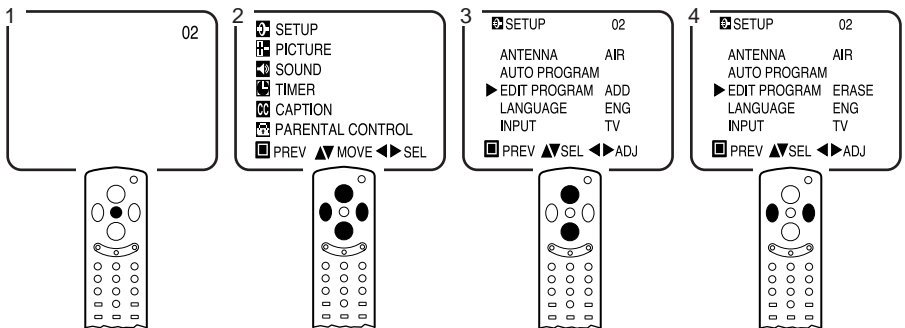


## Changing the TV's Input

Normally, your TV displays the signal coming through the antenna terminal. However, if you've connected another component to your TV (such as a VCR) using the Audio/Video Inputs, you will want to be able to view the signal from that component. To do this, you will need to switch from the "TV" input to the "Video" input, as follows;

 - 1 With the TV turned on, Press MENU
- 2 You will see the Main Menu, Use the ▲CH▼ buttons to select SETUP and press ◀VOL▶.
- 3 Use the ▲CH▼ buttons to select INPUT.
- 4 Press ◀VOL▶ to change from TV to VIDEO. Press ◀VOL▶ again to switch back to TV.
- 5 Wait 7 seconds to return to normal viewing, or press MENU twice.

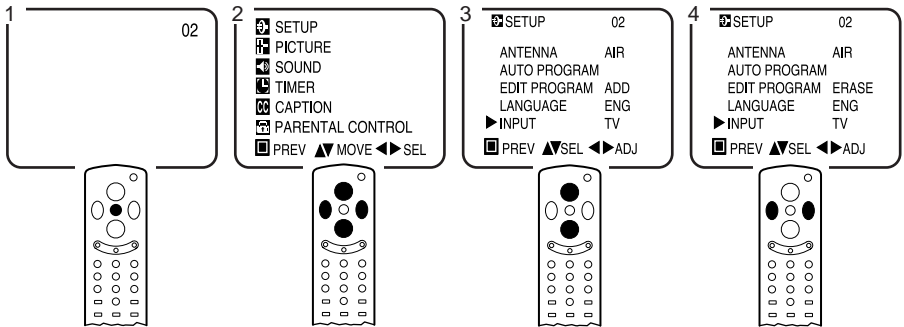


## Changing the TV's Input with the remote control

 

- 1 You can also change the TV/VIDEO setting with the remote control. Press TV/VIDEO button on the remote control to change from TV to VIDEO. Press TV/VIDEO button again to switch back to TV.

## Displaying the Current Channel

 


- 1 To quickly see the current channel, press RECALL. The current channel will be displayed briefly.




## Adjusting Video Settings

 You may wish to adjust the video settings (e. g. contrast or color) to obtain the most pleasing picture. To do so, follow these directions:

- 1 With the TV on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select PICTURE.
- 3 Press the ◀VOL▶ buttons. The picture menu will appear.
- 4 The AUTO feature will be selected. Use the ◀VOL▶ button to turn AUTO to OFF. This will allow you to manually adjust the video settings.

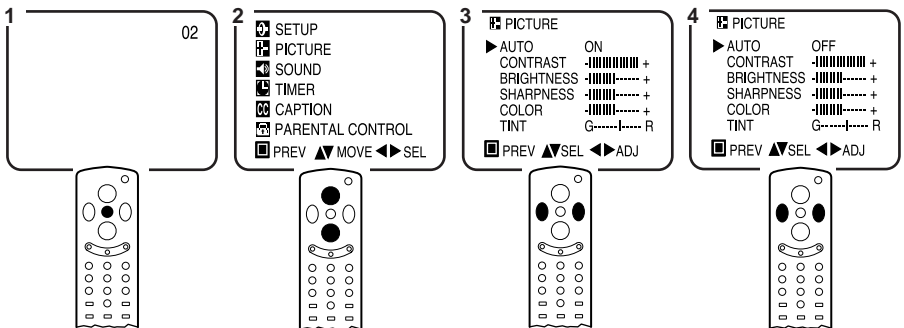

 - 5 Use the ▲CH▼ buttons to select the video setting you wish to adjust. Descriptions of the video settings are on the next page.
- 6 Use the ◀VOL▶ buttons to adjust the video setting to the level you prefer.
- 7 Use the ▲CH▼ buttons to select another video setting to adjust.
- 8 When you are finished, press the MENU button twice to return to normal viewing.

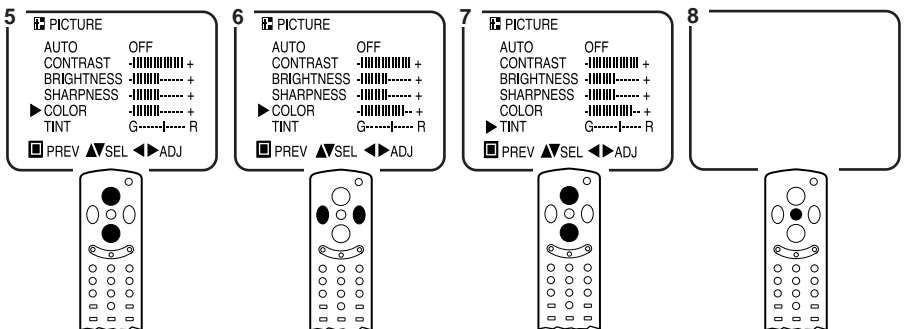


## Returning to the factory settings

If you would like to return to the original video settings, as they were calibrated at the factory, follow these steps :

- 1 Complete steps 1-3 in the “Adjusting Video Settings” section, on the previous page.
- 2 Press the ◀VOL▶ buttons to set the AUTO setting to ON. This will return all video settings to their default levels, as set at the factory.
- 3 You can also return to the factory settings during normal TV viewing by pressing the AUTO.PICT button on the remote control.

 The TV will remember the “custom” settings you had previously chosen. When you set AUTO to OFF again, your previous custom settings will be restored.

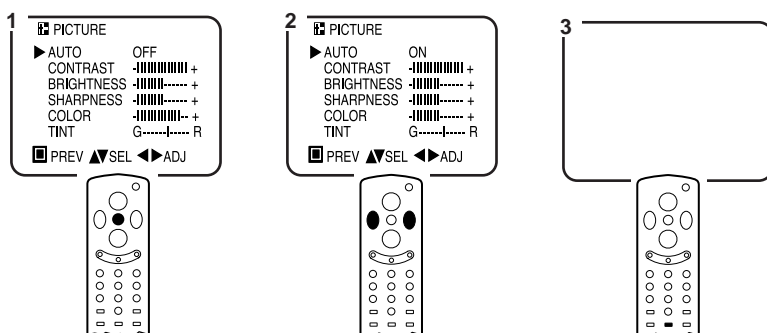

## Descriptions of video settings

The contrast setting controls the relation between the light and black areas of the screen. If the light areas are too bright and are losing details, adjust the contrast towards the “-” position; if the picture is gray and lacks contrast, adjust the contrast towards the “+” position.

The brightness settings controls the overall amount of light in the picture. If the picture is too bright, adjust the brightness setting towards the “-” position; if the picture is too dark, adjust the brightness towards the “+” position.

Sharpness controls how the TV displays edges of objects on-screen. If the TV shows multiple vertical lines at the edges of an object, adjust sharpness towards the “-” position; if the vertical edges of on-screen objects are fuzzy, adjust sharpness towards the “+” position.

The color setting controls the intensity of color. If the color is over-saturated, adjust the color towards the “-” position; if the color is washed out, adjust the color towards the “+” position.

 
The tint setting controls the relationship of red and green in a picture. Tint is especially noticeable in flesh tones. If flesh tones seem too red or purple, adjust the color towards “G”; if the flesh tones are too green, adjust the color towards “R”.

## Setting the Sound

Your TV set is capable of decoding a STEREO signal.

### Changing The Sound Mode

- 1 With TV turned on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select sound.
- 3 Press the ◀VOL▶ buttons. The SOUND menu will be displayed.
- 4 Use the ▲CH▼ buttons to change the STEREO or MONO setting.
- 5 Wait 7 seconds, or press MENU twice to exit.

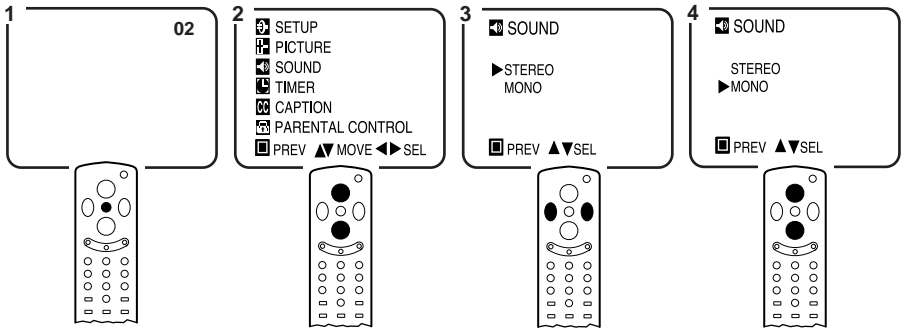


## Using Timer Functions

Your TV has a built in-clock, and you can set the TV to turn on and off at times that you select. You can also set your TV to turn off after counting down a certain amount of time.


### Accessing the Timer Menu

 - 1 With the TV turned on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select TIMER.
- 3 Press the ◀VOL▶ buttons. The TIMER menu will be displayed.

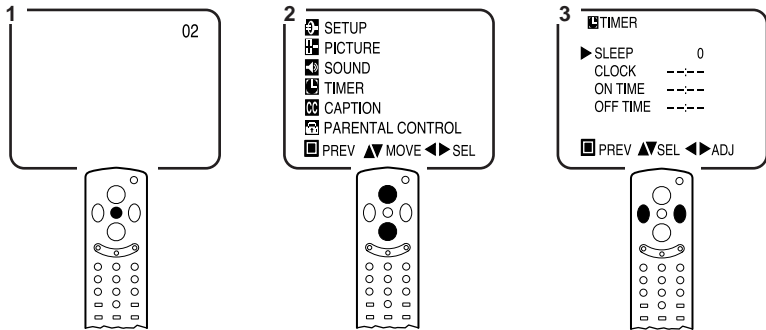

### Setting the Clock

 
- 1 Follow steps 1-3 in “Accessing the Timer Menu,” above.
- 2 Press ▲CH▼ buttons to select CLOCK.
- 3 Press the ◀VOL▶ button to set the hours (including AM/PM); press the VOL▶ button to set the minutes. If you hold down either VOL button, the corresponding numbers will change more quickly.
- 4 When the clock is set correctly, use the ▲CH▼ buttons to select another timer function, or use the MENU button to exit this menu.

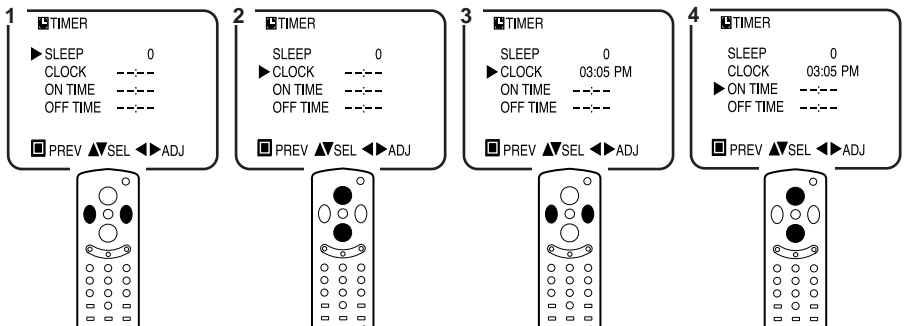

## Settings the On Timer

If you enter a time in the ON TIME setting, your TV will automatically turn on at that time. Follow these instructions to set the ON TIME:

 
- 1 Follow steps 1-3 in “Accessing the Timer Menu” on the previous page.
- 2 Use the ▲CH▼ buttons to select ON TIME.
- 3 Press the ◀VOL button to set the hours (including AM/PM); press the VOL▶ button to set the minutes. If you hold down either VOL button, the corresponding numbers will change more quickly.
- 4 When the setting is correct, use the ▲CH▼ buttons to select another timer function, or use the MENU button to exit this menu.

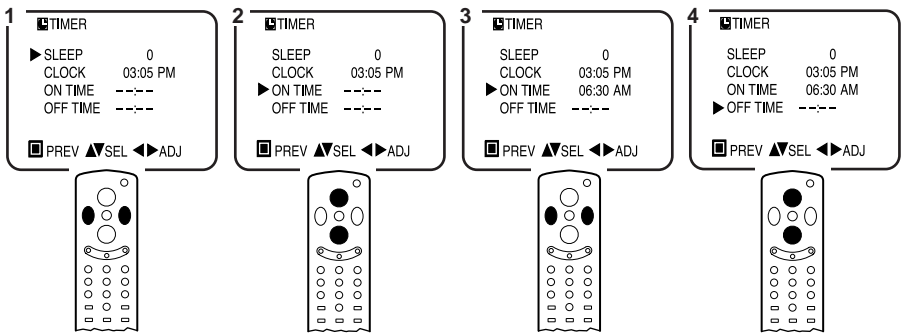

## Setting the Off Timer

If you enter a time in the OFF TIME setting, your TV will automatically turn off at that time. Follow these instructions to set the OFF TIME:

 - 1 Follow steps 1-3 in “Accessing the Timer Menu” on the previous page.
- 2 Use the ▲CH▼ buttons to select OFF TIME.

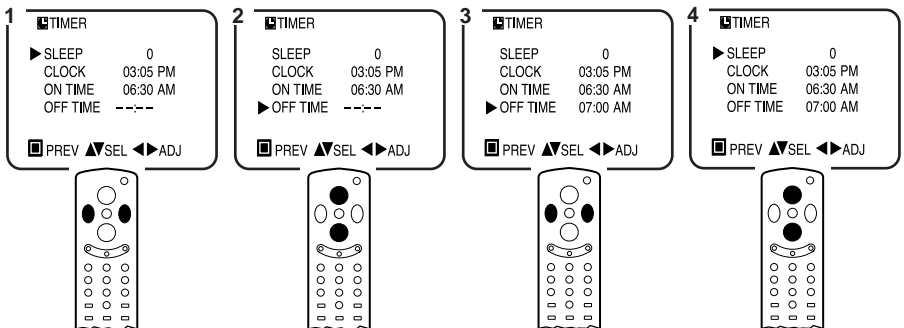

- 3 Press the ◀VOL button to set the hours (including AM/PM); press the VOL▶ button to set the minutes. If you hold down either VOL button, the corresponding numbers will change more quickly.
- 4 When the setting is correct, use the ▲CH▼ buttons to select another timer function, or use the MENU button to exit this menu.

## Canceling the On Timer or Off Timer

If you would like to cancel the On Timer or the Off Timer, press the ◀VOL▶ buttons until the timer settings return to “- -: -” (in magenta).

 
The On Timer and Off Timer will not function correctly unless the clock has been set.

## Setting the Sleep Timer

The sleep timer allows you to set an amount of time from 15 minutes to 4 hours, in 15 minute increments; the TV will count down the amount of time you set, then turn itself off. To set the sleep timer:

- 1 Follow steps 1-3 in “Accessing the Timer Menu.”
- 2 Use the ◀VOL▶ buttons to set the sleep time. Each time you press VOL, you step between the available sleep times: 15 min., 30 min., 45 min., 60 min., 90 min., 120 min., 150 min., 180 min., 210min., and 240 min..
- 3 When the setting is correct, use the ▲CH▼ buttons to select another timer function, or use the MENU button to exit this menu.
- 4 You can also set the SLEEP timer during normal TV viewing, simply by pressing the SLEEP button on the remote control. This button steps through the available sleep times (see step 2), one by one.

To cancel the sleep timer, turn the TV off, or set the sleep time to “0” using one of the methods described above.

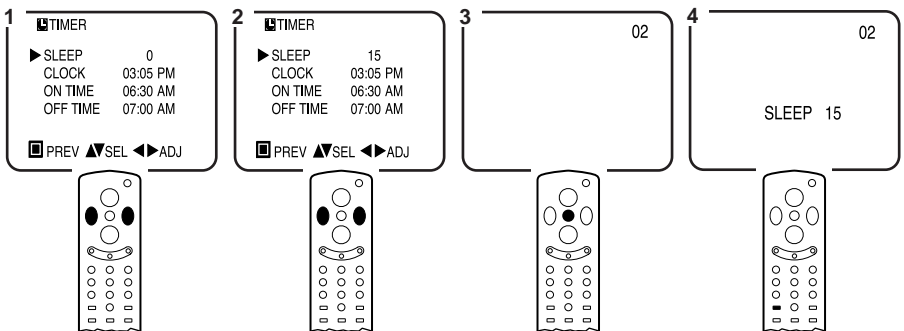


## Additional Features

This section contains descriptions of the more advanced features of your TV.

### Changing the Language of the On-screen Menus

You can choose to display the on-screen menus in English, Spanish, or French. To change the on-screen language:

 - 1 With the TV turned on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select SETUP and press VOL+.
- 3 Use the ▲CH▼ to select LANGUAGE.
- 4 Use the ◀VOL▶ buttons to select the language you want to use : English (ENG), Spanish (ESP), or French (FRA).
- 5 Press the MENU button to return to normal TV viewing.

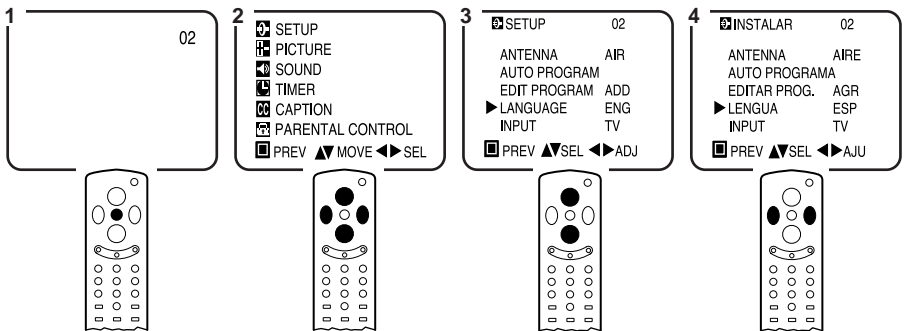


### Captioning

Many TV shows contain “closed captions”. These captions are hidden words that can be displayed on your TV screen. There are two types of these words : “captions” usually follow the action on-screen, providing a written version of the dialogue, narration, and sound effects ; “text” is not usually related to the action on-screen, often providing information such as news or weather. A TV program might be providing more than one set of captions or one set of text.

To set your TV to display captions or text.

- 1 With the TV turned on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select CAPTION.
- 3 Press ◀VOL▶. The caption menu will be displayed.
- 4 To turn captioning on, use the ▲CH▼ buttons to select captions (C1 or C2) or Text (T1 or T2). At the time these instructions were written, only C1 is normally available, but feel free to try the other selections.

 - 
- 5 Wait 5 seconds, or press the MENU button twice to return to normal TV viewing. Your setting will remain intact until you change it.

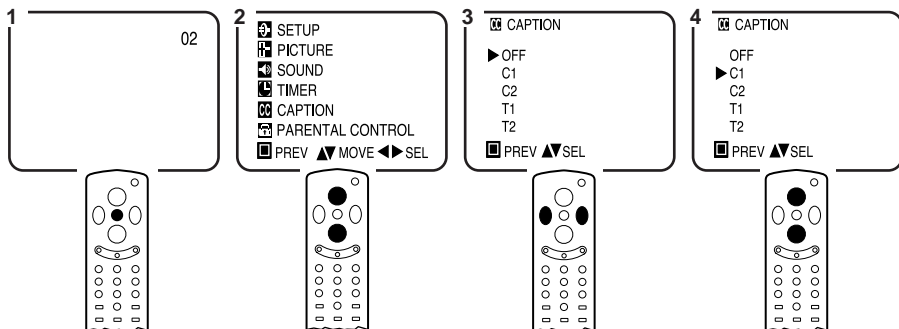

### About captions

Once you have chosen a caption setting, all available captions on that setting will be displayed when you watch TV. If no captions appear, it is because there are no captions being broadcast for that show. Look for a “CC” mark in the TV listings or on video tapes. This mark indicates that captions are provided for that program.

Please note : The content and appearance of captions are determined by the broadcaster, not by the TV. If the captions display strange characters, misspellings, or odd words, those errors are made by the broadcaster, not your TV. Errors in captioning are more common during live programs than during taped programs.

 
Your TV cannot display captions when it is displaying any other on-screen information. If you use the RECALL or VOL buttons, the captions will briefly disappear.



## Parental Control Settings

This function helps parents to set the standard for the programs that their children are able to watch. The Rating Codes for TV program or video movie is provide by the supplier. These codes describe suitability for children. Parents can make the television to be blocked with unsuitable programs or movies for their children using this function. Explanations about the Movie ratings and TV guidelines are described on following pages.







- 1 With the TV turned on, press the MENU button.
- 2 Use the ▲CH▼ buttons to select PARENTAL CONTROL and press ◀VOL▶ buttons.
- 3 The first time to access this function, ENTER A NEW PASSWORD is displayed. Enter the desired password, four digits numeric code, using 0-9 buttons and REPEAT THE PASSWORD is displayed. Repeat the password that you entered. Next times when you access this function ENTER THE PASSWORD is displayed and you must enter the same pasword that you set. <Tip> If you forget the password contact the America service center or an authorized dealer.
- 4 If the password is entered, following menu items are appeared.

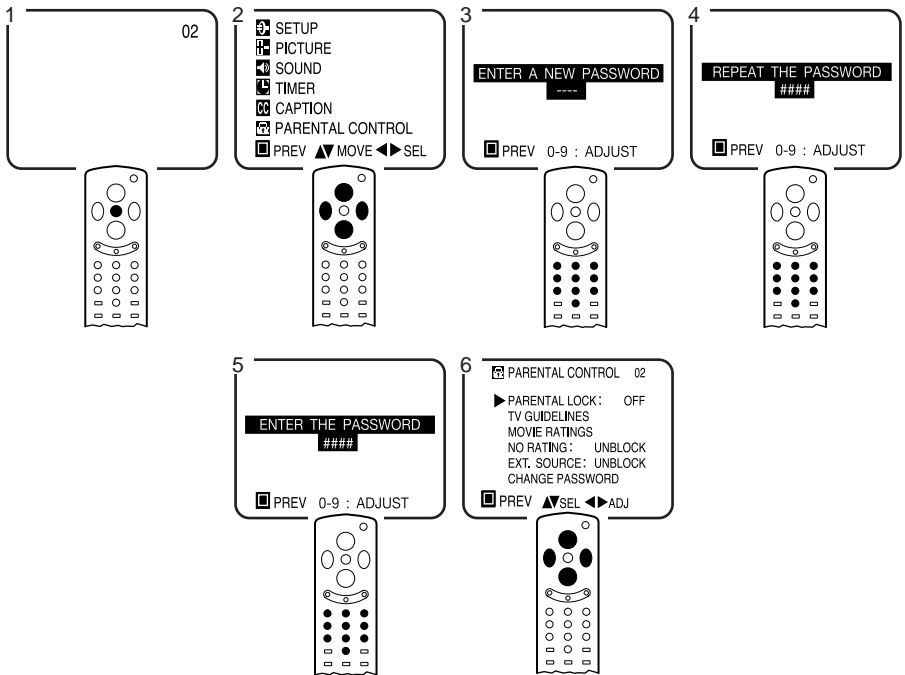

You can set each individual settings using ▲CH▼ and ◀VOL▶ buttons.

- 5 PARENTAL LOCK : Toggle ON or OFF using ◀VOL▶ buttons.
- 6 TV GUIDELINES : Set the standard for TV programs except Sports and News. Use ▲CH▼ buttons to select an item. Selected item marked by red-box. Press ◀VOL▶ buttons to adjust. Blocked item marked by “✓” symbol.
- 7 MOVIE RATINGS : Set the standard for movie, video and other media excluding TV program. Use ▲CH▼ buttons to select. Selected item marked by red-box. Press ◀VOL▶ buttons to adjust. Blocked item marked by “✓” symbol.
- 8 NO RATING : This item toggles between UNBLOCK and BLOCK. It determines whether to block or not the program or external source which are not rated by MOVIE RATINGS and TV GUIDELINES.
- 9 EXT. SOURCE : This item toggles between UNBLOCK and BLOCK. It determines whether to block or not the external source.
- 10 CHANGE PASSWORD : The password can be changed by this function. Press ◀VOL▶ buttons and ENTER A NEW PASSWORD is displayed. Enter new password using 0-9 button and REPEAT THE PASSWORD is displayed. Repeat the password that you entered. Next times you assess PARENTAL CONTROL, you must use this password.
- 11 With PARENTAL LOCK ON, rating code name will be displayed on left top of the screen when you moving channels or changing TV/VIDEO mode. If the rating code is a “blocked rating” by your setting, screen goes dark and THIS RATING IS BLOCKED is displayed on bottom of the screen.
- 12 If you want to watch the program or the movie without access and change PARENTAL CONTROL, press RECALL button twice and ENTER THE PASSWORD / IF YOU WANT BLOCK OFF UNTIL TV IS OFF is displayed. Enter the password using 0-9 buttons. The PARENTAL LOCK is OFF until you turn off the television. PARENTAL LOCK should be ON when you turn on the television again.
- 13 If you block ALL column of each rating, all items on same row are automatically blocked. It is applied on TV GUIDELINES settings only.  
e. g.) F, V, S, L, D
- 14 If you block a lower rating, higher ratings are blocked automatically. Priorities of ratings are explained on the table below. This rule is applied on each column in TV GUIDELINES and MOVIE RATINGS.

	TV Guidelines	MPAA Movie Ratings	
HIGH ↑  ↓ LOW	TV-MA	X	
	TV-14	NC-17	
	TV-PG	R	
	TV-G	PG	
		TV-Y7	G
	TV-Y		NR

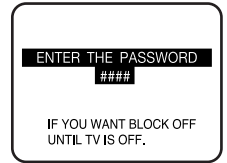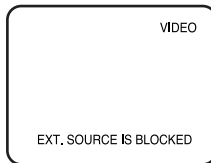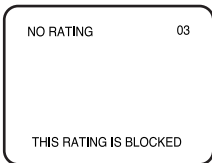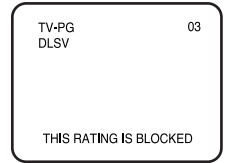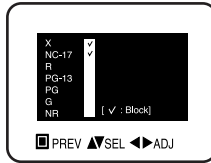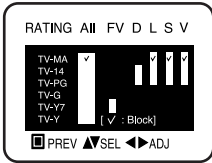      

---

## TV GUIDELINES and MOVIE RATINGS

### 1. TV GUIDE LINES

#### **TV-MA** : Mature audiences only

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. This program contains one or more of the following: graphic violence (V), explicit sexual activity (S), or crude indecent language (L).

#### **TV-14** : Children 14 and over

This program contains some material that many parents would find unsuitable for children under 14 years of age. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following : intense violence (V), intense sexual situation (S), strong coarse language (L), or intensely suggestive dialogue (D).

#### **TV-PG** : Parental guidance suggested

This program contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The theme itself may call for parental guidance and/or the program contains one or more of the following : moderate violence (V), some sexual situation (S), infrequent coarse language (L), or some suggestive dialogue (D).

#### **TV-G** : All ages

Most parents would find this program suitable for all ages. Although this rating does not signify a program designed specifically for children, most parents may let younger children watch this program unattended. It contains little or no violence, no strong language and little or no sexual dialogue or situations.

#### **TV-Y7** : Children 7 and over

This program is designed for children age 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence or comedic violence, or may frighten children under the age of 7. Therefore, parents may wish to consider the suitability of this program for their very young children.

Note : For those programs where fantasy violence may be more intense or more combative than other programs in this category, such programs will be designated TV-Y7-FV.

#### **TV-Y** : All children

This program is designed to be appropriate for all children. Whether animated or live-action, the themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6 This program is not expected to frighten younger children.

- 
- FV** : Fantasy Violence
  - V** : Violence
  - S** : Sexual Situations
  - L** : Adult Language
  - D** : Sexually Suggestive Dialogue

## 2. MOVIE RATINGS

- X** : Adult Movie
- NC-17** : No One 17 and Under Admitted
- R** : Restricted  
Under 17 requires accompanying parent or adult guardian.
- PG-13** : Parents Strongly Cautioned  
Some material may inappropriate for children under 13.
- PG** : Parental Guidance Suggested  
Some material may not be suitable for children.
- G** : General Audience  
All ages admitted.
- NR** : Not Rated

## protection Features

The following two features protect your TV from operating unnecessarily.

### Automatic blue screen

If your television is tuned to a channel that is not receiving a signal (or is receiving a very weak signal), your TV will automatically display a blue screen instead of static.

### Automatic power off

If your television does not receive a television signal for 15 minutes, it will automatically turn off.

## Troubleshooting

Your Daewoo television is designed to give you trouble-free performance for many years. If you have a problem with your TV, try the solutions listed below.

If the suggestions listed below do not solve your problem, contact your Daewoo dealer or an authorized Daewoo service center.

### **There is no picture or sound, or the TV doesn't turn on.**

- Make sure the TV is plugged in.
- Make sure the MUTE is not set.
- Make sure the power is on.
- If there is neither picture or sound, unplug the TV for 30 seconds, then plug it in and try again.

### **There is no picture or sound on some UHF channels.**

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
- See if anything is interfering with the antenna signal.
- Make sure the AIR/CABLE setting is correct.

### **The sound is OK, but the picture is poor.**

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected and is in good working order, has no broken wires, and is adjusted correctly.

### **The picture is OK, but the sound is poor.**

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and adjusted correctly.

### **There is poor reception on some channels.**

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.

### **You cannot tune to a cable channel.**

- Make sure the AIR/CABLE setting is correct.
- The channel may not be programmed into memory.

### **The picture rolls, slants, shows lines, is grainy, has poor color, or has ghosts.**

- Try another station. If the other station are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
- See of anything is interfering with the antenna signal.

### **The remote control does not work.**

- Make sure the TV is plugged in.
- Make sure there are fresh batteries in the remote control.
- Make sure there is nothing blocking the remote control signal.

## Warranty

**Daewoo Electronics Corporation of America** warrants each new electronic product manufactured by it to be free from defective material and workmanship and agrees to remedy any such defect or to furnish a new part (at the Company's option) in exchange for any part of any unit of its manufacture which under normal installation, use, and service disclosed such defect, provided the unit is delivered by the owner to us or to our authorized distributor from whom purchased or authorized service station, intact, for our examination with all transportation charges prepaid to our factory. To establish and receive warranty service at our factory or authorized service facilities, proof of purchase/dated sales invoice is required

Return authorization must be obtained before any merchandise is returned to the factory.

This warranty does not extend to any of our electronic products which have been subjected to misuse, neglect, accident, incorrect wiring not our own, improper installation, unauthorized modification, or to use in violation of instructions furnished by us, nor units which have been repaired or altered outside of our factory, nor to cases where the serial number thereof has been removed, defaced, or changed.

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sake of our electronic products.

**Over-the-counter exchange for units that are initially defective**  
 "Initially defective" is described as when the dealer opens the unit and finds that it is inoperative or a customer opens a new unit and finds that it is inoperable. This unit may be returned to the factory by the dealer for exchange. Under no circumstances will the customer be permitted to return the defective unit directly to the factory.

Exchange must be directly with the dealer.

Model	Parts	Labor	Picture Tube
DTQ-25S2FCV	1 year	1 year	2 years
DTQ-27S2FCV	1 year	1 year	2 years



This instrument is listed by Underwriter's Laboratories, Inc. It is designed and manufactured to meet rigid U.L. safety standards against X-radiation, fire, casualty and electrical hazards.



**DAEWOO**

**Daewoo Electronics Corporation of America**

120 Chubb Avenue  
Lyndhurst, NJ 07071

For more information about this or other Daewoo products, please call 1-800-DAEWOO8.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>