
DVEMOO

VACUUM CLEANER

RC-320F

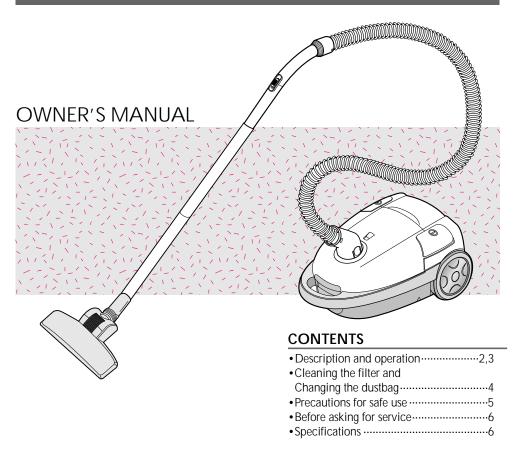

READ AND KEEP THIS

 
- Thank you for purchasing this vacuum cleaner.
- For correct operation, please read this manual before use.

DESCRIPTION AND OPERATION

HOSE CONNECTION




 Connecting the hose: insert the hose firmly into the hose inlet. ("Click")




• Disconnecting the hose: press the button and pull the hose out of the vacuum cleaner.

 SUCTION CONTROL




 The suction power control at the hand grib enables you to control suction power.

PIPE CONNECTION

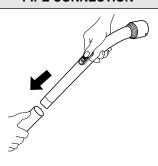

 To connect the nozzle, hold the tubes and the handle: insert the narrowed section into the wide section.

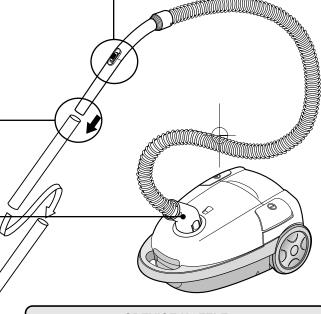

WIDE SUCTION NOZZLE



 Use this nozzle for cleaning both carpeted and uncarpeted floors.



 
CREVICE NOZZLE



Crevice nozzle (Back Board Tool)




CORD REWIND BUTTON




 Rewind the power cord by pressing the cord rewind button

 ON/OFF SWITCH



• Press the on/off switch.

 DUST METER




 When the colour of the dust meter is changed to RED for long time, change the dust bag.(Page 4)

ICE NOZZLE




PRACTICAL PARKING

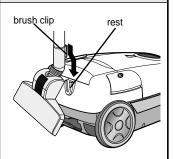


 If you want to stop vacuum cleaning for a while, you can place the brush clip into the rest.

STORAGE

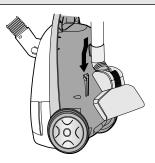


 When storing the vacuum cleaner pipe and nozzle can be attached as shown in the picture.

CLEANING THE FILTER

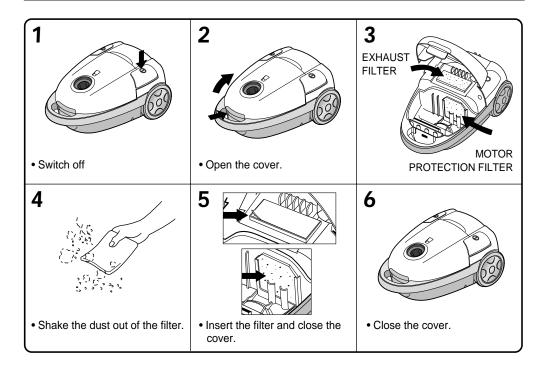

CHANGING THE DUSTBAG

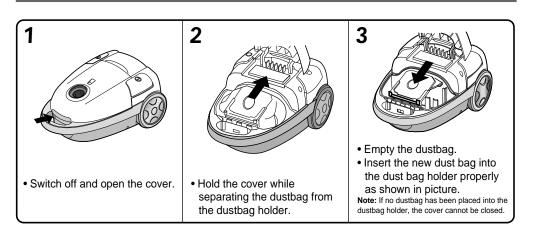


PRECAUTIONS FOR SAFE USE

This vacuum cleaner should only be used for normal dry household dust and dirt.

The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions.


If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or cause a fire.
- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord beyond the specified length.

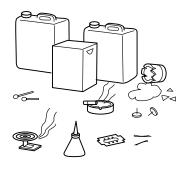



  Make sure a dust bag and a motor protection filter are always inserted.



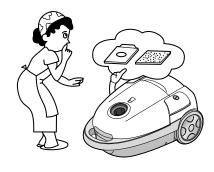



BEFORE ASKING FOR SERVICE

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	Dust bag Pipe or hose	If dust bag is dirty, replace it. If clogged or blocked, remove the object.
The cleaner does not work.	Power cord on/off switch	Check if power cord is plugged. Check if the power switch is turned on.
Power cord does not rewind.	Power cord	Pull the power cord out a little and press the cordrewind button.

SPECIFICATIONS

Model	RC-320F
Rating	230V/50Hz
Watts	1300W
Noise level	81 dB
Weights(Net)	3.8kg
Dimension (L X W X H)	446 X 284 X 217mm
Cord Length	5m

[•] Specifications can be changed for improvement without notice.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com