 


# DAEWOO

# VACUUM CLEANER

RC-370B

OWNER'S MANUAL

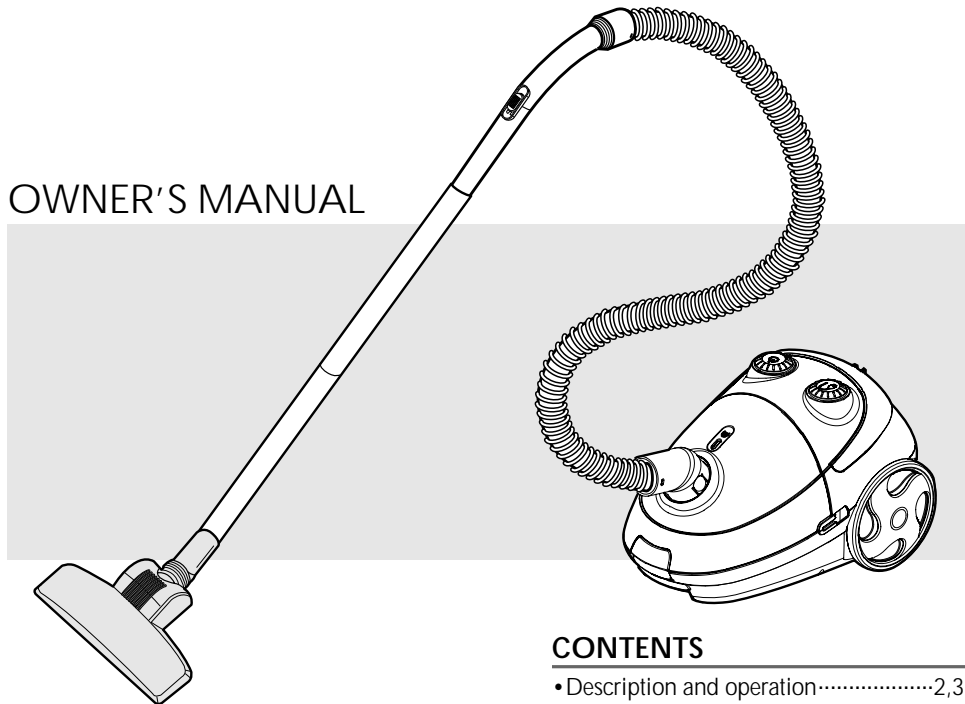

## CONTENTS

 
- Description and operation.....2,3
- Cleaning the filter and  
Changing the dustbag.....4
- Precautions for safe use.....5
- Before asking for service.....6
- Specifications .....6

## READ AND KEEP THIS

- Thank you for purchasing this vacuum cleaner.
- For correct operation, please read this manual before use.

## DESCRIPTION AND OPERATION


### HOSE CONNECTION

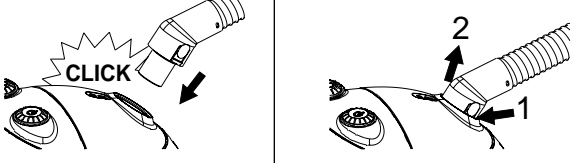

**CLICK**


- Connecting the hose : insert the hose firmly into the hose inlet. ("Click")
- Disconnecting the hose: press the button (1) and pull the hose out of the vacuum cleaner.
 
### SUCTION CONTROL

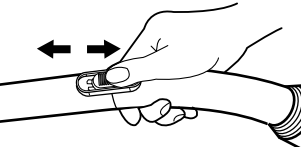

- The suction power control at the hand grip enables you to control suction power.

### PIPE CONNECTION

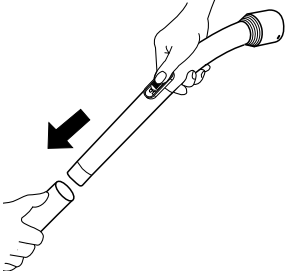 

- To Connect the nozzle, hold the tubes and the handle: insert the narrowed section into the wide section.


### WIDE SUCTION NOZZLE



 Floors Carpet


- Use this nozzle for cleaning both carpeted and uncarpeted floors.

### CREVICE NOZZLE

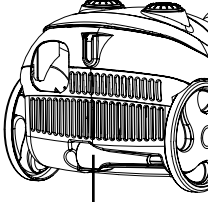


CREVICE NOZZLE

### POWER CONTROL

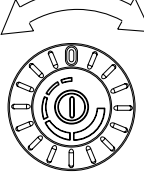 


 - This is available for Model No. RC-480

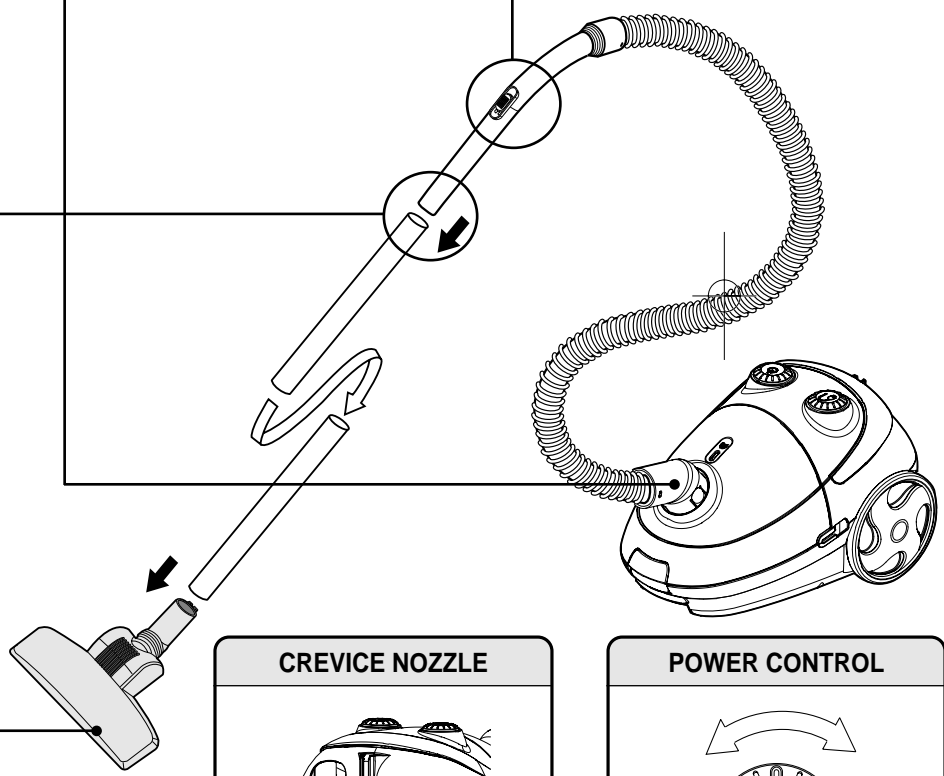


**ROL**  
 Control at you to

**ON/OFF SWITCH**

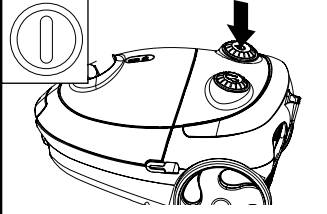 


- Press the on/off switch.

**CORD REWIND BUTTON**

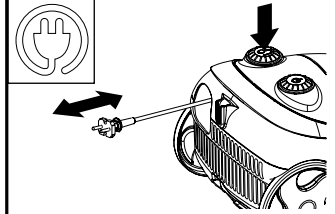 


- Rewind the power cord by pressing the cord rewind button.


**DUST METER**

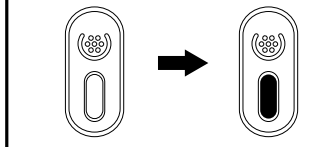 

 - When the colour of the dust meter is changed to RED for long time, change the dust bag.(Page 4)

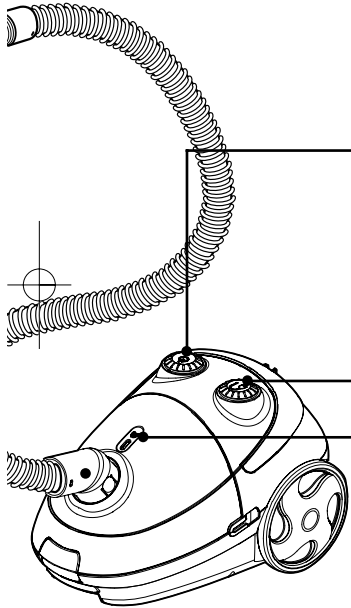


**POWER CONTROL**

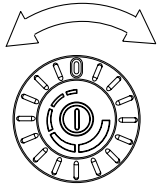 


- This is available for Model No. RC-480

**PRACTICAL PARKING**

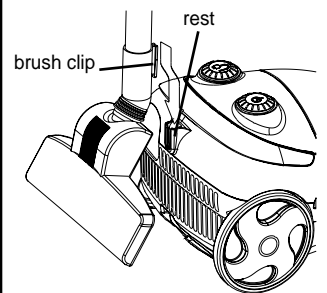 

  
 
 

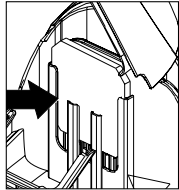 
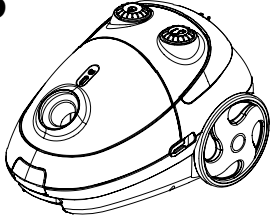 
- If you want to stop vacuum cleaning for a while, you can place the brush clip into the rest.

**STORAGE**

 
 
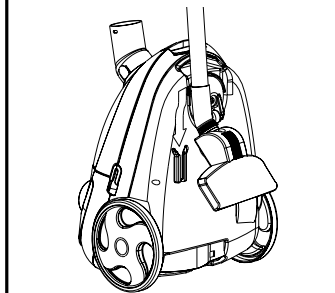 


- When storing the vacuum cleaner pipe and nozzle can be attached as shown in the picture.

## CLEANING THE FILTER
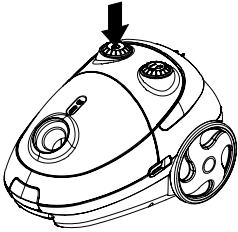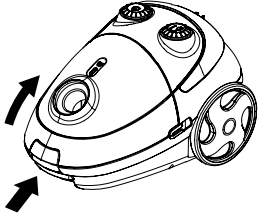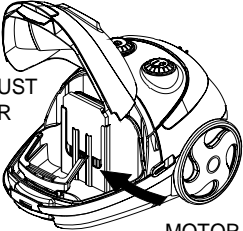
<p><b>1</b></p>  <p>• Switch off</p>	<p><b>2</b></p>  <p>• Open the cover.</p>	<p><b>3</b></p>  <p>EXHAUST FILTER</p> <p>MOTOR PROTECTION FILTER</p>
<p><b>4</b></p>  <p>• Shake the dust out of the filter.</p>	<p><b>5</b></p>  <p>• Insert the filter and close the cover.</p>	<p><b>6</b></p>  <p>• Close the cover.</p>

## CHANGING THE DUSTBAG
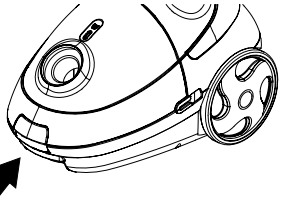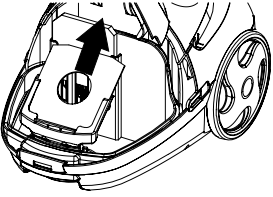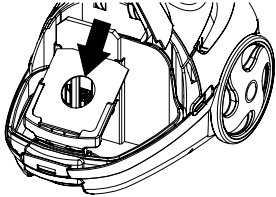
<p><b>1</b></p>  <p>• Switch off and open the cover.</p>	<p><b>2</b></p>  <p>• Hold the cover while separating the dustbag from the dustbag holder.</p>	<p><b>3</b></p>  <p>• Insert the new dust bag into the dust bag holder properly as shown in picture.</p> <p><b>Note:</b> If no dustbag has been placed into the dustbag holder, the cover cannot be closed.</p>
---	---	---


## PRECAUTIONS FOR SAFE USE

 This vacuum cleaner should only be used for normal dry household dust and dirt.


The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or cause a fire.

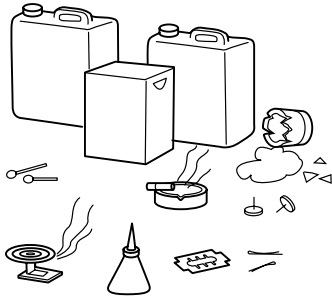

 
- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord out beyond the specified length.

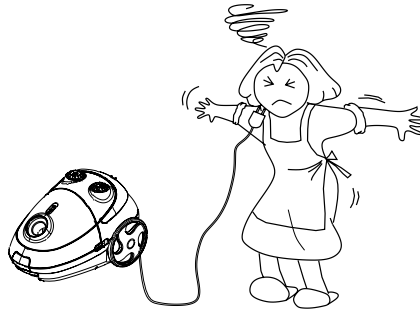


 
- Make sure a dust bag and a motor protection filter are always inserted.

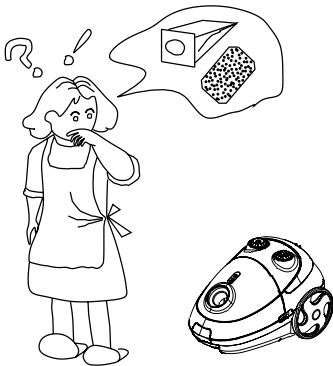

 - This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.

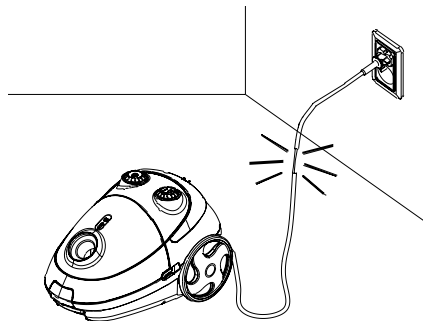

## USING THE VACUUM CLEANER IN THE SHOULDER MODE(OPTIONAL)
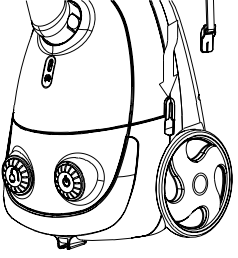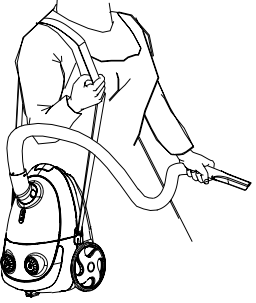  
<p><b>1</b></p>  <p>• Assemble the clips.</p>	<p><b>2</b></p>  <p>• Use it.</p>
--	---

## BEFORE ASKING FOR SERVICE

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	<ul style="list-style-type: none"> <li>• Dust bag</li> <li>• Pipe or hose</li> </ul>	If dust bag is dirty, replace it. If clogged or blocked, remove the object.
The cleaner does not work.	<ul style="list-style-type: none"> <li>• Power cord</li> <li>• on/off switch</li> </ul>	Check if power cord is plugged. Check if the power switch is turned on.
Power cord does not rewind.	<ul style="list-style-type: none"> <li>• Power cord</li> </ul>	Pull the power cord out a little and press the cordrewind button.

## SPECIFICATIONS

<b>Model</b>	RC-370B
<b>Rating</b>	230V/50Hz
<b>Watts</b>	MAX. 1400W
<b>Weights(Net)</b>	3.5kg
<b>Dimension (L X W X H)</b>	377 X 278 X 238mm
<b>Cord Length</b>	5m

• Specifications can be changed for improvement without notice.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>