


# VACUUM CLEANER

#### **OWNER'S MANUAL**

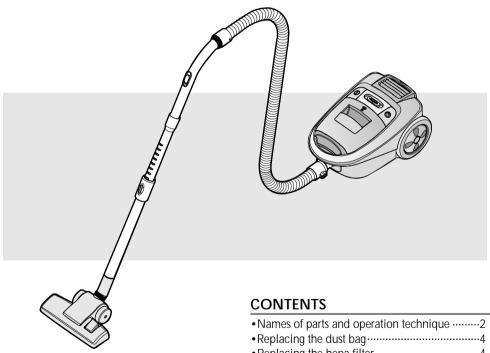


- Replacing the hepa filter ------4
- •Empty the dust box .....5
- Important safety instructions ------6
- Before asking for service -----7

#### **READ AND KEEP THIS**


• Thank you for purchasing this vacuum cleaner.

• For proper operation, please read this manual before using.


#### NAMES OF PARTS AND OPERATION TECHNIQUE

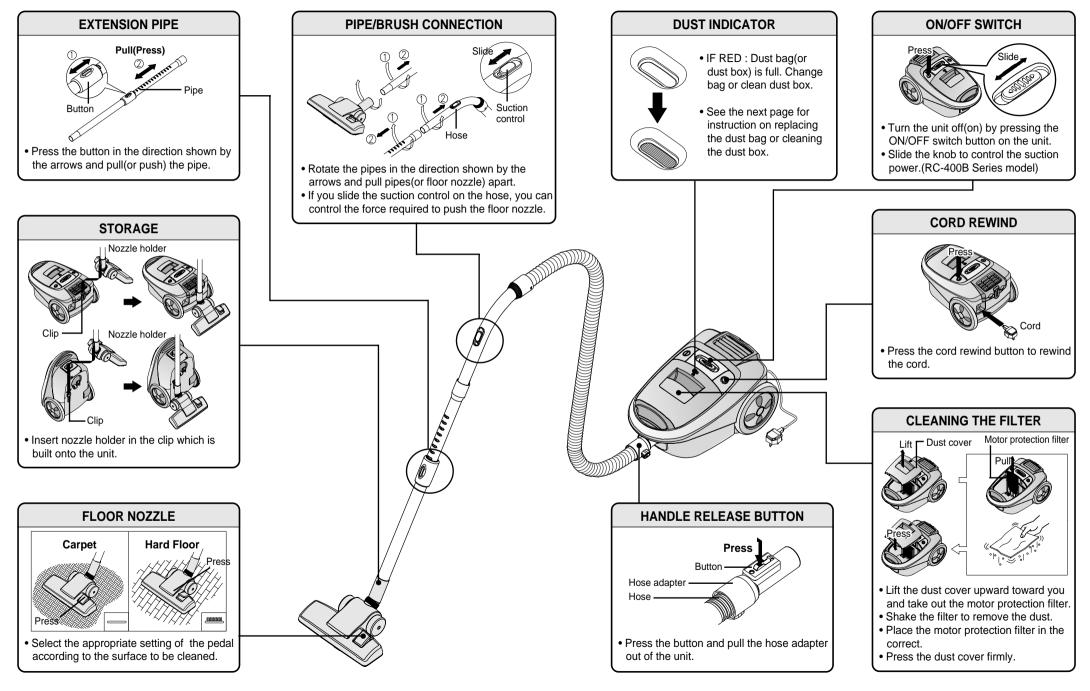


#### **REPLACING THE DUST BAG**

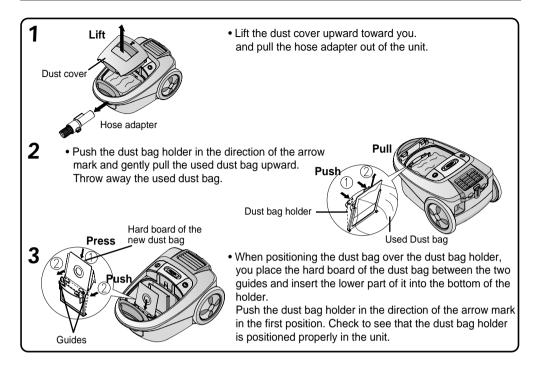

### **REPLACING THE HEPA FILTER**(OPTIONAL)

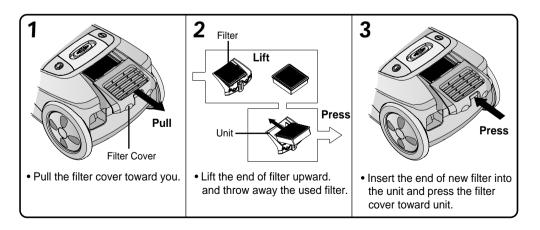

### EMPTY THE DUST BOX

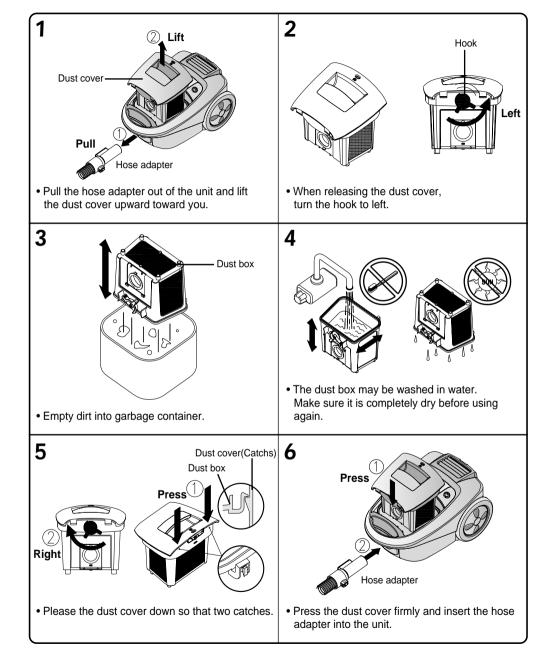

## **IMPORTANT SAFETY INSTRUCTIONS**

This vacuum cleaner should only be used for normal dry household dust and dirt. The manufacturer cannot be held responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not use the cleaner to pick up sharp hard objects, small toys, pins, etc. They may damage the cleaner or dust bag.
- Do not pick up anything that is burning or smoking, such as cigarettes ends, matches or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.



- Never use a damaged dust bag.
- Do not use without dust bag and motor protection filter in place.



Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
Do not pull the power cord out beyond the specified length.

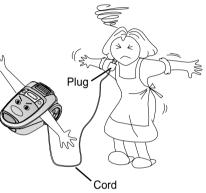

 This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by manufacturer since special tools are required.

• When you pull the cord out, you must hold the plug.

#### **BEFORE ASKING FOR SERVICE**

■ Please check each item below if you have trouble with your cleaner.

Before checking, ensure the cleaner is unplugged from the power supply.

PROBLEM	CHECK POINT	SOLUTION
Suction power is weak	Dust bag Floor nozzle Hose,Pipe, Accessories	If it is filled with dust,change it. Remove hair, string and lint build-up in the floor nozzle area. If clogged or blocked, remove the object.
The cleaner does not work.	Plug On/Off switch When the dust bag is full or openings are blocked, the over heating protection for the motor is activated automatically.	Plug in firmly, push On/Off switch to On. Switch off and unplug the cleaner and check the dust bag, openings and blockages. The cleaner can be switched on again after about 30 minutes.
Power cord does not rewind. Power cord is not pulled out of the cleaner.	Power cord	Pull the power cord out a little and press the cord rewind button. Do not pull it by force rewind it a little by pressing the cord rewind button and pull it out.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com