


## INSTALLATION

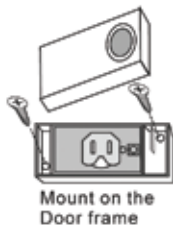

## CODE MATCHING & TUNE SELECTION


### Entering learning mode

Press and hold the "Learning" button 3 seconds. The LED #1 will flash. Press the "Learning" button again to select the zone you want to code.

Then press the "Melody" button to select one of 16 melodies.



After selecting the zone and melody, press the remote button once (the remote button must be within 3 feet of the chime when programming.) If the coding is successful, the chime will generate a short tone.

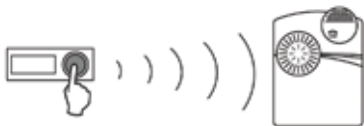

If another LED lights up, this remote button is already programmed on the zone that lights up.

**Dakota Alert**  
**DCPB-1000**



8 91179 00045 4

Made in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>