



**Dakota Alert, Inc.** [www.dakotaalert.com](http://www.dakotaalert.com)

PO Box 130 • 32556 East Main St. • Elk Point, SD 57025

PH: 605.356.2772 • FAX: 605.356.3662

### **AD-SSW (Shock Sensor)**

1. Set RF Shock Sensor and CAD-03 dipswitches to match. The first five dipswitches need to be set exactly the same with the last 3 dipswitches on the RF Shock Sensor set to OFF. (Note: On the shock sensor, “off” is in the down position. On the Dialer, “off” is in the up position.)
2. Remove the battery insulator by pulling black tab from the back of the RF Shock Sensor. Unclip the bracket from the back and mount in desired location.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>