DATEX       DC-750A       Calculator         FEATURES       Large, 8-Digit Display – Adjustable, with large, easy-to-read         digits.					TELEDEX Limited U.S.A. Warranty TELEDEX INC. warrants these products to the original purchaser to be free from defec- tive material and workmanship. Under this warranty, the product will be repaired or replaced at our option, for up to one year, without charge except for supplies or acces- sories such as batteries, wallets etc, when returned with proof of purchase to TELEDEX SERVICE CENTER, 1 ATLAS St. Kenilworth NJ 07033. A check or money order for \$3.00 to cover postage must be included. This is the exclusive written warranty. No other warranty, expressed or implied, shall extend beyond the time listed above. TELEDEX is not liable for consequential economic or property damage. Some states do not allow a time limit on implied warranties or exclusion of consequential damage so this may not apply to				
Folding design – Works like a desktop calculator, then folds to compact size for travelling. Solar Powered – with battery back-up for use in low light.				you. This warranty gives you specific legal rights. You may have other legal rights that vary from state to state.  TELEDEX INC. 1 Atlas st. Kenilworth, NJ 07033 Warranty valid only in the U.S.A. Printed in China					
Automatic Power Off – If left unused for about 7 minutes.									
TURNING THE CALCULATOR ON AND OFF				Square Root ( ÷ ) Calculate the square root of 64.					
ON/C Key Press ON/C to turn on the calculator. The calculator turns off automatically after about 7 minutes if no key is pressed. Press OFF to turn off the calculator sooner.				Percenta		$p64 \div$	01 64.	8	
OPERATING THE CALCULATOR				6% of 100	Э.	p100 x6%	6	6	
<ul> <li>+/- Key</li> <li>Changes the displayed number from positive (+) to negative</li> <li>(-) or from negative (-) to positive (+).</li> </ul>					ax to \$20. ount from \$150.	p20+6% p150-20	%	21.2 120	
<ul> <li>appears when the displayed value is negative.</li> <li>CE Key</li> <li>Deletes the displayed number without losing any pending calculation. If a result exceeds the number of digits that can show on the display, the calculator stops and displays E. Press CE to resume calculating.</li> <li>ON/C Key</li> <li>If the calculator is on, press ON/C to reset the display to 0.</li> </ul>				<ul> <li>MEMORY FUNCTIONS</li> <li>M + Press to add the displayed number into memory. M appears in the display.</li> <li>M - Press to subtract the currently displayed number from memory.</li> <li>MRC Press once to display the number stored in memory. Press twice to clear the memory. M disappears from</li> </ul>					
PERFORMING CALCULATIONS				the display.					
Press DisplayedAddition (+) $6 + 7 = 13$ p 6 + 7 =13Subtraction (-) $10 - 4 = 6$ p 1 0 - 4 =6Multiplication (x) $7 \times 5 = 35$ p 7 x 5 =35Division (+) $14 \div 7 = 2$ p 1 4 ÷ 7 =2		6 35	<ul> <li>CARE AND MAINTENANCE</li> <li>Keep the calculator dry. If it gets wet, dry it before use.</li> <li>Store the calculator in moderate temperatures.</li> <li>Do not drop or strike the calculator.</li> <li>Do not use harsh chemicals to clean the case.</li> </ul>						
	For more information on								

Datexx and S.O.H.O. (Small Office/Home Office) products,

visit our internet Web site at: HTTP://WWW.DATEXX.COM

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com