 



1. TO START CLOCK

Install a "AAA" battery into the battery compartment.
 Press & hold the "Time" button, press "H" to set hour,
 press "M" to set minute, then release the "Time" button.

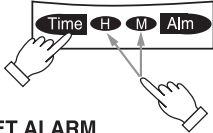


2. TO SET ALARM

 Press & hold the "Alm" button,
 press "H" to set hour, press "M" to set minute,
 then release the "Alm" button.

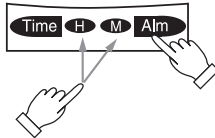


3. TO ACTIVATE ALARM

 Slide the "Alarm On" button rightward to turn alarm on;
 Push back the "Alarm On" button
 leftward to turn alarm off.

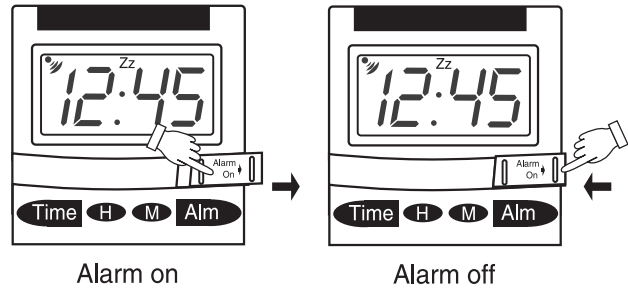

4. TO STOP ALARM & LIGHT UP

 Press "Snooze" bar to stop alarm and light up.
 Alarm will be repeated after 8 minutes, unless shut off.

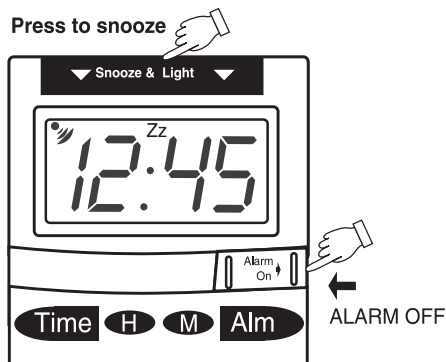

**Power Supply : 1 AAA battery
 (NOT INCLUDED)**

www.datexx.com

TELEDEX Limited U.S.A. Warranty

TELEDEX INC. warrants these products to the original purchaser to be free from defective material and workmanship. The product will be repaired or replaced at our option, for up to one year when returned with proof of purchase to the address below. Include a check or money order for \$6.00 to cover postage.

TELEDEX INC. 1 Atlas st. Kenilworth, NJ 07033

Warranty valid only in the U.S.A.

Printed in China 04/11

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>