

Owner's Manual

COMPACT 501C PLUG-IN STOVE

CONTENTS

- 2 Installation
- 2 Selector Knob
- 2 Baking
- 2 Grilling
- 3 Solid Plates
- 3 Cleaning
- 3 Element Guard
- 4 Controls
- 4 Features
- 5 Warning



 
www.defy.co.za

INSTALLATION

- Remove all packing material and place the stove on a flat level surface.
- Push the electric plug into a 230V. 15A. Earthed wall socket.

SELECTOR KNOB

- The stove is a plug-in model with a 15A. Power supply.
- It is therefore not possible to use all the elements at the same time.
- Set the selector to the required position.

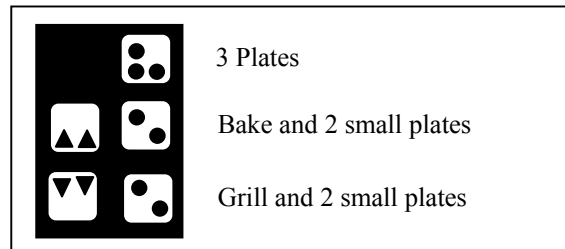

OVEN CONTROL (BAKING)

- Set the selector to bake.
- Set the oven control to the desired temperature.
- The indicator light will glow and remain on until the oven has reached the selected temperature.
- When the indicator light switches off, the food should be placed in the oven.
- During baking the indicator light will regularly cycle on and off as the oven thermostat maintains the selected temperature.
- The door may be opened, for inspection purposes, after about half the cooking time has elapsed.

OVEN CONTROL (GRILLING)

THE OVEN DOOR MUST BE KEPT CLOSED DURING GRILLING

- Set the selector to grill.
- Set the oven control to grill.
- Place the oven shelf on the top shelf position.
- Place the item to be grilled in a roast pan on the shelf under the pre-heated grill element.
- The oven door may be opened to check on the grilling process which should be done every 10 minutes to avoid burning the food.
- The oven control must be turned to the OFF position when grilling is complete.

SOLID PLATES

Before using the plates for the first time, switch them on for four minutes at the highest setting. This allows the factory applied protective coating to burn in.

The markings around the plate control knobs represent the following heat settings:
Position 1 = Warming. 2 = Slow simmer. 3 = Simmer. 4 = Medium heat.
5 = High heat 6 = Boiling and frying.

 
SOLID PLATE CARE

- Use only good quality flat-bottomed pots and ensure that the pot diameter is the same as or slightly larger than the plate diameter. This will prevent any spillage from dripping onto the plate itself.
- Any spillage should be wiped off as soon as possible with a damp cloth.
- A nylon brush may be used to clean badly soiled plates
- Periodically wipe the plate with sewing machine oil or electrical hotplate polish (available from Defy Service Centres) to prevent them from corroding.
- Do not leave plates wet after cleaning them, but switch them on briefly to dry them.
- NOTE: The warranty does not cover the replacement or repair of rusted or corroded solid plates. It is therefore the owner's responsibility to care for them as described above.

CLEANING


- Switch off the electrical supply to the stove before cleaning any part of it.
- Use a hot, soapy damp cloth to clean any part of the oven or the exterior of the stove.
- Stubborn stains may require the use of a nylon scrubbing brush and a liquid cleaner.
- Avoid using abrasive powders or caustic cleaners.
- Do not use metal scouring pads or sharp metal objects to clean any part of the stove.

ELEMENT GUARD

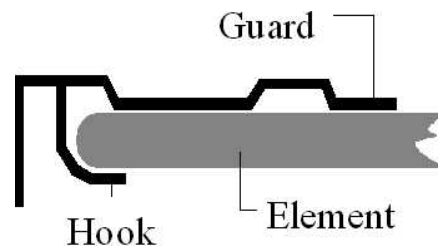


After cleaning the oven, ensure that the oven element is securely clipped into the hook of the element guard. Failure to observe this precaution will allow the element to rest on and damage the oven enamel.

 CONTROLS

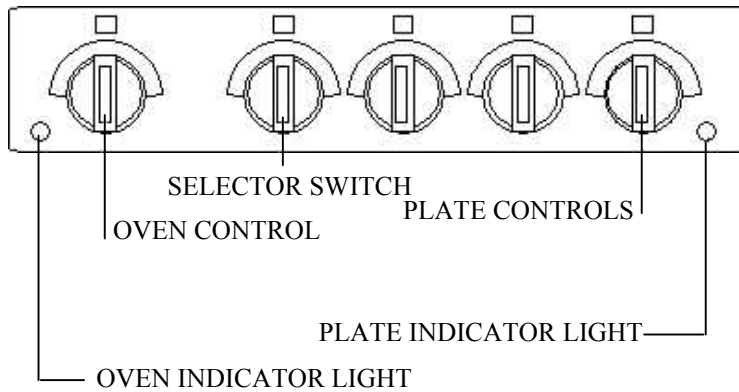

FEATURES

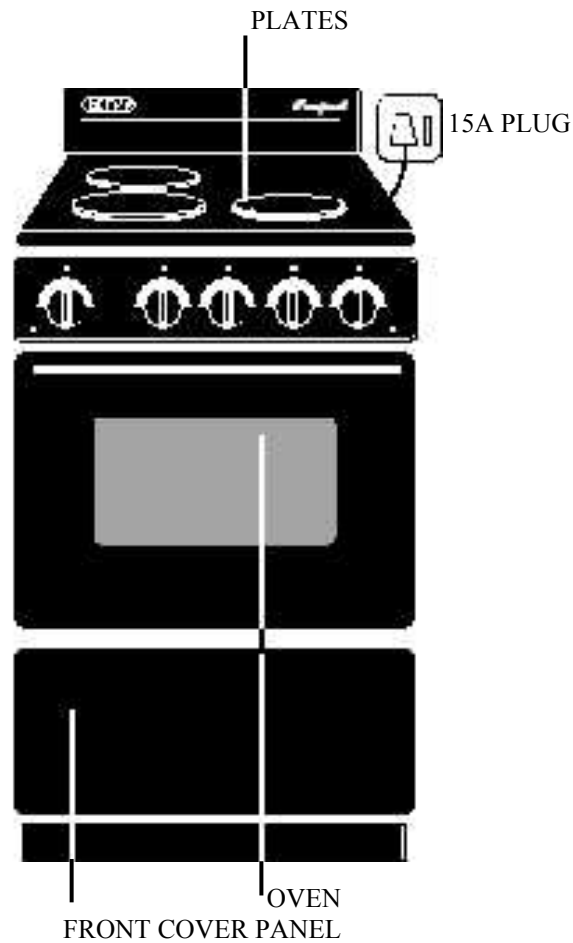 

WARNING

SURFACE AREAS OF HEATING AND COOKING APPLIANCES AS WELL AS ELEMENTS AND OVEN INTERIORS GET HOT WHEN IN USE

ALWAYS KEEP CHILDREN WELL AWAY WHEN THE UNIT IS IN USE

Part Number 061548

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>