 




**Instructions for use and recipes**



**DESCRIPTION**

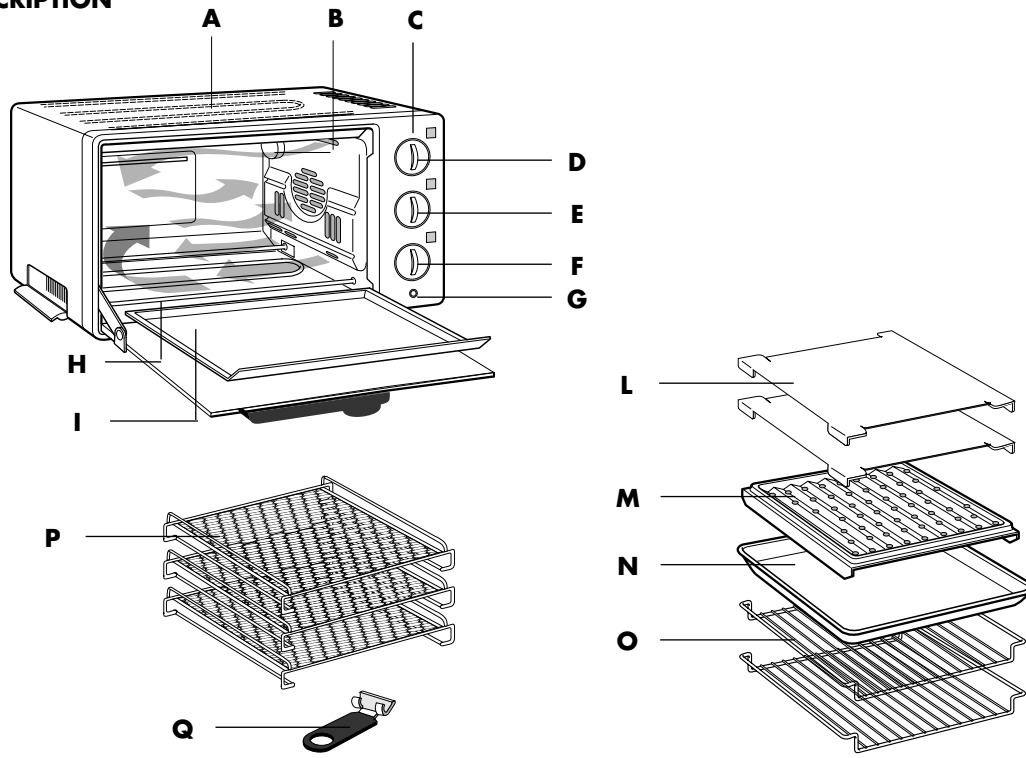

- A** UPPER HEATING ELEMENT
- B** OVEN LIGHT (not for all models)
- C** CONTROL PANEL
- D** THERMOSTAT DIAL
- E** ON/OFF AND TOAST PROGRAMMING DIAL
- F** FUNCTION SELECTOR DIAL
- G** PILOT LIGHT
- H** LOWER HEATING ELEMENT
- I** CRUMB TRAY
- L** COOKIE SHEET (two provided)
- M** BROILING RACK
- N** SHALLOW PAN
- O** WIRE SHELF (two provided)
- P** DEHYDRATOR KIT (optional)
- Q** HANDGRIP

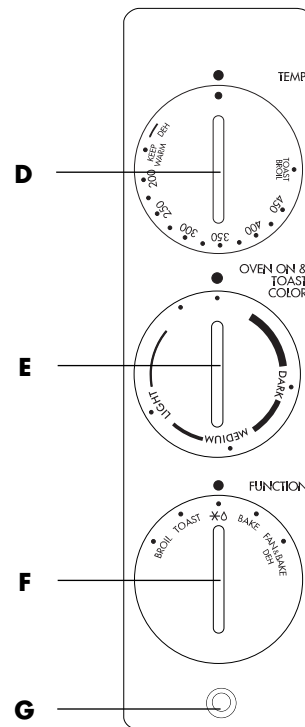

## IMPORTANT SAFEGUARDS

**When using electric appliances basic safety precautions should always be followed, including the following:**

- 1) Read all instructions.
- 2) Do not touch hot surfaces. Use handles, dials and hot pads.
- 3) To protect against electrical shock, do not place oven in or under water. See instructions for cleaning.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before cleaning. To disconnect the appliance, turn the ON/OFF dial to OFF and the thermostat dial to "●". Then unplug the cord from the wall outlet. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7) The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner.
- 11) Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 12) If the plug gets hot, please call a qualified electrician.
- 13) Do not use this appliance for other than intended use.
- 14) Use extreme caution when removing the shallow pan (N) or disposing of hot grease.
- 15) Do not clean oven with metal scouring pads. Pieces can break off the pad and touch electrical parts creating a risk of electric shock.
- 16) To assure safe operation, oversized utensils or food must not be inserted into the oven.
- 17) A fire may occur if this appliance is covered or touching flammable material, including curtains, draperies, walls, etc. when in operation.
- 18) Condensation and a grease deposit may form around the door and the air and steam outlet grilles. This is normal.
- 19) CAUTION: Never leave the oven unattended when in use (especially when broiling and toasting).
- 20) Extreme caution should be exercised when using containers other than ovenproof metal, glass or ceramic.
- 21) Do not store any materials other than the manufacturer's recommended accessories in the oven when not in use.
- 22) Do not place any of the following materials in the oven: paper, cardboard, plastic and the like.
- 23) Do not cover crumb tray or any part of the oven with metal foil; this can cause overheating of the oven. Use aluminum foil on or under food only as directed in the appliance instructions.


 
 
 
 
 
 
 
 
### **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS**


 
 
**WARNING:** Once having removed the appliance from the packaging, check that the door is intact. As the door is made from glass, it is fragile, and should be replaced if visibly chipped, scored or scratched. Furthermore, when using, cleaning or moving the appliance, do not slam or bang the door or pour cold liquids on the glass when the appliance is hot.

- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Plug the cord into a 120 volt AC outlet.
- The cord length of this product has been selected to reduce the possibility of tangling in or tripping over a longer cord. If more cord length is needed, an extension cord may be used. It should be rated no less than 15 amps., 120 volts and have Underwriters Laboratories/CSA listing.
- A six feet long, 15 amp. extension cord may be purchased from your local authorized service facility. When using a longer cord, be sure not to let it drape over the working area or dangle where someone could accidentally pull or trip over it.
- Handle the cord carefully for longer life; avoid jerking or straining the cord at the plug and appliance connections.


• **Note:** Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.

**SUMMARY OF OPERATION**

| <b>PROGRAM</b>                   | <b>FUNCTION DIAL</b> | <b>TEMPERATURE DIAL</b> | <b>POSITION OF WIRE RACK/ ACCESSORIES</b>   | <b>NOTES/TIPS</b>  |
|----------------------------------|----------------------|-------------------------|---|--|
| <b>CONVECTION OVEN COOKING</b>   | FAN/BAKE<br>DEH      | 200° - 450°F            | <br>  | Ideal for meat, pizza, cakes in general and food which need to be crispy on the surface (as gratined dishes). Roast meats and poultry will cook faster. Use of a meat thermometer will help avoid overcooking.   |
|                                  |                      |                         | <p><b>Double level</b></p>  <p><b>Single level</b></p> <br>with cookie sheets | <p>Baked foods (cakes, pies, cookies, etc.) may require a lower temperature to prevent over-browning.</p> <p>Select one or two wire shelves with cookies sheets depending upon the quantity.</p>   |
| <b>TRADITIONAL OVEN COOKING</b>  | BAKE                 | 200° - 450°F            | <br>  | Bake casseroles, fruit desserts, fish, stuffed vegetables, puddings and other moist foods that don't require browning and crisping.  |
| <b>BROILING AND TOP BROWNING</b> | BROIL                | TOAST/BROIL             | <br>  | <p>Always use the broiling rack set in the shallow pan. Place it on the wire shelf in position that puts the food about two inches from the top element, more for thick food such as chicken. Foods such as hamburgers, steaks, kebabs, sausages are to be placed directly on the broiling rack.</p> <p>Use the broil settings to top-brown open-face sandwiches, cheese toppings, hors d'oeuvres.</p> |
| <b>TOASTING</b>                  | TOAST                | TOAST/BROIL             |   | Set the ON/OFF dial to the color desired. Some breads, muffins, etc. will take longer than others. Reset dial if results are too light. Place the bread to be toasted following instruction on page. 6.  |

| PROGRAM             | FUNCTION DIAL   | TEMPERATURE DIAL   | POSITION OF WIRE RACK/ ACCESSORIES   | NOTES/TIPS   |
|---------------------|-----------------|--|--|--|
| <b>KEEPING WARM</b> | FAN/BAKE<br>DEH | KEEP WARM  |    | Turn to this setting to keep hot food warm. Do not hold food more than an hour or reheat cold food. If not hot enough for serving turn temperature dial up.  |
| <b>DEFROSTING</b>   | ✳△              | ●<br>Be sure to keep dial at this position. Only the fan will operate. |    | To thaw frozen food in freezer packaging place it on wire shelf or on shallow pan to catch any juices. Do not try to thaw large roasts or allow any food to overthaw (see page. 10).   |
| <b>DEHYDRATING</b>  | FAN/BAKE<br>DEH | DEH  |  | Place prepared food on the dehydrator kit (if provided) without covering shelves with plastic food wrap. The fan and low heat will dry food in 8 to 20 hours. Consult a book on drying foods for treatment of various foods. |

**CORRECT WIRE SHELF POSITION**

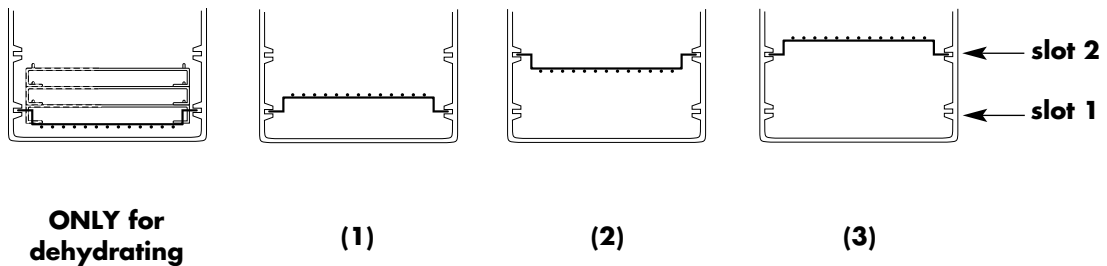

**Note:** the recipes refer to the wire rack positions as numbered above.

## INSTALLATION

- 1) Check that the appliance has not suffered any damage due to transportation.
- 2) Place the appliance on a flat, stable surface out of the reach of children (the glass door becomes very hot while the oven is in operation).
- 3) Before using this appliance, move it two to four inches away from the wall or any object on the counter top. **Remove any object that may have been placed on top of the appliance.** Do not use on surfaces where heat may be a problem.
- 4) The oven light **B** (optional) is always on when the oven is on.

## IMPORTANT TIPS AND TECHNIQUES


### POSITIONING THE WIRE SHELVES:

There are two slots on the sides of the oven. Slide one or both shelves into these positions. The upper shelf can be turned over, allowing three different levels. The recipes will suggest the best arrangement (1 to 3; see page 5) where necessary for best results. The shelf reversed in slot 1 must be used only with the dehydrator kit **P** (optional).


### ACCESSORIES AND UTENSILS

The shallow pan is designed to permit the circulating heat to surround the food (except for the bottom surface) more effectively. Use it as you would any shallow baking or roasting pan. Other utensils you own can be used provided that an inch or so of space remains open to allow circulation of the fan-forced heat. Casserole covers should not be used and glass ovenware should not be placed closer than two inches from the upper heating element.

The cookies sheets provided **must** also be centered on the shelf. When using both sheets on two wire shelves, place wire shelves in position 1 and 3.

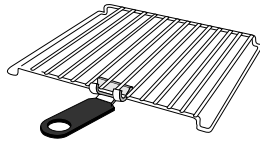

Use handgrip to bring the wire rack out of the oven when it is hot.

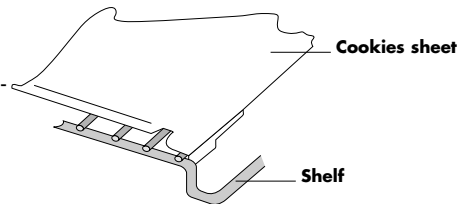

### PREHEATING THE OVEN

When you turn the oven on (except in the DEFROST mode) the pilot light will light until the oven has reached the set temperature. It will cycle on and off during cooking and the heating element (s) will glow red or turn black as they respond to the thermostat setting. This is normal. Preheating generally takes 5 to 8 minutes depending on the temperature setting.

It is not necessary to preheat for long-cooking foods such as roasts or casseroles.

### USE ALUMINUM FOIL

Do NOT allow foil to touch sides of the oven or the heating elements. Foil can be used to cover foods or the shallow pan (for easier clean-up) provided foil is tucked in securely around the food or the edges of the pan or dish. DO NOT cover the broiling rack as this can cause accumulated grease to catch fire. DO NOT cover the crumb tray (I).


Unlike an ordinary toaster-oven, the DE'LONGHI features seven functions: convection and traditional baking and roasting, toasting, broiling, keeping food warm, defrosting frozen foods and even dehydrating sliced fruits for nutritious snacks.

**PLEASE READ AND KEEP THIS BOOKLET HANDY.  
THE IDEAS AND INSTRUCTIONS WILL HELP YOU MAKE FULL USE OF THE OVEN.**

## CONVECTION AND TRADITIONAL COOKING

### GENERAL GUIDELINES

With **convection cooking**, a fan gently circulates the heated air within the oven, providing a more even temperature around the food. This system, used in many large commercial ovens for years, produces more even browning and cooking of baked foods, meats and poultry. The forced air also displaces the layer of cold air surrounding the food, allowing faster cooking in many cases or a lowering of temperature. In general, meats and poultry can be cooked in less time (a meat thermometer will help to prevent overcooking). Cakes, pies, cookies, etc. can be baked at a lower temperature (see charts and recipes).

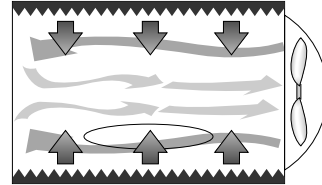

**Traditional cooking** is used when browning and crisping are less important or undesirable. Use it, following conventional recipes, for casseroles, stuffed vegetables, fish, lasagna, fruit tarts, cheesecakes and other moist mixtures.

### CONVECTION BAKING OF CONVENIENCE FOODS

Many convenience foods can be successfully baked or heated by convection on the FAN/BAKE setting. In general, follow the package directions for temperature and time. **However, lower the temperature by 25°F.** for more even cooking of larger items, frozen foods (except waffles and pancakes) and packaged casserole mixtures.

There is such a wide choice of convenience foods on the market and variations in packaging, quantities and initial temperatures (frozen, refrigerated and shelf temperature) that it's best to follow the package instructions. Check the food 5 to 10 minutes before the time is up; you may need to adjust the time and/or temperature for best results.


### Here are some tips for different types of convenience foods:

- If directions call for placing the food container on a metal pan or cookie sheet to avoid spills or to aid even cooking, use the shallow pan provided. Use it or the cookie sheets provided for foods, such as rolls, cookies, turnovers or frozen French fries, breaded fish or chicken pieces, that are placed directly on a pan or cookie sheet.
- Some frozen foods come in "oven-proof" plastic or paper containers which can be cooked in a microwave oven and, within limits, a conventional oven. Be sure to follow directions for maximum baking temperature. The container can melt or scorch if too high a temperature is used. To be on the safe side, set the oven 25°F. lower than the recommended temperature.
- When baking packaged mixtures (such as scalloped potatoes, macaroni and cheese, brownies, corn bread, coffeecake and cake mixes) check the package directions for recommended sizes of pan, casserole or dish and the proper baking times for each. A 9-inch round or an 11- by 7- by 11/2 inch rectangular pan will fit in the oven with room on all sides for air circulation.  
Layer cake mixes can be baked one layer at a time in a 8- or 9-inch round pan or all of the batter in a 3-inch deep 9-inch round bundt or spring-form pan.

### Tips for convection baking and roasting

To bake:

- Turn thermostat dial (D) to the desired oven temperature
- Turn the ON/OFF and toast programming dial (E) clockwise to position **ON**
- Turn the function selector dial (F) to FAN/BAKE/DEH for convection cooking and to BAKE for traditional cooking.
- **When the cooking is finished, turn the thermostat dial (D) to the "●" position and the ON/OFF dial (E) to "OFF" position.**

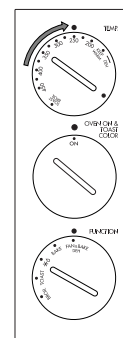

**TEMPERATURE AND TIME FOR TYPICAL FOODS (convection baking and roasting)**

The suggested temperature and times will vary depending on the temperature of the food placed in the oven, the quantity and personal preference. Times given for meat and poultry are for refrigerator temperature. Add five minutes for preheating the oven.

| FOOD   | TEMPERATURE SETTING                      | APPROX. TIME  | NOTES AND TIPS   |
|--|--|---|--|
| Whole chicken 3-3,5 lbs. Unstuffed.  | 350°F                                    | 75 min. or until internal temperature of 175°F in thigh and breast  | Roast in shallow pan with broiling rack inverted, with shelf in position. 1  |
| Pork Loin or Rib Roast, 2 - 4 lbs.   | 325°F                                    | 90 min. or until internal temperature of 170°F is reached.  | Roast as for whole chicken. Broiling rack may be in its higher position if oven space allows.  |
| Pork Baby Back Ribs 1.75 - 2 lbs. in 6 - to 10 - inch strips.                      | 300°F for 20 min. then BROIL for 30 min. | Total time 50 min. or until brown and very tender.  | Use pan without rack, lined with foil, on shelf position 1. See recipe to follow for full directions.  |
| Beef Sirloin or Rib Roast 3 - 5 lbs, boned.  | 350°F                                    | 20 min./lb. for rare<br>25 min./lb for medium<br>30 min./lb. well   | Have roast tied for even cooking. Use broiling rack in low or high position as oven space allows.  |
| Cornish Hens 1.5 lbs. each, two split into four halves.                            | 350°F                                    | 45 - 50 min. or until tender and juice is clear when pierced with fork.   | Roast on pan with broiling rack in high position, skin side up. Brush with orange marmalade or honey. Turn and brush several times until done.   |
| Baking Potatoes 1 to 4 large   | 450°F                                    | 45 - 50 min. or until fork-tender.  | Wash and pierce raw potatoes with fork. Rub skins with salad oil if desired. Bake on wire shelf in position 1 or 2.  |
| Pizza, homemade.   | 425°F                                    | 20 - 25 min. depending on size and topping. Bake until bubbling hot and crust crisp.  | Place pizza pan or stone on wire shelf in position 1.  |
| Cakes: Layer, Sheet cake or Loaf cake.<br>Pies: Fruit, 9- inch double crust.       | 300°F to 325°F<br>350°F to 375°F         | Follow traditional recipe timing but lower temperature by 25 to 50°F.   | Place metal or oven-glass dish on wire shelf in position 1 or 2. Check for doneness 5 - 10 min. before time is up.   |
| Cookies: Drop, Rolled and Cut, Sliced, Formed.<br>Biscuits: Drop or Rolled and Cut | 300°F to 350°F<br>350°F to 375°F         | Follow traditional recipe timing but lower temperature by 25 to 50°F. For cookies or biscuits that take longer than 15 min. reversing the position of the 2 sheets at half the baking time will aid in more even results. | Place 1 - 2 inches apart on 1 or 2 cookie sheets. For 1 sheet place wire shelf in position 2. For 2 sheets place shelves in 1 and 3 positions. Grease sheets if the recipe directs. Remove promptly to cooling rack. |
| Brownies, Bar, Cookies   | 300 to 325°F                             | Follow traditional recipe timing but lower temperature by 25 to 50°F. Use 7x11 inch or 8- or 9 inch square pan or oven-glass dish.  | Place wire shelf in position 1. Check for doneness 5 - 10 min. before time is up. Cut while still warm. Let cool 5 - 10 min. to firm up before removing from pan or dish.  |



The chart and recipes cover various types of food. You can adapt your own favorite foods and recipes by following the directions for similar foods.



## BROILING

### TIPS FOR BROILING TYPICAL FOODS

 - Set both the function and temperature dials to position BROIL.
- Turn the ON/OFF and toast programming dial (E) clockwise to position **ON**.
- When the function and the temperature dials are set to BROIL only the top element heats at full power. **Be sure to leave the door open to the stop position** (as shown in the figure below).
- Preheat 5 to 10 minutes on BROIL.
- Trim excess fat from meat. Dry meat, fish and poultry surfaces with paper towel.
- Place the food on the broiling rack set in the shallow pan. Position wire shelf as shown in the "Summary of operation" (see page 4), so that food will be about 2 inches from top heating element. Thick foods such chicken pieces should be 3 - 4 inches from the element.
- The broiling rack can be inverted if necessary, but do not attempt to broil without the rack: the broiling rack shields the fat drippings from direct heat, reducing spattering, smoking and possible flaming. Always use the shallow pan when broiling any fatty foods.
- For easier clean-up, the shallow pan can be lined with foil. Be sure not to cover the broiling rack or let foil extend beyond the edges of the pan.
- Be careful when turning food or removing the pan. Use hot pads and avoid spilling drippings.
- To top-brown casseroles with crumb or cheese toppings, place the dish directly on the wire shelf 2 - 3 inches from the top element. and watch carefully to avoid burning the toppings. NOTE: Oven-glass dishes should not be exposed to direct broiler heat.

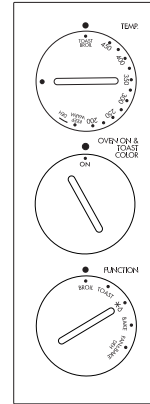

**When broiling is finished, turn the ON/OFF dial to the "OFF" position and the thermostat dial to the "●" position.**


### SUGGESTED BROILING TIMES

| FOOD                              | WEIGHT OR THICKNESS           | APPROX. TIME<br>(Turn at half time)  |
|-----------------------------------|-------------------------------|--|
| Beef Sirloin, Porterhouse Steak   | 1 - 1 1/2 in.                 | Rare 12 - 15 min.<br>Medium 16 - 18 min.                                   |
| Beef Flank Steak, Filet           | 3/4 - 1 in.                   | Rare 10 - 12 min.<br>Medium 13 - 16 min.                                   |
| Hamburger                         | 1 in.                         | Medium-well 15 - 18 min.   |
| Pork Chop                         | 3/4 - in.                     | Well 18 - 22 min.  |
| Fish Fillets, Steak<br>(See note) | 1/2 - 1 in.                   | 10 - 16 min.   |
| Chicken Piece, Broiler-fryer      | 3 - 4 lb.                     | 40 - 50 min. until juices run clear when fork-tested and no pink when cut. |
| Bacon, Sausage, Links or Patties  | Up to capacity of broil-rack. | 10 - 15 min. for crisp bacon, well-done sausage.                           |


Since fish is non-fatty it can be broiled directly on shallow pan, broil until it flakes easily with a fork. Thin fillets need not to be turned.

## TOASTING


With the wire shelf in position 2 you can toast up to 6 slices of bread, muffin halves, bagels, frozen waffles and pancakes. For toasting, place the bread and follow the instruction on the drawing below:

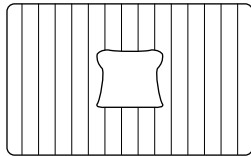


1 slice

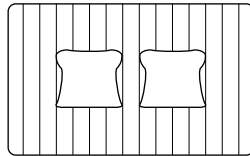

2 slices

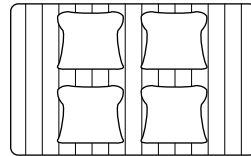


4 slices

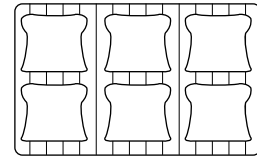

6 slices

- The toast programming dial can be set clockwise for light, medium or dark toast or any shade in between.
  - Set the thermostat dial (**D**) to TOAST/BROIL and the function selector dial (**F**) to pos. TOAST.
  - When the time is up the oven shuts off and a signal bell rings.
- As you use the oven, the best settings for favorite breads will become familiar.

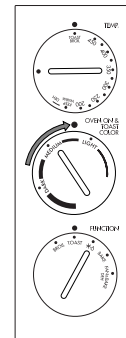


## KEEP WARM SETTING

- Set the thermostat dial (**D**) to the KEEP WARM position.
- Set the ON/OFF and toast programming dial clockwise to pos. **ON**.
- Set the function selector dial (**F**) to pos. FAN BAKE/DEH.

When food has finished cooking it can be held at this setting on the temperature control for up to an hour. Any longer can dry out the food and risks spoilage. If the oven set to 200°F seems too hot, to obtain a lower serving temperature turn the thermostat dial back to the KEEP WARM mark. Do not attempt to hold food longer or to rewarm cold food at this setting.

When finished, turn the ON/OFF dial to the "OFF" position and the thermostat dial to the "●" position.

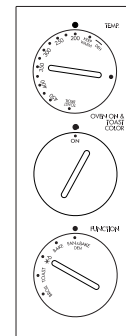

## DEFROSTING


Portions and pieces of raw meat, poultry and fish, frozen soups, pastry, fruit or leftovers will thaw more quickly on this setting than on a counter or in the refrigerator.

- Set the function selector dial (**F**) at the defrost symbol and the thermostat dial to the position "●".
- Turn the ON/OFF and toast programming dial clockwise to pos. **ON**.

DO NOT attempt to speed thawing by turning to DEH or KEEP WARM.

Thaw only pieces or portions small enough to thaw in an hour or less and do not let food come to room temperature.

Thawed food held too long or at a warm temperature can cause serious illness. Large amounts of food should be defrosted in a refrigerator.


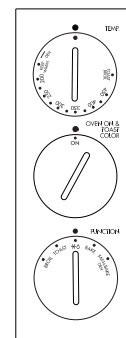


## DEHYDRATING


Slices of apples, pineapple, pears, peaches or bananas, placed directly on the dehydrator kit (if supplied), will dry in 8 to 20 hours in the gently circulating warm air. Time will depend on the moisture in the fruit. Herbs can also be dried. However, the limited quantity of vegetables that can be dried at one time may not be worth your time and attention. Consult a book on dehydrating food for specific directions as to times, temperature, pretreatment and storage of dried foods.

### FOR DEHYDRATING:

- Set both upper and lower dials to DEH position.
- Set the ON/OFF and toast programming dial to pos. **ON**.
- Always leave the door open to the stop position (as shown in figure).

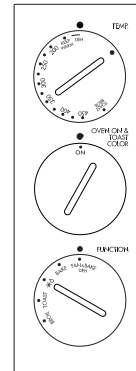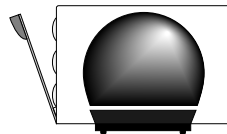

- Prepare food and use the dehydrating kit DE'LONGHI as follows:
- insert wire shelf, inverted in the slot 1;
- put the dehydrator kit on the wire shelf (see figure).

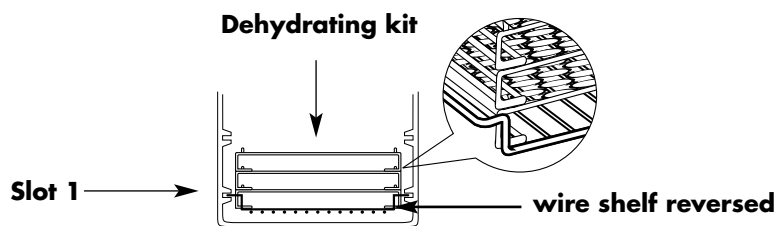

- When finished, turn the ON/OFF dial to the "OFF" position and the thermostat dial to the "●" position.

## CARE AND CLEANING

- **After use let the oven cool and unplug the appliance cord before cleaning.** This unit has been designed and engineered with your safety in mind. To assure maximum safe operation, keep unit clean free of grease and build up of food particles.
- Wash the pan, broiler rack and wire shelves in hot, sudsy water or in a dishwasher. Remove stubborn soil with a scouring pad. Do not use steel wool pads as bits of metal may remain and touch electrical parts or contaminate the food.
- Slide the crumb tray out from the bottom of the oven. Wash by hand. If heavily soiled from a spill, soak the tray in hot suds and scour lightly if necessary to avoid scratching.
- To clean the inside walls use a damp cloth and a mild liquid soap solution. Never use harsh abrasives, corrosive products or spray detergents.
- Clean the glass door with a damp sponge or cloth. If necessary use a glass cleaner. Spreading a damp paper towel over the inside of the door for a few minutes will make cleaning easier.
- Clean the outside finish of the oven with a damp sponge. Never use an abrasive cleaner as it will damage the finish.
- Dry wet surfaces with a dry cloth after cleaning.

### INTERIOR LIGHT (not for all models)

It remains on during all cooking operations. To replace a burned out bulb unscrew the protective glass cover. Remove the bulb and replace it with the same type, a high-temperature appliance bulb.

# RECIPES

## BAKED GNOCCHI ALLA ROMANA

Traditional BAKE 400°F

- 4 cups milk
- 2 eggs, slightly beaten
- 1 teasp. salt
- 1 1/2 cups semolina
- 8 tablesp. melted butter or margarine
- 1 cup freshly grated Parmesan cheese

In a saucepan, bring milk, and salt to a low boil. Reduce heat, then slowly pour in semolina in a thin stream, stirring constantly with a spoon or wire whisk. Continue cooking and stirring until semolina is very thick, about 15 minutes. Remove from heat and add 3/4 cup Parmesan cheese, eggs and 2 tablesp. melted butter. Butter a large shallow baking sheet and spread the thick mixture evenly to about 1/4 inch thick. Cool until firm. Preheat oven on BAKE at 400°F with wire shelf in position 1.

With a 1 1/2 inch biscuit cutter or glass dipped in cold water cut into rounds and arrange them in a buttered 9 inch pan or dish in one layer, overlapping circles slightly. Top with remaining melted butter and cheese. Bake 20 - 30 minutes until lightly browned and crusty. If necessary, turn oven to BROIL for several minutes to brown.

## LASAGNA

Traditional BAKE 350°F

- 3/4 lb. ground beef or beef, pork, veal combination
- 1 - 2 tablesp. minced parsley
- 1/2 lb. lasagna noodles (8 strips)
- 3 - 4 oz. shredded mozzarella
- 1/2 medium onion, chopped
- 4 tablesp. grated parmesan
- 14 oz. jar Marinara Sauce
- 1 egg white
- 8 oz. ricotta

In large skillet cook meat and onion, stirring often until meat is no longer pink and onion is tender.

Drain off fat, then add sauce and set aside. Combine ricotta, egg white and parsley. Cook noodles according to package directions; drain, add cold water to cool and drain well.

Place wire shelf in position 1. Preheat oven on BAKE at 350°F. Oil a 7 x 11 x 1 1/5 inch pan. Lay 4 noodles in pan, overlapping slightly. Spread 1/2 of ricotta mixture, then 1/2 of meat sauce over noodles. Sprinkle with 1/2 of mozzarella and 2 tablesp. parmesan cheese. Repeat layers with 4 noodles, remaining ricotta mixture, meat sauce, mozzarella and parmesan. Bake 25 minutes or until bubbling hot.

## BARBEQUED RIBS

Convection FAN/BAKE 300°F. Then BROIL

- 1 1/2 - 2 lbs. back ribs cut in 2-rib portions
- 1/2 teasp. salt
- 1/4 teasp. ground ginger
- 1/3 cup water or beer
- 1 teasp. prepared mustard
- 1/4 teasp. garlic salt or 1 clove garlic, minced
- 1/2 cup bottled BBQ sauce
- 2 tablesp. soy sauce

Place wire shelf in position 1 and preheat oven on FAN/BAKE at 300°F. Line shallow pan with foil (do not allow to overhang pan.) Add ribs, bone side up, salt and water or beer. Cover ribs with foil, tucking in on all sides. Place pan in oven and FAN/BAKE 20 minutes. Meanwhile make sauce by combining remaining ingredients in a small saucepan and simmer 5 minutes.

Remove pan from oven carefully, uncover ribs and drain off all liquid. Turn oven to BROIL; brush ribs with sauce and return to oven, leaving door open to stop position.

Turn and brush ribs every 10 minutes for 30 minutes or until nicely browned and tender. If ribs brown too quickly, turn oven to 350°F with door closed for additional time until they are tender.

Note: Back ribs, sometimes called baby back ribs, are preferred for this recipe. Spare ribs will take longer to tenderize, an hour or more.

## DEEP DISH CHILI PIE

Convection FAN/BAKE 350°F

- 1 lb. lean ground beef
- 1 teasp. salt
- 1 medium onion, diced
- 1/4 teasp. pepper
- 1 tablesp. chili powder
- 1 15- to 19 oz. can red kidney beans, drained
- 1 28 oz. can tomatoes
- 1 12- to 14 oz. package corn muffin mix
- 1 1/2 teasp. sugar

In skillet cook beef and onion, stirring to break up meat, until meat is browned. Drain excess fat and add chili powder, undrained tomatoes, sugar, salt and pepper. Reduce heat, cover skillet and simmer 20 minutes, stirring occasionally. Stir in drained beans. Spoon mixture into a 7x11x1 1/2 inch pan or 1 1/2 qt. casserole.

Preheat oven on FAN/BAKE at 350°F. with wire shelf in position 1. Prepare corn muffin mix as label directs. Spoon batter evenly over top of meat mixture. Bake uncovered 15 to 20 minutes until golden brown and toothpick inserted in corn bread comes out clean.

**SALMON LOAF**

Convection FAN/BAKE at 325°F

- 1 1 lb. can salmon, drained boned and flaked
- 1/4 cup plain yogurt
- 1 small onion, chopped (1/2 cup)
- 1/4 cup mayonnaise
- 1 small green papper, seeded and chopped (1/2 cup)
- 1 egg or 2 egg whites, lightly beaten
- 1/2 cup chopped celery ● 1/4 teasp. pepper
- 1/2 cup packaged dry bread crumbs

Preheat oven on FAN/BAKE at 325°F. with wire shelf in position 1. Grease an 8- by 4inch loaf pan or dish. In a mixing bowl combine salmon with remaining ingredients. Bake 30 minutes or until loaf begins to brown and shrink away from sides of pan or dish. To serve, cut into slices and top each with sauce.

DILL SAUCE: Combine 1/4 cup yogurt, 1/2 cup mayonnaise, 1/4 cup sour cream, 3/4 cup chopped seeded cucumber, 1/4 cup minced onion and 1 teasp. dried dill weed. Stir over low heat until warm; do not boil or it will separate.

**APPLE CRUMB DESSERT**

Convection FAN/BAKE 325°F

- 4 cups sliced peeled apples
- Pinch salt ● 1 - 2 tablesp. lemon juice
- 1 teasp. baking powder ● Ground cinnamon
- 1 egg ● 1 cup flour
- 4 tablesp. melted butter or margarine
- 1 cup sugar

Preheat oven on FAN/BAKE at 325°F. Arrange apple slices in an 8- or 9inch square cake pan or dish. Sprinkle with lemon juice and cinnamon to taste.

In a medium size bowl combine flour, sugar, salt and baking powder. Break egg into flour mixture and mix lightly with a fork or by hand until egg is evenly distributed.

Sprinkle over the apples; pour the melted butter or margarine over the crumb topping. Bake for 30 minutes or until topping is lightly browned and apples are tender. Serve warm or cold.

**MARIAN'S PLUM TORTE**

Convection FAN/BAKE at 325°F

- 3/4 cup sugar ● 2 eggs
- 1/2 cup (1 stick) butter or margarine
- 24 halves pitted purple Italian prune plums
- 1 cup flour
- 1 teasp. baking powder ● 1/4 teasp. salt
- Sugar, lemon juice, cinnamon for topping

Preheat oven on FAN/BAKE at 325°F. with wire shelf in position 1. Cream sugar and butter in a medium-sized bowl. Add flour, baking powder, salt and eggs and beat with spoon or mixer until well combined.

Spread batter in 8- or 9inch spring form pan. Place plum halves, skin side up, on top of batter in concentric circles. Sprinkle lightly with sugar, lemon juice and cinnamon, amounts depending on taste and tartness of fruit.

Bake 25 to 30 minutes or until golden brown. (Plums will partially sink in cake batter). Cool 10 minutes, then remove side of pan, loosening edge of cake with a small spatula. Serve warm, plain or with whipped or ice cream.

**COTTAGE CHEESECAKE**

Traditional BAKE 350°F

## CRUST

- 1 cup graham cracker crumbs
- 3 tablesp. sugar
- 1/3 cup butter or margarine, melted

## FILLING

- 2 eggs ● 2 tablesp. lemon juice
- 1 teasp. grated lemon rind
- 1/2 cup light cream or half & half
- 1/2 cup sugar
- 1 1/2 cups cottage cheese
- 1/2 teaspoon vanilla ● 2 tablesp. flour
- Cinnamon ● 1/8 teasp. salt

Preheat oven on BAKE at 350°F. with shelf in position 1. In mixing bowl combine crumbs, butter or margarine and 3 tablesp. sugar. Line bottom and sides of 8-inch layer cake pan with the mixture, pressing firmly in place. Chill.

Put filling ingredients, except cinnamon, in electric blender or food processor and blend until smooth. Pour into chilled crust. Sprinkle top lightly with cinnamon. Bake 40 to 45 minutes or until firm. Cool, then chill.

The De'Longhi logo is enclosed in a decorative oval border with a repeating pattern of small circles.

## Limited Warranty

**What Does This Warranty Cover?** We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to replacement or repair, free of charge at our factory or authorized service centers, of any defective part or parts there of other than parts damaged in transit, which shall be returned to us, transportation prepaid. This warranty shall apply only if the appliance is used in accordance with the factory directions which accompany it, and on an Alternating Current (AC) circuit.

**How Long Does The Coverage Last?** This warranty runs for one year from the date of delivery and applies only to the original purchaser for use.

**What Does This Warranty Not Cover?** This warranty does not cover defects or damage of the appliance which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

**How Do You Get Service?** If repairs become necessary or spare parts are needed, please write to:

**De'Longhi America Inc.**

Park 80 West Plaza One 4th floor  
Saddle Brook, NJ 07663  
or call Service Tel. No. 1-800-322-3848

**De' Longhi CANADA**

1040 Ronsa Court  
MISSISSAUGA, ONTARIO  
L4W 3Y4 CANADA

The above warranty is in lieu of all other express warranties and representations; All implied warranties are limited to the applicable warranty period set forth above. This limitation does apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions connection with the sale or use of its Espresso Coffee Machine.

**How Does State Law Apply?** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>