

xm2go™

MyFi™

Satellite Radio Receiver · Quick Guide

Model SA10113




DELPHI



Warning: This manual contains important safety and operating information. Please read, understand, and follow the instructions in this manual. Failure to do so could result in personal injury, death, and/or damage to your MyFi receiver, accessories, and/or to your vehicle or other property.



stuff...

What's in the box?

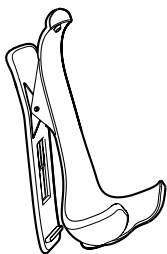


belt clip/stand


remote control

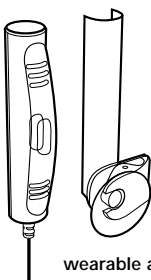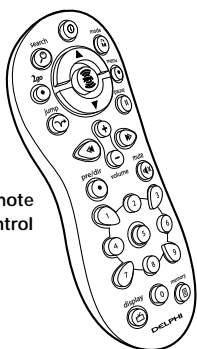


wearable antenna with two clip options

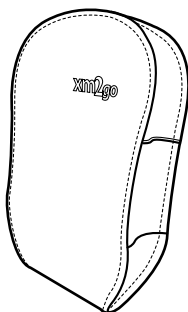


protective case

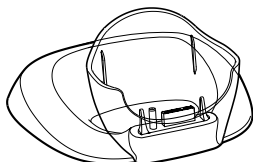


home stand

 

MyFi

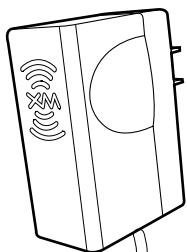


home power adaptor

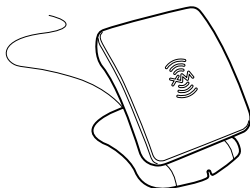


home antenna

audio cable

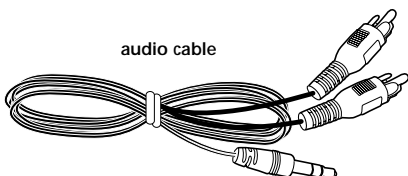




headphones

 


rechargeable
lithium ion battery

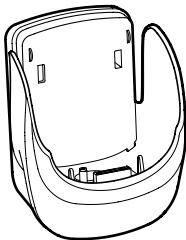


vehicle cradle




vehicle antenna

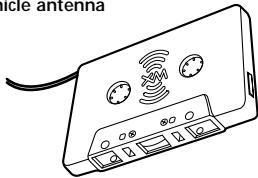


cassette adaptor

 


receiver

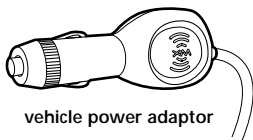


vehicle power adaptor

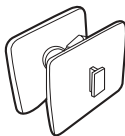

swivel mount
(with extra adhesive pad)

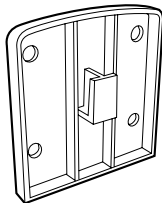

flush mount

 

vent mount



cleaning kit

4

Controls

Turn on your MyFi by pressing the power button. You should be able to hear channel 1, the XM Preview Channel, through your ear buds or attached stereo/speakers.

display – backlit high-resolution LCD display

IR lens – aim your remote control here


2go button – store up to five hours of XM programming

mode button – switch between “LIVE” XM and “MY XM” playback

arrow buttons – cycle through channel categories (“LIVE”); skip to previous or next song (“MY XM”)

preset/direct button – select between direct channel entry or up to 30 presets

number keys – enter a channel directly or select your favorite presets

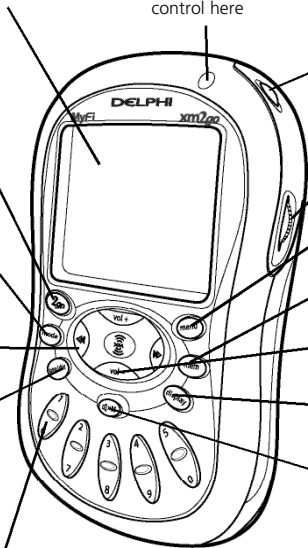


5

Aiming the home antenna

If you do not hear channel 1, the XM Preview Channel, and the screen displays “NO SIGNAL,” try

moving your MyFi’s antenna to another location. Make sure the antenna points south outdoors or through a window.

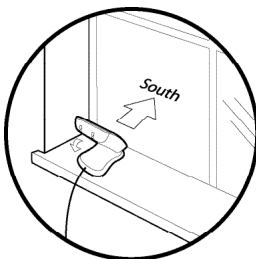

Complete instructions, including an optional activation setup in a vehicle, the availability of accessories designed to improve your signal reception, and more useful information and tips about your MyFi can be found in your *MyFi User Guide*.

Before you begin, take a moment to familiarize yourself with your MyFi's controls. Most basic functions can be accessed using the front panel buttons and the dial. More advanced features are accessed using the "**menu**" button and the dial.

power button – press and hold to turn your MyFi on and off

dial – rotate to highlight a channel or menu option; push in to make selection, or press and hold for TuneSelect

menu button – access advanced features and configuration options

memory button – save and recall song information such as artist and song title


volume buttons – raise or lower volume only when headphones are plugged in

display button – change the appearance of the display, including access to different modes that display stocks or sports scores

mute/pause/lock button – press once to mute audio ("LIVE") or pause playback ("MY XM"); press and hold to lock or unlock your MyFi controls

Your MyFi can help you aim the home antenna to pull in the strongest signal.

1. Using the "**menu**" button and dial, choose "Antenna Aiming."
2. Slowly turn and tilt the antenna. The signal bars on the display will change. Find the position that gives at least two bars on *either* "satellite" or "terrestrial."
3. When you've found the best position, press the "**menu**" button to return to normal operation.

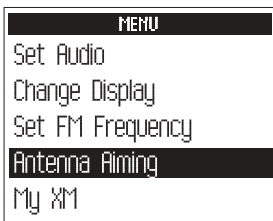


ready...

Getting set up

1

Install the battery


Be sure to charge your battery for several hours on the home stand before use.

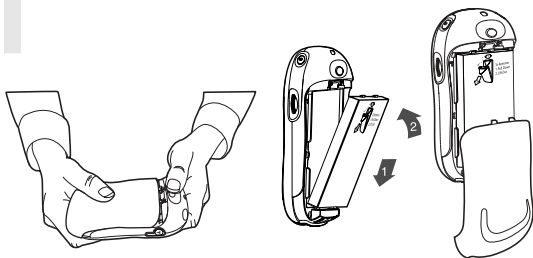

2

Set up


Assemble your MyFi and its home stand as shown.

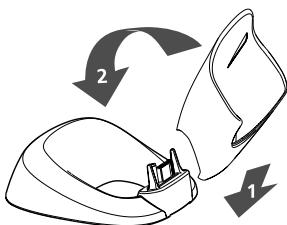

3

Connect to stereo

Plug the AC adaptor into an outlet. Connect the home antenna and connect the line out to either your home stereo or powered (PC type) speakers.

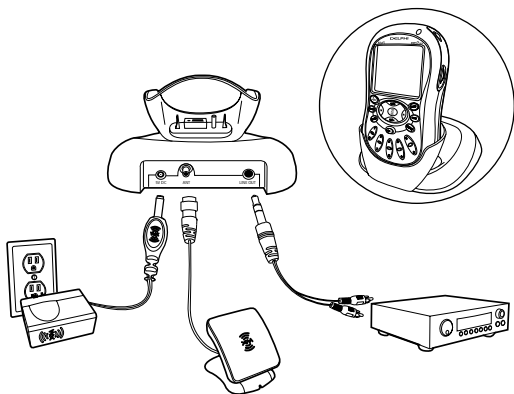

set... Activate and explore


Turn the dial to highlight channel 0, and press the dial in to select it. You should see an 8-character XM Radio ID in the display. (The XM Radio ID should also be on your MyFi's package and under the battery.) Write the ID here:

--	--	--	--	--	--	--	--

The XM Radio ID does not use the letters I, O, S, and F.

XM subscription required for reception of XM service. Not available in Alaska or Hawaii. Activate your XM Satellite Radio service by contacting XM at <http://activate.xmradio.com> or by calling 1.800.XM.RADIO (1.800.967.2346). You will need the XM Radio ID and a major credit card.

XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10 to 15 minutes, but during peak busy periods, you may need to keep your MyFi on for up to an hour to complete the activation process.

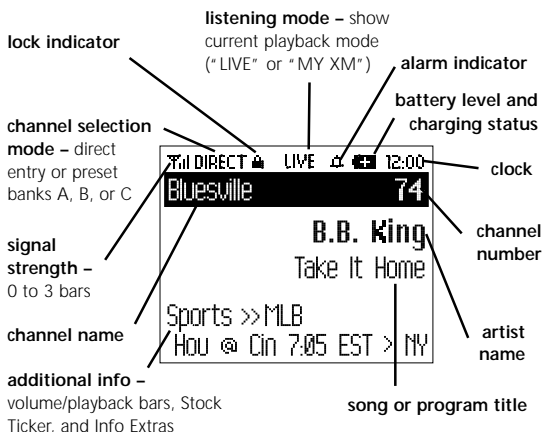

Rotate the dial to preview a list of channels. When you find one you're interested in, press the dial in to tune to that channel!

If you want to tune to a channel and know its channel number, you can use the number keys. Press the "**pre/dir**" button until "DIRECT ENTRY" flashes in the display. Press the number keys corresponding to the channel number, e.g. "4" followed by "5" for channel 45.

XM's channels are organized into categories such as "Rock," "Country," "News," and "Sports." Press the "◀" and "▶" buttons to explore these categories; rotate the dial to view the channels within each category.

ROCK	
Deep Tracks	40
Bone Yard xL	41
XMLM xL	42
XMU	43
Fred	44

go!


Charge the battery and store some music

2go: Store and play back with a single button

Your MyFi lets you store up to five hours of programming and play it back at a later time. Listen to XM wherever you are, including on an airplane, subway, or anywhere satellite coverage may be limited. While the battery is charging in the home stand, try storing some XM programming from XM's lineup of over 130 channels!

TO STORE:

1. Turn on your MyFi and select a channel.
2. Press the "2go" button. To prevent you from accidentally storing over a previously stored program, your MyFi will ask you to confirm. Press the "2go" button again. The center of the top line of your MyFi's screen switches from "LIVE" to "REC."
3. To stop storing and continue with live programming, press the "2go" button again. The display reverts to "LIVE."

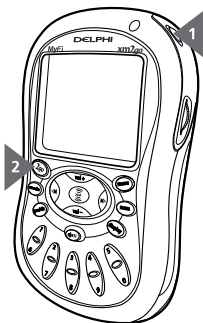

TO PLAY BACK:

1. Press the mode button. Your MyFi switches from "LIVE" to "MY XM", and will begin to play back from the beginning or where you last stopped or paused.
2. "MY XM" holds up to five hours of programming. Press either the "◀" or "▶" button to skip to the previous or to the next song.
3. You can also rotate the dial to view a list of the stored artists and songs. Simply highlight an artist with the dial, then press the dial in to listen to it.

go further...

Advanced features & additional info

Check out the *User Guide* for advanced features, troubleshooting guidelines, and additional information.

DECADES

- 4 BIG BAND / SWING / FORTIES
- 5 FIFTIES HITS
- 6 SIXTIES HITS
- 7 SEVENTIES HITS
- 8 EIGHTIES HITS
- 9 NINETIES HITS

COUNTRY

- 10 CLASSIC COUNTRY
- 11 90s & TODAY'S COUNTRY
- 12 PROGRESSIVE COUNTRY
- 13 TRADITIONAL COUNTRY
- 14 BLUEGRASS
- 15 FOLK
- 16 TOP COUNTRY HITS

POP & HITS

- 20 TOP 20 HITS
- 21 POP HITS
- 22 CONTEMPORARY HITS
- 23 LOVE SONGS
- 24 BEAUTIFUL MUSIC
- 25 ADULT CONTEMPORARY
- 27 MOVIE SOUNDTRACKS
- 28 SHOW TUNES
- 29 EURO & GLOBAL CHART HITS

CHRISTIAN

- 31 CHRISTIAN ROCK
- 32 CHRISTIAN POP
- 33 GOSPEL

ROCK

- 40 DEEP ALBUM ROCK
- 41 HARD ROCK **XI**
- 42 HEAVY ROCK **XI**
- 43 NEW MUSIC
- 44 DEEP CLASSIC ALTERNATIVE
- 45 SOFT ALTERNATIVE
- 46 CLASSIC ROCK
- 47 90s & TODAY'S ALTERNATIVE
- 48 HARD ALTERNATIVE **XI**
- 50 ACOUSTIC ROCK
- 51 JAMBANDS / PROG ROCK
- 52 UNSIGNED ARTISTS
- 53 PUNK / HARDCORE / SKA **XI**
- 54 ALTERNATIVE HITS

HIP HOP & URBAN

- 60 CLASSIC SOUL
- 61 NEO SOUL
- 62 URBAN ADULT
- 64 OLD SCHOOL R&B
- 65 CLASSIC HIP-HOP / RAP **XI**
- 66 UNCLUT HIP-HOP **XI**
- 67 URBAN TOP 40

JAZZ & BLUES

- 70 TRADITIONAL JAZZ
- 71 CONTEMPORARY JAZZ
- 72 MODERN JAZZ
- 73 AMERICAN STANDARDS
- 74 BLUES

LIFESTYLE

- 75 THE VOICE OF MUSIC AT STARBUCKS
- 76 ECCLECTIC
- 77 NEW AGE

DANCE

- 80 UNDERGROUND DANCE
- 81 DANCE HITS

DANCE *continued*

- 82 ELECTRONICA
- 83 DISCO

LATIN

- 90 LATIN HITS
- 92 REGIONAL MEXICAN
- 94 TROPICAL
- 95 LATIN JAZZ

WORLD

- 100 WORLD
- 101 REGGAE
- 102 AFRICAN

CLASSICAL

- 110 TRADITIONAL CLASSICAL
- 112 OPERA / CLASSICAL VOCALS
- 113 POPULAR CLASSICAL

KIDS

- 115 RADIO DISNEY
- 116 XM KIDS

NEWS

- 121 FOX NEWS
- 122 CNN
- 123 CNN HEADLINE NEWS
- 124 ABC NEWS & TALK
- 125 THE WEATHER CHANNEL
- 127 CNBC
- 129 BLOOMBERG RADIO
- 130 MSNBC
- 131 BBC WORLD SERVICE
- 132 C-SPAN
- 133 BOB EDWARDS, PRLMPRI & WBUR
- 134 CNN EN ESPAÑOL

SPORTS

- 140 ESPN RADIO
- 141 ESPN NEWS
- 142 FOX SPORTS CHANNEL
- 143 SPORTING NEWS RADIO
- 144 NASCAR RACING
- 145 IN-RACE DRIVER AUDIO
- 180-188 ACC FOOTBALL / BASKETBALL

COMEDY

- 150 XM COMEDY **XI**
- 151 LAUGH USA
- 152 EXTREME TALK **XI**

TALK & ENTERTAINMENT

- 155 MTV RADIO
- 156 VH1 RADIO
- 161 DISCOVERY CHANNEL
- 162 E! ENTERTAINMENT
- 163 BOOKS & DRAMA
- 164 RADIO CLASSICS
- 165 EXPERTS & ADVICE
- 166 CONSERVATIVE TALK
- 167 PROGRESSIVE TALK
- 169 AFRICAN AMERICAN TALK
- 170 CHRISTIAN TALK
- 171 TRUCKERS' CHANNEL

XM INSTANT TRAFFIC & WEATHER

- 210 - 230 21 MAJOR MARKETS

SPECIAL EVENTS

- 200 CONCERTS / FESTIVALS / SPECIAL FEATURES

PREMIUM

- 202 OPIE & ANTHONY SHOW
- 205 ADULT

XM Previews on Channel 1, **XI**. May include frequent explicit language.

Please call XM Listener Care at 1-800-XM-RADIO (1-800-967-2346) for Parental Control/Blocking Option.

● Ch. 129 airs Mon.-Fri., 5AM ET-6PM ET.

● Ch. 161 airs 6PM ET-5AM ET weekdays and all day Sat. & Sun.

▲ Visit collegisports.xmradio.com for college game schedules. Visit nascar2.xmradio.com for NASCAR 2 Ch. 145 broadcast schedules. All schedules subject to change.

Premium Channel(s) available with basic XM subscription for an additional monthly fee(s).

All programming subject to change.

Channel lineup
effective 10/04

xmradio.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The Delphi XM MyFi Satellite Radio Receiver incorporates an FM transmitter and is therefore classified as an intentional transmitter. Changes or modifications to the unit not expressly approved by Delphi can void your authority to operate this equipment.

Important: The FCC and FAA have not certified the Delphi XM MyFi Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Delphi cannot support this type of application or installation.

DELPHI

Delphi Corporation
1441 West Long Lake Road
Troy, Michigan 48098-5090 U.S.A.
Customer Service: [1] 877.GO DELPHI

www.delphi.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>