



North America Limited

**PRACTICAL USER'S GUIDE  
FOR THE CORNER WALL MOUNTED  
ELECTRIC FIREPLACE**

**MODEL NUMBER:**

**EWMC-CC-SS**

Quality checked by:

*Valued Customer,*

*We are pleased that you have chosen to purchase an electric fireplace  
manufactured by Dimplex North America Limited.*

7206640100REV04

## OPERATION

The controls are located inside the door panel on the lower side of the corner wall mounted electric fireplace. (FIGURE 13)

### A. MAIN ON/OFF SWITCH

The on/off switch supplies power to all unit functions (heater/flame)

### B. MAIN SELECTION SWITCH

To choose between flame effect setting, flame effect with low heat setting, and flame effect with high heat setting.

### C. HEATER THERMOSTAT CONTROL

To adjust the temperature to your individual requirements, turn the thermostat control clockwise all the way to turn on the heater. When the room reaches the desired temperature, turn the thermostat knob counter clockwise until you hear a click. Leave in this position to maintain the room temperature at this setting. For additional heat, turn clockwise until you hear the click again and the heater will turn on.

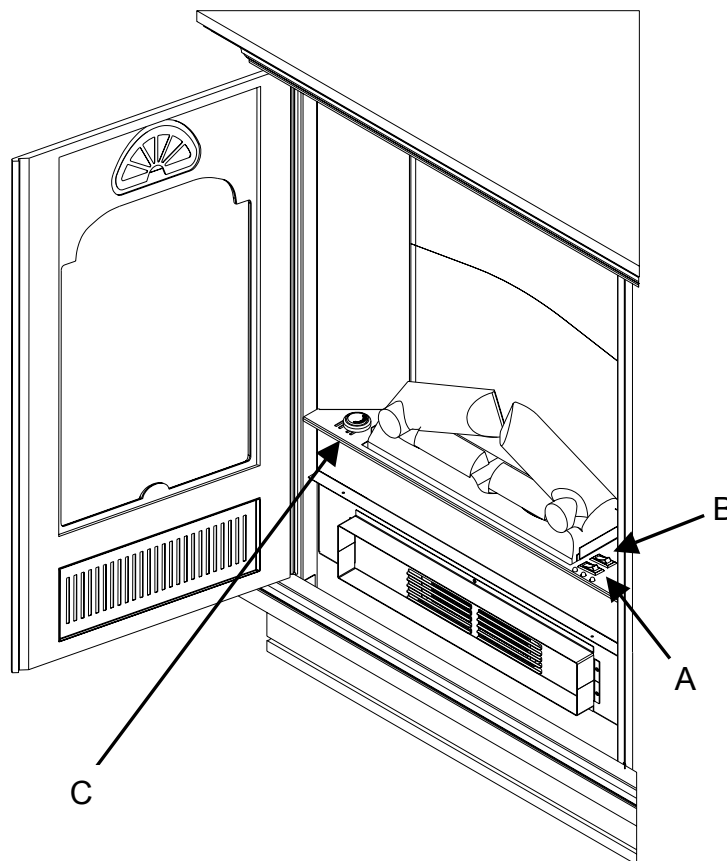


FIGURE 13

## RESETTING THE TEMPERATURE CUTOFF SWITCH

Should the heater overheat, an automatic cut out will turn the heater off and it will not come back on without being reset. It can be reset by switching the MAIN ON/OFF SWITCH to OFF and waiting 5 minutes before switching the unit back on.

### CAUTION


If you need to continuously reset the heater, unplug the unit and call Dimplex customer service at 1-888-DIMPLEX (1-888-346-7539).

### NOTE

The heater may emit a slight, harmless odor when first used. This odor is a normal condition caused by initial heating of internal heater parts and will not occur again.

# REMOTE CONTROL USAGE

The corner wall mounted electric fireplace is supplied with a radio frequency remote control. This remote control has a range of approximately 50 feet (15.25m), it does not have to be pointed at the fireplace and can pass through most obstacles (including walls). It is supplied with one of 243 independent frequencies to prevent interference with other units. The frequency designation is indicated on the back of the transmitter.

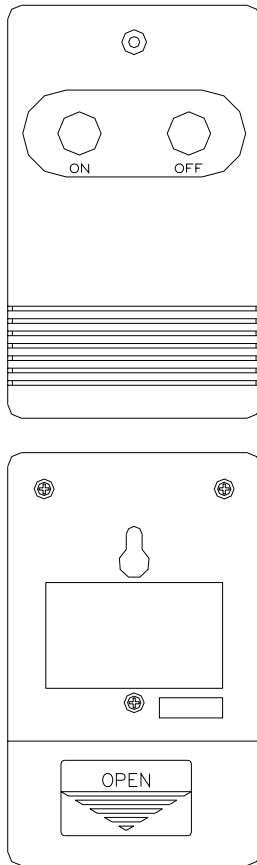

**FIGURE 14**


## A. Remote Control Initialization

This procedure is required every time there is a loss of power to the remote control in the fireplace. (i.e. power failure, breaker tripped, main power switch is turned off)

1. Ensure that power is supplied through main service panel.
2. Locate manual controls. (refer to FIGURE 13)
3. Activate main power switch, red indicator light 1 will flash.
4. Press and hold the heater control switch for five seconds. The second red indicator light will flash.
5. Press ON button located on the remote control transmitter (FIGURE 14). This will synchronize the remote control transmitter and receiver.

## B. Remote Control Usage

The remote control operates the fireplace levels sequentially. The level is increased every time the ON button on the transmitter is pressed. The fireplace can be turned off at any point by pressing the OFF button on the remote control transmitter.

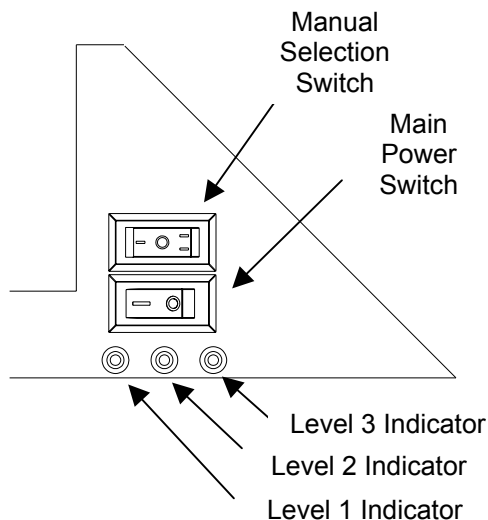

**FIGURE 15**

Level 1: The flame effect is turned on and the first red indicator light is activated.

Level 2: The flame effect remains on, the heater is activated to the low heat setting, and the first and second red indicator lights are activated.

Level 3: The flame effect remains on, the heater is set to the high heat setting, and all three red indicator lights are activated.

## MANUAL CONTROLS

The corner wall mounted electric fireplace can also be controlled in a similar manner to the remote control with switches located inside the unit (FIGURE 15).

### A. Main Power Switch

Main on/off switch, supplies power to the remote control receiving unit. When placed in the on position Level 1 indicator will flash.

### B. Manual Selection Switch

Operates the corner wall mounted electric fireplace in the same manner as the remote control transmitter. Pressing the left side of this switch has the same effect as the ON button on the remote control and the right side has the same effect as the OFF button of the remote control. Pressing once to the left activates Level 1, twice activates Level 2, three times activates Level 3. Pressing to the right turns the corner wall mounted electric fireplace off.

## MAINTENANCE

### WARNING

Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electric shock or damage to persons.

### LIGHT BULB REPLACEMENT

Allow at least 5 minutes for light bulbs to cool before touching bulbs to avoid accidental burning of skin.

Light bulbs need to be replaced when you notice a dark section of the flame or when the clarity and detail of the log exterior disappears. There are two bulbs under the log set which generate the flames and embers.

### TOOL REQUIREMENTS

Slot screw driver

### HELPFUL HINTS

It is a good idea to replace all light bulbs at one time if they are close to the end of their rated life. Group replacement will reduce the number of times you need to open the unit to replace light bulbs.

### LOWER LIGHT BULB REQUIREMENTS

Two (2) clear chandelier or candelabra bulbs with an E-12 (small) socket base, 60 watt rating.

### LOWER BULB REPLACEMENT

1. Unplug the unit from the outlet.
2. Open latched door.
3. Remove the 3 mounting bracket screws.
4. Set aside mounting bracket.
5. Remove 2 log set screws.
6. Set log set assembly aside.
7. Unscrew the bulb(s) counter clockwise.
8. Insert new bulb(s).
9. Assemble in reverse order.

### NOTE

When placing log set back into unit ensure the log set sits in between the 2 vertical mounting flanges.

10. Plug in the corner wall mounted electric fireplace.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>