

# DISH® Receiver Setup for SK-1000



 
The following instructions assume that the TRAV'LER® antenna has found and locked onto satellites 110°, 119° and 129°. There should be an asterisk next to 110°, 119°, and 129° on the TRAV'LER interface.

The following instructions are based on a ViP® 211 receiver. If your receiver differs from the options shown, you may need to consult your receiver manual. The wording and display used in your receiver may differ slightly.


**For Help, Call 1-800-788-4417**



1 Press **Menu** on your remote. Select option 6, **System Setup**.

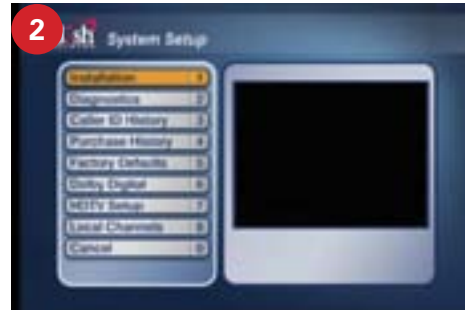


2 Select option 1, **Installation**.

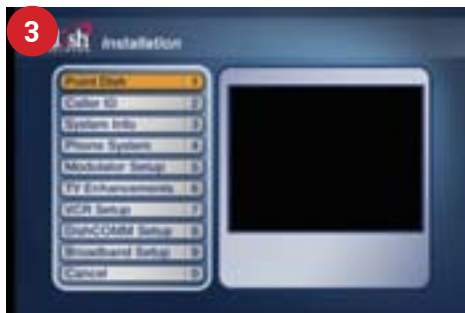 

3 Select option 1, **Point Dish**.



 4 Select **Check Switch**.

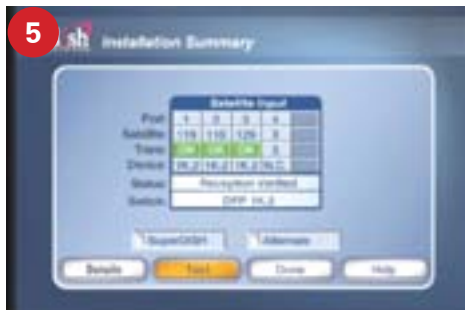

5 If your receiver is showing a switch type of DPP1K.2, then a check switch test is not necessary. In that case, skip to step 7 to complete DISH receiver setup.

If it is of any other type other than DPP1K.2, then check that there are no checkmarks by SuperDISH or Alternate, and select **Test**.



6 Verify that the check switch resulted in a switch type of DPP 1K.2 and that there is a green OK status on Satellite 110, 119 & 129.



7 Press **Cancel** four times to exit the receiver menu.

The receiver setup is now complete.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>