

Quick Help and Tips



QUICK REFERENCE GUIDE

Two-TV DVR Satellite Receiver

Keep this guide in your TV2 viewing area

Look inside for important tips to operate your satellite receiver



What should I do if I have a snowy picture (or a blue or black screen) on TV2?

Check to make sure your TV (and if connected, your VCR) is tuned to the correct channel. Unless changed, factory default for TV2 is channel 60. Refer to the "How to Watch TV on TV2" section in this guide for correct channel setup or use the RECOVER button.



Why does my TV2 display a moving DISH Network logo that says "Shared view is currently disabled"?

Your satellite receiver is in "Single Mode" and "Shared View" is disabled. To watch what TV1 is watching, simply enable the Shared View option. To watch a program on TV2, that is different than what is being viewed on TV1, press the MODE button on the front of the satellite receiver to put it in Dual Mode. See your *User's Guide* for Shared View options.



What should I do if my remote control doesn't seem to operate my satellite receiver?

- Try pressing the SAT Mode button.
- Check to make sure you are using the correct remote (TV1 or TV2) for the desired location.
- Your remote control batteries may need to be replaced (alkaline batteries are recommended).
- Check the remote address (see *User's Guide*).



Why does my receiver change channels and do things on its own?

You may have a neighbor that also has a UHF remote that is controlling your receiver. Simply change your remote control address. See your *User's Guide* for instructions.



What would affect my satellite signal?

- Look for obstructions in front of your satellite dish such as new tree or plant growth.
- If you are still experiencing signal interruptions, contact Technical Assistance. Press the SYSTEM INFO button on the front of your receiver and call the Technical Assistance phone number shown on the screen.



What would cause programs to disappear from My Recordings?

The oldest, unprotected recordings will be replaced with new recordings when there is no more room on the receiver. To avoid losing a recorded event, use the Protect option when you set up the recording or when you select it from the My Recordings screen.

POWER

MODE



POWER

Tip: To ensure your receiver has the latest program guide information and the latest software updates, press the **POWER** button on both remote controls to turn your receiver off when not in use.

Tip: To watch the same program on both TV1 and TV2, place your receiver in **Single Mode**. To watch different programs on TV1 and TV2, place your receiver in **Dual Mode**. Use the **MODE** button on the front panel of the receiver to toggle between **Dual** and **Single** mode.

Tip: Some receiver problems can be resolved by pressing and holding the **POWER** button on the front of the receiver until the front panel lights go out and come back on. After releasing the **POWER** button, the receiver should return to normal operation within a few minutes.

Enhance Your TV Experience

Tune to DISH Network FYI Channel 101

dishnetwork.com

Press DISH button and select Service

See the User's Guide



Using the Recover Button

Use the Recover button to get back to watching satellite programming if you accidentally change channels or inputs on your TV



Press and hold the RECOVER button until all mode buttons light up.



If you see this System Information screen, proceed to step 4. Otherwise, continue to step 3.



Press the RECOVER button again & wait until the mode lights stop flashing. If you see the System Information screen, go to step 4. If not, repeat this step until you do.



Press the SELECT button (to choose Done).

Channel Directory					
<i>Note: All programming subject to change without notice. Go to dishnetwork.com for a current directory.</i>					
A&E	118	Fox Reality	190	ShopNBC	228
ABC Family	180	Fox Soccer	149	Si TV	159
AMC	130	Free Speech TV	9415	SOAPnet	188
America's Preview Channel	221	Fuse	158	SPEED	150
Angel One	262	FX	137	Spike TV	168
Animal Planet	184	G4	191	Style	115
BBC America	135	Galavisión	833	TBN	260
Beauty & Fashion Channel	225	GoTV	407	TBS	139
BET	124	Golf Channel, The	401	TeleFutura (East)?	830
Biography Channel, The	119	Great American Country (GAC)	167	TeleFutura (West)?	831
Boomerang	203	GSN	116	Tennis Channel, The	400
Bravo	129	Hallmark Channel	185	The Movie Channel (West)	329
BYUTV	9403	Hallmark Living Channel	187	The Movie Channel xtra (West)	330
Cartoon Network	176	Healthy Living Channel	223	TLC	183
CCTV-9	265	HGTV	112	TNT	138
CCTV-E&F	884	History Channel, The	120	Toon Disney	174
CMT	166	History International	121	Travel Channel	215
CNBC	208	HITI	843	Turner Classic Movies	132
CNBC World	207	HorseRacing TV	404	Turner South?	437
CNN	200	HSN	222	TVG	405
CNN Headline News	202	iDrive TV	217	TV Guide Channel	102
CoLours TV	9407	Independent Film Channel (IFC)	131	TV Land	106
Comedy Central	107	International Music Feed	157	TV Outlet Mall	219
Court TV	204	iShop	229	University of California TV	9412
C-SPAN	210	Jewelry Television	227	University of Washington TV	9404
C-SPAN2	212	KBS World?	704	Univision (East)	827
CSTV	152	Kid Tunes (Audio only)	976	Univision (West)	828
Discovery Channel	182	Lifetime	108	USA Network	105
Discovery Health	189	Lifetime Movie Network	109	VH1	162
Discovery Home	194	Linkmedia	9410	VH1 Classic	163
Discovery Kids	179	Men's Channel, The	218	WE: Women's Entertainment	128
Discovery Times	192	Military Channel	195	Weather Channel, The	214
Disney Channel (East)	172	MSNBC	209	WGN	239
Disney Channel (West)	173	MTV	160		
DIV	111	MTV2	161		
Documentary Channel	197	NASA	213		
E! Entertainment Television	114	mun2	838		
Encore (West)	341	National Geographic Channel	186		
Encore Action	343	NFL Network	154		
Encore Drama	345	Nickelodeon Games & Sports	177		
Encore Love	346	Nickelodeon/Nick at Nite (East)	170		
Encore Mystery	344	Nickelodeon/Nick at Nite (West)	171		
Encore Wam	347	Nicktoons Network	178		
Encore Westerns	342	NOGGIN/The N	169		
ESPN	140	NOGGIN/The N	169		
ESPN2	144	Northern Arizona University	9411		
ESPN Classic	143	Outdoor Channel, The	153		
ESPNNEWS	142	Oxygen	127		
ESPNU	148	PAX TV	181		
EWTV	261	QVC	226		
Fine Living	113	Research TV	9400		
Food Network	110	Resort & Residence Channel	216		
Fox Movie Channel	133	RFD-TV	9409		
FOX News Channel	205	SCI FI Channel	122		
		Sci Fi Channel, The	193		
		Shop at Home	224		

ADDITIONAL CHANNELS

- Audio Music Channels 923-981
- DISH Network Pay-Per-View 455-539
- Local Channels 800-9318
- Regional Sports Networks 409-438
- SIRIUS Music Channels 601-6116
- DISH FAMILY Entertainment Package
- AMERICA'S TOP 60 Entertainment Package
- AMERICA'S TOP 120 Entertainment Package
- AMERICA'S TOP 180 Entertainment Package

* FREE Spanish audio feed. Audio disponible en español.

1 = Available at no cost to all DISH Network customers. CCTV channels require DISH 500, DISH 1000 or SuperDISH antenna. KBS World requires SuperDISH antenna pointed at 121° orbital location and subscription to qualifying programming. Additional fees may apply for existing DISH Network customers to upgrade their dish antenna. 2 = TeleFutura East is available to subscribers in the Eastern and Central time zones. 3 = Available in Georgia, Mississippi, St. Catharines, Tennessee and sections of N. Carolina.

America's "Everything" Pak includes America's Top 180 package plus all four premium movie packages and NBA TV (channel 402).

Movie Packages

HBO	300	Starz (East)	350
HBO (East)	300	Starz (West)	351
HBO (West)	303	Starz Cinema (East)	353
HBO2 (East)	301	Starz Cinema (West)	354
HBO2 (West)	304	Starz Kids & Family	356
HBO Comedy	307	Starz Edge	352
HBO Family	305		
HBO Latino	309		
HBO Signature	302	CINEMAX	
HBO HD**	9456	5StarMAX	314
		ActionMAX	313
		Cinemax (East)	310
		Cinemax (West)	311
		STARZ!	
		Starz InBlack	355
		Encore (East)	340
		MoreMAX	312

SHOWTIME UNLIMITED

FLIX	333
The Movie Channel (East)	327
The Movie Channel xtra (East)	328
Showtime Too	320
Showtime (East)	318
Showtime (West)	319
Showtime Beyond	323
Showtime Extreme	322
Showtime Showcase	321
Sundance Channel	332
Showtime HD**	9460

* FREE Spanish audio feed available. Audio disponible en español. **Requires HD television and receiver.

Features of Your Remote Control 2

To use the features described in this section, make sure you are in SAT mode by pressing the SAT Mode button

Note: To control a TV, VCR, or other available component, the remote must be programmed. See the User's Guide for details.

SAT Mode
Press to control your satellite receiver, TV power, volume and mute

TV Mode
Press to control your TV

VCR Mode
Press to control your VCR

AUX Mode
Press to control other components such as a DVD player

Receiver Power & TV Power
Top button turns the receiver on/off, bottom button turns the TV on/off

Receiver Menu
Access receiver features and settings

Themes
Search for programs using Themes

Recall
Go back to last channel viewed

Info
Display program information

Digital Video Recorder (DVR) Buttons
Pause live TV and play or record programming

Recover
Recovers satellite programming if your TV input or channel has changed

Picture-In-Picture (PIP) Buttons
Watch two separate programs at once (in Single Mode)

Page Buttons
Page up/down in menus

Program Guide
Display current and future satellite program listings

Arrows/Select Buttons
Channel up/down, navigate through menus/guides and select a desired option

Browse
See what is on other channels while watching TV

View Satellite Program
Exit any menu/guide and go back to viewing live TV

DISH
Explore interactive TV features

Number Buttons
Enter a channel number, or select menu items

Search
Search for a program

Remote Key
Green with number 1 indicates TV1
Blue with number 2 indicates TV2

Device Codes:

TV: _____ VCR: _____ AUX: _____

My remote is programmed in Limited Mode (check box):

Tip: Using the Limited Mode option helps prevent you from accidentally tuning to a TV or VCR channel (or input) that does not display satellite TV programming.

How to Watch TV on TV2 2

TV2 viewing locations are identified with a blue key on your remote and the blue TV2 logo on the TV screen



To watch satellite TV or if you lose video:

Set TV to _____
(Channel/Input)

Set VCR to _____
(Channel/Input)

VCR must be _____
(On/Off)

Watching Your Satellite Programs


To operate your satellite receiver you must be in SAT mode by pressing the SAT Mode button



Turns the Satellite Receiver On or Off

Turns the TV On or Off

Easy Ways to Find a Program

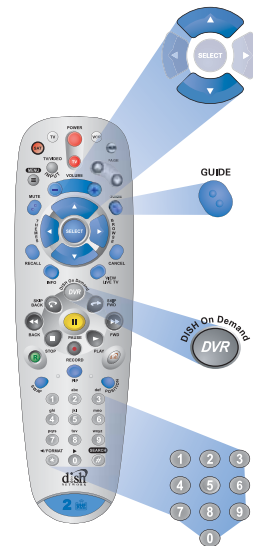

Channel Up/Down one program at a time

OR

Select a program from the Program Guide

OR

Find and play a recorded program

OR

Enter a channel number from the Channel Directory



Digital Video Recorder

Get to recorded programs

Skip back 10 seconds in a program

Reverse at 4 different speeds

Stop playback or recording

Record a program

Freeze programs

Skip forward 30 seconds in a program

Fast forward at 4 different speeds

Starts playback of a program

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>