

Equipment CONTROLS

Mode Buttons

- » **SAT:** controls your satellite. You will stay in SAT mode most of the time.
- » **TV:** controls your TV.*
- » **DVD:** controls your VCR or DVD player.*
- » **AUX:** controls other equipment such as a second TV or DVD player.*

Power & TV Power

- Turns the receiver on/off.
- Turns the TV on/off.*



Menu

Access features and settings including: Parental Locks, Favorites Lists, Customer Support and more.



Input/Recover

Press to see video from other equipment connected to your TV. Recovers satellite programming if your TV input or channel has changed.*

Input function only works in TV mode. Not applicable with certain TV makes/models.

Auxiliary CONTROLS


Remote can be programmed to operate basic functions of VCR and DVD players.*

Special CONTROLS



Format

Changes the shape of the picture on your TV screen to match the frame size of the program you are watching. Choose between Normal, Stretch, Partial Zoom, Zoom or Gray Bar.

 

System Wizard

Helps resolve remote issues and set-up your receiver. Press and hold to start the System Wizard.

Picture-In-Picture (PIP) Buttons

Watch two separate programs at once.*

Only available in Single Mode. Refer to the User's Guide for more details.



DISH

Access DishHOME Channel 100 to explore interactive TV features.

Where do I go for 24/7 help?

www.dishnetwork.com/welcome
Customer Support: 1-888-683-6079

See the front of your channel line-up card for more information.

Basic Navigation CONTROLS

Page

Move up/down in on-screen menus and Program Guide one page at-a-time.

Guide

Display current and future TV program listings. Also toggles lists between ALL Chan, ALL Sub, ALL HD, FAVORITES.

Arrows

Channel up/down, navigate menus and the guide.

Select

Select a show or menu option – like an enter button.

Browse (right arrow)

Look for other channels while watching TV.

Themes (left arrow)

Search for programs by categories such as sports.

View Live TV

Return to watching live TV. Also exits all on-screen menus.

Recall

Go back to the last channel viewed.

Search

Search for a program by name or by category.

Info

Display additional program info.

REMOTE KEY

Black with green number 1 indicates (TV1).
Black with blue number 2 indicates (TV2).



TV VIEWING BASICS

Important Features of Your Receiver

SAT Mode Button:

You will need to stay in SAT mode to use the remote control, even when operating your TV's volume, power and mute functions.

The "mode" you are in will light each time you touch a remote control button.



Turns the satellite receiver on or off.


Turns the TV set on and off.

Remote must be programmed to control TV. For details, see Learning Functionality in User's Guide.

To watch TV or if you lose video:

- » Make sure **TV1** (room with receiver) is set to channel **3** or _____ (channel/input)
- » Make sure **TV2** (room without receiver) is set to channel **60** or **73** or _____ (channel/input) (Use the stickers in your User's Guide to help remind you which channel/input.)
- » Make sure receiver is **ON**. Green or blue light will be visible on the front panel of the receiver.

On-Screen Program Guide

- » Press the **GUIDE** button to view the On-Screen programming guide.
- » Press **GUIDE** again to bring up a pop-up menu asking which guide to display.
 - **ALL Chan:** All DISH Network channels
 - **ALL Sub:** All channels you subscribe to
 - **ALL HD:** All HD channels you subscribe to
 - **FAVORITES:** Only your Favorite channels – For Favorites Lists set-up, press the **Menu** button , select **PREFERENCES**, then select **FAVORITES**.
- » If you prefer to toggle through the various guides by pressing the **GUIDE** button, it's easy to disable the pop-up menu feature. Press **GUIDE** until the pop-up screen comes up, select **FAVORITES**, select **GUIDE** button and select **DONE**.



 
 
Unique Benefits of Your Dual-Tuner Receiver

One receiver independently operates 2 TVs:

1 **TV1** has a **GREEN** #1 on the remote key and is in the room with the receiver.



2 **TV2** has a **BLUE** #2 on the remote key and is in the room without the receiver.

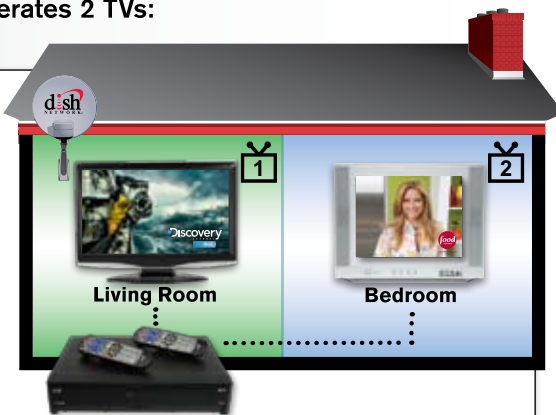

You get all the same great features in the living room and bedroom – all from just one DISH Network receiver.

TROUBLESHOOTING & FEATURES

Quick Fixes for Most Common Problems

DISH Network prides itself on its top-of-the-line high-definition receivers. In the event you experience any problems watching or controlling your TV, try these quick fixes:

Blue, Black, Frozen or Snowy Screen:

 
- » **Reset Your Receiver:** If you see a blue, black, frozen or snowy screen, press the red **RESET** button on the front panel of your receiver. The receiver will restart and should return to programming in just a few minutes. Resetting your receiver is like re-booting your computer.



Your TV May Be On the Wrong Channel / Input:

See the "TV Viewing Basics" panel to make sure your TV is set to the correct channel number or input.

Remote Won't Work:


Press and hold the zero button  to load the System Wizard. Follow the on-screen instructions to fix remote control issues. Also, try replacing the batteries in your remote control. You may see a message on your screen regarding low battery strength.

Satellite Signal Message:

If you get an "acquiring satellite signal" message, your signal will be restored within minutes, not days or weeks like with cable. This is rare, and almost always temporary. If you have had inclement weather and continue to have signal issues after the weather clears, make sure your dish antenna is not covered by snow, ice or a fallen object. If it can be accessed safely and easily, gently clear your dish.

Parental Locks

You can password-protect programming based on rating or on a channel-by-channel basis.

1. Press the **MENU** button , select **LOCKS**.
2. Select the **LOCKS** option you prefer (such as "Lock PPV").
3. Select **LOCK SYSTEM** and choose a password.

Get Connected

Connecting a **phone line** or **high-speed internet connection** into the receiver unlocks many great features, plus you can save \$5/mo. If you're not connected to a phone line, you will see a \$5 programming access fee on your monthly bill for each dual-tuner receiver.

Phone Line and High-Speed Internet Benefits

- » Caller ID* – See who's calling right on the screen.**
- » Change your programming packages on DishHOME Channel 100.**
- » Order Pay-Per-View with your remote control.
- » Play exclusive interactive games on DishHOME Channel 100.
- » Your receiver will let DISH Network know that it is running smoothly.



Ethernet

Phone

*With subscription to Caller ID through your local phone company.
**Not available with high-speed internet connection.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>