
## **Battery Safety Information**

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

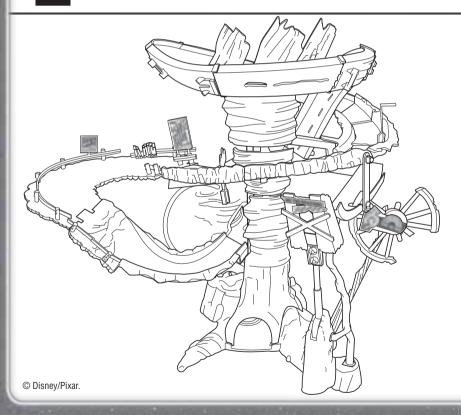


Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A. All Rights Reserved. Consumer Relations 1 (800) 524-8697. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

• <u>Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.</u> Helpline 01628500303 • Mattel Australia Pty Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.





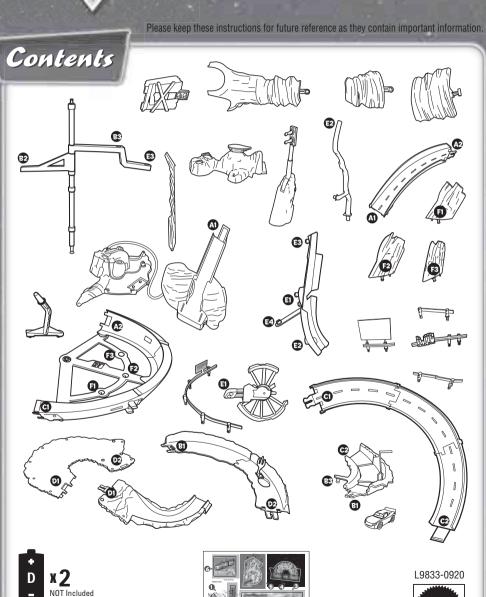


Requires 2 "D" (LR20) alkaline

batteries (not included).

## Battery Installation


Open battery cover with a Phillips head screwdriver (not included). Insert 2 "D" size alkaline batteries (not included) in the orientation shown. Replace cover and tighten screw. For best performance, use alkaline batteries. When booster is unable to propel vehicles through the set, replace the batteries.

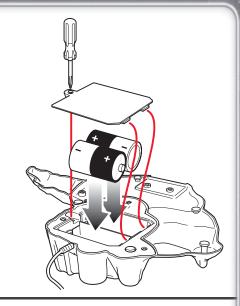






Refer to numbers on parts and contents page to help with assembly.


SAFETY NOTE: Do not launch cars until toy is completely assembled.

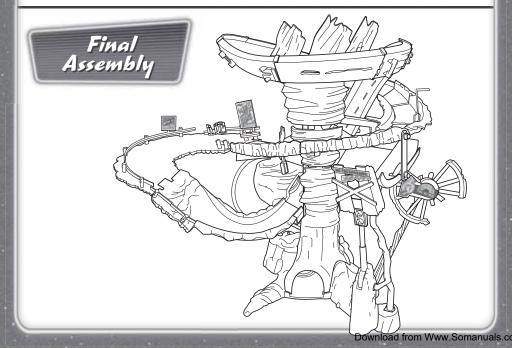

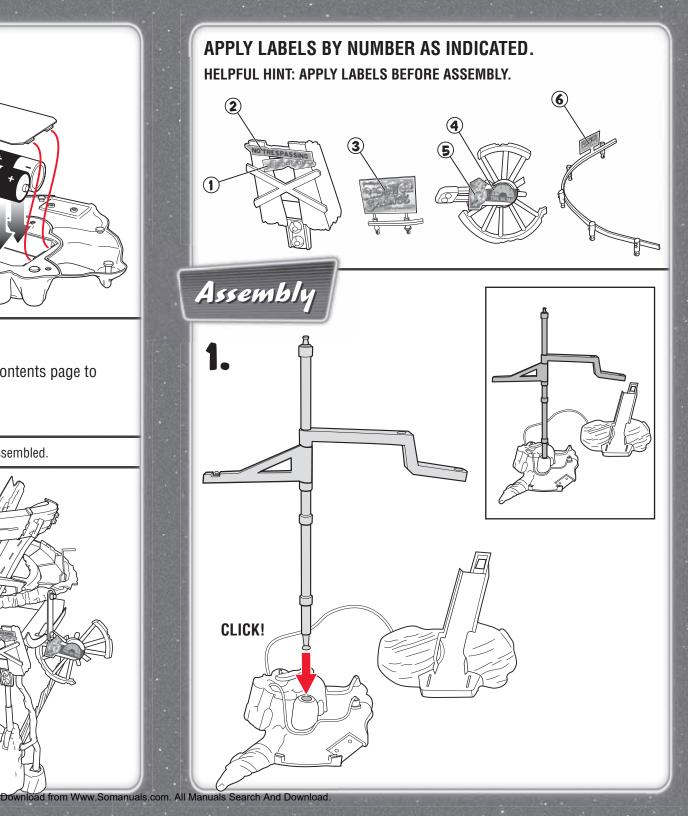


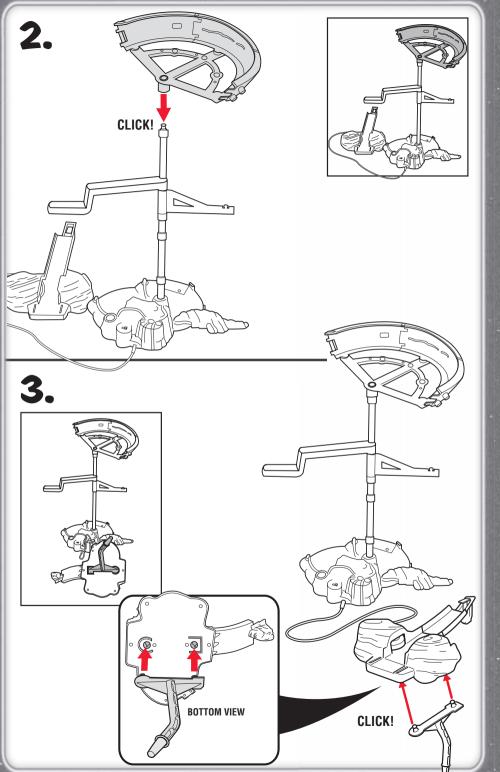


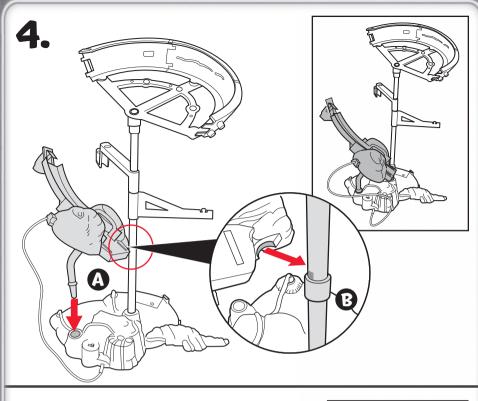


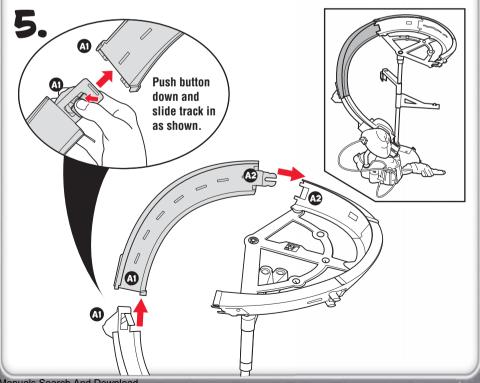



Download from Www.somanuals.com. All Manuals Search And Download.

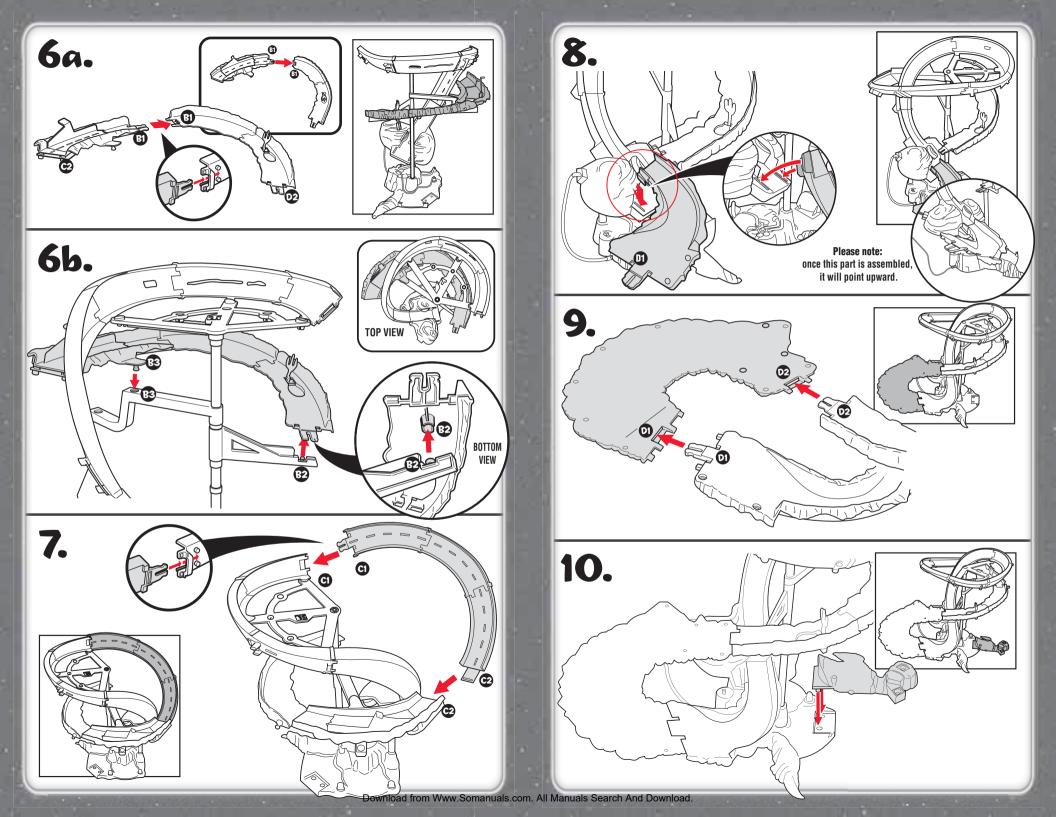

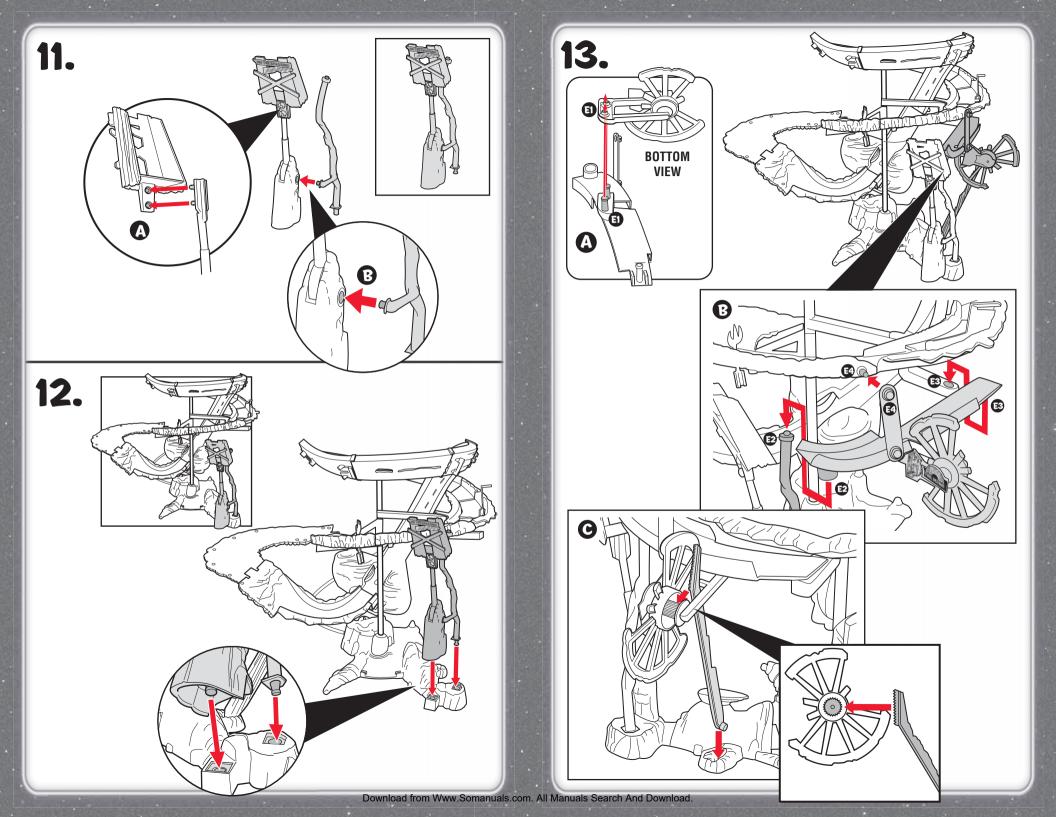

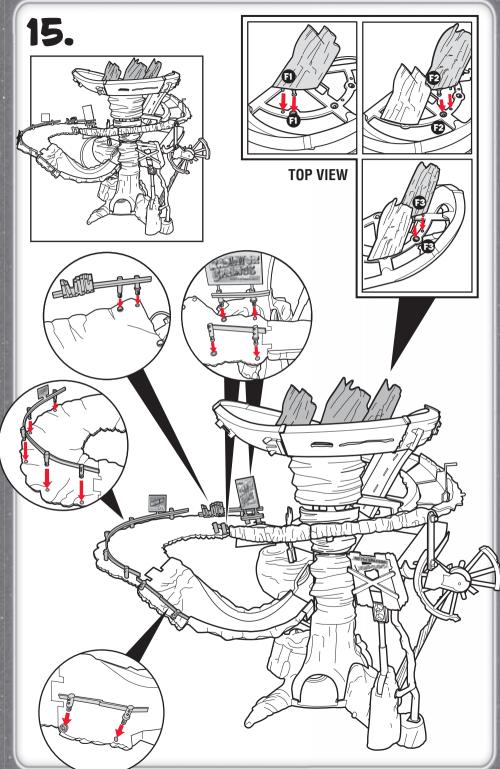

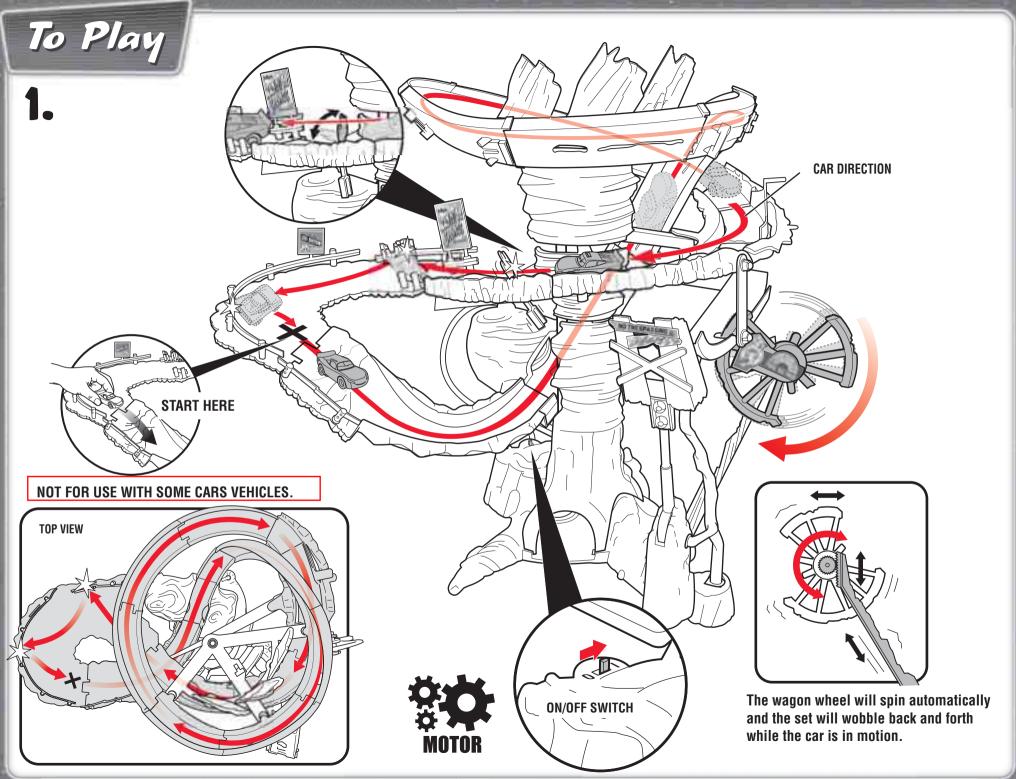

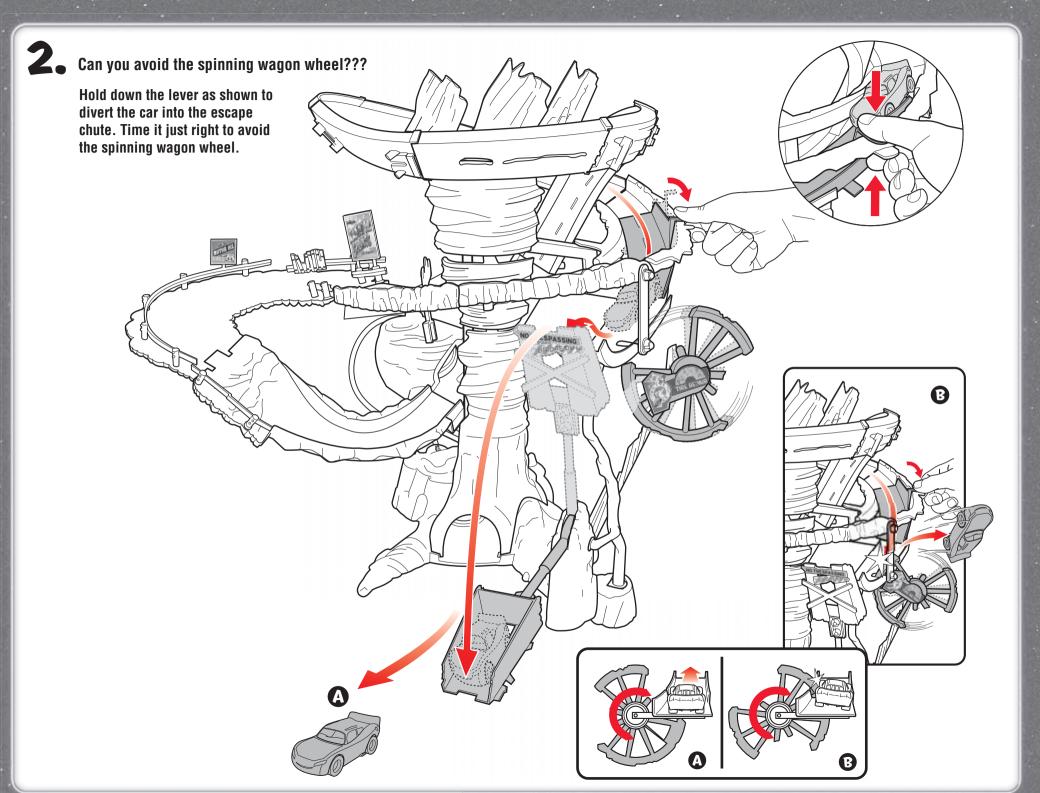

## INSTRUCTION SHEET SPECIFICATIONS Toy: Mountain Challenge playset L9833 Tov No.: 0920 Part No.: 11"W x 8.5" H

Trim Size:

Folded Size:

One Type of Fold: Two # colors: PMS485 + Black Colors:

5.5"W x 8.5" H

White Offset Paper Stock: 70 lb. Paper Weight: 005 FDM No ·

rom Www.Somanuals.com. All Manuals Search And

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com