



User's Guide

## Princess Telephone

Manual del Usuario

## Teléfono de Princesa



Guide d'utilisation

## Téléphone de Princesse

DPH8010-P


  
# QUICK REFERENCE

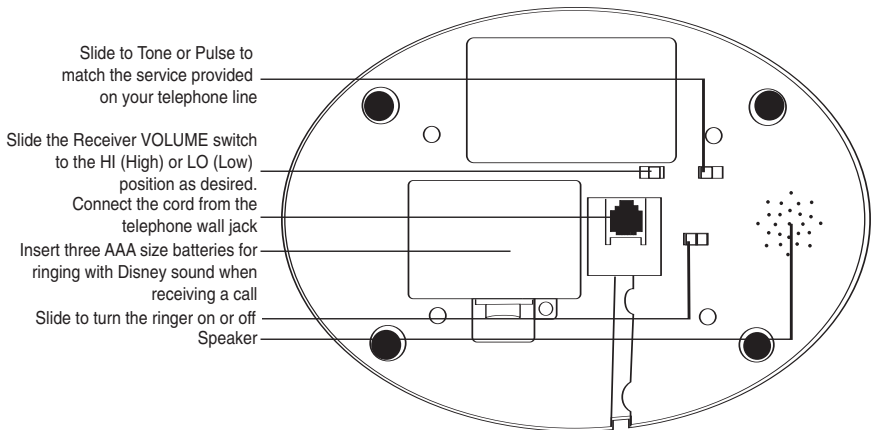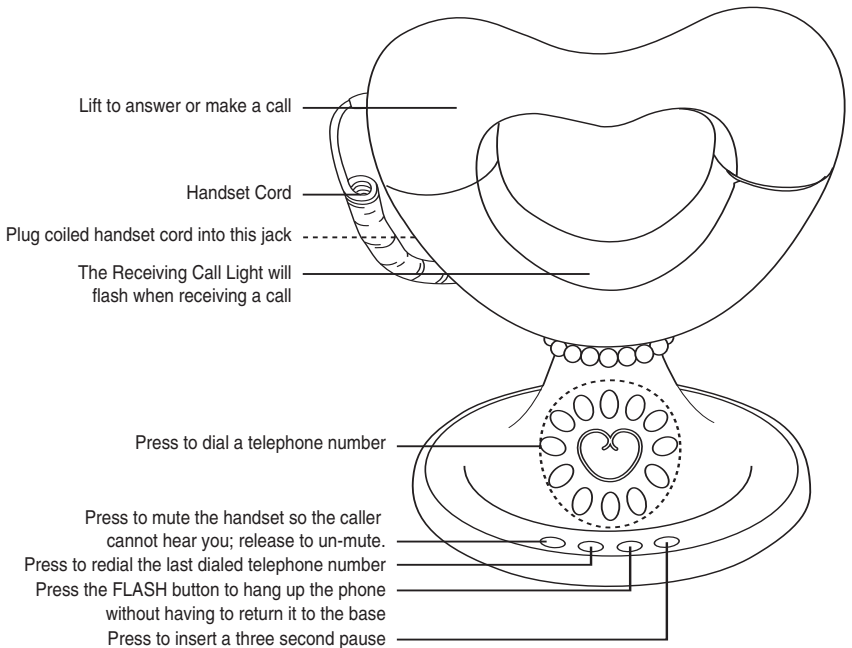

## QUICK REFERENCE (CONTINUED)

1. Set the RINGER switch to the ON position to have the ringer sound when receiving a phone call.
2. Set the Tone/Pulse switch to Tone or Pulse to match the service provided on your telephone line.
3. Connect the coiled handset cord to the base.
4. Connect the straight cord to the telephone base jack and telephone wall jack.
5. When the phone rings, lift the handset and speak into the mouthpiece. Hang up when call is completed.
6. Lift the handset and listen for a dial tone. Press the key buttons (0-9) for the specified number you wish to call.
7. Slide the Receiver VOLUME switch to the HI (High) or NOR (Normal) position as desired.
8. Press the REDIAL button to automatically redial the last number dialed.
9. Press the FLASH button to hang up the phone without having to return it to the base. This is useful for using the phone with the Call Waiting feature.
10. Press and hold the MUTE button and you will be able to hear the person on the other end of the telephone, but they cannot hear you. Release the MUTE button to restore normal sound.
11. Press the PAUSE button to insert a three second pause. This is useful in some cases, such as a PBX or long distance service when a pause may be needed in the dialing sequence

## PACKAGE LIST

The package should include the following items:

1. Base Unit
2. Handset with Handset Cord
3. Telephone Line Cord
4. User's Guide

## IMPORTANT SAFETY INSTRUCTIONS

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If your local telephone exchange only accepts Pulse dialing, you may have to switch the Tone/Pulse switch to Tone to access certain services that require Tone signalling (such as home banking). After the initial line is connected to the number you are calling, switch the Tone/Pulse switch to Tone to access Tone signalling. When you have completed your call, please switch the Tone/Pulse switch back to Pulse.

## IMPORTANT SAFETY INSTRUCTIONS (CONTINUED)

 
When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this product.
3. Do not use this product near water—for example: near a bathtub, wash bowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
4. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious injury and serious damage to the product.
5. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation unless proper ventilation is provided.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill or spray any type of liquid on the product.
7. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel under the following conditions:
  - A. If liquid has been spilled into the product.
  - B. If the product has been exposed to rain or water.
  - C. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - D. If the product has been dropped or the cabinet has been damaged.
  - E. If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Do not allow anything to rest on the telephone cord. Do not locate this product where the cord will be abused by persons walking on it.
11. Never install telephone wire during a lightning storm.
12. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
13. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
14. Use caution when installing or modifying telephone lines.
15. Use only the supplied cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

**SAVE THESE INSTRUCTIONS**

# LOCATION OF CONTROLS

## FRONT

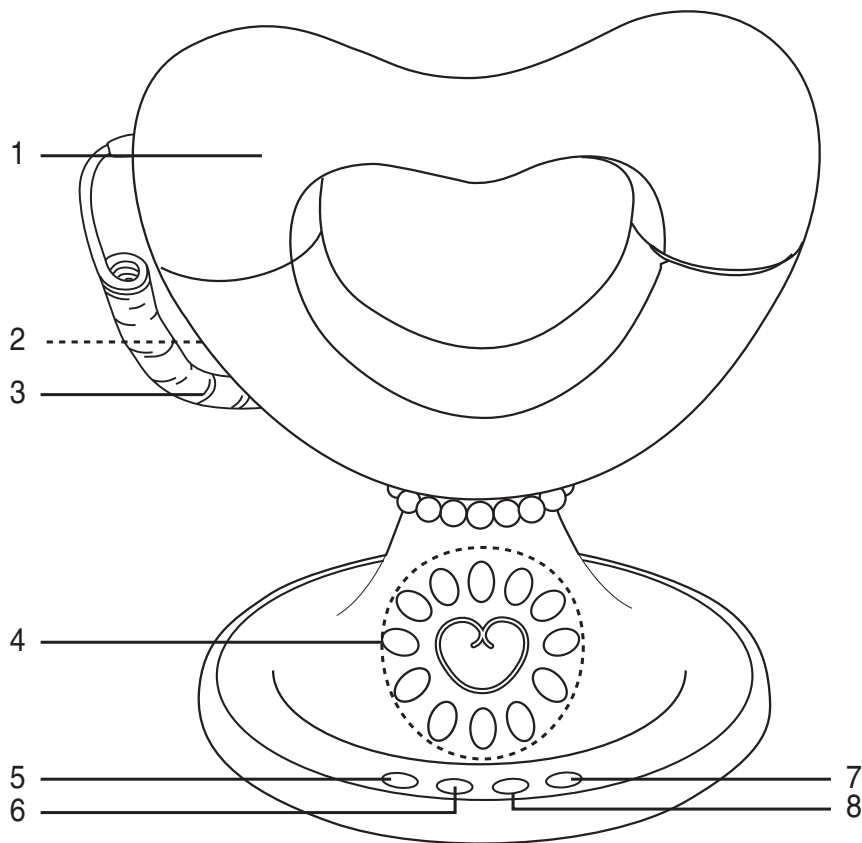


1. Handset
2. Handset In Jack
3. Handset Coiled Cord
4. Key Buttons (0-9,#,\*)
5. MUTE Button

6. REDIAL Button
7. Receiving Call Light
8. PAUSE Button
9. FLASH Button

## LOCATION OF CONTROLS (CONTINUED)
 
### BOTTOM

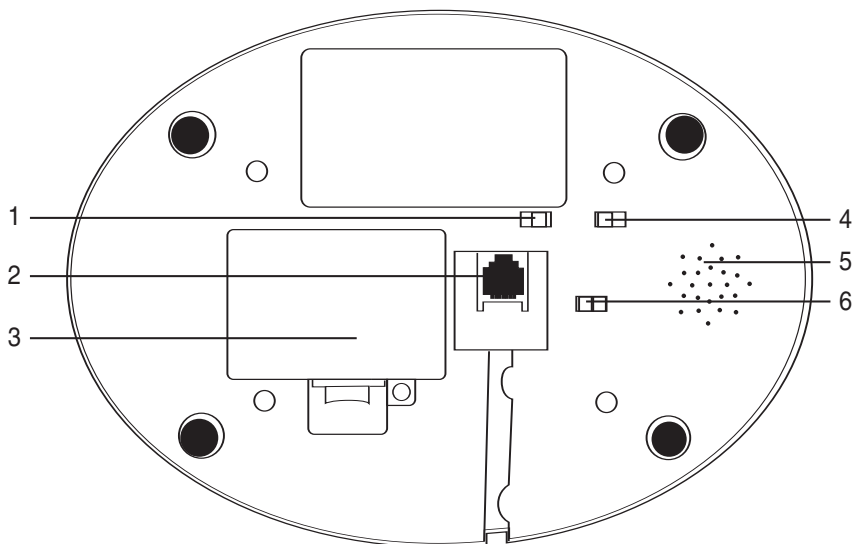


1. Receiver VOLUME Switch
2. Line In Jack
3. Battery Compartment
4. Tone/Pulse Switch
5. Speaker
6. RINGER Switch

# INSTALLATION

 This unit can be used on a desk, or other level surface away from excessive heat or direct sunlight.

## Desk or Table Use

1. Set the RINGER switch to the ON position to have the ringer sound when receiving a phone call. Insert batteries as described on the next page to hear the Disney ring when receiving a call.
2. Set the Tone/Pulse switch to Tone or Pulse to match the service provided on your telephone line. If you are not sure of your service, please contact your telephone company.
3. Connect the coiled handset cord to the base.
4. Connect the telephone line cord to the telephone Line In jack and telephone wall jack as shown.

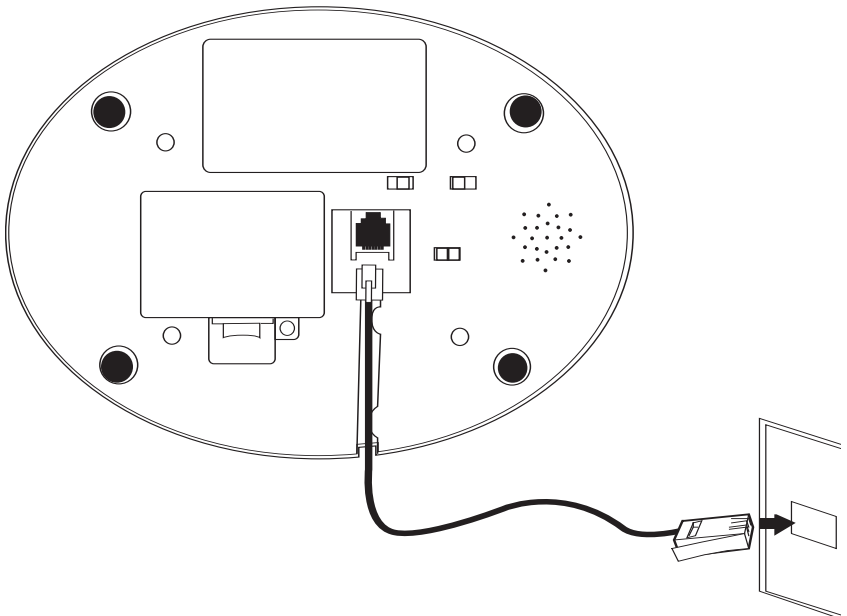




## INSTALLATION (CONTINUED)

### Battery Installation

To hear the Disney ring when receiving a call, insert three (3) AAA size batteries into the bottom of the unit as described below.

**NOTE:** When the batteries become weak, the unit will revert back to the standard ring.

 1. Remove the Battery Compartment screw.
2. Press in on the Battery Compartment tab and lift off the Battery Compartment cover.
3. Insert three (3) AAA size batteries, observing the polarity as shown.
4. Replace Battery Compartment and screw.

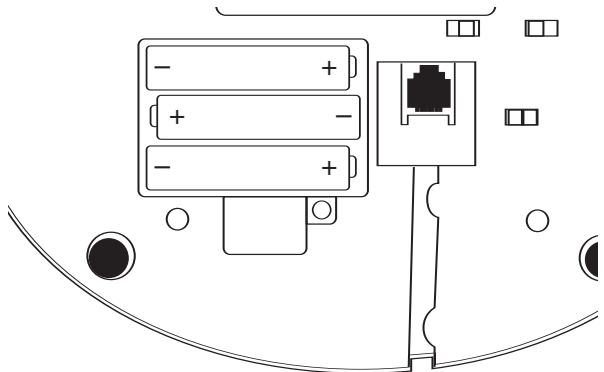

### BATTERY PRECAUTIONS

 
Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture.

(Follow battery manufacturer's directions.)


# TELEPHONE OPERATION

## RECEIVING CALLS

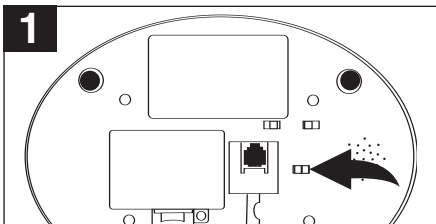


Make sure the RINGER switch is in the ON position. When the phone rings and the Receiving Call Light flashes, lift the handset and speak into the mouthpiece. Hang up when the call is completed.

## MAKING CALLS

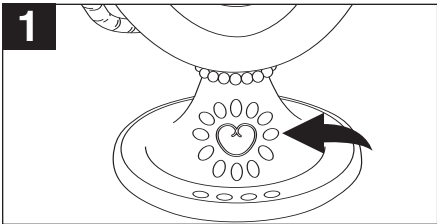 


Lift the handset and listen for a dial tone. Press the key buttons (0-9) for the specific number that you wish to call.

## RINGER SWITCH

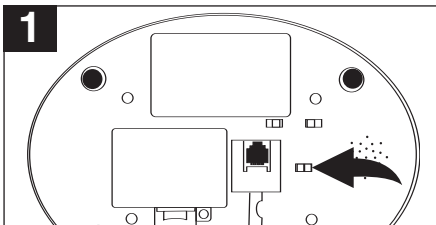 


 Slide the RINGER switch to the ON position to turn the ringer on.

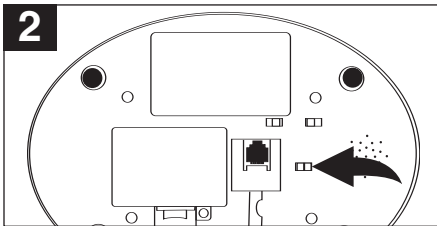

Slide the RINGER switch to the OFF position to turn the ringer off.


## RECEIVER VOLUME SWITCH

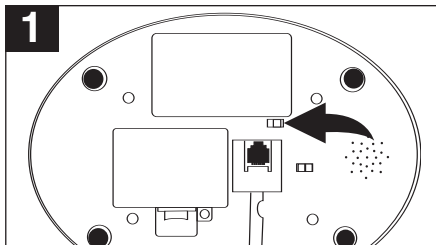 

Slide the Receiver VOLUME switch to the HI (High) or NOR (Normal) position as desired.


# TELEPHONE OPERATION
 
## T/P (TONE/PULSE) SWITCH

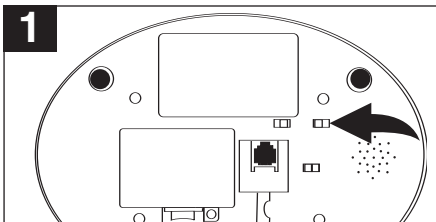

Slide the T/P switch to Tone (T) or Pulse (P) to match the service provided on your telephone line. If you are not sure of your service, please contact your telephone company.


## REDIAL BUTTON

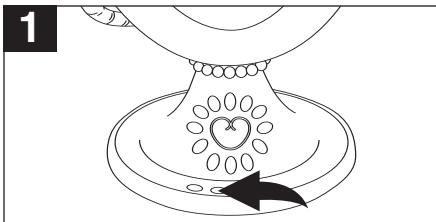 

Press the REDIAL button to automatically redial the last number dialed.


**NOTE:** Please note that only the last number you called can be stored in the Redial memory.

## FLASH BUTTON

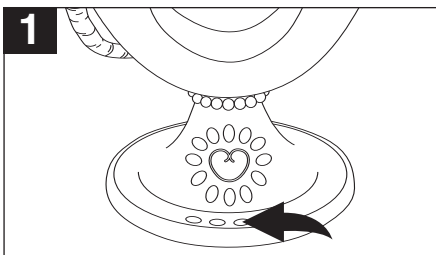 


Press the FLASH button to hang up the phone without having to return it to the base. This is useful for using the phone with the Call Waiting feature.

## MUTE BUTTON

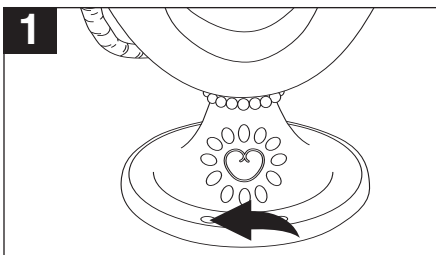 

Press and hold the MUTE button and you will be able to hear the person on the other end of the telephone, but they cannot hear you. Release the MUTE button to restore normal sound.

## PAUSE BUTTON

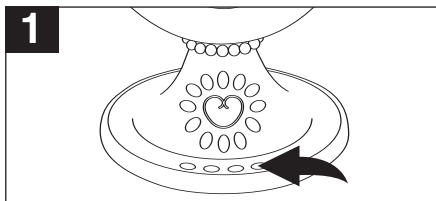 

In some cases, such as a PBX or long distance service, a pause may be needed in the dialing sequence. Pressing the PAUSE button will insert a three second delay between dialed numbers.

## TROUBLESHOOTING GUIDE

Before requesting service, please refer to the following chart and check for the symptom you are experiencing.

**PROBLEM:** No Dial Tone

**SOLUTION 1:** Handset cord is not connected properly; securely connect to the base.

**SOLUTION 2:** Line cord is not connected properly; securely connect to wall telephone outlet and Line In jack on the bottom of the unit.

**SOLUTION 3:** Your phone line is having problems; call the phone company.

**PROBLEM:** Ringer not working or not working properly.

**SOLUTION 1:** RINGER switch is in the OFF position; slide to the ON position.

**SOLUTION 2:** Batteries are weak or dead, so the Disney ring will not sound; replace batteries.

For additional set-up or operating assistance, please visit our website at [www.disneyelectronics.com](http://www.disneyelectronics.com) or contact customer service at (954) 660-7026.

Please keep all packaging material for at least 90 days in case you need to return this product to your place of purchase or Memcorp.

For parts and accessories, contact Fox International at 1-800-321-6993.

Distributed by Memcorp Inc., Weston, FL, Disney Elements © Disney 2004.

Para informacion adicional sobre la configuracion o si necesita asistencia con la operacion del equipo, por favor visitenos en nuestra pagina web [www.disneyelectronics.com](http://www.disneyelectronics.com) o si requiere asistencia directa, comuniquese con nuestro departamento de servicio al cliente al numero (954) 660-7026.

Por favor mantenga todo el material de empaque por lo menos por 90 dias, en caso que usted necesite devolver el producto donde lo compro a directamente a Memcorp Inc.

Para Accesorios o Partes en general, por favor comuniquese con Fox International al numero 1-800-321-6993.

Distribuido por Memcorp inc. Weston, FL, Disney Elements © Disney 2004.

Pour obtenir des informations supplémentaires sur l'installation ou une assistance concernant l'emploi de votre produit, veuillez visiter notre site Web sur [www.disneyelectronics.com](http://www.disneyelectronics.com) ou contacter notre service clientèle au (954) 660-7026.

Veillez conserver tout matériel d'emballage pendant au moins 90 jours au cas où vous devriez renvoyer votre produit à votre revendeur ou directement à Memorex.

Pour les pièces et les accessoires, contactez Fox International at au 1-800-321-6993

Distribué par Memcorp inc. Weston, FL, Disney Elements © Disney 2004.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>