

Operator and Parts Manual

SpeedZTR 36"
Grass Bagger

966 004301

TABLE OF CONTENTS

SAFETY RULES4
ASSEMBLY7
UNPACKING INSTRUCTIONS7
PARTS IDENTIFICATION7
OPERATION11
GENERAL RECOMMENDATIONS 11
BLADE CARE11
STORAGE11
TIPS TO IMPROVE BAGGING11
PARTS12

CONGRATULATIONS on your purchase of a new Grass Bagger. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, please contact your nearest authorized service center/ department. They have competent, well-trained technicians and the proper tools for service and repairs.

Please read and retain this manual. The instructions will enable you to assemble and maintain your Grass Bagger properly. Always observe the "SAFETY RULES".

KNOW YOUR GRASS BAGGER

READ THIS OPERATION MANUAL AND THE SAFE-TY RULES BEFORE ASSEMBLING OR OPERATING YOUR GRASS BAGGER. Compare the illustrations with the carton contents to familiarize yourself with the parts before starting the assembly. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Grass Bagger and to prevent injury to yourself and others. Save this manual for future reference.



WARNING

The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. ALWAYS wear safety glasses or eye shields before starting your mower and while mowing. We recommend a wide vision safety mask for over the spectacles or standard safety glasses.

SAFETY RULES



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



DANGER!

THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

I. GENERAL OPERATION



Look for this symbol to point out important safety precautions. It means:

CAUTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.

- Read, understand and follow all instructions in the manual and on the machine before starting.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, stones, toys, wire etc., which could be picked up and thrown by the blades.
- Be sure the area is clear of all people and pets before mowing. Stop the machine if anyone enters the area.
- Never carry passengers or children even with blades off.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not direct it towards anyone. Do not operate the mower without either the entire grass bagger or the guard in place.
- Slow down before turning.
- Never leave the machine unattended when the engine is running. Always turn off the blades, set the parking brake, stop the engine and remove the key before leaving the machine.
- Turn off blades when not mowing.
- Stop engine before removing grass bagger or unclogging chute.
- Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch out for traffic when operating near or crossing roadways.
- Use extra care when loading and unloading the machine onto a trailer or truck.

- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- **DO NOT** operate mower with grass bagger, unless the front weights are installed.



WARNING

If machine is equipped with a tow hitch, use extreme caution when towing. Never allow children or others in or on towed equipment..

Make wide turns to avoid jack-knifing. Travel slowly and allow extra distance to stop. Do not tow on sloped ground. The weight of the towed equipment may cause loss of traction and loss of control.

Follow the manufacturer's recommendation for weight limits for towed equipment. Do not tow near ditches, canals, and other hazards.

 Keep machine free of grass, leaves or other debris buildup which can touch hot exhaust/engine parts and burn. Do not allow the mower deck to plow leaves or other debris which can cause buildup to occur. Clean any oil or fuel spillage before operating or storing the machine. Allow machine to cool before storage.



WARNING

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SAFETY RULES



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



II. SLOPE OPERATION

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

DO

- Mow up and down slopes (10° Max.), not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use slow speed. Choose a low speed so that you will not have to stop while on the slope.
- Use extra care with grass baggers or other attachments. These can change the stability of the machine.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.

DO NOT

- Do not turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.
- Do not mow near drop-off, ditches, or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- Do not mow on wet grass. Reduced traction could cause sliding.
- Do not try to stabilize the machine by putting your foot on the ground.

III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. **Never** assume that children will remain where you last saw them.

- NEVER allow children to operate the machine.
- Keep children out of the mowing area and under the watchful care of another responsible adult.
- Be alert and turn off the machine if children enter the area.
- Before and when backing, look behind and down for small children.

- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

IV. SERVICE

 The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety



CAUTION

In order to prevent accidental starting when transporting, setting up, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot contact spark plug.

glasses or eye shields while operating your mower or performing any adjustments or repairs. We recommend a wide vision safety mask over spectacles or standard safety glasses.

- Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container.
 - Never remove gas cap or add fuel with the engine running.
 - Allow engine to cool before refueling.
 - Do not smoke.
 - Never refuel the machine indoors.
 - Never store the machine or fuel container inside where there is an open flame, such as a water heater.
- Never run a machine inside a closed area.
- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check there proper operation regularly.
- Keep machine free of grass, leaves, or other debris buildup. Clean oil or fuel spillage. Allow machine to cool before storing.

SAFETY RULES



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS





WARNING

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals know to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.

- Grass bagger components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown.
 Frequently check components and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as shown in the Operator's manual.
- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.

UNPACKING INSTRUCTIONS

- Remove all parts and packing materials from both cartons.
- Check carton contents against list. Be sure all parts are there.

CARTON 1 CONTENTS

1 - Upper Chute
1 - Owner's Manual
1 - Flex Hose
1 - Hanger Bracket
1 - Weight Kit

2 - High Lift Blades 1 - Hose Clamp 2 - Support Straps 1 - Cast Weight


1 - Weight Box1 - Baffle1 - Discharge Adapter1 - Decal

1 - Discharge Mount Bracket

PARTS IDENTIFICATION

CARTON 2 CONTENTS

1 - Cover Assembly 2 - Soft Bag Containers

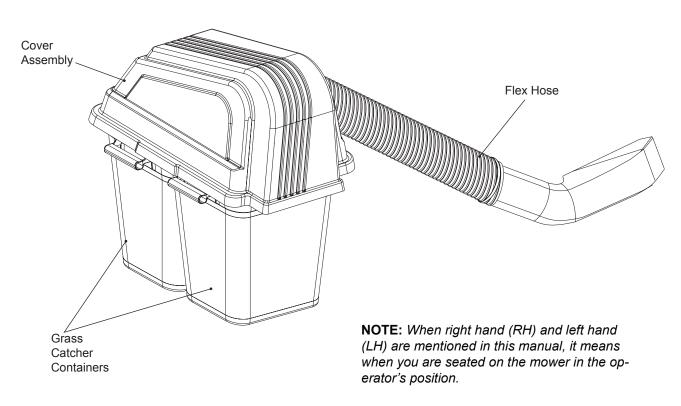



WARNING

BEFORE ASSEMBLING GRASS BAGGER TO MOWER:

- · Set parking brake.
- Place motion control levers in "NEUTRAL" position.
- · Turn ignition key "OFF" and remove key.
- Make sure the blades and all moving parts have completely stopped.
- Disconnect spark plug and place wire where it cannot come in contact with plug.

CHANGING BLADES

WARNING


Blades are sharp. Protect your hands with gloves and/or wrap blades with a heavy cloth when handling.

For the collection system to operate properly you will need to replace the cutting blades on your unit with the high lift blades in the kit.

- Remove mower deck from machine. Refer to Operator's Manual, if necessary.
- 2. Remove standard mower blades from deck and install high lift blades provided to mower deck. Individual preferences may vary, depending on mowing conditions and on the type and heaviness of grass to be bagged.

NOTE: There are two different types of high lift blades with the grass catcher. The blade with highest lift should be put on hub nearest the discharge opening. The blade with the lower lift should be put on the trim side hub.

3. Install rear baffle by aligning with holes at rear

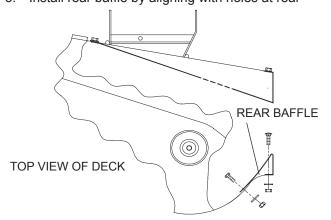


of discharge chute. From inside deck, install 1/4-20 x 3/4" bolt through slotted hole in baffle and extend through deck wall. Attach 1/4 washer and 1/4-20 nyloc nut. Install 5/16-18 x 3/4" carriage bolt in square hole in the same manner and attach 5/16 washer and 5/16-18 nyloc nut. Lift baffle to top of slot and tighten hardware.

4. Spin mower blade several times to check for sufficient clearance. CONTACT BETWEEN BLADE AND BAFFLES MAY RESULT IN SERIOUS INJURY.


DISCHARGE ADAPTER

- Reinstall deck to machine. Refer to Operator's Manual, if necessary.
- Remove grass deflector from mower deck by pulling hairpin cotter and deflector pin.
- 3. Position discharge adapter assembly on deck. Run deflector pin through the deflector spring and the mounting brackets on the deflector and mower deck. Slip spring end through lock slot on the deflector mouning bracket. Secure deflector pin with hairpin cotter.

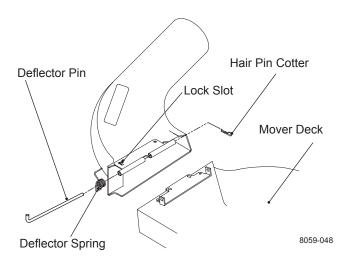

3 BAGGER SUPPORT ASSEMBLY


- Using hardware provided in kit, attach support mount to unit.
- 2. Attach hanger bracket to support mount. Do not fully tighten nuts at this time.
- 3. Secure rear end of support straps to outside of

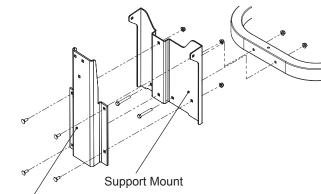

Hanger Bracket

hanger assembly. Set reinforcement plates to the outside of the tank brackets and fasten front end of support strap to tank bracket and reinforcment plate with round head bolt. Secure front end of reinforcement plate to tank bracket with hex bolt. Fully secure all mounting hardware. See illustration.


NOTE: Depending on model, rear guard hole may need to be drilled out to 5/16" if kit hardware is too large.

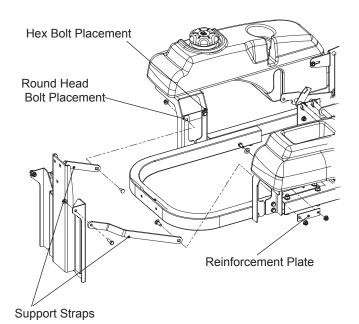

4 MOUNTING COVER ASSEMBLY TO SUPPORT ASSEMBLY


For ease of assembly, you may wish assistance from another person for mounting the cover assembly to mower.

- Position cover assembly on the ground behind the mower.
- Lift and rotate cover to align the frame bracket with the hanger and slide the cover down until secure.

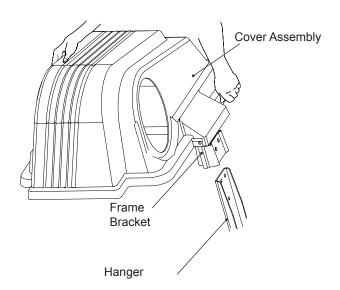


5 INSTALLING SPACER PLUG

Remove plastic end cap from the center bag support arm. Fully insert spacer plugs into the ends of the support tube. It may be necessary to tap the spacer into place with a hammer or mallet. Replace the plastic end cap back over the spacer. The additional extension will hold the hood more securely when latched.

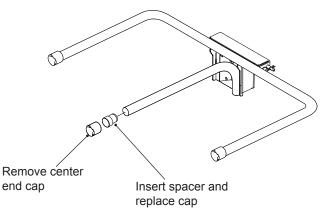

6UPPER CHUTE

- 1. Attached flex tube to blower and secure with the hose clamp.
- 2. Slide opposite flex hose end into upper chute.
- 3. Push upper chute through the gasketed opening in the cover assembly.
- 4. Rotate flex tube and upper chute so that the chute opening is downward toward the container bags.

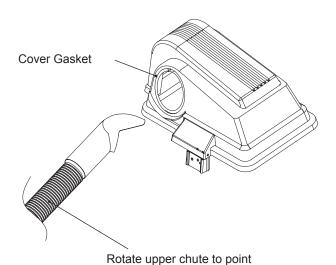

downward toward bags



CAUTION

Do not leave grass in bagger containers. Empty containers after each use and before storing. Failure to do so may result in spontaneous combustion which could develop into a fire.



CAUTION

Grass bagger components are subject to wear, damage and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.

OPERATION

GENERAL RECOMMENDATIONS

Always observe safety rules when performing any maintenance.

- Before each use check for loose fasteners.
- Clean unit thoroughly after each use.

BLADE CARE

For best results mower blades must be kept sharp. Replace bent or damaged blades.

See BLADE CARE instructions in your mower operator's manual.

STORAGE

When grass bagger is to be stored for a period of time, clean it thoroughly, remove all dirt, grass, leaves, etc. Store in a clean, dry place.

TIPS TO IMPROVE BAGGING

Follow the mower operation instructions in your mower operator's manual.

When operating your grass bagger on a lawn where grass and leaf bagging equipment has not been used, you are picking up thatch and debris that has accumulated for long periods of time. The amount collected and the total time of operation may be greater than you will experience with regular use of your grass bagger.

- Always run throttle at full speed when bagging.
- Select a speed low enough to give good mower cutting performance, good quality cut and good bagging performance.

NOTE: It may be necessary to overlap width of cut to suit your conditions.


- If grass is extremely tall, it should be mowed twice.
 The first time relatively high, the second time to desired height.
- Use left hand side of mower for trimming.
- Plastic trash bags (3.0 mil, 30 gallon) can be inserted inside grass bagger containers for ease of debris disposal. To remove the plastic trash bags when full:
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - b. Unlatch and raise cover.
 - Remove one container at a time by grasping container handles and pulling toward the rear, off of the tube rails.
 - d. With the container resting on the ground, close and secure the top of the plastic lawn bag.
 - e. Tip the container on its side and slide the filled bag from the container.

- f. Install a new plastic lawn bag with the edges of the bag draped over upper lip of the Container (for replacement bags refer to REPLACEMENT PARTS).
- g. Repeat for other containers.
- h. Reinstall containers making sure right container overlaps left container at center supports.
- Close cover and secure latches over center support tubes.
- Avoid cutting wet grass or in the morning while the dew is still heavy. Grass clippings collected under these conditions tend to be sticky and adhere to the walls of the flow path causing clogging.
- If the grass bagger fails to pick up cut grass or leaves, it is an indication that clogging has occurred in the system or that the grass bagger containers are full.
 - Disengage blades, place motion control levers in neutral position, engage parking brake and stop engine.
 - Unlatch and raise cover.
 - Slide out containers and dispose of clippings.
 - Replace containers, close cover, and latch.
 - b. Check for clogging.
 - Remove all debris in chute.
 - Reassemble chutes.




CAUTION

- DO NOT operate mower with grass bagger partially installed.
- Disengage blades and stop engine before leaving mower seat to empty containers, unclogging chutes, etc.
- Close cover before starting.
- Disengage mower blades when crossing driveways or gravel surfaces and other areas where thrown objects could be a hazard.
- DO NOT attempt to vacuum up cans or other potentially hazardous projectiles.

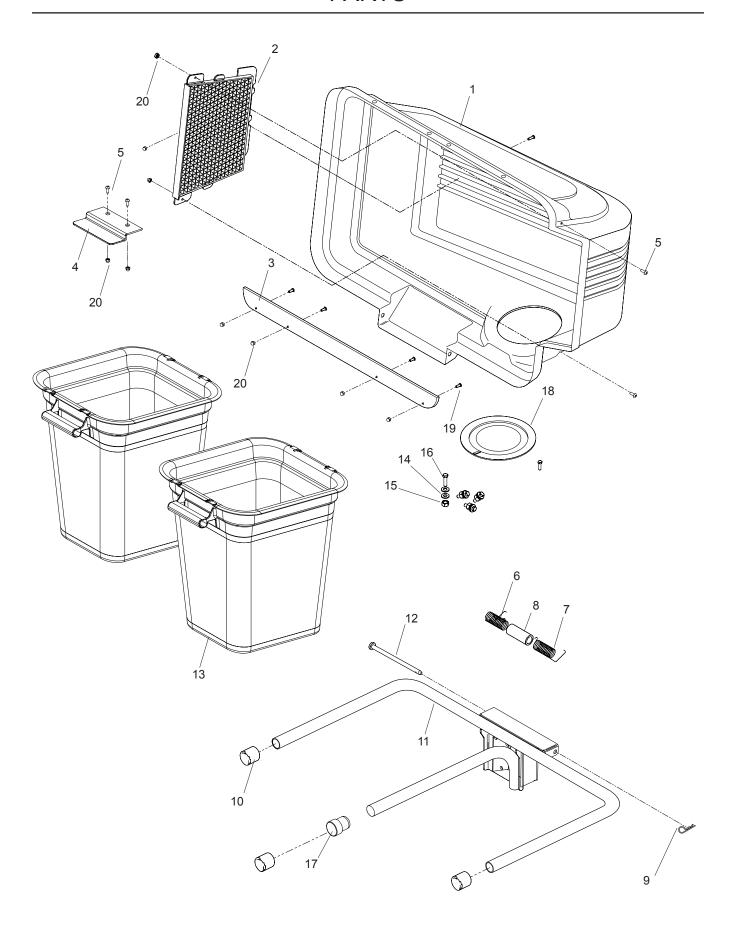

ITEM PART NO	. QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1 539 1111		OVER ASSM, COMPLI	ETE 11	532 17974	61	BAGGER, FRAME
		INCLUDES ITEMS 2-4	12	532 12860	01	PIN, HINGE
2 532 1275	331 S	CREEN, COVER	13	532 40022	62	CONTAINER, SOFT BAG
3 532 1550	1421 S	TRIP, REINFORCEME	NT 14	539 10540	88	WASHER #10 FLAT
4 532 1308	8951 L <i>A</i>	ATCH HANDLE, COVE	R 15	539 97697	74	NUT #10-24 HEX NYLOC
5 539 9769)524 S(CREW #10-24 x ⁵ /8	16	539 10631	24	HMS #10-24 x 3/4
6 532 1327	'961 SI	PRING, COVER, LH	17	522 80130	11	SPACER, PLUG
7 532 1329)831 SI	PRING, COVER RH	18	532 12753	41	GASKET
8 532 1332	:351 SI	PACER, COVER	19	539 10808	314	SCREW #10-24 x ½
9 532 0859	021 SI	PRING, RETAINER	20	539 10808	69	NUT #10-24 ACORN
10 532 1740	1833 C	AP, TUBING END				

NOTE: ALL FASTENERS ARE GRADE 5 UNLESS OTHERWISE SPECIFIED.

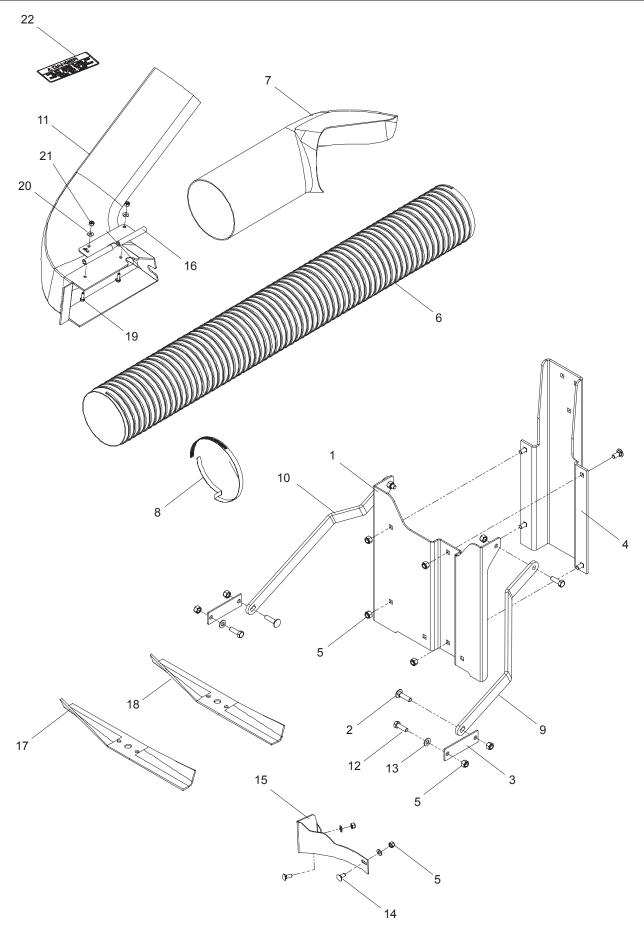

ITEN	I PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	522 854602	1	MOUNT, BAGGER	12	539 99020	94	HCS ⁵ / ₁₆ -18 x 1
2	539 100472	4 ا	RHSNB-18 x 11/4	13	539 99018	34	WASHER 5/16 SAE
3	523 112802	21	PLATE, REINFORCEM	ENT 14	539 99031	36	RHSNB ⁵ / ₁₆ -18 X ³ / ₄
4	522 854702	11	BRACKET, HANGER	15	539 115243	31	BAFFLE
5	539 990717	12 ا	NUT 5/16-18 HEX NYLO	16	539 11671	51	BRACKET, DISCHARGE
6	539 115938	1	FLEX HOSE, 50"	17	539 11524	11	HI LIFT BLADE 36" RIGHT
7	539 131190	1	UPPER CHUTE	18	539 11524	51	HI LIFT BLADE 36" LEFT
8	539 115719	1	HOSE CLAMP	19	539 99058	02	HCS ¼ -20 x ¾
9	522 854502	1	SUPPORT STRAP, LEF	T 20	539 99005	52	WASHER 1/4 SAE
10	522 854402	1	SUPPORT STRAP, RIG	HT 21	539 97697	32	NUT 1/4 -20 NYLOC
11	539 116714	1	ADAPTER, DISCHARG	F 22	539 11540°	11	DECAL, G.C. WARNING



P/N 115 150227 IR 03/10/09

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com