

Eagle•Ranger

 
Flex

USER MANUAL

INDEX

- 1 . External view and description of keys**
- 2. Features and Icon Definitions**
- 3. Turning on the pager**
- 4. Various functions**
 - 4.1. Receive and read messages**
 - 4.2. Message protection and unlock**
 - 4.3.Messages deleting selectively**
 - 4.4. Delete messages**
 - 4.5. Time setting**
 - 4.6. Date setting**
 - 4.7. Alert setting**
 - 4.8. Audio alert setting**
 - 4.9. Time setting of mute receiving**
 - 4.10. Alarm setting**
- 5. Attentions**

1. Appearance

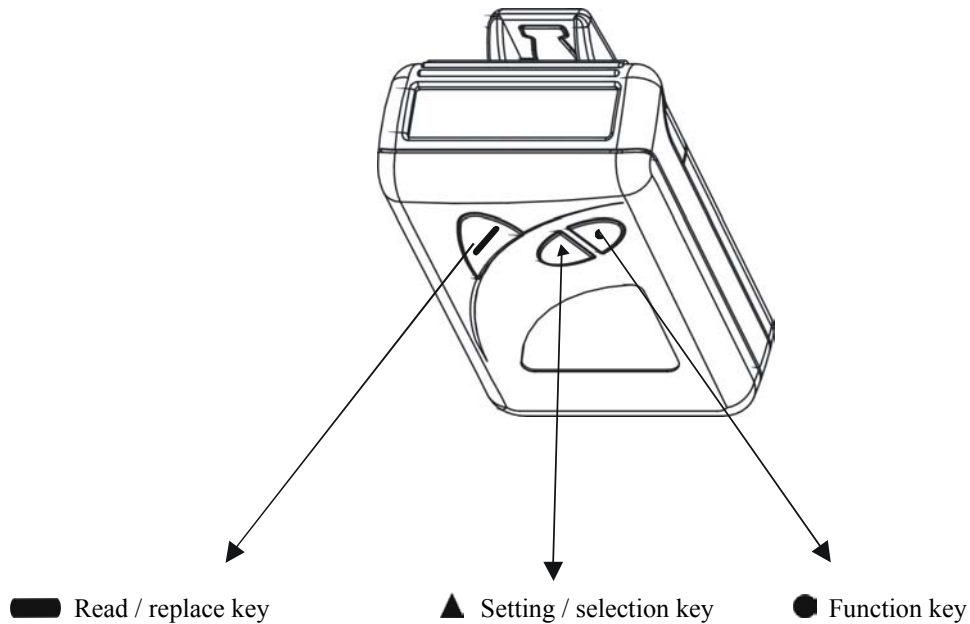

2. Features and Icon Definitions

(a) Features

- ◆ 12 audio alerts
- ◆ Vibration alert
- ◆ 3 alarm settings
- ◆ 4 address codes
- ◆ 15 message memory protection / 20 total
- ◆ 18 characters reception
- ◆ Manual frequency and address code programming
- ◆ Low battery indication
- ◆ Duplicate and unread message indication
- ◆ Message full indication

(b) Icon Definitions

◆ Menu indication icons

- ◀) Sound alert mode is on
- (•) Mute / vibration mode is on
- 🔔 Alarm is on

◆ Message status display icons

- 📄 Message serial number and resource indication icon

- ☞ Message protection \ lock icon
- ▶ Message continued icon
- ☐ Duplicate message icon


◆ **Function selection icons**

 
- ⌚ Time setting
- 🔊 Sound alert setting
- 🔇 Mute / vibration mode setting
- 🔔 Alarm setting
- ✂ Message deletion

◆ **Other display icons**

- 🔋 Low battery warning
- ⚡ Blinking when out of receiving area

3. Turning on the pager


- ◆ After installing the battery, the pager will give out an audio or vibration alert. Press the Read / replace key  then time and date will be displayed on the screen.
- ◆ Turn on the pager to display:




- ◆ Standby mode display while the pager is on audio alert




 - ◆ Standby mode display while the pager is on vibration alert



Now your pager is in standby mode and can receive messages at any time.

 - ◆ In standby mode with date displaying, press the setting / selection key  to display the week as follows:



Press the setting / selection key  to select date or week as the standby mode display.

- ◆ Standby mode display while the pager is turned off:



To turn off the pager, press the function key **●** to select the “OFF?” function. Then press the setting /selection key **▲** to turn off the pager.

4. Various functions

In standby mode, press the function key **●** to start function selection. Press the function key **●** repeatedly till desired function is displayed on the menu, then press the setting /selection key **▲** to confirm that function.

- ◆ “SET ALERT?” function. Please consult “Alert setting”.



- ◆ “OFF?” function.



- ◆ “SET TIME?” function. Please consult “Time setting”.



- ◆ “SET DATE?” function. Please consult “Date setting”.



- ◆ “SET AUDIO?” function. Please consult “Audio alert setting”.



- ◆ “SET ALARM?” function. Please consult “Alarm setting”.



- ◆ “CLEAR ALL?” function. Please consult “Delete message”.



[If no message, all messages locked, or all messages unread, “CLEAR ALL?” function will not be displayed in function options.]

Note: If you want to exit from functions selection without any changes, please press the Read / replace key . The pager will automatically return to standby mode display in 8 seconds if no keys are pressed.

4.1. Receive and read messages

- ◆ Press the Read / replace key to read messages. If there's no message stored in the pager, “NO PAGES” will be displayed .



- ◆ When the pager has received messages, the number of unread messages will be displayed as follows:



This display indicates 2 unread messages. An unread messages alert will remind you of unread messages. The number at the bottom left corner shows the number of received message. Press the read / replace key to display the message.



- ◆ The first part of the message [received message: 861 579 0234, time received: 13:53 noon of April 27.]

The number at the bottom left corner shows its the 8th message. Press the Read / replace key again to display time and date the message was received.



The number at the bottom left corner shows the 1st address code .

- ◆ Press the setting /selection key to read the next message.
- ◆ At any time when you are reading messages, pressing the function key for 5 seconds to return to standby mode. Your pager can automatically store received messages along with their time and date. When stored memory is full, “MEMORY FULL” indication will be displayed in standby mode . Receiving of any new message will lead to permanent deletion of the oldest and unlock message.



If the pager is full of unread messages and one unread message has been deleted by a new received message, an “OVERFLOW” indication will be displayed on the pager.



If the pager receives a duplicate message repeatedly, a duplicate message icon will be displayed to show that the message is a duplicate one. Under such a circumstance, the receiving time of the message will be updated to the latest. If it's the same message from different resources, the two messages will not be regarded as the duplicate.

4.2. Message protection and unlock

You can “lock” or “protect” maximum of 15 messages from being deleted by the new message when memory overflows.

- ◆ In order to lock or protect a message, press the function key **●** while reading the message. When “PROTECT?” emerges on the display, press the setting /selection key **▲** to lock the message. The lock icon shows that the message has been locked.



- ◆ In order to unlock a message, press the function key **●** first, then press the setting /selection key **▲** to unlock the message while reading the message.



Note: “FULL” indication will be displayed when you press the setting /selection key **▲** to protect one more message while already having 15 messages locked.



4.3. Messages deleting selectively

- ◆ In order to selectively delete messages, press the function key **●** twice while reading unlocked messages. Then “DELETE?” indication will be displayed .



- ◆ Press the setting /selection key ▲ to confirm the selective deletion.

4.4. Delete messages

The pager has two way of deleting messages.

- 1) Select “CLEAR ALL?” function to delete all read and unlock messages.
- 2) Select “DELETE?” selectively deleting function to delete some read message.



Press the setting /selection key ▲ to confirm all unlocked read message will be deleted.

Note: “CLEAR ALL?” function will not be displayed in function selection items under the following circumstances:

- 1) No message stored.
- 2) All messages unread.
- 3) All messages have been read and locked.

4.5. Time setting

- ◆ Press the function key ● to display:



- 1) Press the setting /selection key ▲ to move cursor from one blinking position to another.
The order is [HH—>MM—>A / P—>12Hr/24Hr.]
 - 2) Press the function key ● to adjust the digit to the current time.
- ◆ Repeat step 1 and 2 in every position to adjust to correct time.
 - ◆ Press the Read / replace key ■ to confirm your setting.




4.6. Date setting

- ◆ Press the function key ● to display:




- ◆ Press the setting /selection key ▲ to enter date setting mode.
- ◆ Press the setting /selection key ▲ to move from one blinking position to another. The order is [MM—DD—YY].
- ◆ Press the function key ● to adjust the digit in every position to correct date.

- ◆ Repeat above steps in every position to adjust to correct date.
- ◆ Press the Read / replace key  at any time to confirm your setting .





4.7. Alert setting



- ◆ Press the function key  to display:




In the "SET ALERT" function, you can select the following 3 kinds of alert:

- 1) AUDIO alert - Press the Setting / selection key  to set audio alert; or press the function key  to enter next option.




- 2) MOTOR alert - Press the Setting / selection key  to set vibration alert; or press the function key  to enter next option.



- 3) MUTE alert - Press the Setting / selection key  to confirm mute alert and enter mute receiving time setting. In this mode, the received message will only display on the menu without sound or vibration.






 
4.8. Audio alert setting

- ◆ Press the function key  to display:



In the "SET AUDIO?" function, you can select one alert from the 5 alerts or 12 melody alerts for receiving messages or turning on the pager.

 
- ◆ When "SET AUDIO?" function displayed on the screen, press setting /selection key  .
- ◆ Press the function key  until you get your desired alert. After each selection, the pager will give out example alert for about 2 seconds.
- ◆ Press the Setting / selection key  to confirm your selection.



Note: if your pager is in mute or motor status, “SET AUDIO?” function will not appear in function selection items.

4.9. Time setting of mute receiving

You may set mute receiving time for 1 to 10 hours. By the time the pager will give out short alert and change to sound alert receiving mode. Or set permanent mute receiving until resetting other alert mode.



This shows permanent mute receiving. Press the setting /selection key ▲ to confirm this setting or press the function key ● to enter next option.



It shows 1 hour mute receiving. The pager will give out short alert 1 hour later and enter sound alert receiving mode. Press the setting /selection key ▲ to confirm this setting or press the function key ● to enter next option

4.10. Alarm setting

Alarm function may be used for everyday alarm or dating reminder.

- ◆ In “SET ALARM?” function, press the setting /selection key ▲ to enter alarm setting mode.



- ◆ Press the function key ● to select from alarm 1 , 2 or 3.



- ◆ Press the Setting / selection key ▲ to confirm your selection.
- ◆ Press the function key ● to select turning the alarm ON/ OFF.
- ◆ Press the setting /selection key ▲ to move to the position needed changing, then press the function key ● to adjust the alarm time.
- ◆ Repeat the above steps in every position to adjust the alarm time.
- ◆ Press the read / replace key ■ to confirm your alarm setting.

Alarm icon in standby mode or OFF mode shows an alarm is ON. Alarm icon will not display when all alarm released.



The pager will give out alert and display “ALARM” indication and flashing alarm ON icon when any alarm rings at set time.



Note: You can set maximum of 3 alarms. Alarm 1 and 2 is for everyday timed alarm; alarm 3 is for dating reminder, only ringing once at some set time and not repeating ringing the next day.

5. Attentions:

- ◆ Avoid humidity, high temperature, magnetic field and fierce bumping.
- ◆ Please sent to service center for repair.
- ◆ Do not attempt to open the pager for repair .

United Communications Corporation

888-763-7550

www.uccwireless.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>