

Power Pruner[™]

Operator's Manual

MODEL: FOR MODELS

99946400023 4' EXTENSION PP-1200/1250/1260 PPT-2100/2400 PPT-230/231 PPT-260/261 PPT-280 PPT-265 PPT-265S

ENGLISH

ESPAÑOL

FRANCAIS



WARNING

Read rules for safe operation and instructions carefully. ECHO provides an Operator's Manual and a Safety Manual with your original Power PrunerTM. Those manuals and this manual must be read and understood for proper and safe operation.

X7672300101

X767000211 11/09



4 FOOT EXTENSION INSTALLATION

Tools Required: Screwdriver, 3 mm Hex Wrench, Measuring Tape

Parts Required: 1220mm (4 Foot) Extension



WARNING

The Saw Chain is sharp! Always wear gloves when handling the cutting attachment, otherwise serious personal injury may result.

1. Loosen the two (2) screws (A), and locator screw (B) on cutting attachment, and remove the cutting attachment.

(PPT Only)

- 2. Loosen clamp knob (C) turning counter clockwise.
- 3. Pull aluminum housing (D) out of fiberglass housing 610mm (24 in.), then slide (D) back into fiberglass housing approximately 305mm (12 in.) exposing inner drive shaft (E).
- Loosen the extension clamp knob (G) turning counter clockwise. 4.


(All Models)

5. Align inner drive shaft adapter (E) with extension shaft (F).


NOTE


Assure locator hole in extension shaft is oriented on same side as locator hole in aluminum housing (D).

- 6a. Align ridges on aluminum housing (D) with grooves in extension housing.
- 6b. Models PPT-2100/2400/230/231/260/261 Models PP-1200/1250/1260: Slide extension coupling onto aluminum housing (D) until extension stops.
- 6c. Models PPT-265/265S/280: Slide extension coupling onto aluminum housing (D) until coupling stops against rivet in housing.
- 7. Tighten extension clamp knob (G) securely.

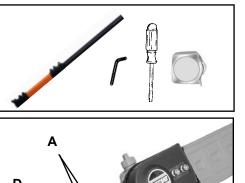



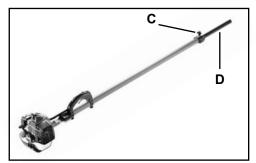

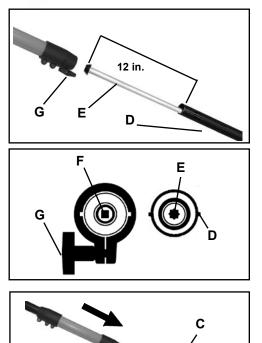

G




8. Align extension drive shaft adapter (H) with cutting attachment shaft (I).

NOTE

Locator screw in cutting attachment must align with locator hole (L) in extension housing (J).

- 9. Align ridges on aluminum extension housing (J) with seams in cutting attachment and slide cutting attachment onto extension housing. Remove locator screw (B) to align locating hole in cutting attachment with locating hole (L) in aluminum extension housing.
- 10. Install and tighten locator screw (B). Tighten two (2) cutting attachment screws (A).

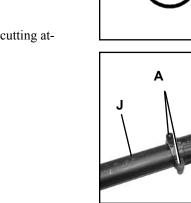

4' Extension Safety Label P/N 89007522761

WARNING ANGER

This Power Pruner® is designed to accept only one estimation. Use of more than one estamision can result in belance and control problems leading to possible personal injury to operator and bystanders and/or unit damage. Refer to the application shart is your Operator's Narwal for approved estamistion and attachment combinations or visit www.acho-use.com.

lee this extension with ECHO Power Pruner" models ONLY.

ADVERTENCIA / PELIGRO

Power Power" está diseñeda para Indiatar con une sola estensión. Si utiliza más de una estensión se pueden produciór problemas de equilibrio y contro use causan posibiles lesiones controlates al operador y a los francesimies yl sónto e la unidad. Para las contribuciones de estensión y accesación probados, concerta la tabás de epideaciones en su Manual del Operador o rísile www.accho-usa.com.

Utilice esta extensión ÚNICAMENTE con los modelos Power Pruner^a de ECA

AVERTISSEMENT AND DANCE

2de Powe Powe Powe do copu pour incorptor grune sole reflexes. L'unese le plusieurs raisogne pour clauter des problems d'appliant et de contrie acceptibles not autientent de later l'opérateur et las presentes et l'operateur sous et later un les laces na aussi d'anchemis pour les payeres. Reporte-vous es tables autres la aces d'anchemisger l'appress. Reporte-vous es tables allanges et d'accessiones, ou visite à site www.ache-use.com.

R

WARNING

- The Power Pruner[™] is designed to accept only one extension. Use of more than one extension or longer shafts can result in balance and control problems leading to possible personal injury to operator and bystanders and/or unit damage.
- Use this extension with ECHO Power PrunerTM models ONLY.

ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:30 am to 4:30 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.



ECHO, Incorporated 400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com