

Communication
Torches/Flashlights
Mobile Computing
Measuring & Calibration

ecom
instruments
Mobile solutions for extreme tasks

Getting Started

i.roc x20 (-Ex)
Pocket PC



Picture: i.roc x20 -Ex



Getting started



1 Do not connect the i.roc x20 Pocket PC to your computer until you have finished installing Microsoft Active Sync on your computer.

2 Charge the battery pack of the i.roc x20 Pocket PC
Do not connect the Pocket PC to you computer untill the battery pack is not fully charged. You have following options to charge the i.roc x20:

2.1 Inside Dockingstation with assembled adaptor



2.2 Using direct connected charger



2.3 Using the USB connection set



3 **Power On**
Press the Power button to turn the unit on.



4 **Set up the device**
When the Windows Mobile screen displays on the screen tap anywhere on the screen and follow the on-screen instructions until setup is complete.

5 **Insert the Companion CD into the computer**
Insert the Companion CD into the computer's CD Rom drive. Click "Start Here". Follow the on-screen instructions. The setup wizard installs following:

- Active Sync 4.x or higher
- Microsoft Outlook (if necessary)
- Other optional software applications

6 **Connect the i.roc x20 Pocket PC to your computer when instructed by setup wizard on the computer**
Therefore connect the USB connection cable to a free USB port on your computer, insert the i.roc x20 into docking station or connect the USB cable to USB connection set.



7 **Establish a partnership**
Follow the on-screen Active Sync instructions to establish a connection between you Pocket PC and your computer or select guest partnership.

Use of HP original documents

The ecom instruments i.roc x20 Pocket PC is based on the HP iPAQ hx2000 Pocket PC family. Therefore all related HP documents or Software updates can be used further on. All modifications regarding the hardware are described within these booklet as good as possible. The use of standard software is equal to the original HP devices.

Resetting the unit

Depending on the i.roc x20 operating system, different resets can be performed. All resets should be performed without connected and powered charger.

Windows Mobile 2003 SE

Performing a Soft-Reset

A Soft-Reset stops all running applications, but does not erase any programs or saved data. Be sure to save any unsaved data with a running application before performing a Soft-Reset.

- *To perform a Soft-Reset press both reset buttons on the keypad*
- *The Pocket PC restarts and displays the today screen*

Performing a Hard-Reset

Perform a Hard-Reset only when you want to clear all user-installed settings, applications, and data from RAM, where data and applications you have loaded are stored. Also after the battery is completely discharged, the device will operate in the same way after Hard-Reset. All i.roc x20 are equipped with a so called AutoInstallation tool, you can reload predefined programs and settings automatically.

- *To perform a Hard-Reset press and hold down the F1 and F4 buttons*
- *While holding down these buttons, press the reset buttons for about two seconds*
- *When the Pocket PC screen begins to fade, release the F1 and F4 buttons first and then release the reset buttons.*
- *The Pocket PC resets and powers on*

Note: If you simultaneously push and hold the Reset, F1 and F4 buttons for more than two seconds, the battery disconnects. To restart the device, either plug the device into the AC Adapter or press the reset buttons again.

Windows Mobile 5

Performing a Soft-Reset

A Soft-Reset stops all running applications, but does not erase any programs or saved data. Be sure to save any unsaved data with a running application before performing a Soft-Reset.

- *To perform a Soft-Reset press both reset buttons on the keypad*
- *The Pocket PC restarts and displays the today screen*

Performing a Hard-Reset

A Hard Reset stops all running applications, but does not erase any programs or saved data. Additional to a soft reset all hardware registers will be erased.

- *To perform a Hard-Reset press and hold down the F1 and F4 buttons*
- *While holding down these buttons, press the reset buttons for about two seconds*
- *When the Pocket PC screen begins to fade, release the F1 and F4 buttons first and then release the reset buttons.*
- *The Pocket PC resets and powers on*

Note: If you simultaneously push and hold the Reset, F1 and F4 buttons for more than two seconds, the battery disconnects. To restart the device, either plug the device into the AC Adapter or press the reset buttons again.

Performing a Clean-Reset

A Clean Reset clears all user-installed settings, applications and data from the device.

- *To perform a Clean-Reset, press and hold F1, F3 and the power buttons*
- *While holding down these buttons, press the reset buttons for about two seconds*
- *When the Pocket PC restarts release first the F1, F3 and power buttons first and then release the reset buttons*
- *The Pocket PC resets and powers on*

System Overview



Front and bottom panel components

- 1 Flat top panel, optional long top panels for adding barcode or RFID modules available
- 2 Wireless / Notification LED indicator
Off = WiFi or Bluetooth are both off
Blue flash = WiFi and / or Bluetooth are on
Green flash = notification events have occurred
- 3 Charge LED indicator
Off = no charging
Red flash = charging
Red solid = charging complete
- 4 Touchscreen
- 5 Power button
- 6 F4 button (HP indication: iTask button)
- 7 F3 button (HP indication: Messaging button)
Starting iPAQ Wireless, press and hold for two seconds
- 8 5 pin charging plug with USB connector (only active with powered charger)
- 9 Speaker and microphone in / outputs
- 10 F2 button (HP indication: Contacts button)
Starting HP Protect Tools, press and hold for two seconds
- 11 F1 button (HP indication: Calendar button)
Switching Landscape / Portrait mode, press and hold for two seconds
- 12 5-Way Navigation button, scrolling through a list or pushing to select (similar to using a joystick)
- 13 F5 button (HP indication: Record button)
Using as trigger button for optional barcode or RFID modules
- 14 2 Reset buttons, for Soft Reset press both buttons at the same time



back and inhousing components*

- 15 serial interface for connecting optional modules*
- 16 SD card expansion slot*
- 17 Typ II CF card slot*
- 18 Stereo-headphone / headset jack (3,5mm)*
- 19 IrDA Infrared port*
- 20 Lower socket for optional handstraps or handgrips*
- 21 Two stylus slots*
- 22 Backcover label, including serial number and device name*
- 23 External socket for connecting external trigger additional to F5 button*
- 24 Upper sockets for optional handstraps or handgrips*
- 25 Battery slot*



i.roc 420
with scannermodule
and optional handgrip
inserted in dockingstation

*not all i.roc x20 types provide full functionality in the way described before or are accessible by enduser

Learning more about the i.roc x20 Pocket PC

for information on ...

see this source ...

Using your Pocket PC

- HP iPAQ hx2000 Pocket PC Family user guide on the related PC Companion CD
 - HP iPAQ hx2000 product side on <http://www.hp.com/country/de>
 - i.roc x20 Productside on <http://www.ecom-ex.com>
-

Bluetooth- and WiFi connections

HP iPAQ hx2000 Pocket PC Family user guide on the related HP Companion CD

Additional programs that can be installed on your Pocket PC

- HP Companion CD
 - i.roc x20 product side on <http://www.ecom-ex.com>
 - Use at application "EcomEdit"
 - User guide for "AutoInstall"
-

Safety precautions and Safety instructions

Document "Safety instructions" on i.roc x20 product side on <http://www.ecom-ex.com>

Information about warranty

Document "Safety instructions" on i.roc x20 product side on <http://www.ecom-ex.com>

CE Conformity

Document "CE Conformity" on i.roc x20 product side on <http://www.ecom-ex.com>

Accessory

On the i.roc x20 product side on <http://www.ecom-ex.com>

Support

E-mail: info@ecom-ex.com
Phone: +49(0) 62 94 / 42 24 - 0

Technical data

On the i.roc x20 product side on <http://www.ecom-ex.com>

WEEE-Reg.-No. DE 934 99306
3500 AL02 A01 01/09 Subject to change without notice!

ecom instruments GmbH · Industriestr. 2 · 97959 Assamstadt · Germany

Tel.: + 49 (0) 62 94 / 42 24 0 · Fax: + 49 (0) 62 94 / 42 24 90 · E-Mail: sales@ecom-ex.com

www.ecom-ex.com

Download from www.Somannuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>