

PC332B Personal CD player with FM radio

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Setup

Battery Power


Requires 2, AA-size, batteries (not included)

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries No mezcle baterías viejas y nuevas No mezcle baterías alcalinas, estándar (carbonozinc) o recargables (ni-cad, ni-mh, etc.).

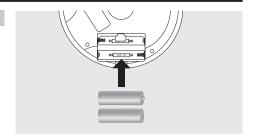

AC Power

 Requires an AC/DC power adapter (not included)



Introduction

Mode

Press to repeat a single track or an entire CD, play tracks in a random order, or play the CD in Intro mode.

Radio Indicator


Displays a light when in Radio mode.

Tuning

Press to tune the FM radio.

Skip/Search

Press to skip between tracks on a loaded CD. Press and hold to search an individual track on a loaded CD.

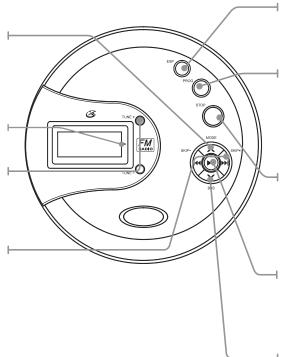

Press to turn on or off the anti-skip protection.

Prog

Press to program a loaded CD to play tracks in a specified order.

Stop

Press to stop a loaded CD during play. In CD Mode, press again to turn the unit off.

Play/Pause

Press to play or pause a loaded disc.

BBS


Press to turn the bass boost system on or off.

(Off)CD/FM

Adjust to switch between (Off)CD and Radio modes.

Open

Adjust to open the CD Door.

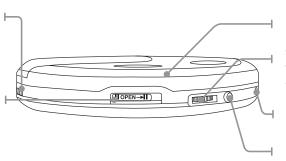

CD Door

Volume

Turn to adjust the volume.

DC Power Input

Stereo Headphone Jack

Loading a CD

- Slide the **Open** switch to open the CD Door.
- 2. Load a CD into the player, label side up.
- Close the CD Door.

Playing a CD

- Follow the instructions for Loading a CD.
- 2. Adjust the (Off)CD/FM switch to the (Off)CD position.
- Press the Play/Pause button.

Programming a CD

- Follow the instructions for Loading a CD and Playing a CD.
- 2. Press the Stop button to stop the CD during play.
- 3. Press the **Prog** button.
- "00" will begin to blink on the display.
- 5. Press the Skip/Search buttons to select the track you wish to program.
- 6. Press the Prog button to save the selected track to the program.
- 7. Repeat steps 4 and 5 to program up to 20 tracks to play in the order they are programmed.
- 8. Press the Play/Pause button to begin playing the programmed tracks.

Radio

Tuning the FM Radio

Adjust the (Off)CD/FM switch to the FM position.

> The Radio Indicator will display a light when in Radio mode.

- Press the Tun -/+ buttons to search for the next available station.
- 3. Press and hold the Tun -/+ buttons to manually adjust the station.

Note: The display will be blank in FM Mode.

Note: To improve radio reception, fully extend the headphone cord.



International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.gpx.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com