



USER'S GUIDE  
V:1602-0715-11



# ONNPD7711B

## Dual 7" DVD Player with Built-in Rechargeable Battery

For the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)

# Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

*La prise du secteur est utilisé pour déconnecter le système.*

*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

*No mezcle baterias viejas y nuevas.*

*No mezcle baterias alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

# Important Safety Instructions

1. Read these Instructions.
  2. Keep these Instructions.
  3. Heed all Warnings.
  4. Follow all instructions.
  5. Do not use this apparatus near water.
  6. Clean only with a dry cloth.
  7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
- 
-  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

## FCC Warnings

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.  
*L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.  
*La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
*Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the rear or back of the apparatus.  
*Attention marquage est situé à l'arrière ou à l'arrière de l'appareil*
- The marking information is located at the rear or back of apparatus.  
*Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.*



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

## DVD Player

### Features

- Two 7" LCD displays
- DVD player: DVD, DVD±R/RW
- CD player: CD, CD-R/RW
- JPEG CD
- Built-in speakers
- Audio/video input
- Audio/video output
- USB port: supports JPEG, MP3, MPEG1, and MPEG2
- SD/MMC memory card reader: supports JPEG, MP3, MPEG1, and MPEG2
- Supports multiple languages and language subtitles
- Two stereo headphone jacks

### Included

- 3.5mm Audio/Video cable
- 3.5mm to 3 x RCA audio/video adapter
- AC/DC power adapter
- DC power car adapter with two DC power cables
- Carry bag
- Remote control: requires 1 CR2025 battery (pre-installed)
- Two sets of stereo earbuds

### Power - Primary Display

- DC power: requires a DC car adapter (included)
- AC power: requires an AC/DC power adapter (included)
- DC battery power: built-in rechargeable lithium-polymer battery

 
 
### Power - Secondary Display

- DC power: requires a DC car adapter (included)
- AC power: requires an AC/DC power adapter (included)


# Table of Contents

<b>DVD Player</b> .....	4
Features	
Included	
Power - Primary Display	
Power - Secondary Display	
<b>Table of Contents</b> .....	5
<b>Introduction - Primary Display</b> .....	6
<b>Introduction - Secondary Display</b> .....	7
<b>Introduction - Remote</b> .....	8
<b>Setup</b> .....	9
Power - Primary Display	
Power - Secondary Display	
Remote	
<b>DVD and CD</b> .....	10
Loading a Disc	
Playing a Loaded Disc	
Programming a Loaded Disc	
Setup Menu Contents	
<b>Memory Card Slot</b> .....	13
Connecting a Memory Card	
Accessing Content on a Memory Card	
<b>USB Port</b> .....	14
Connecting a USB Thumb Drive	
Accessing Content on a USB Drive	
<b>Audio/Video Output</b> .....	15
Connecting the Displays	
Using the 3.5mm Audio/Video Output	
<b>Company Information</b> .....	16
International Support	
Contact Information	
Green Initiative	

## Introduction - Primary Display

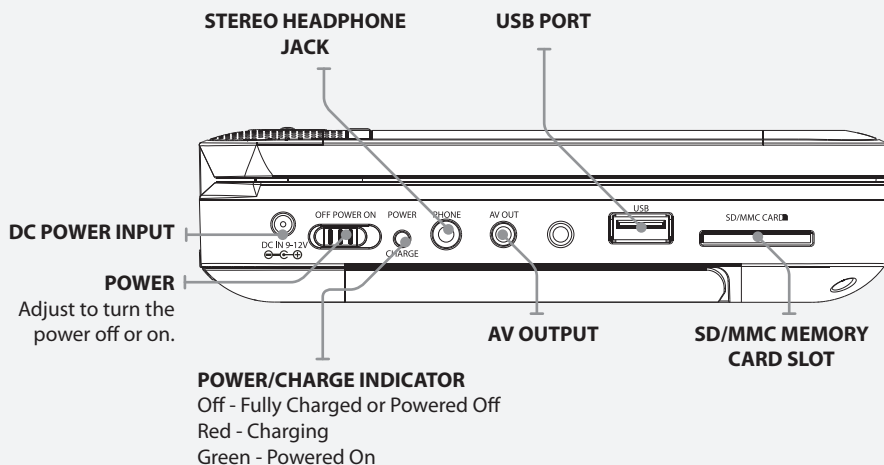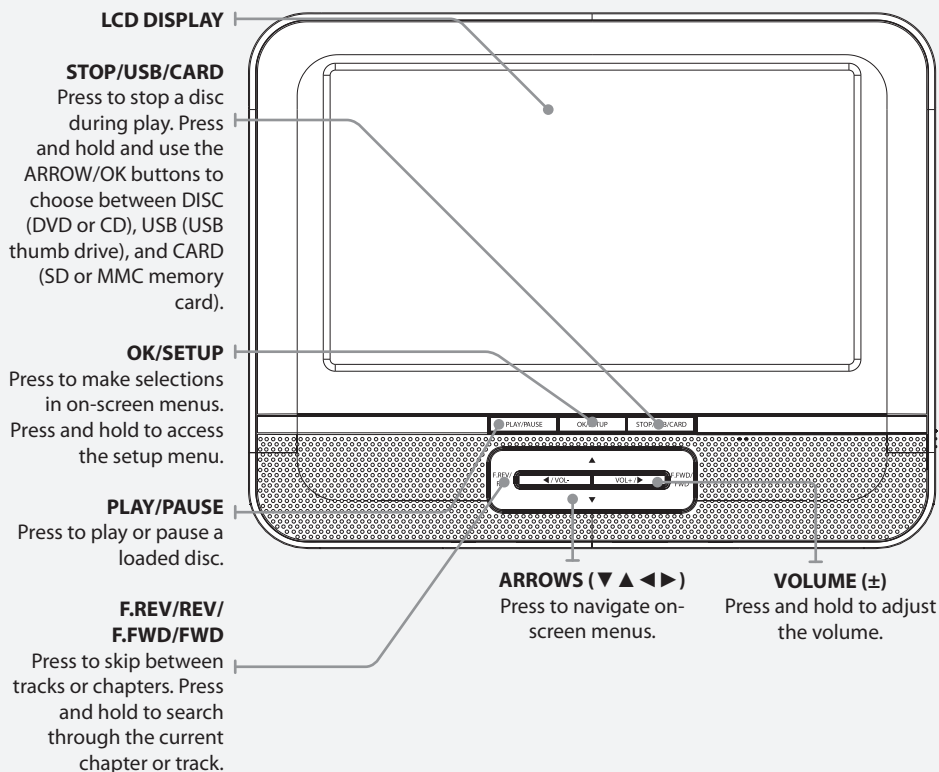

## Introduction - Secondary Display

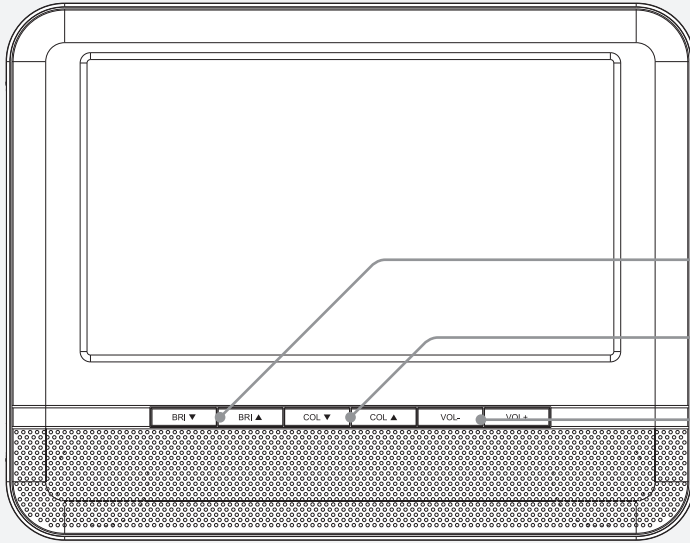 

**BRIGHTNESS (▲▼)**

 
Press to adjust the brightness.

**COLOR (▼▲)**

Press to adjust the color.

**VOLUME (±)**

Press to adjust the volume.

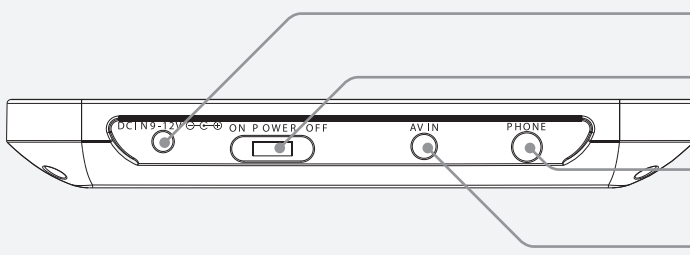

**DC POWER INPUT**

 
**POWER**

Adjust to turn the power off or on.

**STEREO HEADPHONE JACK**

**AV INPUT**

# Introduction - Remote

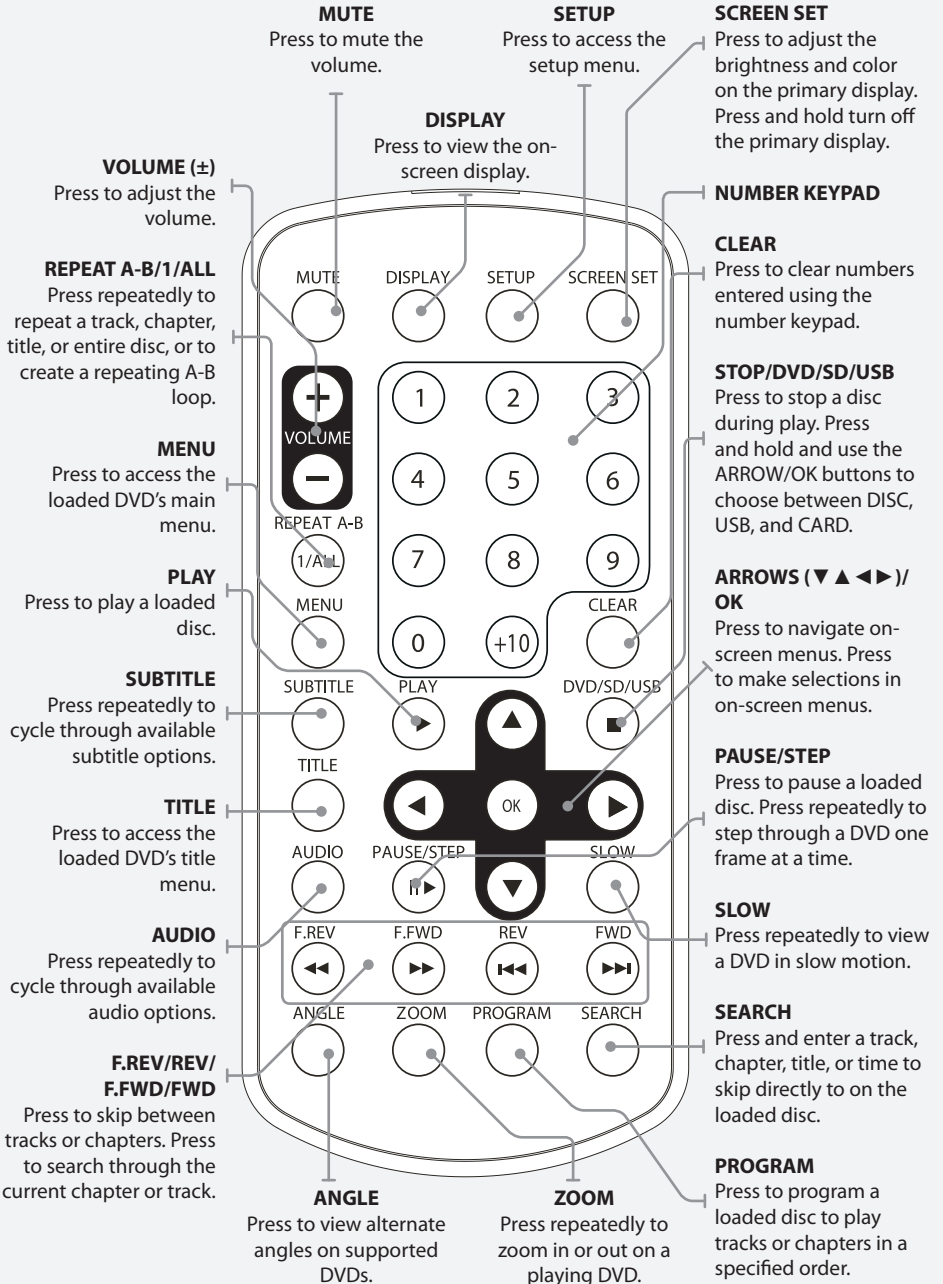




## Setup

### Power - Primary Display

DC power input: requires an AC/DC power adapter (included) or DC car adapter (included)

 DC battery power: built-in rechargeable battery

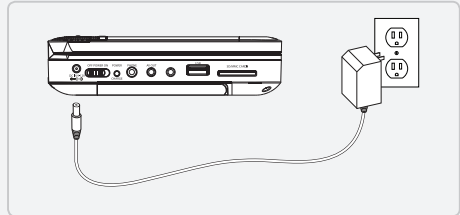

### POWER/CHARGE INDICATOR

 
Off - Fully Charged or Powered Off

Red - Charging

Green - Powered On


### Power - Secondary Display

DC power input: requires an AC/DC power adapter (included) or DC car adapter (included)

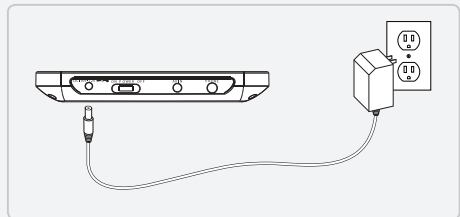

### Remote

 Requires 1 CR2025 battery (pre-installed)

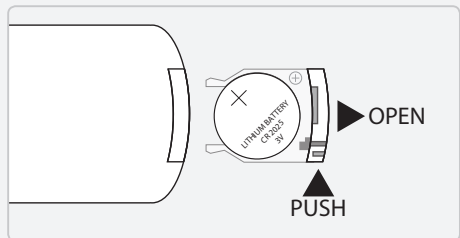


## DVD and CD

### Loading a Disc

1. Manually open the disc door.
2. Load a disc into the DVD player, label side facing up.
3. Manually close the disc door.

 *After a disc is loaded, it will begin playing automatically.*

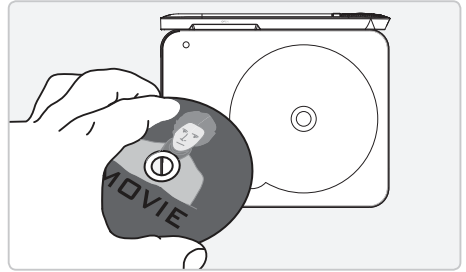

### Playing a Loaded Disc

1. Follow the instructions for [Loading a Disc](#).
2. If the disc does not begin playing automatically, press the **PLAY/PAUSE** button.

## Programming a Loaded Disc

1. Follow the instructions for [Loading a Disc](#) and [Playing a Loaded Disc](#).
2. While the loaded disc is playing, press the **PROGRAM** button on the remote.
3. Use the **NUMBER KEYPAD** and **ARROW** buttons to enter in tracks or chapters and titles in the order you want them to play.
4. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.
5. Highlight the on-screen PLAY button and press **OK** to begin playing the programmed disc.

*Highlight the on-screen CLEAR button and press OK to clear the entered tracks or titles and chapters.*

## Setup Menu Contents

### System Setup

- TV System
- Screen Saver
- TV Type
- Default

### Language Setup

- OSD Language
- Audio Language
- Subtitle Language
- Menu Language

### Video Setup

- Brightness
- Contrast
- Hue
- Saturation

### Speaker Setup

 
- Downmix

## In Car Setup



### Using the Headrest Straps

1. Slide the primary and secondary display into their headrest strap cases.
2. Run the headrest strap through the headrest strap connections on the back of both displays.
3. Tighten the straps around the headrests of a vehicles seats.

#### Primary Display

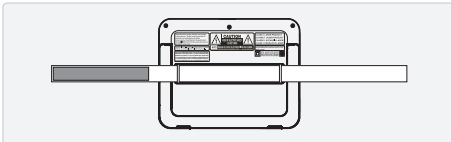

#### Secondary Display

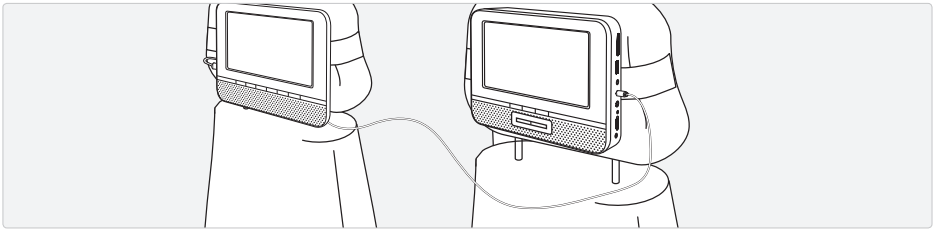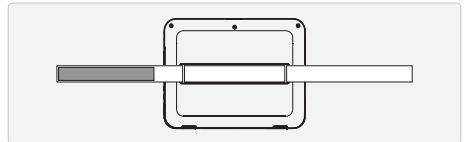  

## Memory Card Slot

 
### Connecting a Memory Card

1. Connect a SD or MMC memory card to the **MEMORY CARD SLOT**.

*Supports: JPEG, MP3, MPEG1, and MPEG2*

### Accessing Content on a Memory Card

1. Follow the instructions for [Connecting a Memory Card](#).
2. Press and hold the **STOP/USB/CARD** button and press the **ARROW** and **OK** buttons to switch to SD mode.
3. Use the **ARROW** and **OK** buttons to select and play content from the connected SD or MMC memory card.

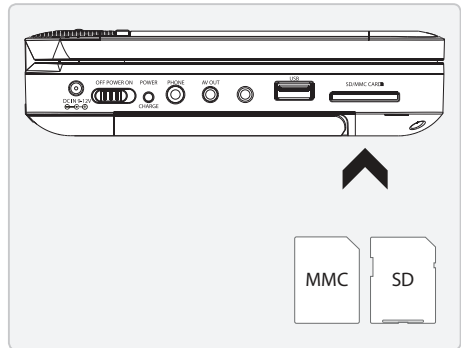

## USB Port

 
### Connecting a USB Thumb Drive

1. Connect a USB Thumb Drive to the **USB PORT**.

*Supports: JPEG, MP3, MPEG1, and MPEG2*

### Accessing Content on a USB Drive

1. Follow the instructions for Connecting a USB thumb drive.
2. Press and hold the **STOP/USB/CARD** button and press the **ARROW** and **OK** buttons to switch to USB mode.
3. Use the **ARROW** and **OK** buttons to select and play content from the connected USB thumb drive.

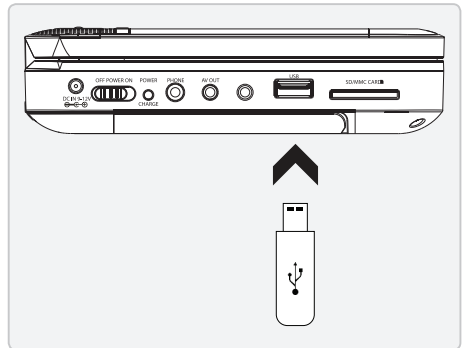

## Audio/Video Output

### Connecting the Displays

Requires a 3.5mm A/V Cable (included)

1. Plug the A/V cable into the **A/V OUTPUT** on the primary display and the **A/V INPUT** on the secondary display.

*The secondary display must be connected to a power source.*

2. Audio and video played on the primary display can now be seen on the secondary display.

### Using the 3.5mm Audio/Video Output

Requires a 3.5mm to 3 x RCA audio/video adapter (included) and an RCA audio/video cable (not included).

1. Connect the 3.5mm to 3 x RCA audio/video adapter to the **3.5mm AUDIO/VIDEO OUTPUT** on the primary display.
2. Connect the RCA audio/video cable to the 3.5mm to 3 x RCA audio/video adapter and the RCA stereo audio inputs and composite video input on a television.
3. Audio and video played through the portable DVD player will now be output through the connected television.

## Company Information

### International Support

To download this User's Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

### Contact Information

**Phone:** 1-888-999-4215

**Email:** [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

**Parts Email:** [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

**Website:** [www.gpx.com](http://www.gpx.com)

### Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>