



## USER'S GUIDE

V:0012-0313-09

C209B

Clock Radio with Intelli Set™

### FEATURES

#### AM/FM Radio

#### Intelli Set™ auto clock set

#### 0.9" amber LED display with dimmer control

#### Auxiliary input

Analog with direct tuning

Rotary volume control

Digital clock with alarm

Wake to radio or buzzer

Snooze and sleep function

Time zone button

Daylight savings time button

Built-in speaker

AC power

Integrated battery backup for digital clock

Keeps time during shipment or when AC power is out

Includes: AC/DC adapter

### IN THE BOX

C209B

AC/DC adapter

 
Documentation

For the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)

### POWER OPTIONS

#### AC POWER


Plug the attached AC power cord into a standard AC outlet to power the unit.

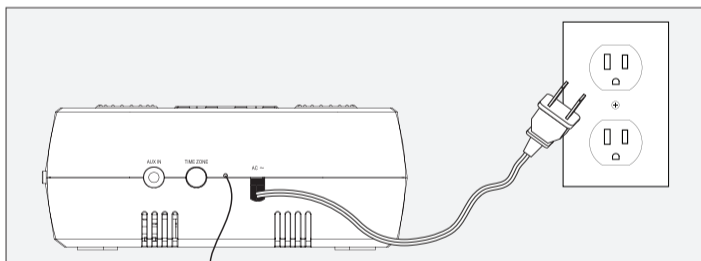

#### BATTERY BACKUP

Requires 1 CR2032 battery (pre-installed)

 The backup battery is for saving the time during brief power outages. The unit cannot perform any of its normal functions when powered off of the backup battery alone.

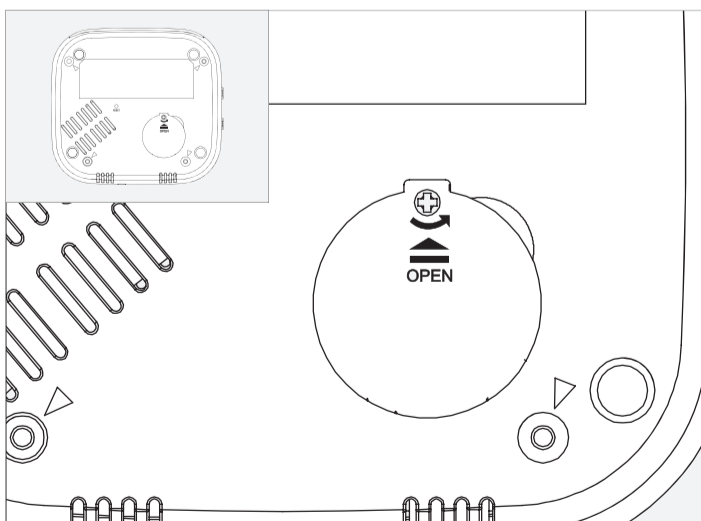




To access the pre-installed backup battery, use a small Phillips-head screwdriver.

### WARNINGS AND PRECAUTIONS

   - **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries. Tum que omante, vid pecesim aximei igingultum pubitere comant. Casta,

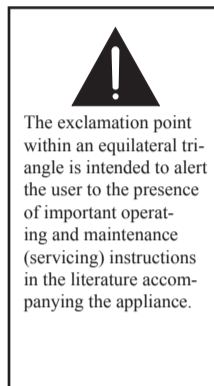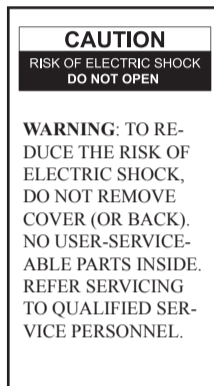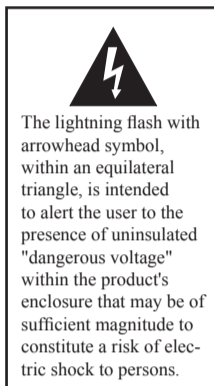

#### Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. *L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.*
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely. *La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.*
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like. *Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.*
- Caution marking is located at the bottom of apparatus. *Les précautions d'emploi sont inscrites en bas de l'appareil.*
- The marking information is located at the bottom of apparatus. *Les marquages sont inscrits en bas de l'appareil.*

### COMPANY INFORMATION

#### INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, visit the support section at [www.gpx.com](http://www.gpx.com).

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en [www.gpx.com](http://www.gpx.com).

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez [www.gpx.com](http://www.gpx.com).

#### SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: [prodinfo@gpx.com](mailto:prodinfo@gpx.com)

Parts Email: [partsinfo@dpi-global.com](mailto:partsinfo@dpi-global.com)

Website: [www.gpx.com](http://www.gpx.com)

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



#### FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## SETTING THE CLOCK

### SETTING THE CLOCK USING INTELL SET™

1. Plug the attached AC Cord into an AC power source.
2. The time will automatically be set to Eastern Standard Time.
3. Press and hold the **Time Zone Button**, located on the back of the unit.
4. While holding the **Time Zone Button**, press the **MIN Button** to adjust the current time zone.

Refer to the Time Zone Chart to find your specific time zone.

### MANUALLY SETTING THE CLOCK

1. Press and hold the **Time Button**.
2. While holding the **Time Button**, press the **HR Button** to adjust the hour, and the **MIN Button** to adjust the minute.

A PM Indicator Light will illuminate green when the time is in the PM.

3. After the correct time is set, release the **Time Button** to finish setting the clock.

	Abbr.	Full Name	Time Zone
A-1	AST	Atlantic Standard Time	UTC - 4 hours
	ADT	Atlantic Daylight Time	UTC - 3 hours
A-2	EST	Eastern Standard Time	UTC - 5 hours
	EDT	Eastern Daylight Time	UTC - 4 hours
A-3	CST	Central Standard Time	UTC - 6 hours
	CDT	Central Daylight Time	UTC - 5 hours
A-4	MST	Mountain Standard Time	UTC - 7 hours
	MDT	Mountain Daylight Time	UTC - 6 hours
A-5	PST	Pacific Standard Time	UTC - 8 hours
	PDT	Pacific Daylight Time	UTC - 7 hours
A-6	AKST	Alaska Standard Time	UTC - 9 hours
	AKDT	Alaska Daylight Time	UTC - 8 hours
A-7	HAST	Hawaii-Aleutian Standard Time	UTC - 10 hours
	HADT	Hawaii-Aleutian Daylight Time	UTC - 9 hours

## OPERATIONS

### SETTING THE ALARM

1. Press and hold the **AL Button**.
  2. While holding the **AL Button**, press the **HR Button** to adjust the hour, and the **MIN Button** to adjust the minute.
- A PM Indicator Light will illuminate green when the time is in the PM.
3. While continuing to hold the **AL Button**, press the **AL Mode Button** to set the alarm mode to *BU* (Buzzer), *RU* (Radio), or *Off*.
  4. After the correct time is set, release the **AL Button** to finish setting the alarm.

- After the alarm sounds, press the **Snooze Button** to delay the alarm for an additional 9 minutes.
- After the alarm sounds, press the **Power/AL Off Button** to turn the alarm off until the set alarm time is reached again.

### SETTING THE SLEEP TIMER

1. Press and hold the **Sleep Button**.
  2. While holding the **Sleep Button**, press the **HR Button** to increase the hour, and the **MIN Button** to decrease the minutes.
- The maximum sleep time is 1 hour 59 minutes.
3. After the sleep time is set, release the **Sleep Button** to finish setting the sleep timer.

At anytime, you can check the remaining sleep time by pressing and holding the **Sleep Button**.

 
### TUNING THE AM/FM RADIO

1. Press the **Power/AL Off Button** to turn the radio on.
- Turn the volume up to see if the unit is turned on or off. If static or the radio plays, then the unit is turned on, if not, then the unit is powered off.
2. Adjust the **FM/AM Switch** to AM or FM.
  3. Turn the **Tuning Dial** to the desired station.
- Turn the **Volume Dial** adjust the volume of the unit.
  - To set the sleep timer when in *Radio Mode*, follow the "Setting the Sleep Timer" instructions.
  - When the Auxiliary Input is connected to an Audio Source, that source will override the radio.

### USING THE AUXILIARY INPUT

1. Plug an MP3 Player or other Audio Source into the **Auxiliary Input** on the back of the unit.
  2. Press the **Power/AL Off Button** to turn the unit on.
- Turn the volume up to see if the unit is turned on or off. If static, the radio, or the connected audio source plays, then the unit is turned on, if not, then the unit is powered off.
- When the Auxiliary Input is connected to an Audio Source, that source will override the radio.

## CONTROLS

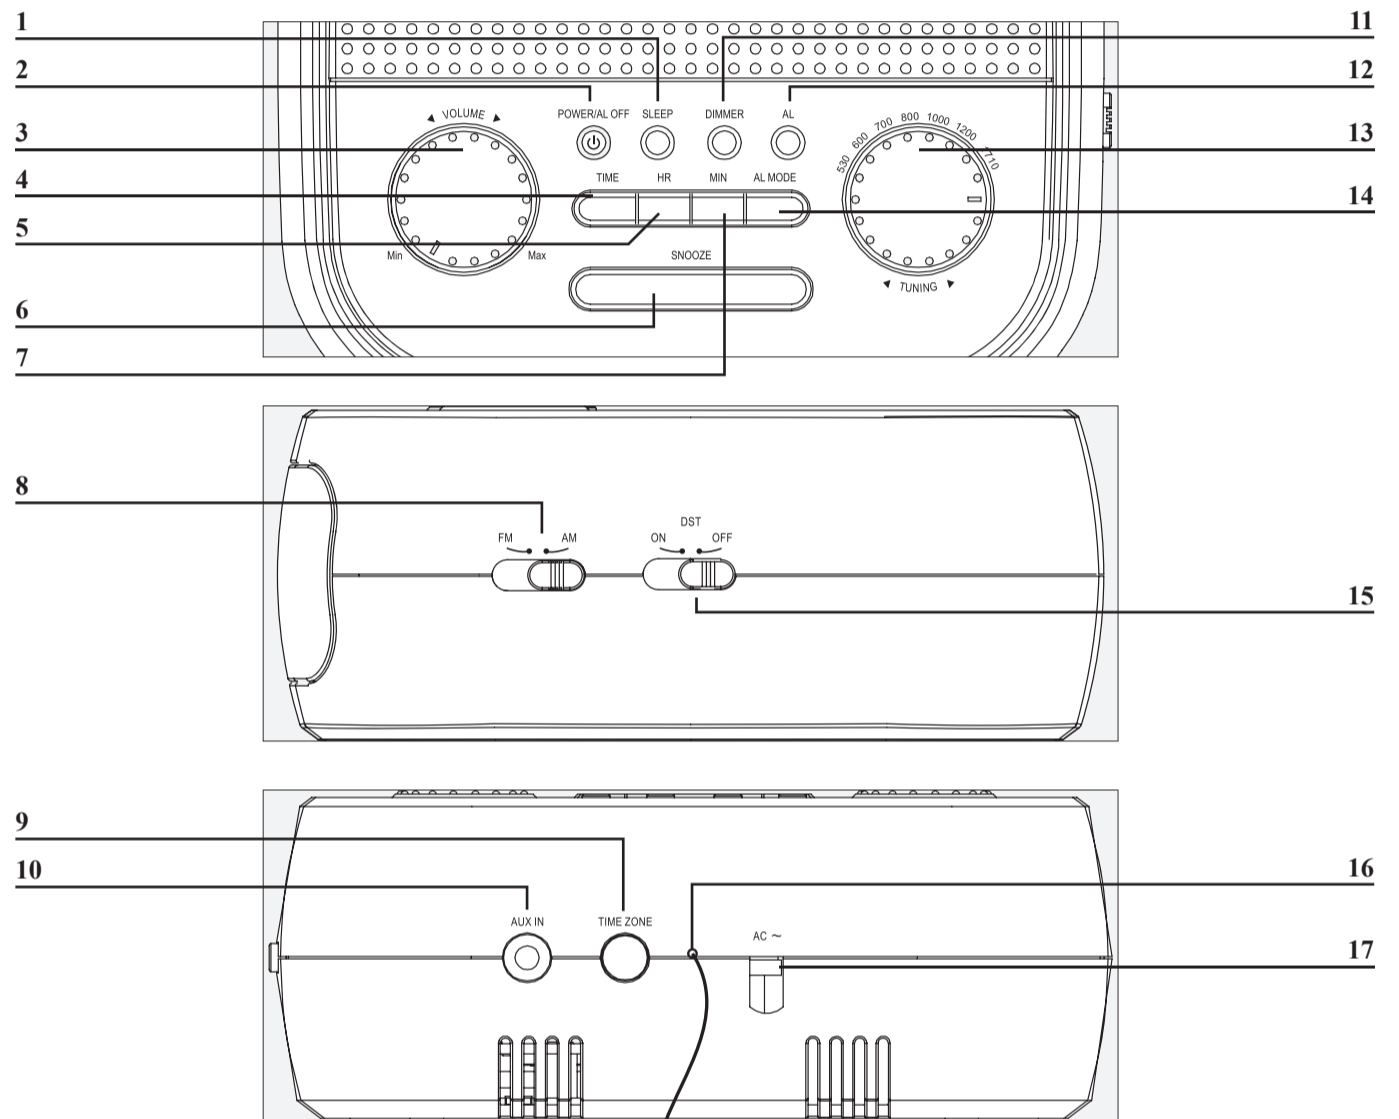

## CONTROL GLOSSARY

- 01. Sleep Button**  
Press the Sleep Button to adjust the sleep timer.
- 02. Power/AL Off Button**  
Press the Power Button to turn the unit on.  
After the alarm sounds, press the **Power/AL Off Button** to turn the alarm off until the set alarm time is reached again
- 03. Volume Dial**  
Turn the Volume Dial to adjust the volume of the unit.
- 04. Time Button**  
Press the Time Button to adjust the unit's time.
- 05. HR Button**  
Press the HR Button to adjust the hour of the time or alarm.
- 06. Snooze Button**  
After the alarm sounds, press the Snooze Button to delay the alarm for an additional 9 minutes.
- 07. MIN Button**  
Press the MIN Button to adjust the minute of the time or alarm.  
While holding the **Time Zone Button**, press the **MIN Button** to adjust the current time zone.
- 08. FM/AM Switch**  
Adjust the FM/AM Switch to select FM or AM radio.
- 09. Time Zone Button**  
Press the Time Zone Button to adjust the time zone.
- 10. Auxiliary Input**  
Use the Auxiliary Input to connect an MP3 player or other audio source to the unit.
- 11. Dimmer Button**  
Press the Dimmer Button to adjust the brightness of the LED display
- 12. AL Button**  
Press the AL Button to set the alarm time.
- 13. Tuning Dial**  
Turn the Tuning Dial to adjust the FM or AM radio station.
- 14. AL Mode Button**  
Press the AL Mode Button to set the alarm mode to *BU* (Buzzer), *RU* (Radio), or *Off*.
- 15. DST Switch**  
Adjust the DST Switch to "On" during Daylight Savings Time to adjust the clock forward an hour.  
Adjust the DST Switch to "Off" at the end of Daylight Savings Time to adjust the clock back an hour.
- 16. FM Wire Antenna**  
Adjust the FM Wire Antenna to improve the FM radio reception.  
An AM Antenna is built into the unit. Adjust the position of the unit to improve AM radio reception.
- 17. AC Cord**  
Use the attached AC Cord to connect the unit to an AC power source.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>