Clock Radio with Dual Alarm

User's Guide for Model C224B v981-01



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines

 
FUNCTIONS AND CONTROLS

Battery Backup ⊢

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone. Requires 2, AAA-size, batteries (not included).

Power


Plug the AC/DC power adapter (included) into the **DC Power Input** on the unit, and a standard power outlet.





Alarm 1 Buzzer/ **Radio Indicator**

Alarm 2 Buzzer/ **Radio Indicator**

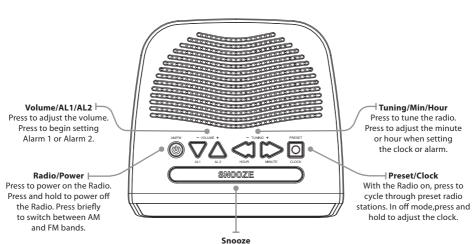

Press to snooze the alarm after it sounds. In on mode, press repeatedly to set the sleep timer.

CLOCK AND SLEEP TIMER

Setting the Clock

- 1. Press and hold the Preset/Clock button until the display begins flashing.
- 2. Press the Hour and Minute buttons to adjust the time. The PM indicator will light when the hour is set in the PM.
- 3. Press the Preset/Clock button again to finish, or wait for the display to stop flashing.

Setting the Sleep Timer

- 1. Power the radio and press the Snooze button to adjust the timer (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF).
- 2. Once the set sleep time has expired the clock radio will automatically power off.

RADIO

Radio Reception

Adjust the position of the FM Antenna to improve FM radio reception. An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio.

Tuning the AM or FM Radio

- 1. Power on the radio and press the **Power** button again to switch between the **AM and FM** radio mode.
- 2. Press the **Tunning** ± buttons to find the desired radio frequency.
- 3. Press the Volume ± buttons to adjust the volume of the radio.

Saving a Station as a Preset

- 1. With the radio on, tune to your desired frequency, press and hold the Preset/Clock button until the screen flashes.
- 2. Press the Tunning ± buttons to choose the desired preset station, 1 though 10.
- 3. Press the Preset/Clock button again to set the frequency to that preset station.
- 4. The unit will store 10 FM and 10 AM radio station presets. Once set, press the **Preset/Clock** button to cycle through your preset stations.

ALARM

Setting the Alarm

- 1. In off mode, press the AL1 or AL2 buttons to set Alarm 1 or Alarm 2.
- The screeen will flash and display the time the alarm is set to go off. Press the Hour and Minute buttons to set the desired time. Note the PM indicator.
- 3. Press the Al1 or Al2 buttons repeatedly to switch between Radio, Buzzer or off. Wait for the display to stop flashing.
- 4. Once the set alarm time is reached, the alarm will sound. Press the **Power** button to turn the alarm off until the set alarm time is reached again.
- 5. To set the other alarm, follow the above steps and choose the alarm not currently set.

Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze** button to delay the alarm for an additional 9 minutes.

OR

Press the **Power** button to turn the alarm off until the set alarm time is reached again.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com