

# Clock Radio with Dual Alarm

User's Guide for Model C303B v997-01



## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

 
 
 
receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- This product is supplied with a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Batteries should be recycled or disposed of as per state and local guidelines.



## FUNCTIONS AND CONTROLS

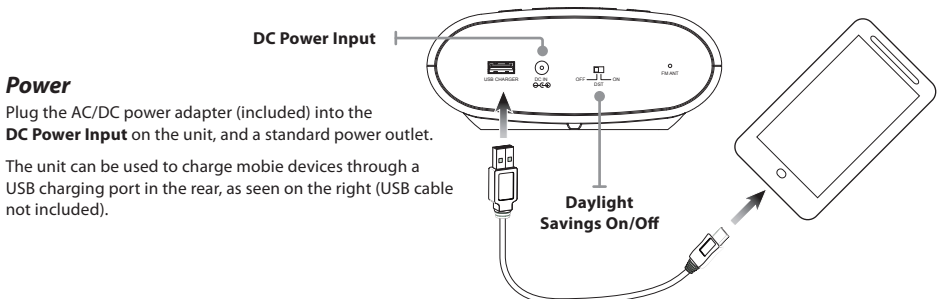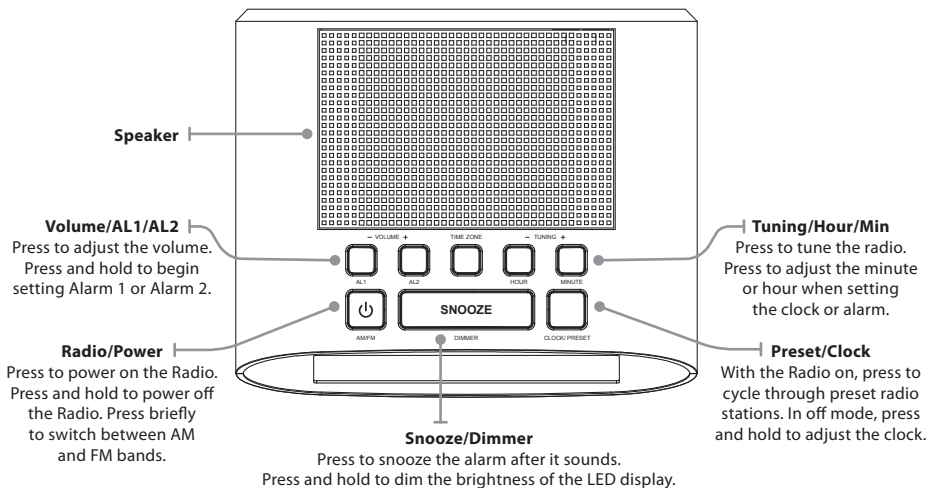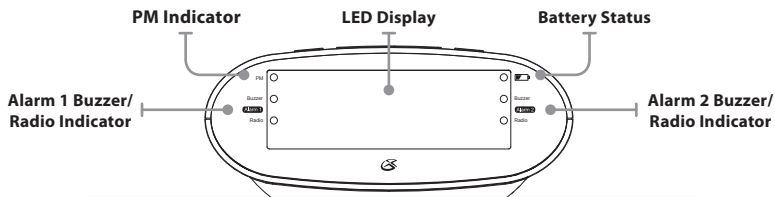

## Battery Backup

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone. This unit uses a button cell battery that will last up to 1 year and maintains the time. Replace the battery if the low battery indicator lights up.

  Bottom View

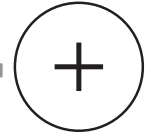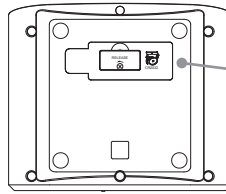

CR2032 Button Cell Battery (included)

## SETTING THE CLOCK

### Auto

When the unit is plugged in, the correct time will be displayed after a few seconds.

### Manual

1. Press and hold the **Clock** button until the display begins flashing.
2. Press the **Hour and Minute** buttons to adjust the time. The **PM indicator** will light when the hour is set in the PM.
3. Press the **Clock** button again set the day of the week. Press the **Hour and Minute** button to adjust the day from 1 to 7. Example: 1 - Monday, 2 - Tuesday, etc.
4. Press the **Clock** button again to finish, or wait for the display to stop flashing.

### Daylight Savings Time

On the rear of the unit is a switch marked **DST ON/OFF**. In the **ON** position, the time on the clock is moved ahead one hour. In the **OFF** position, it is moved back one hour.

### Time Zone

When the unit is first powered on, it is automatically set to Time Zone 2 - Eastern Standard Time. To change this setting, press the **Time Zone** button to select the desired time zone.

1	Atlantic Std Time	UTC- 4 hrs
2	Eastern Std Time	UTC- 5 hrs
3	Central Std Time	UTC- 6 hrs
4	Mountain Std Time	UTC- 7 hrs
5	Pacific Std Time	UTC- 8 hrs
6	Alaska Std Time	UTC- 9 hrs
7	Hawaii - Aleutian Std Time	UTC- 10 hrs

## RADIO

### Radio Reception

Adjust the position of the FM Antenna to improve FM radio reception. An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio.

### Tuning the AM or FM Radio

1. Power on the radio by pressing the **Power** button. Press it again to switch between the **AM and FM** radio mode.
2. Press the **Tuning ±** buttons to find the desired radio frequency.
3. Press the **Volume ±** buttons to adjust the volume of the radio.

### Saving a Station as a Preset

1. With the radio on, tune to your desired frequency, press and hold the **Preset** button until the screen flashes.
2. Press the **Tuning ±** buttons to choose the desired preset station, 1 through 10.
3. Press the **Preset/Clock** button again to set the frequency to that preset station.
4. The unit will store 10 FM and 10 AM radio station presets. Once set, press the **Preset/Clock** button to cycle through your preset stations.

## ALARM

### Setting the Alarm

1. With the radio off, press and hold the **AL1 or AL2** buttons to set the time for Alarm 1 or Alarm 2.
2. The screen will flash and display the time the alarm is set to go off. Press the **Hour and Minute** buttons to change the desired time. Note the **PM indicator**.
3. With the screen still flashing, press the **AL1 or AL2** buttons again to set the weekly alarm schedule.  
1-7 rings Mon-Sun | 1-5 rings Mon-Fri | 6-7 rings Sat-Sun

4. After the alarm is set and the screen has stopped flashing, press the **AL1 or AL2** buttons again to select how the alarm will sound with the Buzzer or the Radio. Press once more to deactivate the alarm entirely.

### Snooze and Alarm Reset

After the alarm sounds, press the **Snooze** button to delay the alarm for an additional 9 minutes, or press the **Power** button to turn the alarm off until the set alarm time is reached again.

## INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: [www.gpx.com](http://www.gpx.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.gpx.com](http://www.gpx.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.gpx.com](http://www.gpx.com)



For Warranty Information and the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)  
Customer Service: 1-888-999-4215 | Email Support: [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com) | Email Parts: [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)  
Copyright © 2013 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>