

USER'S GUIDE

V: 1008-0414-09

C389B
Dual Alarm Clock Radio with Intelli Set™




For the most up-to-date version of this User's Guide, go to www.gpx.com

POWERING THE UNIT

AC/DC ADAPTER


Connect the included AC/DC Adapter to the DC Power Input on the unit and an AC power source to power the unit.

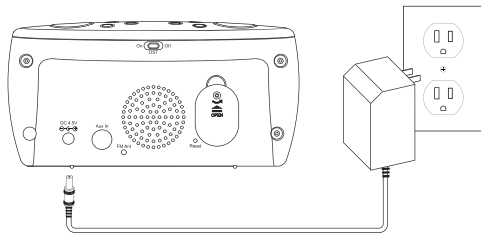

BATTERY BACKUP

Requires a CR2032 battery, pre-installed.

Use a small, Phillips-head screwdriver to open the backup battery compartment.

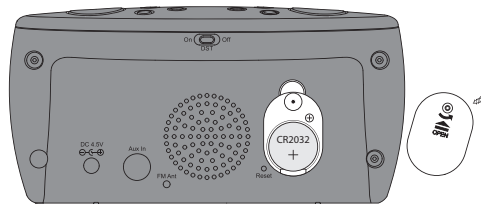

Only replace with same or equivalent type battery.

GENERAL PRODUCT INFORMATION

IN THE BOX

C389B

AC/DC adapter

Pre-installed Backup Battery (CR2032)

Documentation

WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

*No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

OPERATIONS

SETTING THE TIME USING INTELLI SET™

When the unit is first powered on, the time will automatically be set to Eastern Standard Time.

1. Plug the unit into a power source.
2. Press and hold the **Clock Button**.
3. While holding the **Clock Button**, press the **Time Zone Button** repeatedly to cycle through the available time zones.

Refer to the Time Zone Chart below to find your specific time zone.

	Abbr.	Full Name	Time Zone
1	AST	Atlantic Standard Time	UTC - 4 hours
2	EST	Eastern Standard Time	UTC - 5 hours
3	CST	Central Standard Time	UTC - 6 hours
4	MST	Mountain Standard Time	UTC - 7 hours
5	PST	Pacific Standard Time	UTC - 8 hours
6	AKST	Alaska Standard Time	UTC - 9 hours
7	HAST	Hawaii-Aleutian Standard Time	UTC - 10 hours

4. Release the **Clock Button** to finish setting the time.

If you are experiencing issues when attempting to use the Intelli Set™ feature, you can set the clock manually by following the directions on the next page.

SETTING THE TIME MANUALLY

1. Plug the unit into a power source.
2. Press and hold the **Clock Button**.
3. While holding the **Clock Button**, press the **Tun+/Hr Button** and **Tun-/Min Button** to adjust the hour and minute.
4. Release the **Clock Button** to set the adjusted time.

SETTING THE ALARMS

1. With the unit powered off, press and hold the **AL 1/P- Button** (Alarm 1) or **AL 2/P+ Button** (Alarm 2).
2. While holding the **AL 1/P- Button** or **AL 2/P+ Button**, press the **Tun+/Hr Button** and **Tun-/Min Button** to adjust the hour and minute.
3. While holding the **AL 1/P- Button** or **AL 2/P+ Button**, press the **AM/FM/AUX Button** to set the alarm to wake to the buzzer or the AM/FM radio.

If set to AM/FM radio, the alarm will sound to the current radio settings.

4. Release the **AL 1/P- Button** or **AL 2/P+ Button** to set the adjusted alarm time.

OPERATIONS

TUNING THE AM/FM RADIO

1. Press the **Power/AL Off Button** to turn the unit on.
2. Press the **AM/FM/AUX Button** to switch between AM and FM radio modes.
3. Press the **Tun+/Hr Button** and **Tun-/Min Button** to tune the AM or FM radio.

Press and hold **Tun+/Hr Button** and **Tun-/Min Button** to scan for the next available AM or FM radio station.

SAVING A RADIO STATION TO THE UNIT'S MEMORY

1. Tune the AM or FM radio to the desired station.
2. Press the **Memory Button**.
3. Press the **AL 1/P- Button** or **AL 2/P+ Button** to select a numbered preset to save the current radio station to.
4. Press the **Memory Button** to save the current radio station to the selected numbered preset.

Up to 10 AM and 10 FM radio stations can be saved as presets.

5. With the unit powered on, press the **AL 1/P- Button** or **AL 2/P+ Button** to cycle through the saved AM or FM radio stations.

COMPANY INFORMATION

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

© 2009 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice

CONTROL GLOSSARY

TOP OF UNIT

- **Power/AL Off Button**
Press the Power Button to turn the unit off and on.

Press the AL Off Button to turn the alarm off, after it has sounded, until the set time is reached again.
- **AL 1/P- & AL 2/P+**
Press the AL 1 and AL 2 Buttons to set the alarms.

Press the P- and P+ Buttons to cycle through saved preset radio stations.
- **FM/AM/AUX Button**
Press the FM/AM/AUX Button to cycle through the FM, AM, and Auxiliary modes.
- **Clock Button**
Press the Clock Button to set the unit's time.
- **Snooze Button**
Press the Snooze Button to delay the alarm for an additional 9 minutes.
- **AL 1 & AL 2 Buttons**
Press and hold the AL1 or AL2 Buttons to activate alarm 1 or alarm 2.

Preset Button

Press the Preset Button to save the current radio station as a preset.

Up to 10 AM and 10 FM radio stations can be saved as presets.

Time Zone Button

Press the Time Zone Button to cycle through the unit's available Time Zones.

Dimmer Button

Press the Dimmer Button to adjust the brightness of the display.

Tun +/Hr & Tun -/Min Buttons

Press the Tune Buttons to adjust the AM or FM radio station.

Press the Hour and Minute Buttons to set the hour and minute on the clock or alarm time.

BACK OF UNIT

DST Button

Adjust the DST Button to on when your current time zone is in Daylight Savings Time. Adjust the DST Button to off at all other times of the year.

Auxiliary Input

Use the Auxiliary Input to connect an MP3 player or other audio source to the unit.

Press the FM/AM/AUX Button to switch the unit to Auxiliary Mode.

FM Wire Antenna

Adjust the FM Wire Antenna to improve FM radio reception.

An AM antenna is built into the unit. Adjust the position of the unit to improve AM radio reception.

Reset Button

Press the Reset Button using a paperclip or like object to reset the unit to its default settings.

If you are experiencing problems with the unit, pressing the Reset Button is likely the quickest way to solve the issue.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>