



USER'S GUIDE
V:2328-0624-10



JM250S

Karaoke Party Machine

For the most up-to-date version of this User's Guide, go to www.gpx.com

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterias viejas y nuevas.

No mezcle baterias alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or back of the apparatus. *Attention marquage est situé à l'arrière ou à l'arrière de l'appareil*

- The marking information is located at the rear or back of apparatus. *Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.*



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Boombox for iPod with Radio

Features

- CD player: CD, CD-R/RW, CD+G
- 5.5" black and white monitor
- Echo control
- AVC control
- 2 Digit red LED display
- 2 - 6.3mm microphone jacks
- Audio/video RCA input
- Audio/video RCA output
- DC power input: requires an AC/DC power adapter (included)


Included

- Microphone
- Audio/video RCA cable
- AC/DC power adapter

TABLE OF CONTENTS

| | |
|--------------------------------------|-----------|
| Warnings and Precautions | 2 |
| Important Safety Instructions | 3 |
| • FCC Warnings | |
| • Additional Warnings | |
| Boombox for iPod with Radio | 4 |
| • Features | |
| • Included | |
| Introduction | 6 |
| Setup | 8 |
| • Power | |
| CD and CD+G Discs | 9 |
| • Automatic Voice Control | |
| • Loading a Disc | |
| • Playing a Loaded Disc | |
| • Programming a Loaded Disc | |
| Video Input and Output | 10 |
| • Composite Video Input | |
| • Composite Video Output | |
| Audio Input and Output | 11 |
| • RCA Audio Input | |
| • RCA Audio Output | |
| Company Information | 12 |
| • International Support | |
| • Contact Information | |

 Introduction

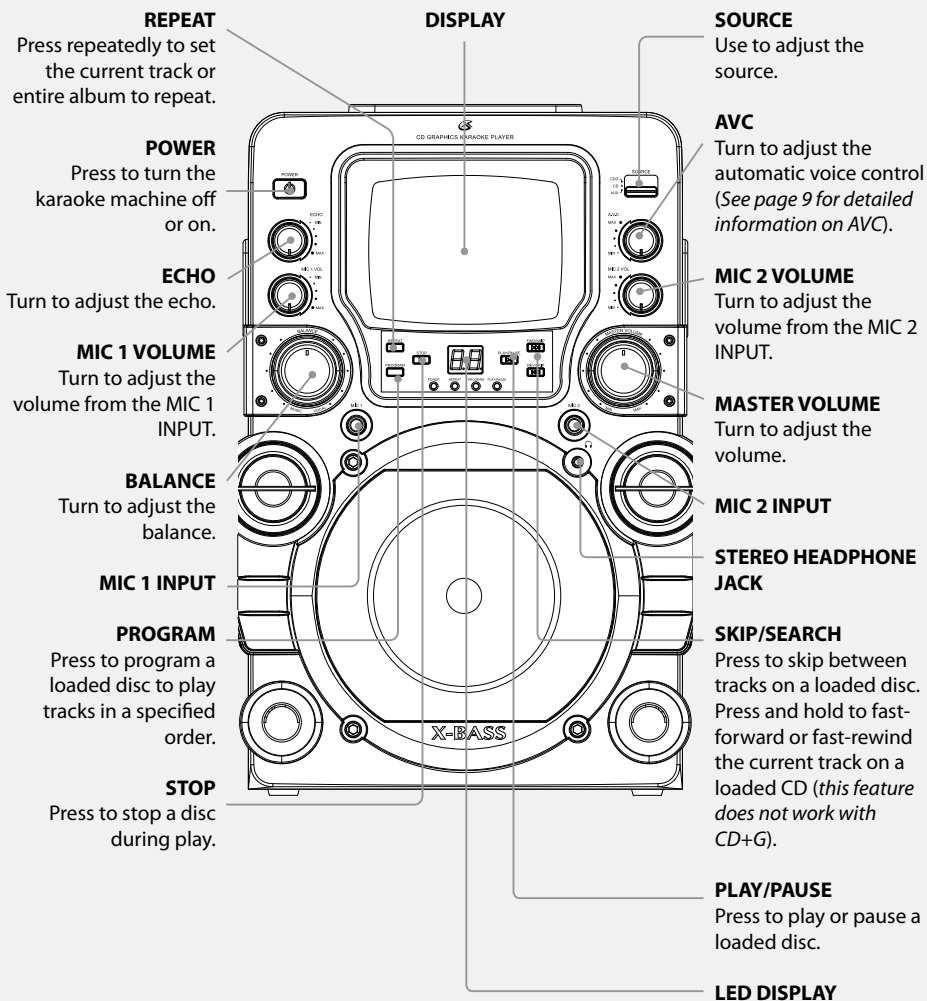

BRIGHT

Turn to adjust the brightness of the LCD display.

CONTRAST

Turn to adjust the contrast of the LCD display.

V-HOLD

Turn to adjust the vertical hold of the LCD display.

 
COMPOSITE VIDEO OUTPUT

RCA AUDIO OUTPUT

DC POWER INPUT

RCA AUDIO INPUT

COMPOSITE VIDEO INPUT

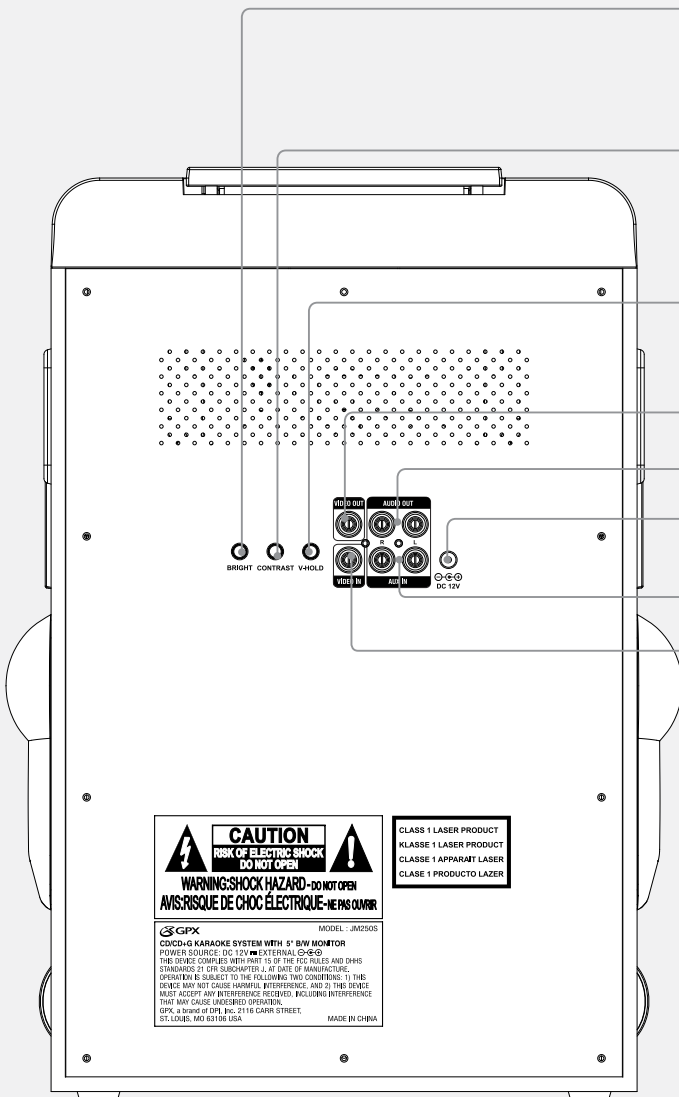

CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN
 WARNING: SHOCK HAZARD - DO NOT OPEN
 AVIS: RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRIR

 
GPX MODEL: JMZ505
CD/CD-G KARAOKE SYSTEM WITH 5" BW MONITOR
 POWER SOURCE: DC 12V EXTERNAL CH-DC
 THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES AND CEHS STANDARDS 21 CFR SUBCHAPTER J, AT DATE OF MANUFACTURE.
 OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
 GPX, a brand of DPL, Inc., 2116 CARR STREET, ST. LOUIS, MO 63105 USA. MADE IN CHINA.

CLASS 1 LASER PRODUCT
 KLASSE 1 LASER PRODUCT
 CLASSE 1 APPARAT LASER
 CLASE 1 PRODUCTO LAZER

Setup

Power

Plug the included AC/DC power adapter into the **DC POWER INPUT** and an AC power outlet to power the karaoke machine.

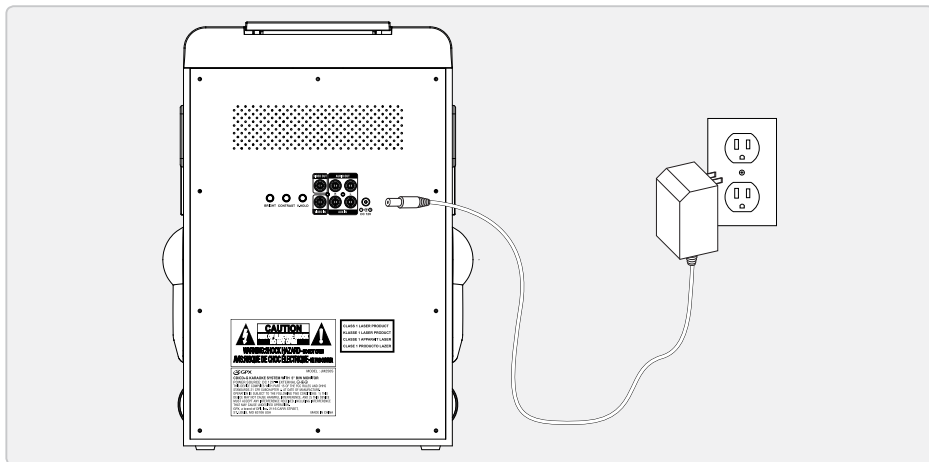

CD and CD+G Discs

Automatic Voice Control

The **AVC** (Automatic Voice Control) dial adjusts the volume of the unit to compensate for varying levels of volume from the microphone. Turn the dial to adjust the degree to which the Automatic Voice Control compensates for variations in volume.

Loading a Disc

1. Press the **OPEN/CLOSE** button on the CD door.
2. Load a CD, CD-R/RW, or CD+G disc into the karaoke machine, label side facing up.
3. Close the CD door.

Playing a Loaded Disc

1. Follow the instructions for [Loading a Disc](#).
2. Adjust the **SOURCE** switch to CD+G or CD mode.
3. Press the **PLAY/PAUSE** button to begin playing the loaded disc.

Programming a Loaded Disc

1. Follow the instructions for [Loading a Disc](#) and [Playing a Loaded Disc](#).
2. Press the **STOP** button to stop the loaded disc.
3. Press the **PROGRAM** button.
4. Press the **SKIP/SEARCH** buttons to select a track from the loaded disc.
5. Press the **PROGRAM** button to add the selected track to the program.
6. Repeat steps 4 and 5 to program up to 20 tracks to play in a specified order.
7. Press the **STOP** button to cancel a program.

Video Input and Output

Composite Video Input

Requires an RCA video cable (included)

1. Connect an RCA video cable to the **COMPOSITE VIDEO INPUT** on the karaoke machine and a video output on an external video source.
2. Adjust the **SOURCE** switch to AUX mode.
3. Use the native controls on the external video source to play and control video.

Composite Video Output

Requires an RCA video cable (included)

1. Connect an RCA video cable to the **RCA VIDEO OUTPUT** on the karaoke machine and a video input on a television.
2. Adjust the television source to the input used in step one.
3. CD+G lyrics played through the karaoke machine will now be seen on the connected television.

Audio Input and Output

RCA Audio Input

Requires an RCA audio cable (included)

1. Connect an RCA audio cable to the **RCA AUDIO INPUT** on the karaoke machine and an audio output on an external audio source.
2. Adjust the **SOURCE** switch to AUX mode.
3. Use the native controls on the external audio source to play and control audio.

RCA Audio Output

Requires an RCA audio cable (included)

1. Connect an RCA audio cable to the **RCA AUDIO OUTPUT** on the karaoke machine and an audio input on an external stereo system.
2. Adjust the external stereo systems source to the input used in step one.
3. Audio played through the karaoke machine will now be heard through the connected stereo system.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215

Email: proinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>