

ML451B Digital Media Player

For the most up-to-date version of this User's Guide, go to www.gpx.com

Digital Media Player

Features

- Digital audio: MP3, WMA (non-DRM), WAV
- Digital video: MP4, MTV
- Digital photos: JPEG, BMP
- eBooks: TXT
- 4GB installed flash memory
- Virtual hard drive
- 1.44" TFT LCD display
- Resolution: 128 x 128
- Built-in microphone
- Voice recording
- Hold function
- System requirements: Windows 2000, Windows XP, Windows Vista, Windows 7
- Preset EQ
- Mini-USB port, 2.0 high speed
- Stereo headphone jack
- DC battery power: built-in rechargeable lithium ion battery
- Battery life: ~12 hours audio, ~4 hours video

Features


- Mini-USB to USB cable
- One set of stereo earbuds
- Warranty
- User's guide

Setup

Power

DC battery power: built-in rechargeable battery

Connect the digital media player to a computer using a USB cable (included) to a computer to charge.

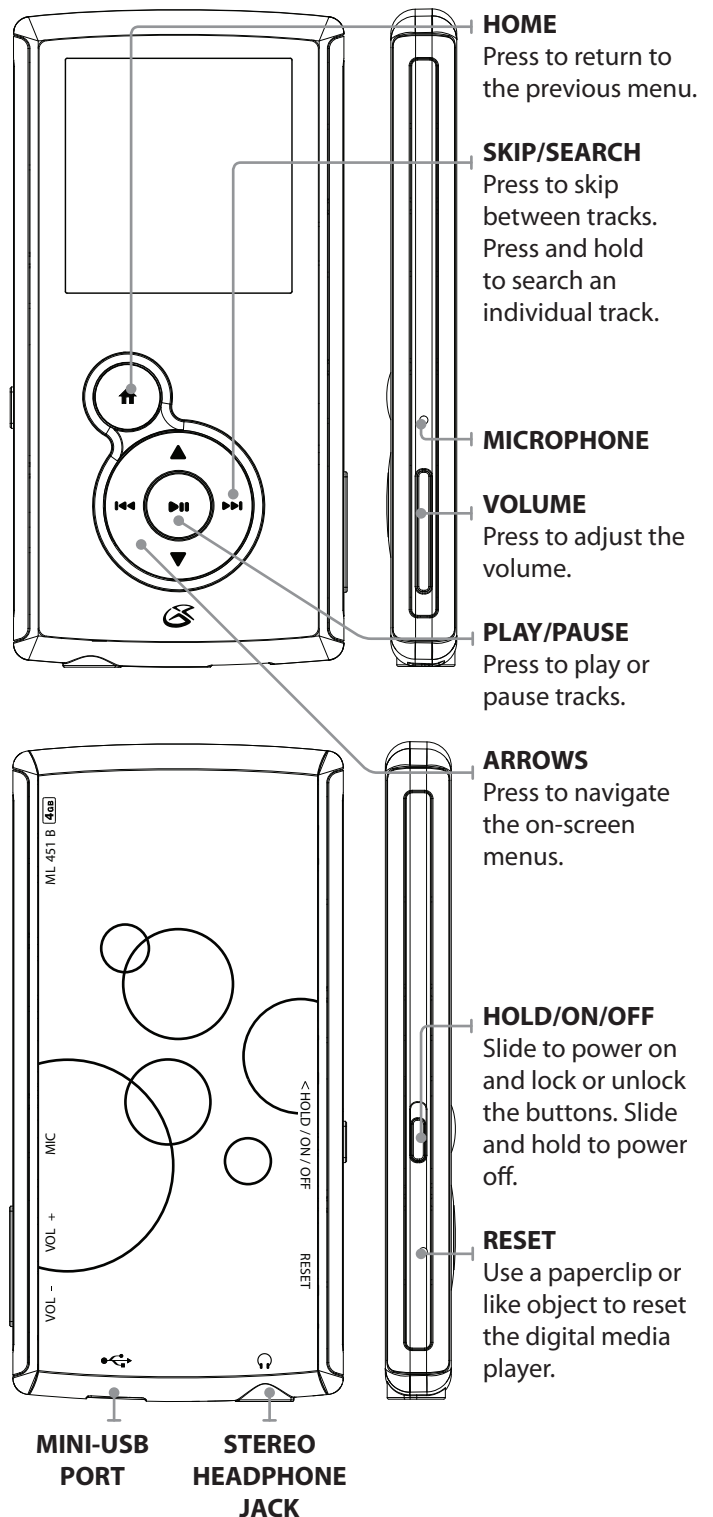

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Digital Media Player - Basic Operations

Loading Files

1. Connect the digital media player to a computer using the **MINI-USB** connection and a USB cable (included).
2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, external hard drive, or memory card.
3. Drag and drop the desired audio, video, photo, or ebook files into the unit's drive location on the connected computer.

File Compatibility:

MUSIC: MP3, WMA

VIDEO: MTV

VOICE: WAV

PHOTOS: JPEG, BMP

EBOOK: TXT

4. After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the USB cable.

Music

1. Slide the **HOLD/ON/OFF** button to power the player on.
2. Press the **ARROW** buttons to navigate to the Music icon on the main menu and press the **PLAY/PAUSE** button.
3. Press the **PLAY/PAUSE** button to begin playing music from your digital media player.

Photos

1. Slide the **HOLD/ON/OFF** button to power the player on.
2. Navigate to the Photos icon on the main menu and press the **PLAY/PAUSE** button.
3. Use the **ARROW** buttons to highlight a photo. Press the **PLAY/PAUSE** button.
4. Press the **SKIP/SEARCH** buttons to skip between photos on the digital media player.

Creating a Recording

1. Slide the **HOLD/ON/OFF** button to power the player on.
2. Press the **ARROW** buttons to navigate to the Recordings icon on the main menu and press the **PLAY/PAUSE** button.
3. Press the down **ARROW** button to begin a new recording.
4. Press the **HOME** button to save the recording.
5. Press the **PLAY/PAUSE** button to begin playing music from your digital media player.

Playing Saved Recordings

1. Follow the instructions for [Creating a Recording](#).
2. Slide the **HOLD/ON/OFF** button to power the player on.
3. Press the **ARROW** buttons to navigate to the Recordings icon on the main menu and press the **PLAY/PAUSE** button.
4. Press the **PLAY/PAUSE** button to begin playing recordings from your digital media player.

Digital Media Player - Basic Operations

Videos

1. Slide the **HOLD/ON/OFF** button to power the player on.
2. Press the **ARROW** buttons to navigate to the Video icon on the main menu and press the **PLAY/PAUSE** button.
3. Press the **PLAY/PAUSE** button to begin playing videos from your digital media player.

Loading the Video Conversion Software

System Requirements: Windows 98, ME, or XP

1. Connect the digital media player to a computer (Windows, Apple, or Linux) using the **MINI-USB** connection and the included USB cable.
2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, external hard drive, or memory card.
3. Windows will ask you if you want to run and install VideoConvert.exe. Install the video conversion software.

Using the Video Conversion Software

System Requirements: Windows 2000, ME, or XP

1. Follow the "Running Video Conversion Software" directions on the previous page.
2. After the program opens, click on the "Input Video" button in the Video Converter software.
3. Browse to and double-click on any of the following video file types:
AVI, WMV, ASF, MPG, MOV, QT, VOB, RM, RMVB, MPEG4, 3GP
4. Click on "Output Video" to select a destination for the converted video file.
5. Click "Start Conversion" to begin converting the selected video file.
This video conversion software may be blocked by some anti-virus applications. If you are experiencing issues when attempting to run this program, please disable your anti-virus software or try using another computer. Re-enable your anti-virus software immediately after you finish using the video conversion software.
Please note, disabling your anti-virus software exposes your computer to potential threats. Disable at your own risk.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>