



USER'S GUIDE

BC219B
PORTABLE CD PLAYER WITH AM/FM RADIO

CONTENTS	
WARNINGS AND PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	2
» QUICK START	3
CD/AUX MODE	3
AM OR FM MODE	3
GENERAL PRODUCT INFORMATION	4
IN THE BOX	4
FEATURES	4
POWERING THE UNIT & REMOTE	5
UNIT POWER OPTIONS	5
REMOTE POWER OPTIONS	5
OPERATIONS	6
PLAYING A CD	6
PROGRAMMING A CD	6
OPERATIONS	7
TUNING THE AM/FM RADIO	7
USING THE AUXILIARY INPUT	7
UNIT CONTROLS & FEATURES	8
UNIT CONTROL GLOSSARY	9
REMOTE CONTROLS & FEATURES	10
REMOTE CONTROL GLOSSARY	11
COMPANY INFORMATION	12
GREEN INITIATIVE	12
INTERNATIONAL SUPPORT	12
SERVICE INFORMATION	12

For the most up-to-date version of this User's Guide, go to www.GPX.com



WARNINGS AND PRECAUTIONS



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class I laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.

WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding -type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
14. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
15. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

16. Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
17. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
18. Excessive sound pressure from earphones and headphones can cause hearing loss.
19. Des pressions acoustiques excessives provenant d'écouteurs ou de casques peuvent provoquer des pertes de l'audition.
20. To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.



 
 
21. Symbol is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reasons.






22. This symbol indicates that this product incorporates double insulation.
23. Caution marking is located at the rear of apparatus.

Les précautions d'emploi sont inscrites en bas de l'appareil.

1. Plug the BC219 into an AC outlet or insert 8 C batteries into the battery compartment.

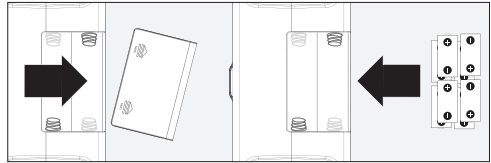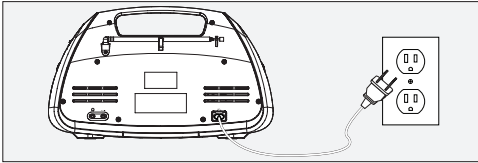


   2. Adjust the **Source Switch** on the side of the unit to *CD/Aux*, *AM*, or *FM mode*.

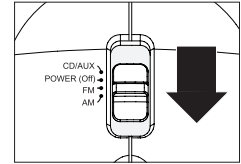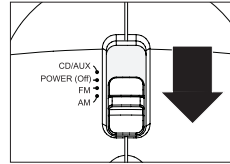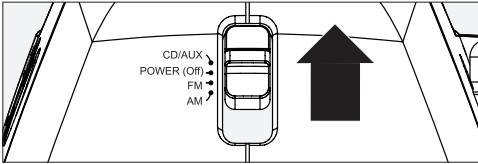


■ CD/AUX MODE

 1. Open the **CD Door** and load a CD into the unit.

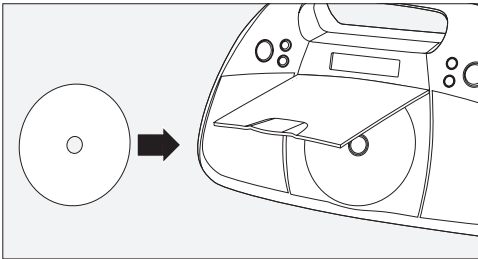


 2. Press the **Play/Pause Button** to begin playing the loaded CD.

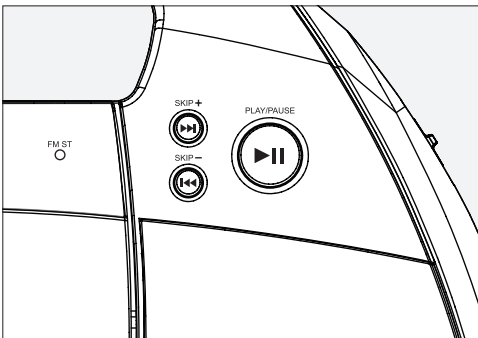


■ AM OR FM MODE

 1. Extend the FM antenna to improve FM reception. An AM antenna is built into the unit. Adjust the position of the unit to improve AM reception.

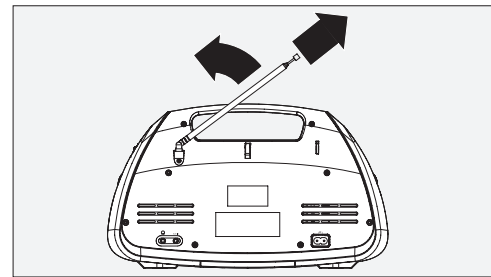

 2. Turn the **Tuning Dial** to adjust the AM or FM radio station.

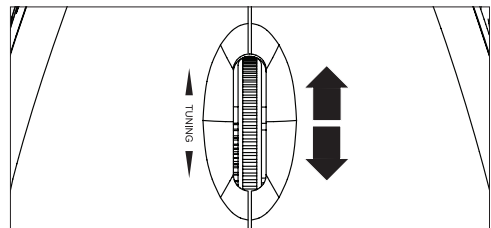

GENERAL PRODUCT INFORMATION

IN THE BOX

BC219 - Portable CD Player with AM/FM Radio

Remote Control

Detachable AC Cord

User's Guide & Warranty

FEATURES

CD player: CD, CD-R/RW

AM/FM stereo radio with digital readout

Auxiliary input

Remote

Programmable CD tracks

Repeat play

Analog volume control

Built-in stereo speakers

Stereo headphone jack

AC power

DC power: requires 8 C batteries, not included

 
Includes: detachable AC cord, remote control

POWERING THE UNIT & REMOTE

UNIT POWER OPTIONS


AC Power

Detachable AC Cord (included)

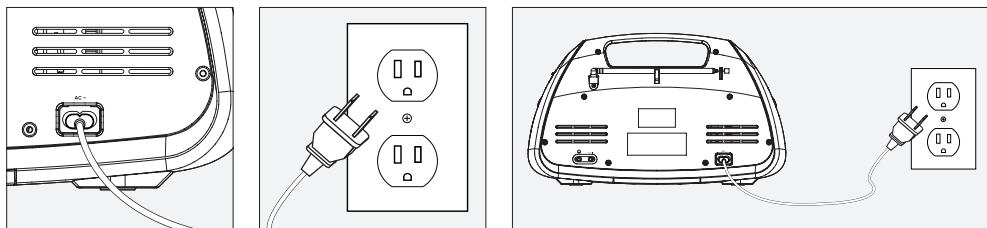

DC Power

 
Requires 8 C batteries (not included)

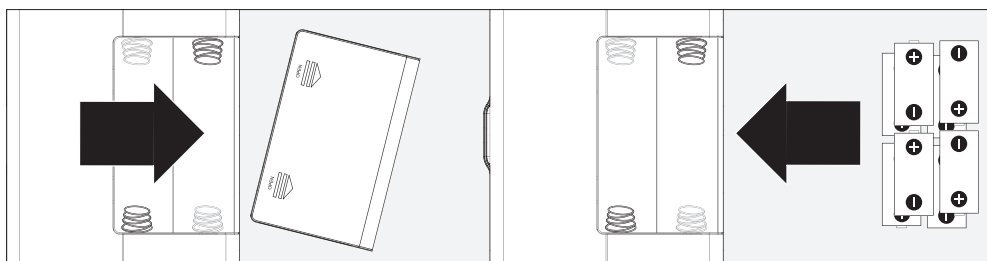

REMOTE POWER OPTIONS

DC Power

 Requires 1 CR2025 battery (included)

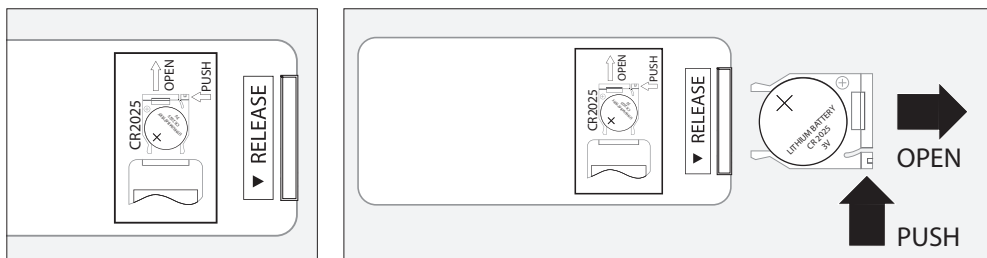


OPERATIONS


PLAYING A CD

Disc compatibility: CD, CD-R/RW

 
1. Adjust the **Source Switch** to *CD/Aux Mode*.

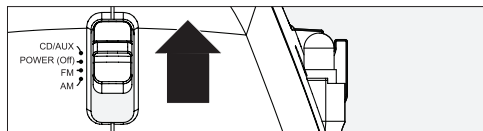

 2. Open the **CD Door** and load a CD into the unit.

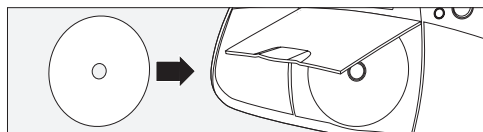

 3. Press the **Play/Pause Button** to begin playing the loaded CD.

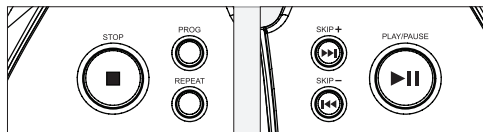

4. Press the **Stop Button** to stop the CD during play.
5. Press the **Skip/Search Buttons** to skip between tracks on the loaded CD.

Press and hold the **Skip/Search Buttons** to search through individual tracks on a loaded CD.

6. Press the **Repeat Button** once to repeat the current CD track.

 
Press the **Repeat Button** twice to repeat an entire album.

Please note: When an audio source is connected to the Auxiliary Input and a CD is loaded, the Auxiliary Input connection will take priority. To play a CD, disconnect the Auxiliary Input.

PROGRAMMING A CD

Before Programming a CD, read through the "Playing a CD" instructions.

1. After the CD is loaded and ready to play, press the **Program Button** to begin programming the CD's tracks.

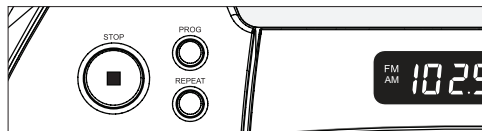

2. Press the **Skip/Search Buttons** to select the track to play first.
3. Press the **Program Button** to program the selected track.
4. Repeat steps 2-3 to continue programming tracks numerically.

 
Up to 20 CD tracks can be programmed at one time.

5. Press the **Repeat Button** once to repeat all of the programmed tracks.


Press the **Repeat Button** twice to repeat an individual track from the programmed list.

TUNING THE AM/FM RADIO

1. Adjust the **Source Switch** to *AM* or *FM* radio modes.

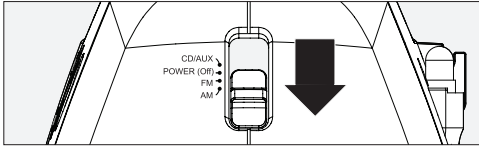


 2. Turn the **Tuning Dial** to adjust the AM or FM radio station.

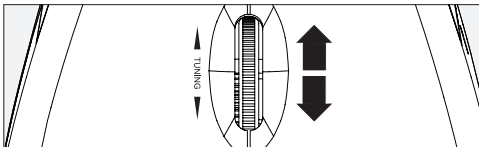


The **FM Stereo Indicator (FM ST)** illuminates when the FM radio is in stereo mode.

 Extend the FM antenna to improve FM reception. An AM antenna is built into the unit. Adjust the position of the unit to improve AM reception.

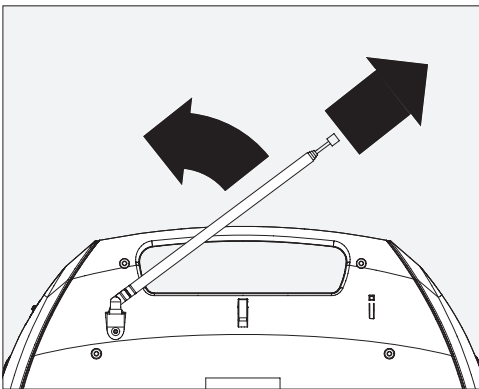


USING THE AUXILIARY INPUT

 1. Adjust the **Source Switch** to *CD/Aux Mode*.

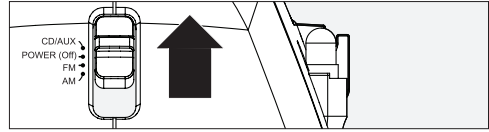

2. Connect an MP3 Player or other audio source to the **Auxiliary Input**.




 
Connecting an audio source to the Auxiliary Input requires a cord with a 3.5 mm mini-phono plug.

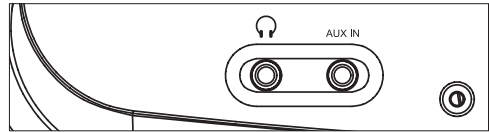

3. Use the connected device's controls to play, pause, stop, and skip between tracks on the connected device.

Please note: When an audio source is connected to the Auxiliary Input and a CD is loaded, the Auxiliary Input connection will take priority. To play a CD, disconnect the Auxiliary Input.

    UNIT CONTROLS & FEATURES

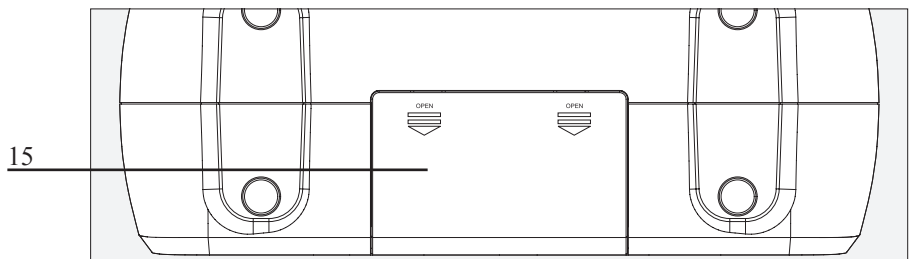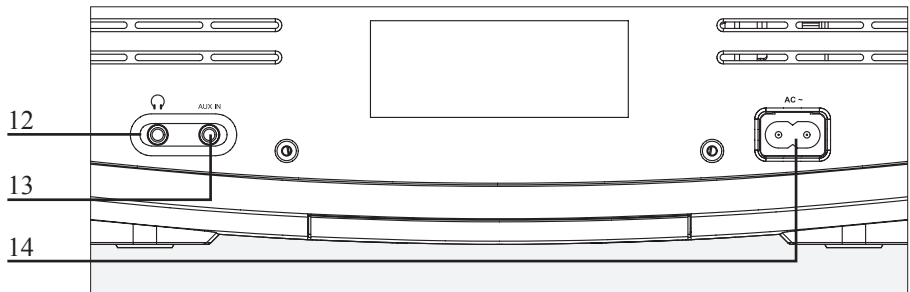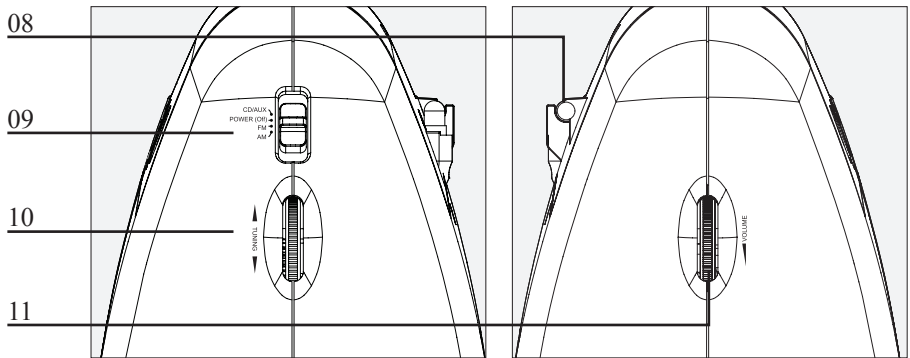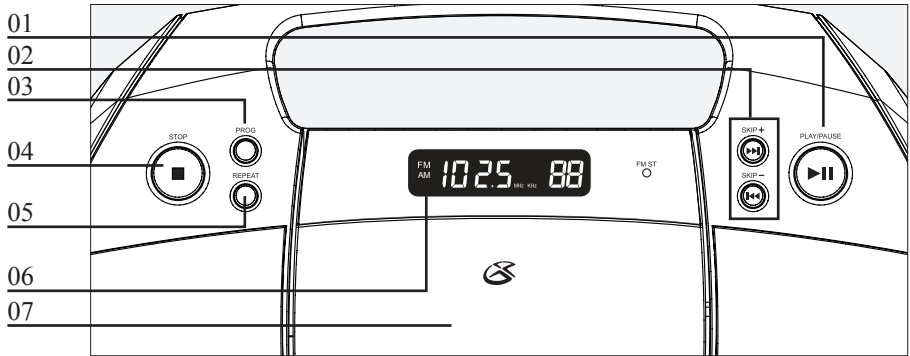

01. Play/Pause Buttons

Press the Play/Pause Buttons to play or pause a loaded CD.

02. Skip/Search Buttons

Press the Skip/Search Buttons to skip between tracks on a loaded CD.

Press and hold the Skip/Search Buttons to search through an individual track on a loaded CD.

03. Program Button

Press the Program Button to program the tracks of a loaded CD to play in a particular order.

04. Stop Button

Press the Stop Button to stop a CD during play.

05. Repeat Button

Press the Repeat Button once to repeat the current CD track.

Press the Repeat Button twice to repeat the entire CD.

06. LCD Display**07. CD Door**

Open the CD Door using the finger grip at the bottom of the door.

Please note, the CD Door must be closed for a loaded CD to play.

08. FM Antenna

Extend and adjust the FM Antenna to improve FM radio reception.

An AM Antenna is built into the unit. Adjust the position of the unit to improve AM radio reception.

09. Source Switch (CD, Aux, Power Off, AM, FM)

Adjust the Source Switch to activate CD, Aux, Power Off, AM, or FM modes.

10. Tuning Dial

Turn the Tuning Dial to adjust the current AM or FM radio station.

11. Volume Dial

Turn the Volume Dial to adjust the volume of audio output from the unit.

12. Headphone Jack

Use the Headphone Jack to connect a set of earbuds or headphones to the unit.

13. Auxiliary Input

 
Use the Auxiliary Input to connect an MP3 player or other audio source to the unit.

14. AC Power Input

Use the AC Power Input to connect the included detachable AC cord to the unit.

15. Battery Compartment (Requires 8 C batteries, not included)

REMOTE CONTROLS & FEATURES

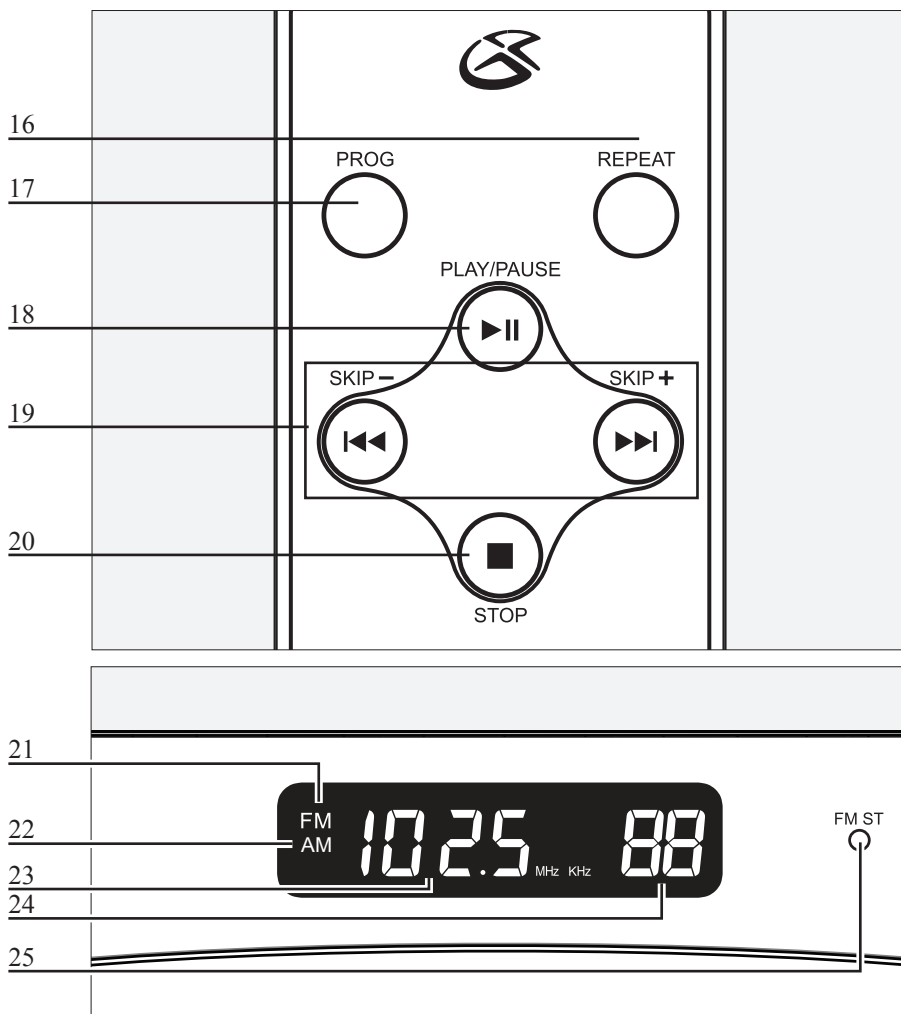

16. Repeat Button

Press the Repeat Button once to repeat the current CD track.

Press the Repeat Button twice to repeat the entire CD.

17. Program Button

Press the Program Button to program the tracks of a loaded CD to play in a particular order.

18. Play/Pause Button

Press the Play/Pause Buttons to play or pause a loaded CD.

19. Skip/Search Buttons

Press the Skip/Search Buttons to skip between tracks on a loaded CD.

Press and hold the Skip/Search Buttons to search through an individual track on a loaded CD.

20. Stop Button

Press the Stop Button to stop a CD during play.

21. FM Indicator

Displays when in FM radio mode.

22. AM Indicator

Displays when in AM radio mode.

23. Radio Station

Displays the current AM or FM radio station.

24. CD Track

Displays the current track of a loaded CD.

25. FM ST. Indicator

The FM Stereo Indicator illuminates when the FM radio is in *stereo mode*.

COMPANY INFORMATION

GREEN INITIATIVE

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marks the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI and its four brands, iLive, WeatherX, Capri, and GPX, are building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>