



USER'S GUIDE

V:1427-0601-10



PD730W

7" Portable DVD Player

For the most up-to-date version of this User's Guide, go to www.gpx.com

WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Main plug is used as disconnect device and it should remain readily operable during intended use.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterias viejas y nuevas.

No mezcle baterias alcalinas, estándar (carbone-zinc) o recargables (ni-cad, ni-mh, etc.).

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This Laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of the apparatus.
Les marquages sont inscrits en bas de l'appareil.
- The marking information is located at the bottom of apparatus.
Les précautions d'emploi sont inscrites en bas de l'appareil.

7" PORTABLE DVD PLAYER

Features

- 7" TFT display
- Resolution: 480 X 234
- Built-in speakers
- 3.5mm audio/video output
- Supports multiple languages and language subtitles
- Aspect ratio: 4:3, 16:9
- Stereo headphone jack
- DVD player: DVD, DVD±R/RW
- CD player: CD, CD-R/RW
- JPEG CD
- NTSC
- DC power: requires DC car adapter (included)
- AC power: requires an AC/DC power adapter (included)
- DC battery power: built-in rechargeable battery
- Battery life: ~2 hours


Included

- PD730W
- AC/DC power adapter
- DC power car adapter
- Remote control
- A/V cable adapter
- One sets of stereo earbuds

TABLE OF CONTENTS

INTRODUCTION	6
SETUP	8
DVD & CD	9
SETUP MENU	10
AUDIO/VIDEO OUTPUT	11
COMPANY INFORMATION	12

 INTRODUCTION

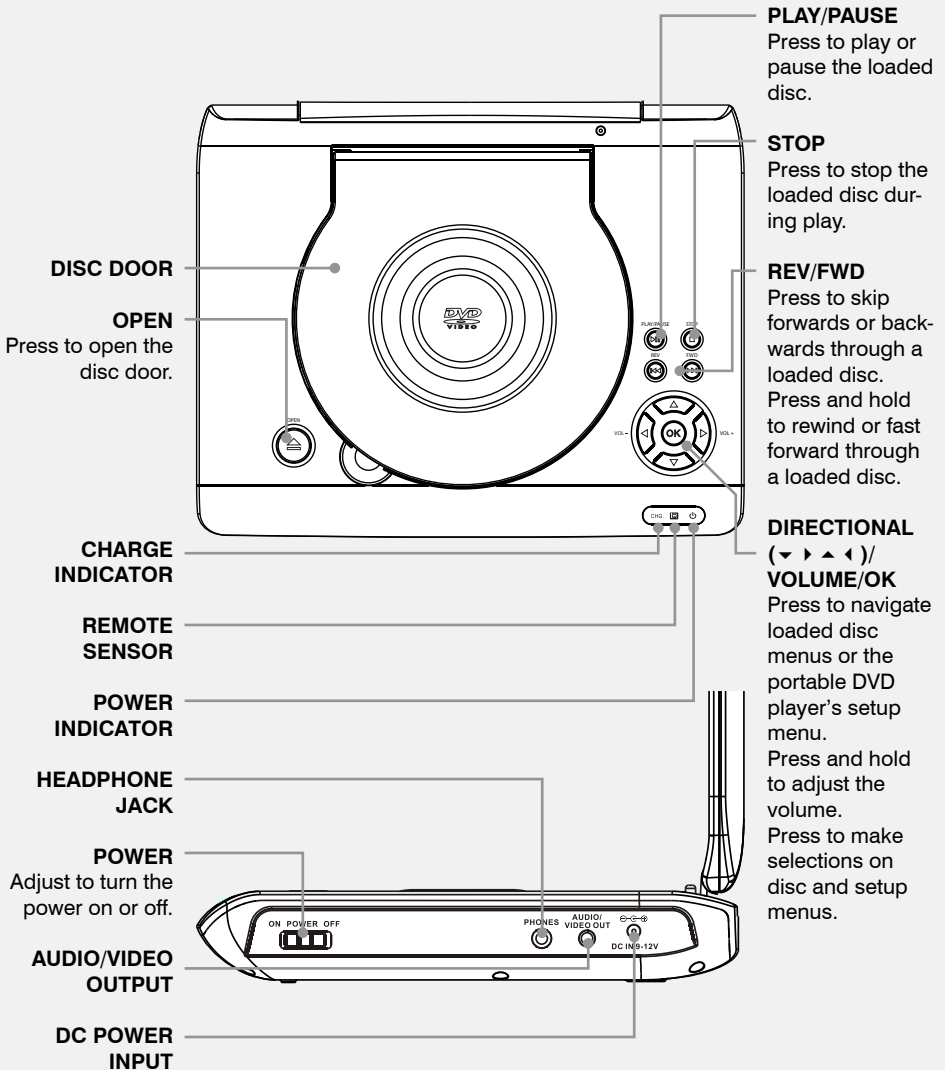

DISPLAY MODE
Press to adjust the brightness and contrast on the display.
Press and hold to turn the display off or on.

SETUP
Press to view the setup menu on the loaded DVD.

POWER
Press to turn the power off or on.

STOP
Press to stop the loaded disc during play.

OSD/WIDE
Press to view the on-screen display. Press and hold to switch between 4:3 and 16:9 aspect ratio.

 
SUBTITLE
Press to cycle through available subtitle options.

AUDIO
Press to cycle through available audio options.

SEARCH
Press to enter a title, chapter, and/or time to search for on a loaded DVD.

REPEAT
Press to repeat the current chapter, title, or entire disc, or to create an A-B repeat loop.

ZOOM/SLOW
Press to zoom in and out on a loaded DVD. Press and hold to view the playing DVD in slow motion.

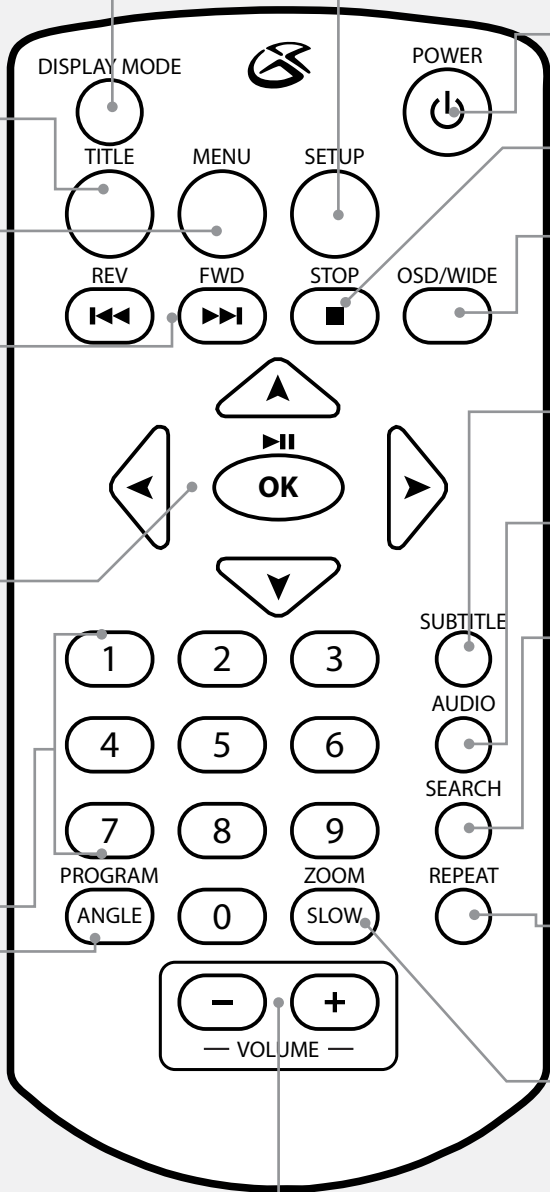

TITLE
Press to view the title menu on the loaded DVD.

MENU
Press to view the disc menu on the loaded DVD.

REV/FWD
Press to skip forwards or backwards through a loaded disc. Press and hold to rewind or fast forward through a loaded disc.

DIRECTIONAL
(◀ ▶ ▲ ▼)/PLAY/PAUSE/OK
Press to navigate loaded disc menus or the portable DVD player's setup menu. Press to play or pause the loaded disc. Press to make selections on disc and setup menus.

NUMBER KEYPAD

PROGRAM/ANGLE
Press to program a loaded disc. Press and hold to access alternate viewing angles on supported DVDs. *Supported DVDs will show an indication on the screen when the angle feature can be used.*

VOLUME
Press to adjust the volume.

 
SETUP

Internal Rechargeable Battery

A rechargeable battery is built into the portable DVD player.

To charge, connect the portable DVD player to a standard AC power outlet using the included AC/DC power adapter.


The charge indicator on the front of the portable DVD player will illuminate when the internal battery is charging.

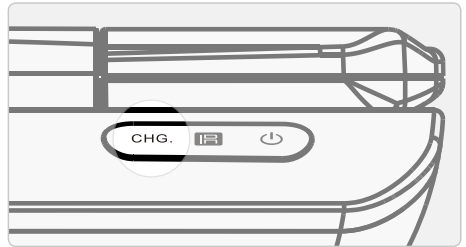

AC Power

Plug the included AC/DC adapter into the DC power input on the portable DVD player and a standard AC power outlet.

 *Charges internal battery when the **POWER** switch is switched to OFF.*

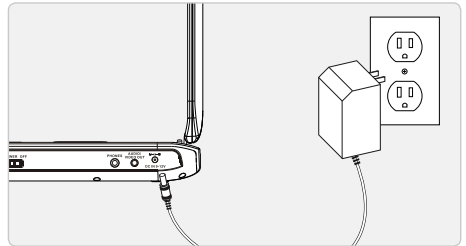


DC Car Power

Plug the included DC car adapter into the DC power input on the portable DVD player and a standard DC car power outlet.

Remote

 Requires 2 AAA batteries (included)

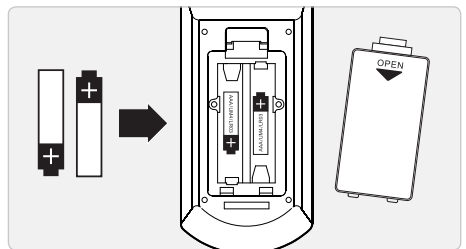

Loading a DVD or CD

- 1 Press the **OPEN** button to open the DISC DOOR.
- 2 Place a DVD or CD into the disc compartment, label side facing up.

Playing a DVD or CD

- 1 Load a DVD or CD into the disc compartment.
- 2 Adjust the **POWER** switch to the ON position.

The loaded DVD or CD will begin playing automatically.

Programming a DVD or CD

- 1 Play a DVD or CD
- 2 Press the **PROGRAM** button on the remote control.
- 3 Use the **NUMBER KEYPAD** on the remote to enter in TITLES (Tt) and CHAPTERS (ch) or TRACKS in the order you'd like them to play.
- 4 After the desired titles and chapters or tracks have been programmed, highlight the on-screen START button using the **DIRECTIONAL** buttons, and press the **OK** button.
- 5 To cancel a set program, press the **STOP** button twice.

SETUP MENU

Setup Menu

GENERAL

- TV Display
Normal/PS, Normal/LB, Wide
- Angle Mark
- OSD Language
English, French, Spanish
- Screen Saver
- Exit Setup

AUDIO

- Downmix
Lt/Rt, Stereo
- Exit Setup

SYSTEM

The System section can only be accessed in full stop mode. To enter full stop mode, press the STOP button twice.

- TV Type
- Audio
- Subtitle
- Disc Menu
- Default
- Exit Setup

Connecting a Television

Requires an audio/video cable adapter, 3.5mm to Composite RCA. (included)

- 1 Plug the audio/video cable adapter into the **AUDIO/VIDEO OUTPUT** (3.5mm) on the portable DVD player and the audio/video inputs (RCA) on a television.
- 2 Adjust the television to the correct input setting.
- 3 Content played on the portable DVD player will now play through the connected television.

Company Information

Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>