



**190cc 460MM (18")**  
**MULCH/CATCH**  
**PETROL LAWN MOWER**

RLMC  
INSTRUCTION MANUAL (1 of 2)

**GMC**<sup>®</sup>  
**GLOBAL MACHINERY COMPANY**

Black	Magenta	Code: RLMC IM		
Cyan	Yellow	Date: 080709	Edition: 5	Op: DCR

用本处所有显示的颜色打印包装资料。Print artwork using ALL inks shown here.

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# Contents

<b>Warranty</b>	<b>2</b>
<b>Introduction</b>	<b>3</b>
<b>Description of symbols</b>	<b>3</b>
<b>Specifications</b>	<b>4</b>
<b>Safety rules for petrol lawn mowers</b>	<b>4</b>
<b>Contents of carton</b>	<b>6</b>
<b>Know your product</b>	<b>7</b>
<b>Unpacking</b>	<b>8</b>
<b>Assembly</b>	<b>8</b>
<b>Cutting height adjustment</b>	<b>9</b>
<b>Inserting the mulcher plug</b>	<b>9</b>
<b>Brake lever</b>	<b>9</b>
<b>Fuelling</b>	<b>9</b>
<b>Checking the oil</b>	<b>10</b>
<b>Starting the engine</b>	<b>10</b>
<b>Stopping the engine</b>	<b>10</b>
<b>Mowing advice</b>	<b>10</b>
<b>Emptying the grass catcher</b>	<b>11</b>
<b>Maintenance</b>	<b>11</b>
<b>Changing the mower blade</b>	<b>11</b>

## **Warranty Mowers (excludes Briggs & Stratton engines)**

Whilst every effort is made to ensure your complete satisfaction with this tool, occasionally, due to the mass manufacturing techniques, a tool may not live up to our required level of performance and you may need the assistance of our service department.

The product is warranted for a 2-year repair warranty for home domestic use from the date of original purchase. If found to be defective in materials or workmanship, the tool will be repaired free of charge.

A small freight charge may apply. Proof of purchase is essential. We reserve the right to reject any claim where the purchase cannot be verified.

This warranty does not include damage or defects to the tool caused by or resulting from abuse, accidents, alterations or commercial or business use. It also does not cover any bonus items or included accessories. Only the power tool is covered under this warranty.

With continuing product development, changes may have occurred which render the product received slightly different to that shown in this instruction manual.

Please ensure that you store your receipt in a safe place.

Conditions apply to the above warranty. For full details of the warranty terms and conditions please refer to our website – [www.gmcompany.com](http://www.gmcompany.com)

For prompt service we suggest you log your service request online - [www.gmcservice.com.au](http://www.gmcservice.com.au), should you not have access to the internet, please contact our service department on 1300 880 001 (Australia) or 0800 445 721 (New Zealand).

## Introduction

Your new GMC power tool will more than satisfy your expectations. It has been manufactured under stringent GMC Quality Standards to meet superior performance criteria.

You will find your new tool easy and safe to operate, and, with proper care, it will give you many years of dependable service.

 
**CAUTION.** Carefully read through this entire Instruction Manual before using your new GMC Power Tool. Take special care to heed the Cautions and Warnings.

Your GMC power tool has many features that will make your job faster and easier. Safety, performance, and dependability have been given top priority in the development of this tool, making it easy to maintain and operate.

## Environmental protection



Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.



Noise label rating 75dBA (taken at 7.5 meters) you must wear ear protection at all times.

## Description of symbols

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use.



Conforms to relevant standards for electromagnetic compatibility.



Wear hearing protection.  
Wear eye protection.  
Wear breathing protection.



Wear safety footwear.



Wear safety gloves.



Warning.



Read these instructions for use carefully.



Use at a distance of at least 15m from other people.



Thrown objects and rotating blades can cause severe injury.



Explosive material.



Extremely hot surface. Do not touch a hot muffler, gear box or cylinder, you may get burned. These parts get extremely hot from operation and remain hot for a short time after the unit is turned off.



**CAUTION.** Before carrying out any operation stop the engine and disconnect the spark plug cap.



**CAUTION.** Risk of hand and feet injuries.

## Specifications

Engine Capacity:	190cc
Fuel Type:	Unleaded
Oil Type:	4 Stroke Motor Oil
Engine:	Briggs & Stratton 190cc, 4 Stroke
Speed:	0 – 3000min <sup>-1</sup>
Width of cut:	18" 460mm
Blade:	1 Mulch Blade
Height adjustment:	10 Levels, 15 – 70mm
Grass catcher capacity:	60L
Equivalent spark plugs:	CHAMPION - RJ19LM DENSO - W9LMR-US NGK - BR2LM
Weight:	32kg

Noise label rating 75dBA (taken at 7.5 meters) you must wear ear protection at all times.

## Safety rules for petrol lawn mowers

### Training

- Read the instructions carefully. Get familiar with the controls and proper use of the equipment.
- Only use the lawn mower for the purpose for which it was designed, i.e. for cutting and collecting grass. Any other use can be hazardous, causing damage to the machine.
- Never allow children or people unfamiliar with these instructions to use the lawn mower. Local regulations may restrict the age of the operator.
- Never use the lawn mower:
  - When people, especially children, or pets are nearby.
  - If the operator has taken medicine or substances that

can affect his ability to react and concentrate.

- Remember that the operator or user is responsible for accidents or hazards occurring to other people or their property.

### Preparation

- While mowing, always wear sturdy footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine or damage the cutter assembly and the engine (stones, sticks, metal wire, bones, etc.)
- **WARNING: DANGER!** Engine fuel is highly flammable:
  - Store fuel in containers specifically designed for this purpose.
  - Refuel using a funnel and outdoors only. Do not smoke while refuelling or whenever handling the fuel.
  - Add fuel before starting the engine. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot.
  - If fuel is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until the fuel has evaporated and the vapour dispersed.
  - Replace all fuel tanks and containers caps securely.
- Substitute faulty silencers.
- Before use, always inspect the machine, especially the condition of the blades, and check that the screws and cutting assembly are not worn or damaged. Replace worn or damaged blades and screws in sets to preserve balance.
- Discharge openings must be guarded at all times. Do not remove the discharge guard or hold it up while mowing.
- It is advisable to wear suitable eye protection when operating the mower.

## Operation

- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
- Mow only in daylight or good artificial light.
- If possible, avoid operating the equipment in wet grass.
- Always be sure of your footing on slopes.
- Walk, never run and do not allow yourself to be pulled along by the lawn mower.
- Mow across the face of slopes, never up and down.
- Exercise extreme caution when changing direction on slopes.
- Do not mow on slopes of more than 20°.
- Exercise extreme caution when pulling the lawn-mower towards you.
- Stop the blade if the lawn mower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawn mower to and from the area to be mowed.
- Never operate the lawn mower with defective guards, or without safety devices, such as the stoneguard and/or grass-catcher, in place.
- Do not change the engine governor settings or over speed the engine.
- On power-driven models, disengage the drive clutch before starting the engine.
- Start the engine carefully, following the instructions and keeping feet well away from the blade.
- Do not tilt the lawn mower when starting the engine. Start the engine on a flat surface that is free of obstacles and tall grass.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Never pick up or carry a lawn mower while the engine is running.
- Stop the engine and disconnect the spark plug wire:
  - Before carrying out any work underneath the cutting deck or before unclogging the chute;
  - Before checking, cleaning or working on lawn mower;
  - After striking a foreign object. Inspect the lawn mower for damage and make repairs before restarting and operating the lawn mower;
  - If the lawn mower starts to vibrate abnormally (find and remove the cause of the vibration immediately).
- Stop the engine:
  - Whenever you leave the lawn mower unattended. Remove the key from models with electric starters.
  - Before refuelling.
  - Every time you remove or replace the grass-catcher.
- Reduce the throttle before turning off the engine and turn the fuel off when you have finished mowing, following the instructions in the engine handbook.
- When mowing, always keep to a safe distance from the rotating blade. This distance is the length of the handle.
- Never cut grass while walking backwards.
- Stop the engine before pushing mower across gravel drives, walks or roads.

## Maintenance and storage

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Regular maintenance is essential for safety and performance.
- Never store the equipment with fuel in the tank inside a building where vapour may reach a flame or a spark or a source of extreme heat.
- Allow the engine to cool before storing in an enclosed space.
- To reduce the fire hazard, keep the engine, exhaust silencer, battery compartment and fuel storage area free of grass, leaves, or excessive grease. Do not leave containers with grass cuttings in rooms.

- Check the stone-guard and grass-catcher frequently for wear and deterioration.
- If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.
- Wear strong work gloves when removing and reassembling the blade.
- Check the blade's balance after sharpening.
- For reasons of safety, do not use the equipment with worn or damaged parts. Parts are to be replaced and not repaired. Parts that are not of the same quality can damage the equipment and be dangerous for your safety.
- Whenever the machine is to be handled, transported or tilted you must:
  - wear strong working gloves;
  - grasp the machine at the points that offer a safe grip, taking account of the weight and its distribution.
- Damaged blades and worn bolts are major hazards.

### **Contents of carton**

- Handle bar locking knobs, with bolts and washers x 2
- Catcher
- Mulcher plug

## Know your product

1. Handle bar
2. Lower handle
3. Throttle lever
4. Discharge guard
5. Grass catcher
6. Height adjustment lever
7. Fuel tank cap
8. Oil filler cap
9. Recoil starter
10. Spark plug cap
11. Air filter
12. Primer bulb
13. Handle bar locking knob
14. Brake lever
15. Mulcher plug



## Unpacking

Due to modern mass production techniques, it is unlikely that your GMC Power Tool is faulty or that a part is missing. If you find anything wrong, do not operate the tool until the parts have been replaced or the fault has been rectified. Failure to do so could result in serious personal injury.

**Note.** Make sure that two people are used to remove the mower from the box. Have two people at opposite ends lifting from the bottom of the mower.

## Assembly

It is necessary to fit the lower handle (2), handle bar (1), and catcher (5) to the mower.

### Assembling the catcher

The grass catcher (5) is supplied in two sections. Locate the top half on top of the bottom half and interlock them together by aligning the lugs and slots and pushing the halves together until they click into place.



### Attaching the catcher

1. Lift the discharge guard (4) in order to position the catcher.
2. While lifting the discharge guard, slide the catcher into position in a downwards direction (Fig. 1).



3. Push the catcher down until it locks into place (Fig. 2).

4. Release the discharge guard to secure the catcher in place between the 2 ribbed locking notches (Fig. 3).





**Note.** Always empty the catcher before it has reached maximum capacity, otherwise it will decrease the performance of the mower.

### Attaching the handles

It is necessary to attach both the lower handle and handle bars.

**Note.** Uncut the cable ties connecting the handle to the mower before you start.

1. To attach the lower handle, first use a spanner to remove the 4 bolts.
2. Place the lower handle in position (inside the bolt brackets) and replace the 4 bolts, from outside in. Use the spanner to retighten the nuts.
3. To attach the handle bar, first remove the two handle bar locking knobs (13).

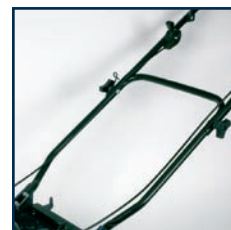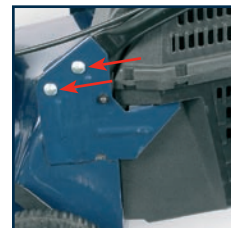

4. Position the handle bar over the lower handle and insert the two locking knobs, and tighten to secure the handles together.



## Cutting height adjustment

The GMC mower has one lever to easily adjust the cutting height. There are 10 height settings.

1. To decrease the cutting height pull the height adjustment lever (6) out and move it up a notch, towards the handlebar.
2. To increase the cutting height pull the lever out and move it down a notch, towards the motor.



**Note.** If you are unsure of which cutting height to use, begin with a high setting and trial a small section of lawn, then check the appearance of the lawn. Then readjust if necessary.

## Inserting the mulcher plug

**WARNING.** When inserting the mulcher plug ensure that the mower is turned off and the blades are at a stand still.

1. Make sure the mower is steady by placing one knee in front of the back wheel.
2. Whilst lifting up the discharge guide place the mulcher plug into the opening at a downward angle. When the plug has got to a point where it can not go in any further place the mulcher plug flat and square it up with the right side of the mower, ensuring it is flush and locked into the right hand side.



## Brake lever

The mower is equip with a brake lever (14) to improve the safety of the mower.


During operation the brake lever must be held, if it is let go the engine will automatically stop. To start the lawn mower you must hold the brake lever to the handle bar.



## Fuelling

**Note.** Use fresh unleaded petrol.

1. Unscrew the fuel tank cap (7) and pour the unleaded petrol into the tank with the aid of a funnel.
2. Fill the tank to approximately 2.5 cm below the lowest portion of the neck to allow for fuel expansion. Be careful not to over fill.
3. Be careful not to spill any petrol, if this happens, wipe the spill with a clean rag.
4. Start the engine at least three meters away from the area where the fuel tank has been filled in order to avoid the risk of fire.

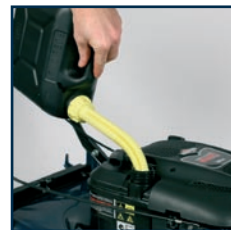

**WARNING.** Never attempt to refuel the engine while it is running or still warm, allow it to cool before fuelling.

**Note.** For further information refer to the Fuel Recommendations section in the Briggs & Stratton instruction manual.


## Checking the oil

**CAUTION.** The lawn mower is shipped without oil. Do not start your lawn mower before ensuring it has been filled with the right amount of correct grade oil. Refer to the oil recommendations section of the Briggs & Stratton instruction manual for this information.

1. Move the lawn mower to a level surface and clean around the oil filter cap (8).
2. Remove the oil filter cap with dipstick and wipe it with a clean cloth. Replace it and retighten the cap.
3. Remove the dipstick again and check the oil level, the oil should be at the full mark.
4. If oil is required add it slowly (the oil capacity is about 0.6 litre), do not over fill.
5. Retighten the oil filter cap firmly before starting the engine.



3. Disengage the brake by pulling the brake lever (14) toward the handle. Letting go of the lever will prevent the mower from starting or will stop the engine, if running.
4. While holding the brake lever inward pull the recoil starter (9) lightly until you feel resistance then pull quickly until the engine starts. Do not pull the cord with a jerk or release it until fully rewound.

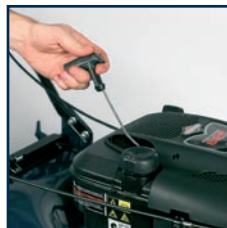

5. Once the lawn mower has started and warmed up move the throttle lever to the Run position while continuing to hold the brake lever.

## Starting the engine

**Note.** Before starting the mower check the oil and fuel levels.


**Note.** Ensure that the spark plug RJ19LM is fitted before starting the mower.

1. Move the throttle lever (3) to the cold start position.



## Stopping the engine

To stop the engine reduce the speed of the engine by pulling the throttle lever (3) towards the tortoise and release the brake lever (14). In an emergency just release the brake lever.

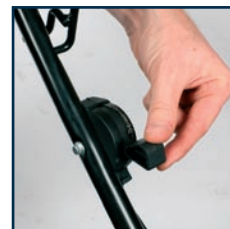

## Mowing advice

2. Push the primer bulb firmly 5 times (for initial starting) or 3 times (for engine starting thereafter).

1. It is recommended to use the fast throttle setting and keep the engine running at maximum speed. This will deliver the best cut and increase engine life. If the speed of the engine slows this could indicate the mower is being overloaded, by trying to cut too much grass. Try mowing a narrower strip, mowing slower or raise the cutting height.
2. Before you begin mowing always check and clear the grassed area for all foreign objects. Especially solid ones that can be semi-concealed in the ground such as rocks, stumps and garden stakes.

3. Sharp blades cut cleanly and efficiently, if the blade is dull it will tear the grass. This will result in the ends turning brown. When the blades no longer cut cleanly either sharpen them or replace them.
4. To safely operate the mower ensure all four wheels are on the ground and be careful not to lose your footing or control of the mower. Be very careful when mowing uneven or rough ground. Keep a firm grip on the handle bar at all times, always walk, never run with the mower.
5. For healthier and greener grass do not cut it too short. This can cause damage to the grass and allow weeds to develop. Short grass will also require more watering.
6. Vary your cutting pattern from week to week, this will help to prevent matting and graining of the grass.
7. Before checking a clogged mower deck stop the engine completely and disconnect the spark plug lead and then tilt the mower so the air filter side is facing upwards. Use a stick to clear any clogged material, never use your hands.
8. Mowing wet grass should be avoided. Wet grass will tend to stay flattened by wheels and not actually cut it. It will also clog the mower deck and if it is slippery you may lose your footing.
9. Always mow across slopes not up and down them. Be extra careful if the grass is wet as this could cause you to slip and lose control of the mower.
10. If the ground is too dry, mowing will stir up a lot of dust which may clog the air filter. It is recommended you check and clean the air filter straight after mowing.
11. Use the side of the mower as a guide to cut close to large objects such as a fence or a wall. Be careful when mowing over obstacles embedded in the lawn such as sprinkler systems and paving, avoid anything that sticks up above the surface of the lawn.
12. Avoid mowing over loose stones, gravel and other landscaping material as this can be picked up by the mower and flung out causing serious personal injury.
13. If the blades do come into contact with something or the mower starts to vibrate stop the engine immediately, remove the spark plug lead and inspect to see if there is any damage.

### Emptying the grass catcher

To remove the catcher, raise the guard while lifting the catcher to dislodge it from the hooks.

Do not leave clippings in the catcher for extended periods.

**WARNING.** Check the catcher frequently for cracks and wear and replace it if damaged.

### Maintenance

**CAUTION.** Before making any adjustment or maintenance procedures to the mower ensure it is turned off and the spark plug lead is removed.

**WARNING.** It is important that when the mower is tipped backwards the spark plug is highest in the air. Failure to do so will mean that oil will travel into other internal areas, this can cause the mower to have difficulty starting, excessive smoke and oil leaks. Such occurrences are not covered under warranty.

### Changing the mower blade

**WARNING:** Stop the engine and unplug the spark plug before any repairs or maintenance operations.

The blade is made of pressed steel. In order to obtain a clean cut, sharpen the blade periodically after every 25 hours of use. Ensure that the blade is always well balanced. A badly balanced blade can involve harmful vibrations and may cause injury.

**WARNING.** Never carry out any assembly operations or adjustments with the engine running.

1. Periodically check the blade for nicks and dull cutting edges and have it sharpened if needed.

**Note.** The blade should be sharpened and balanced by an authorised repair centre.

2. If there are rounded or broken ends, thinned metal or other damage, replace the blade.

3. With the engine switched off, lift the front of the mower upwards so the handle bar sits on the ground and the spark plug faces upwards.



**Note.** Improper tipping may affect engine performance.

4. Put on a pair of sturdy gloves to protect your hands.
5. Block the rotation of the blade and use a spanner (not supplied) to unscrew the blade bolt in an anti-clockwise direction (viewed from underneath).



6. Replace the blade and screw in the blade bolt, tightening it with a spanner (not supplied).

**Note.** When reassembling the blade, ensure the cutting edges face in the direction of the engine rotation.

7. Return the mower to the upright position.
8. Start the engine and allow the mower to run for a few minutes to check that the blade is properly fitted and that there is no undue noise or vibration. Use only the blade as recommended by the manufacturer.

For all engine maintenance information refer to the Briggs & Stratton instruction manual.







# GMC customer assist

Attach Your  
Receipt Here

**If your product needs repairing or you simply need help or advice, please contact us on our Customer Assist Line 1300 880 001 (Australia) or 0800 445 721 (New Zealand).**

For prompt service we suggest you log your service request online at [www.gmcservice.com.au](http://www.gmcservice.com.au). Should you not have access to the Internet, please contact our service department on 1300 880 001 (Australia) or 0800 445 721 (New Zealand). 7am – 7pm, 7 days a week (AEST).

**Please note that if repair is required, you must provide a valid original purchase receipt.**

You will need the following details at hand to log your service request;

**Personal details:** First & Last name, address, pick up address, contact phone numbers, email address

**Product details:** Product number, date of purchase, retailer bought from, State & postcode, receipt number, reason for the request, copy of official purchase receipt

Attach your purchase receipt and save with this Manual for future reference.

Please refer to our website [www.gmcompany.com](http://www.gmcompany.com) for full GMC warranty Terms and Conditions.

**GMC**<sup>®</sup>  
**GLOBAL MACHINERY COMPANY**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>