



GOJR

User's Guide





Congratulations...

...on your purchase of this Go Jr. DVD Player! We know you will enjoy this product for many years to come.

In case warranty service is required, please take a moment to attach your receipt to this manual and write down your Serial Number (located on the back panel of the player):

Caution

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- To prevent fire or shock hazard, or annoying interference, use only the recommended accessories.
- To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.
- To reduce the risk of electric shock, do not remove the unit cover or back. There are no serviceable parts inside.
- Refer servicing to qualified personnel only.

WARNING:

- TO AVOID HAZARDOUS EXPOSURE TO INVISIBLE LASER RADIATION, DO NOT OPEN OR REMOVE/DEFEAT LASER TRANSPORT PROTECTIVE HOUSING.

Cuidado

 
- Para prevenir incendio, riesgo de choque, o interferencia enfadosa, use solamente los accesorios recomendados. Para prevenir electrochoque, no use este enchufe (polarizado) con un cordón de extensión, toma de corriente, o cualquier otra toma a menos que los dientes puedan ser completamente insertados para prevenir exposición de los dientes. Para reducir el riesgo de descarga eléctrica, no remueva la cubierta o la parte posterior del equipo. Dentro del equipo no hay partes que requieren servicio. Diríjase solamente a personal calificado cuando requiera servicio.

2

Go Jr. User's Guide

Attention

- Pour éviter les incendis, risque de chocs, ou interférences fâcheuses, employer seulement les accessoires recommandés. Pour éviter les chocs électriques, ne pas employer cette prise (polarisée) avec une rallonge, une prise de courant ou une autre sortie de courant à moins que les lames peuvent être insérées à fond pour l'exposition des lames. Pour réduire les risques de chocs électriques, ne pas retirer le couvercle ou l'arrière du module. Il n'y a pas de pièce utilisable à l'intérieur. Ne faire effectuer l'entretien que par un personnel qualifié.

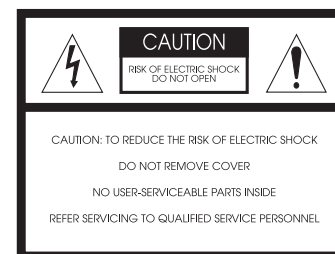

This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute risk of fire or electric shock.

 


This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying this product.



IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water - for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. **Accessories** - Use only the manufacturer's approved mounting instructions and hardware when installing product.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

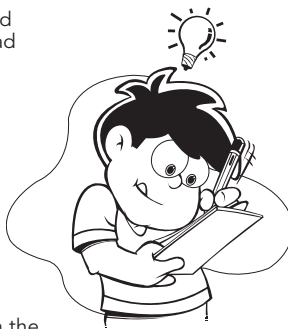

11. **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. **Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
15. **Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
16. **Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. **Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,

4 Need Help?

3



- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
18. **Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
19. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
20. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Copyright Notice

Federal law provides severe civil and criminal penalties for the unauthorized reproduction, distribution, or exhibition of copyrighted motion pictures and videotapes. (Title 17, United States Code, Sections 501 and 506).

Macrovision Notification

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

4

Go Jr. User's Guide

User/Installer Caution

Your authority to operate this FCC certified equipment could be voided if you make changes or modifications not expressly approved by the manufacturer, who is responsible for compliance with Part 15 FCC rules.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

© 2003 GoVideo. All Rights Reserved.
 GoVideo Incorporated does not assume any responsibility for errors or omissions in this document or make any commitment to update the information contained herein.
 GoVideo is a trademark of GoVideo. All other product names may be trademarks of the companies with which they are associated.





Table of Contents



Welcome to Go Jr.!

1 Getting Started	page 7
2 Let's Have Some Fun!	page 13
Watch Movies!	page 13
Play Music!	page 15
View Slideshows!	page 17
Sing Along!	page 18
3 Advanced Settings	page 19
4 Need Help?	page 23



Go Jr. User's Guide





On Your Mark, Get Set... Go Jr.!

Welcome to Go Jr.! In this chapter you'll get to know your DVD player, including:

- Top Panel
- Front Panel
- Accessories
- Remote Control
- Rear Panel

 
You'll also get to connect Go Jr. to your TV!

Tip

To prevent damage to the player and to your discs, do not push down on the Go Jr. top panel.

1 - Getting Started

Go Jr. Top Panel

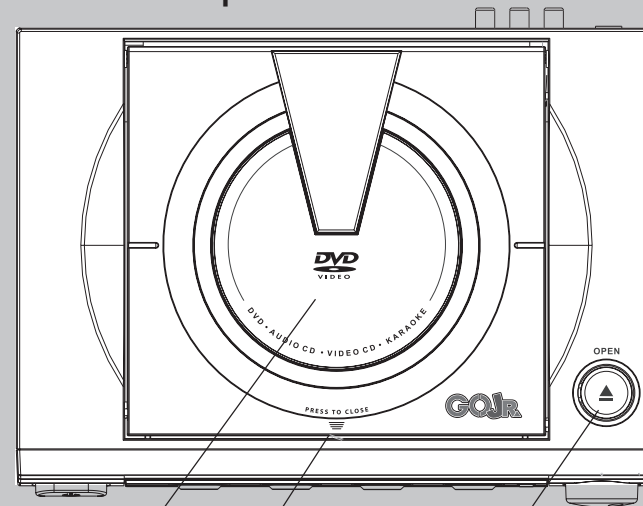

Disc Tray – Insert your discs here.

Close – Press to close the disc tray.

 
Open – Press to open the disc tray.




Go Jr. Accessories




Microphones (2)

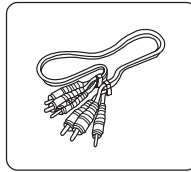


Audio/Video Cable

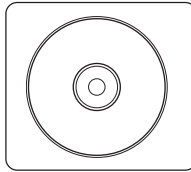 


Free Karaoke CD

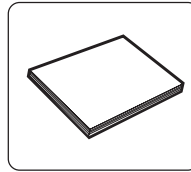 

User's Guide

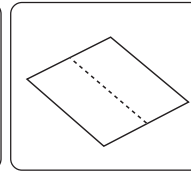 


**Quick Reference
Guide**

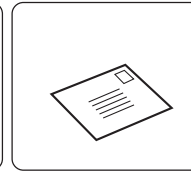 

Warranty Card


Inserting Batteries

 - 1 Remove the battery cover on the back of the remote control using a Phillips screwdriver. Ask your parents if you need help!
- 2 Insert two 1.5 volt AAA batteries. Make sure the + and - sides of the battery are in the right way.
- 3 Replace the cover.

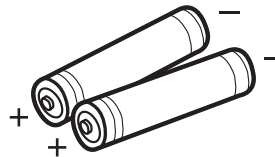



Go Jr. Back Panel

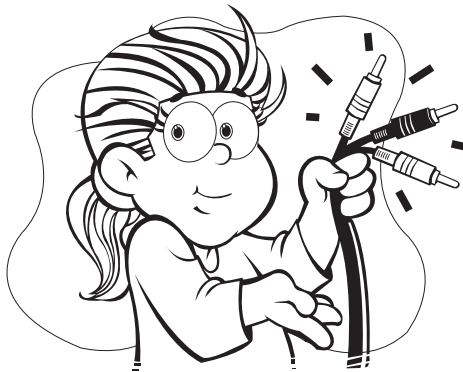 


Video Output – Connects to the matching Video input jack on your TV using the supplied video cable (with the yellow plug).

Audio (R/L) Output – Connects to the matching Audio input jacks on your TV using the supplied audio cable (with the red and white plugs).

S-Video Output – Connects to the S-Video input on your TV using an S-Video cable (sold separately).

- S-Video offers even better picture quality than standard Composite Video. Use only if your TV is equipped with an S-Video input.

 Power Cable – Connects to any standard wall outlet.

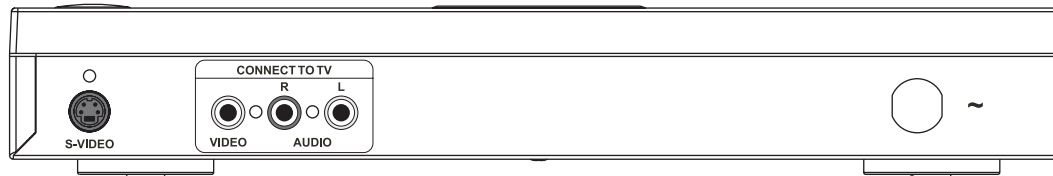



Connecting Go Jr. to Your TV

Follow these steps to connect Go Jr. to your TV...

1 Connect Video

Connect the video cable (with the yellow plug) to the matching Video input jack on your TV.

- If your TV has an S-Video input, you can get even better picture quality by connecting an S-Video cable to the matching S-Video input on your TV.

2 Connect Audio

Connect the audio cables (with the red and white plugs) to the matching Audio input jacks on your TV.

3 Plug In

Plug Go Jr. into a wall outlet.

 
4 Power On

Press the main POWER button on the front panel.

- Once this button is pressed in, use the POWER button on the remote control to turn the player on and off.


5 Let's Go!

The Go Jr. splash screen appears – now let's have some fun!

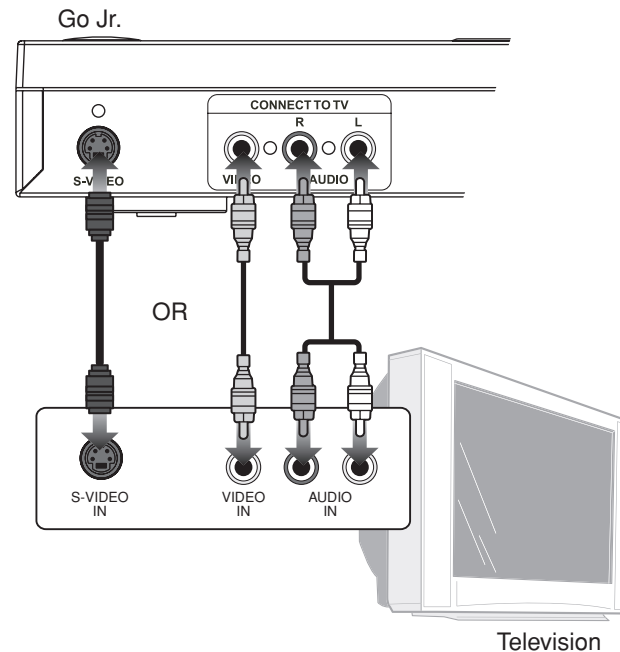



Go Jr. Front Panel

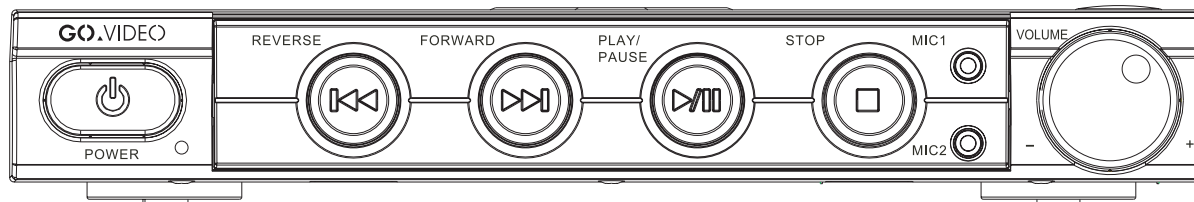 

- Power** – Press to turn Go Jr. on and off.
- When the front panel POWER button is pressed, the green light glows.
 - Now use the remote control POWER button to switch between On and Standby (low power) modes. The red light glows in Standby mode.

Reverse – Press to skip to the previous chapter or track. Press and hold for fast reverse.

Forward – Press to skip to the next chapter or track. Press and hold for fast forward.

Play/Pause – Press to start and pause playback.

 
Stop – Press to stop playback.

Microphone Jacks (Mic 1/Mic 2) – Insert the microphones here.

Volume Knob – Turn to adjust the microphone volume. Remember, this knob only adjusts the microphone volume, and NOT the TV volume—use your TV remote control to adjust the volume when watching movies or listening to CDs.



Go Jr. Remote Control

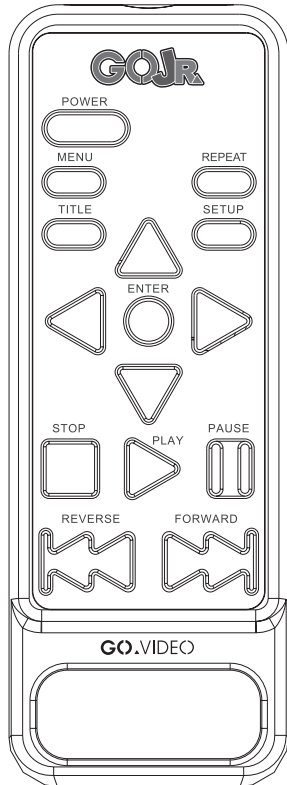

Power – Press to switch Go Jr. between On (green light) and Standby (red light) modes. The front panel POWER button must be pressed in for this button to work.

Menu – Press to view the disc menus on your DVDs.

Repeat – Press to repeat a title, chapter or track.

Title – Press to view the title menus on your DVDs.

Setup – Press to view Go Jr.'s advanced settings menu.

Arrows – Press to move around in menus. Also use for:

- *Instant Replay* - Press the Left arrow to replay the last 10 seconds.
- *Instant Skip* - Press the Right arrow to skip ahead 10 seconds.

Enter – Press to enter menu settings.

Stop – Press to stop playback.

Play – Press to start playback.

Pause – Press to pause playback. Press repeatedly to step forward one frame at a time.

Reverse – Press to skip to the previous chapter or track. Press and hold for fast reverse. While in Pause, press for Slow Reverse play.

Forward – Press to skip to the next chapter or track. Press and hold for fast forward. While in Pause, press for Slow Forward play.



Watch Movies!

To Play a DVD

- 1 Press OPEN.
- 2 Insert your DVD.
- 3 Close the disc tray.
- 4 The disc will start playing automatically!



2 Lets Have Some Fun!



Movie Formats You Can Watch

- DVD Video
- DVD-R
- DVD+R
- DVD+RW



Special DVD Features

About Disc Menus

Disc menus let you pick the chapters you want to watch. They also often have fun options for sound, picture, language, and more. Use these buttons when viewing disc menus:

MENU

- Press to open and close disc menus.

ARROWS

- Use to move around in the disc menu.

ENTER

- Press to choose the options you want in the disc menu.

Special Playback Features

STOP

- Press once to stop playback but keep your place in the movie.
- Press twice to restart the disc from the beginning.

PAUSE

Press to pause playback. Press repeatedly to step forward.

REVERSE

- Press and release to skip to the previous chapter.
- Hold for 3 seconds and release to view FR 2X on screen. Now each time you press REVERSE the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

FORWARD

- Press and release to skip to the next chapter.
- Hold for 3 seconds and release to view FF 2X on screen. Now each time you press FORWARD the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

SLOW MOTION

- Press PAUSE, then press FORWARD repeatedly for Slow Forward playback. Likewise, press REVERSE repeatedly for Slow Reverse playback. Playback will gradually slow down in this order: 1/2 - 1/4 - 1/8 - 1/16 - 1/32 - PLAY.

REPEAT

- Press to repeat the current chapter or title. When you press REPEAT, these options will appear:
CHAPTER REPEAT ON - Repeats the current chapter.
TITLE REPEAT ON - Repeats the current title.
REPEAT OFF - Cancels Repeat mode.

INSTANT REPLAY

- Press the Left arrow to replay the last 10 seconds.

INSTANT SKIP

- Press the Right arrow to skip ahead 10 seconds.

Tip "FR" means Fast Reverse and "FF" means Fast Forward. "SR" means Slow Reverse and "SF" means Slow Forward.



Play Music!

To Play an Audio CD

- 1 Press OPEN.
- 2 Insert your audio CD.
- 3 Close the disc tray.
- 4 The first track on the disc will start playing automatically.



Special CD Playback features

STOP

- Press to stop playback.

PAUSE

- Press to pause playback.

REVERSE

- Press and release to skip to the previous track.
- If you are on the first track and press REVERSE, the disc will stop playing.
- Hold for 3 seconds and release to view FR 2X on screen. Now each time you press REVERSE the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

FORWARD

- Press and release to skip to the next chapter or track.
- Hold for 3 seconds and release to view FF 2X on screen. Now each time you press FORWARD the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

REPEAT

- Press to repeat the current track or disc.
- When you press REPEAT, these options will appear:
 - REP-ONE - Repeats the current track.
 - REP-ALL - Repeats the current disc.
 - REPEAT OFF - Cancels Repeat mode.

COMPACT
disc
DIGITAL AUDIO

2 Let's Have Some Fun!

15



Play MP3 CDs

To Play an MP3 CD

- 1 Press OPEN.
- 2 Insert your MP3 CD.
- 3 Close the disc tray.
- 4 The special MP3 playback screen appears.
- 5 Use the arrow keys to highlight the track you want to play.
- 6 Press PLAY or ENTER to play the track.

Special MP3 CD Playback features

STOP

- Press to stop playback.

PAUSE

- Press to pause playback.

REVERSE

- Press and release to skip to the previous track.
- If you are on the first track and press REVERSE, the disc will stop playing.
- Hold for 3 seconds and release to view FR 2X on screen. Now each time you press REVERSE the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

FORWARD

- Press and release to skip to the next chapter or track.
- Hold for 3 seconds and release to view FF 2X on screen. Now each time you press FORWARD the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

REPEAT

- Press to repeat the current track or disc.
- When you press REPEAT, these options will appear:
REP-ONE - Repeats the current track.
REP-ALL - Repeats the current disc.
REPEAT OFF - Cancels Repeat mode.





View Slideshows!

To Play an Photo CD

- 1 Press OPEN.
- 2 Insert your Photo CD.
- 3 Close the disc tray.
- 4 The special Photo CD screen appears.
- 5 Use the arrow keys to highlight the first photo you want to view.
- 6 Press PLAY or ENTER to start the slideshow.

Special Photo CD Playback features

STOP

- Press to stop the slideshow.

PAUSE

- Press to pause the slideshow.

MENU

- Press to view tiny images called "thumbnails" of the pictures on your disc. The screen displays up to nine thumbnails at a time.

ARROWS

- Use the arrow keys to highlight the name of the picture you want to see and press ENTER to view the highlighted picture.
- Use the right arrow key to rotate the picture clockwise 90 degrees.
- Use the left arrow key to rotate the picture counterclockwise 90 degrees.
- Use the down arrow key to flip the picture horizontally.
- Use the up arrow key to flip the picture vertically.

FORWARD/REVERSE

- Use the FORWARD and REVERSE buttons to move forward or backward one page at a time in menu view or thumbnail view.

REPEAT

- Press for a variety of slideshow repeat options:
 - REP-ONE - Repeats the current image.
 - REP-ALL - Repeats all images on the current disc.
 - REPEAT OFF - Cancels Repeat mode.

Kodak
PICTURE CD
COMPATIBLE

2 Let's Have Some Fun!

17



Sing Along!

To Play a Karaoke CD

- 1 Plug the microphones into the Mic 1 and Mic 2 jacks.
- 2 Press OPEN.
- 3 Insert your CD-G Karaoke disc (like the sample disc that came with Go Jr.).
- 4 Close the disc tray.
- 5 The disc will start to play automatically.
- 6 Start singing and following along with the words on the screen!



Special Karaoke CD Playback features

STOP

- Press to stop playback.

PAUSE

- Press to pause playback.

REVERSE

- Press and release to skip to the previous track.
- If you are on the first track and press REVERSE, the disc will stop playing.
- Hold for 3 seconds and release to view FR 2X on screen. Now each time you press REVERSE the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

FORWARD

- Press and release to skip to the next chapter or track.
- Hold for 3 seconds and release to view FF 2X on screen. Now each time you press FORWARD the playback will speed up in this order: 4X - 8X - 16X - 32X - PLAY.

REPEAT

- Press to repeat the current track or disc.
- When you press REPEAT, these options will appear:
 - REP-ONE - Repeats the current track.
 - REP-ALL - Repeats the current disc.
 - REPEAT OFF - Cancels Repeat mode.



How to Use the Setup Menu

Navigating the Setup Menu

The Setup menu lets you set your preferences for Go Jr. Use these buttons when to get around the Setup menu:

SETUP

- Press to open and close the Setup menu.

ARROWS

- Use to move around in the Setup menu.

ENTER

 
- Press to choose the options you want in the Setup menu.

Tip

For an overview of the complete Go Jr. Setup menu, see page 39.



3 Advanced Settings

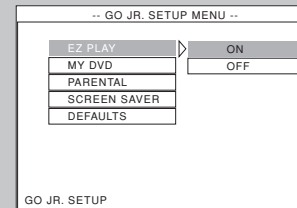

Things You Can Set

- EZ Play
- My DVD
- TV Display
- Languages
- Subtitles
- Parental Controls
- Screen Saver
- Defaults



EZ Play

When EZ Play is on, Go Jr. will skip DVD menus and trailers automatically and start playing the movie!

To Set EZ Play

- 1 Press SETUP.
- 2 Highlight EZ PLAY and press the right arrow key.
- 3 Highlight On or Off and press ENTER.
 - ON - EZ Play is on.
 - OFF - EZ Play is off.



My DVD

With My DVD, Go Jr. will automatically remember your preferences for TV Display, Language and Subtitle settings. Just set it once and forget it!

To Set TV Display

- 1 In Stop mode, press SETUP.
 - You cannot access MY DVD when a disc is playing.
- 2 Highlight MY DVD and press ENTER.
- 3 Highlight TV DISPLAY and press the right arrow key.
- 4 Highlight one of the following and press ENTER:
 - FULLSCREEN - Select if you have a standard television and like your DVD movies to fill the entire screen.
 - LETTERBOX - Select if you have a standard television and like your DVD movies to show black bars above and below the picture.
 - WIDESCREEN - Select if you have a widescreen television.

To Set Language

- 1 In Stop mode, press SETUP.
 - You cannot access MY DVD when a disc is playing.
- 2 Highlight MY DVD and press ENTER.
- 3 Highlight LANGUAGE and press ENTER.
- 4 Highlight one of the following and press the right arrow key:
 - ON-SCREEN - Sets your preferred language for the Go Jr. Setup menu and on-screen displays. Highlight English, French or Spanish and press ENTER.



Parental Control

- **AUDIO** - Sets your preferred language for movie soundtracks. Highlight English, French or Spanish and press ENTER.
- **DISC MENU** - Sets your preferred language for DVD disc menus. Highlight English, French or Spanish and press ENTER.
- **SUBTITLE** - Sets your preferred language for DVD subtitle languages. Highlight English, French or Spanish and press ENTER.

To Set Subtitle

- 1 In Stop mode, press SETUP.
 - You cannot access MY DVD when a disc is playing.
- 2 Highlight MY DVD and press ENTER.
- 3 Highlight SUBTITLE and press the right arrow key.
- 4 Highlight On or Off and press ENTER.
 - **ON** - Subtitles will be shown (if available).
 - **OFF** - Subtitles will not be shown.

Viewing My DVD Preferences

Whenever you load a DVD, Go Jr. will look for your preferences on the disc. You will briefly see the My DVD menu on screen indicating if your TV Display, Language & Subtitle preferences were found.

The Parental Control feature allows you to block playback of movies based on their rating.

To Set the Parental Control Rating

- 1 Press SETUP.
- 2 Highlight PARENTAL and press the right arrow key.
- 3 Highlight a rating from 1 (most restrictive) to 8 (least restrictive) and press ENTER. The password screen will appear.
- 4 Use the ARROW keys to enter your password:
 - Use the UP/DOWN arrow keys to scroll to the desired number (0-9).
 - Use the LEFT/RIGHT arrow keys to move to the next or previous digit in the password.
 - Press ENTER to confirm your new password.
- 5 Press ENTER again to continue.
- 6 Press SETUP to exit. Your rating is now set. Go Jr. will block playback of any movie rated higher than your Parental setting.



Tip

The factory default password is "8-8-8-8". You must enter this password before you can enter a new password; see page 22.



Parental Control (cont.)

To Change Your Password

- 1 Press SETUP.
- 2 Highlight PARENTAL and press the right arrow key.
- 3 Highlight PASSWORD and press ENTER.
- 4 Use the ARROW keys to enter your current password:
 - Use the UP/DOWN arrow keys to scroll to the desired number (0-9).
 - Use the LEFT/RIGHT arrow keys to move to the next or previous digit in the password.
 - Press ENTER to confirm your current password.
- 5 Now use the ARROW keys as described above to enter your new password, and press ENTER.
- 6 Press ENTER again to continue.
- 7 Your password has been changed.
 - Please store your password in a safe place.
 - If you forget your password, you can enter the factory default number (8-8-8-8) and follow the instructions above to change your password again.

Screen Saver

When you haven't used Go Jr. for several minutes, the screen saver will come on to protect your TV screen.

To Set the Screen Saver

- 1 Press SETUP.
- 2 Highlight SCREEN SAVER and press the right arrow key.
- 3 Highlight On or Off and press ENTER.
 - ON - Screen saver is on.
 - OFF - Screen saver is off.

Defaults

If you want to return Go Jr. to its original factory settings, choose the Defaults feature.

To Set Defaults

- 1 Press SETUP.
- 2 Highlight DEFAULTS and press the right arrow key.
 - The word RESET will be highlighted.
- 4 Press ENTER to reset Go Jr. to its factory defaults.

 


Tip

The Defaults function will not reset your customized password.



Troubleshooting

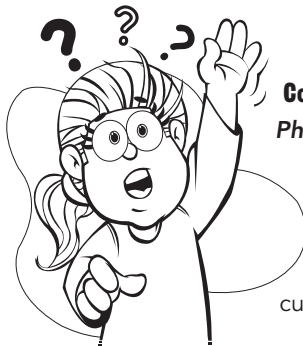

Contacting Customer Service

Phone

800-736-7679

Web

www.GoVideo.com

E-mail

customersupport@GoVideo.com

Why is there no power?

- Make sure power cord is securely connected.
- Press the front panel POWER button.

Why is there no picture?

- Securely connect video cable.
- Repair or replace damaged video cable.
- Make sure player is connected to the correct TV input.
- Make sure video input on TV is set to view the DVD player.

Why is there picture noise?

- Make sure disc is not dirty or flawed.

Why doesn't the picture fill the screen?

- The DVD may only include a widescreen version. Check the disc menu to verify options.
- Make sure TV Display is set to NORMAL/PS in the menu system.



4 Need Help?

Why is there no sound?

- Securely connect all audio cables.
- Repair or replace any damaged audio cables.
- Make sure the volume is turned up using the Volume knob.
- The player is in Pause, Fast Forward, or Fast Reverse. Press PLAY on the remote control to return to normal playback mode.

Why is the remote not working?

- Remove any obstacles between the remote and the player.
- Move closer to the player when operating the remote.
- Point the remote directly at the sensor on front panel of the player.
- Replace the batteries.

Why doesn't the disc play?

- Make sure there is a disc in the tray.
- Turn the disc over. Make sure the desired playback side is facing down on the disc tray.
- The disc is skewed or warped.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player. Remove the disc and leave the player turned on for about half an hour.

Why doesn't the disc start playing from the beginning?

- Press STOP twice and then press PLAY to restart DVD playback.

Why does the disc play automatically?

- Go Jr. features an auto playback function.



Technical Specifications

CONNECTIVITY

Audio In

- 2 mono audio inputs (front panel)

Audio Out

- 1 analog L/R audio output

Video Out

- 1 S-Video output
- 1 Composite video output

SPECIFICATIONS

Power Requirements

- 120V AC, 60 Hz, 10W

Environment

- 41-104° F; 5-90% humidity

Accessories

- 2 karaoke microphones (6' cords)
- Big button, simplified remote control
- Remote control batteries
- Composite audio/video cable (5')
- User's Manual
- Quick Start Guide
- Sample CDG karaoke disc

Dimensions

- Unit Weight: 4.3 lbs. (1.95 kg)
- Unit Dimensions: 11.2" w x 1.6" h x 8" d (280mm x 40mm x 200mm)
- Boxed Weight: 4.9 lbs. (2.23 kg)
- Boxed Dimensions: 14.5" w x 5.5" h x 11.6" d (368mm x 140mm x 295mm)


Free Karaoke Disc

All tracks provided as stereo performance tracks and vocal demonstration tracks:



- If You're Happy And You Know It
- Twinkle, Twinkle Little Star
- Do Your Ears Hang Low
- The Ants Go Marching
- Oh Susanna
- Bingo
- This Old Man
- A Bicycle Built For Two
- Row, Row, Row Your Boat
- *Where Has My Little Dog Gone*

Notes about Discs

On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface. 
- Do not expose the disc to direct sunlight or heat sources such as shot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

On cleaning discs

- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. 
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs. 



Limited Warranty

Who Provides the Limited Warranty

During the warranty period, the GoVideo Warranty Administrator will honor service for 90 days parts and labor from the original date of consumer purchase. See below for Commercial, Industrial or Educational use coverage. Remote controls are warranted for 90 days from the date of purchase.

Who is Protected

This warranty protects the original consumer owner of this GoVideo product.

What is Covered and How Long

This warranty covers internal operating parts and service/labor to repair or replace covered parts in this GoVideo product for 90 days parts and labor, from the date of purchase, defined as follows: (1) Original Consumer Retail Purchase; (2) First Rental Purchase Agreement; or (3) First Lease Purchase Agreement (the "Warranty Period"). Labor and replacement parts supplied during the Warranty Period are covered only for the remaining portion of the original Warranty Period. The GoVideo Warranty Administrator shall have no liability for service under this warranty if non-OEM (Original Equipment Manufacturer) replacement parts are used in the repair of your GoVideo product.

What the Owner Must Do If Service is Required

If service under this warranty is required, log onto "www.govideo.com" to determine the nearest authorized GoVideo service center.

Other Warranty Coverage

Commercial, Industrial or Educational use has the same warranty coverage as stated in this warranty.

What are the Exceptions

This warranty does not cover: (1) Normal maintenance service, such as cleaning. (2) Damage from misuse, abuse, neglect or accident, natural disasters or Acts of God. (3) Cabinetry, decorative parts, A/C adapters, knobs or buttons. (4) The foreign country use of this product. (5) GoVideo product which has been electronically or mechanically modified in any way or incorporated into other products. (6) Installation and setup service adjustments. (7) Owner instruction. Your Owner's Guide provides information regarding operating instructions and user controls. For additional information, contact your authorized GoVideo dealer.

GoVideo is not responsible for any shipping, handling or insurance charges.

This Exclusive Limited Warranty excludes all incidental and consequential damages. Some states do not allow the exclusion of incidental and consequential damages, so the above exclusion may not apply to you.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY PERIOD. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Exclusive Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

GOVIDEO WARRANTY ADMINISTRATOR

GoVideo
7835 East McClain Drive
Scottsdale, Arizona 85260-1732
customerservice@govideo.com

90^{days labor}
parts &

4 Need Help?

25



Index

A

Accessories 8
Arrow buttons
 12, 14, 17, 19
Audio output 9
Audio setting 21
Audio/Video cable 8

B

Back panel 9
Batteries, inserting 8

C

CD Audio 15
CD Playback 15
Connections 10

D

Defaults 22
Disc Menu setting 21
Disc menus, About 14
Disc tray 7
DVD formats 13
DVD playback 13
DVD, special features 14

E

Enter button 12, 14, 19
EZ Play setting 20

F

Forward button
 11, 12, 14, 15, 16, 17, 18
Front panel 11

I

Instant Replay 12, 14
Instant Skip 12, 14

K

Karaoke CD 8
Karaoke CD Playback 18

L

Letterbox setting 20

M

Menu button 12, 14, 17
Microphones 8, 11, 18
MP3 CD Playback 16
My DVD 20, 21

O

Open button 7
OSD Language setting 20

P

Pan & Scan setting 20
Parental Control settings 21
Password, changing 22
Pause button
 14, 15, 16, 17, 18
Photo CD Playback 17
Play button 12
Play/Pause button 11
Power button 11, 12
Power cable 9

R

Remote control 12
Repeat button
 12, 14, 15, 16, 17, 18
Reverse button
 11, 12, 14, 15, 16, 17, 18

S

S-Video output 9
Screen Saver setting 22
Setup button 12, 19
Setup menu 19
Slow Motion playback 12, 14
Splash screen 10
Standby mode 11
Stop button
 11, 12, 14, 15, 16, 17, 18
Subtitle setting 21

T

Technical Specifications 24
Title button 12
Top panel 7
Troubleshooting 23
TV Display setting 20

V


Video output 9
Volume knob 11

W

Warranty 25



 Menu Tree

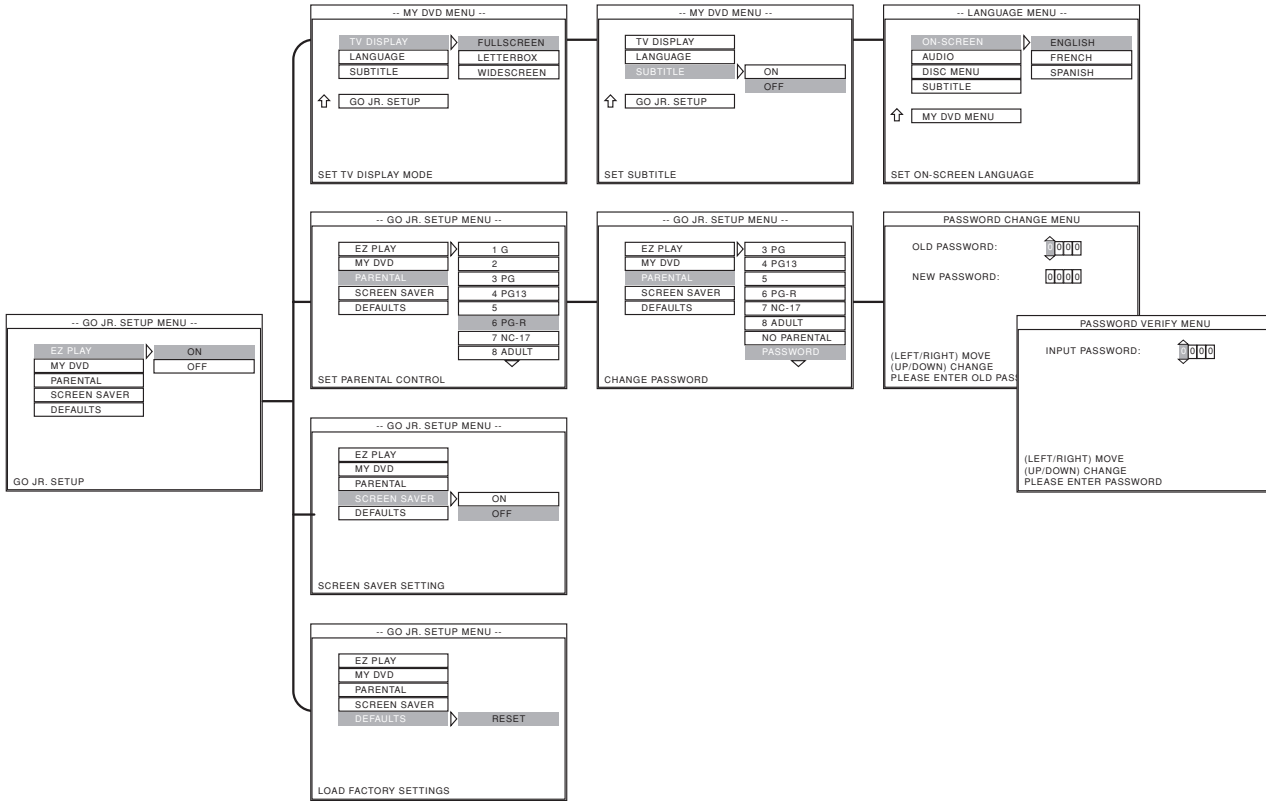

4 Need Help?



GO VIDEO®

7835 E. McClain Dr.
Scottsdale, AZ 85260
www.govideo.com



DJ530 UG 9-26-03.pm7

28



9/26/03, 11:39 AM



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>