



Air Conditioning & Heating

GMSG OWNER'S MANUAL

SPLIT-SYSTEM ROOM AIR CONDITIONER



CONTENTS



| | |
|--------------------------------------|-----------|
| SAFETY PRECAUTIONS | 3 |
| PARTS NAMES | 5 |
| OPERATING TEMPERATURE | 6 |
| MANUAL OPERATION | 7 |
| ADJUSTING AIRFLOW DIRECTION | 8 |
| HOW THE AIR CONDITIONER WORKS | 10 |
| MAINTENANCE | 12 |
| OPERATION TIPS | 14 |
| TROUBLESHOOTING TIPS | 16 |

Please read the operating instructions and safety precautions carefully and thoroughly before installing and operating your room air conditioner.

READ THIS MANUAL

Inside you will find many helpful hints on how to properly use and maintain your air conditioner. Just a little preventative care on your part can save a great deal of time and money over the life of your air conditioner. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.

! CAUTION



- Contact an authorised service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- If the power cord is to be replaced, replacement work shall be performed by authorised personnel only.
- Installation work must be performed in accordance with the national wiring standards by authorised personnel only.

Goodman Manufacturing Company, L.P., reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.



Copyright © 2007 • Goodman Manufacturing Company, L.P. • Houston, Texas
Printed in the USA.

SAFETY PRECAUTIONS





To prevent injury and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The seriousness is classified by the following indications.

| | |
|--|--|
|  WARNING | This symbol indicates the possibility of death or serious injury. |
|  CAUTION | This symbol indicates the possibility of injury or damage to property. |

■ Meanings of symbols used in this manual are as shown below.

| | |
|---|------------------------|
|  | Never do this. |
|  | Always do this. |

 **WARNING**

| | | |
|--|---|---|
| <p> Connect with the power properly.</p> <ul style="list-style-type: none"> ● Otherwise, it may cause electric shock or fire due to excess heat generation. | <p> Do not operate or stop the unit by switching on or off the power.</p> <ul style="list-style-type: none"> ● It may cause electric shock or fire due to heat generation. | <p> Do not damage or use an unspecified power cord.</p> <ul style="list-style-type: none"> ● It may cause electric shock or fire. |
| <p> Do not modify power cord length or share the outlet with other appliances</p> <ul style="list-style-type: none"> ● It may cause electric shock or fire due to heat generation. | <p> Do not operate with wet hands or in damp environment.</p> <ul style="list-style-type: none"> ● It may cause electric shock. | <p> Do not direct airflow at room occupants only.</p> <ul style="list-style-type: none"> ● This could damage your health. |
| <p> Always ensure effective earthing.</p> <ul style="list-style-type: none"> ● No earthing may cause electric shock. | <p> Do not allow water to run into electric parts.</p> <ul style="list-style-type: none"> ● It may cause failure of machine or electric shock. | <p> Always install circuit breaker and a dedicated power circuit.</p> <ul style="list-style-type: none"> ● No installation may cause fire and electric shock. |
| <p> Disconnect the power if strange sounds, smell, or smoke comes from it.</p> <ul style="list-style-type: none"> ● It may cause fire and electric shock. | <p> Do not drink water drained from air conditioner.</p> <ul style="list-style-type: none"> ● It contains contaminants and could make you sick. | <p> Do not open the unit during operation.</p> <ul style="list-style-type: none"> ● It may cause electric shock. |
| <p> Keep firearms away.</p> <ul style="list-style-type: none"> ● It may cause fire. | <p> Do not use the power cord close to heating appliances.</p> <ul style="list-style-type: none"> ● It may cause fire and electric shock. | <p> Do not use the power cord near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.</p> <ul style="list-style-type: none"> ● It may cause an explosion or fire. |
| <p> Ventilate room before operating air conditioner if there is a gas leakage from another appliance.</p> <ul style="list-style-type: none"> ● It may cause explosion, fire and, burns. | <p> Do not disassemble or modify unit.</p> <ul style="list-style-type: none"> ● It may cause failure and electric shock. | |

SAFETY PRECAUTIONS

CAUTION

⊘ When the air filter is to be removed, do not touch the metal parts of the unit.

- It may cause an injury.

⊘ Do not clean the air conditioner with water.

- Water may enter the unit and degrade the insulation. It may cause an electric shock.

⊘ Ventilate the room well when used together with a stove, etc.

- An oxygen shortage may occur.

⊘ When the unit is to be cleaned, switch off, and turn off the circuit breaker.

- Do not clean unit when power is on as it may cause fire and electric shock, it may cause an injury.

⊘ Do not put a pet or house plant where it will be exposed to direct air flow.

- This could injure the pet or plant.

⊘ Do not use for special purposes.

- Do not use this air conditioner to preserve precision devices, food, pets, plants, and art objects. It may cause deterioration of quality, etc.

⊘ Stop operation and close the window in storm or hurricane.

- Operation with windows opened may cause wetting of indoor and soaking of household furniture.

⊘ Do not place obstacles around air-inlets or inside of air-outlet.

- It may cause failure of appliance or accident.

⊘ Turn off the main power switch when not using the unit for a long time.

- It may cause failure of product or fire.

⊘ Do not use strong detergent such as wax or thinner. Use a soft cloth for cleaning.

- Appearance may be deteriorated due to change of product color or scratching of its surface.

⊘ Ensure that the installation bracket of the outdoor appliance is not damaged due to prolonged exposure.

- If bracket is damaged, there is concern of damage due to falling of unit.

⊘ Always insert the filters securely. Clean filter once every two weeks.

- Operation without filters may cause failure.

⊘ Do not place heavy object on the power cord and take care so that the cord is not compressed.

 
- There is danger of fire or electric shock.

⊘ Use caution when unpacking and installing. Sharp edges could cause injury.


⊘ If water enters the unit, turn the unit off and disconnect the power, contact a qualified service technician.

PARTS NAMES

INDOOR UNIT

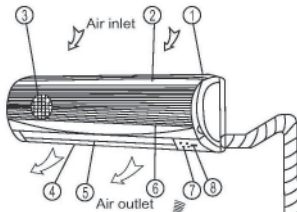


OUTDOOR UNIT

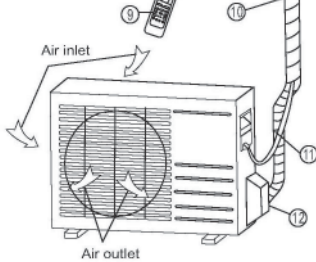 

DISPLAY PANEL

 NOTE:
The display panel on the indoor unit would look like one of following:

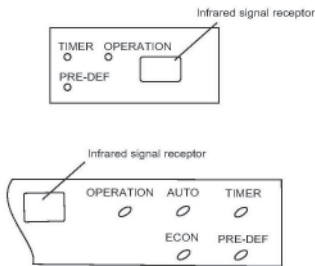

INDOOR UNIT

1. Front panel frame
2. Front panel
3. Air filter
4. Horizontal airflow grille
5. Vertical airflow louver
6. Room temperature sensor
7. Display panel
8. Infrared signal receiver
9. Remote controller
10. Drain hose, refrigerant connecting pipe
11. Connective cable
12. Stop valve

DISPLAY PANEL

OPERATION INDICATOR flashes once every second after power is on and illuminates when the air conditioner is in operation.

TIMER INDICATOR illuminates when TIMER is set ON.

PRE-DEF. INDICATOR (FOR COOLING/HEATING MODEL ONLY) illuminates when the air conditioner starts defrosting automatically or when the Anti-cold air function is activated in heating operation.

AUTO INDICATOR flashes when the unit is in AUTO operation.

ECON INDICATOR illuminates while the air conditioner is in economic operation.

NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased. The actual shape shall prevail.

OPERATING TEMPERATURE



| Mode Temp. | Cooling Operation | Heating Operation | Drying Operation |
|------------------------|---|----------------------|--|
| Room Temperature | 17C ~ 32C | 0C ~ 30C | 17C ~ 32C |
| Outdoor Temperature | 18C ~ 43C | -7C ~ 24C | 11C ~ 43C |
| | (-5C ~ 43C: for models with low temperature cooling system) | | (21C ~ 52C: for special tropical models) |
| | 21C ~ 52C (for special tropical models) | | |

! CAUTION

1. If air conditioner is used outside of the above conditions, certain safety protection features may be activated and cause the unit to function abnormally.
2. Room relative humidity less than 80%. If the air conditioner operates in excess of this figure, the surface of the air conditioner may attract condensation. Please set the vertical airflow louver to its maximum angle (vertically to the floor), and set HIGH fan mode.
3. Optimum performance will be achieved within these operating temperatures.

MANUAL OPERATION

  Manual operation can be used temporarily in case you cannot find the remote control or its batteries are exhausted.

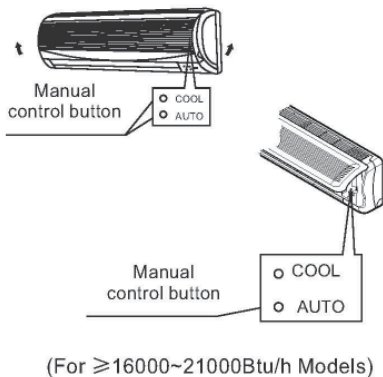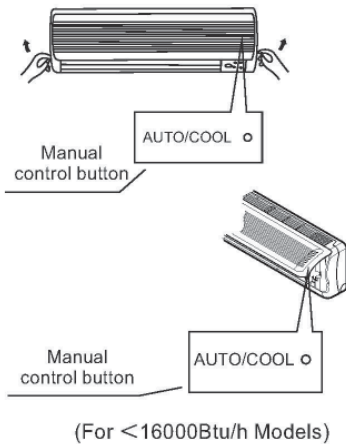

1. Open and lift the front panel up until it remains fixed with a clicking sound.
2. Push the button until the AUTO indicator is lit; the unit will work in forced AUTO mode (the default setting temperature is 24C).
3. Close the panel firmly to its original position.

! CAUTION

 
 
 
- Once you push the manual button, the operation mode is shifted in order as: AUTO, COOL, OFF.
- Push the manual button until the OPERATION indicator flashes rapidly (five times per second); the unit now is operating in forced COOL mode. This is used for testing purposes only.
- When the OPERATION indicator goes off, the air conditioner is OFF.
- To restore the remote control operation, use the remote control directly.

1. Open and lift the front panel up until it remains fixed with a clicking sound.
2. Push the AUTO button and the air conditioner will run in AUTO mode.
3. Close the panel firmly to its original position.

NOTE

The "COOL" mode on the control board is only provided for testing purposes.

ADJUSTING AIRFLOW DIRECTION

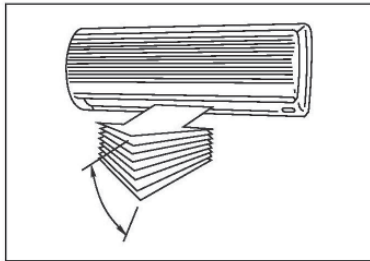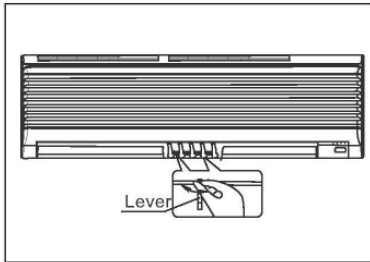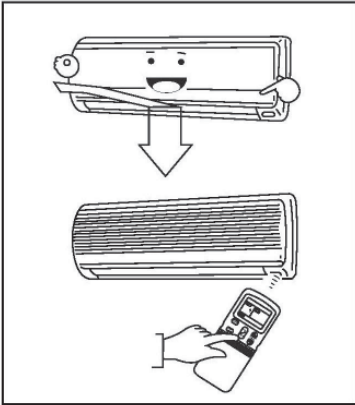

- Adjust the airflow direction properly; otherwise, it might cause discomfort or cause uneven room temperatures.
- Adjust the horizontal louver using the remote control.
- Adjust the vertical louver manually.

Adjusting Vertical Airflow Direction (up-down)

The air conditioner automatically adjusts the vertical airflow direction in accordance with the operating mode.

Setting Vertical Airflow Direction

 
Perform this function while the unit is in operation. Keep pressing the AIR DIRECTION button on the remote control to move the louver to the desired direction.

- Adjust the vertical airflow direction to the desired direction.
- In subsequent operations, press the AIR DIRECTION button to automatically set the vertical airflow.

Setting Horizontal Airflow Direction (left-right)

Adjust the vertical louver manually using the lever on the left or right side of the vertical louver arm (depending on model). Take care not to catch fingers on the fan, horizontal louver, or to damage vertical louvers. When the air conditioner is in operation and the horizontal louver is in a specific position, move the lever at left (or right, depending on model) end of the air outlet to the desired position.

ADJUSTING AIRFLOW DIRECTION (CONT.)

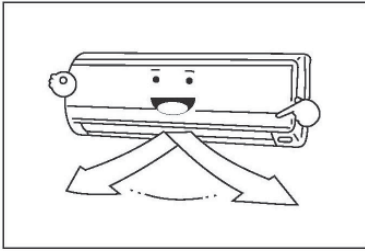




Automatic Swing Airflow Direction (up-down)

- Perform this function while the air conditioner is in operation.
- Press the SWING button on the remote control.
- To stop the function, press the SWING button again.
- Press AIR DIRECTION button to lock louver in desired position.

! CAUTION

- The AIR DIRECTION and SWING buttons will be disabled when the air conditioner is not in operation (including when the TIMER ON is set).
- Do not operate the air conditioner for long periods with the airflow direction set downward in cooling or dry mode. Otherwise, condensation may occur on the surface of the horizontal louver causing moisture to drop on to the floor or on furnishings.
- Do not move the horizontal louver manually. Always use the AIR DIRECTION or SWING button. If you move this louver manually, it may malfunction during operation. If the louver malfunctions, stop the air conditioner once and restart it.
- When the air conditioner is started immediately after it was stopped, the horizontal louver might not move for approximately 10 seconds.
- Open angle of the horizontal louver should not be set too small, as COOLING or HEATING performance may be impaired due to too restricted airflow area.
- Do not operate unit with horizontal louver in closed position.
- When the air conditioner is connected to power (initial power), the horizontal louver may generate a sound for 10 seconds; this is a normal operation.

   HOW THE AIR CONDITIONER WORKS

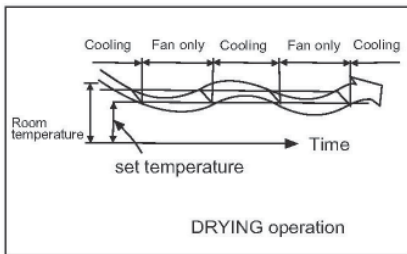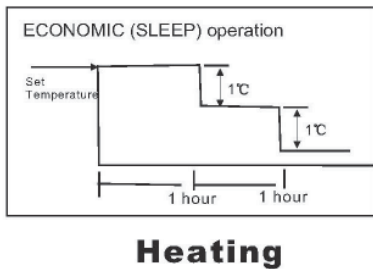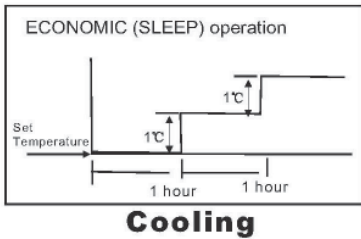

AUTOMATIC OPERATION

- When you set the air conditioner in AUTO mode, it will automatically select cooling, heating (cooling/heating models only), or fan-only operation depending on what temperature you have selected and the room temperature.
- The air conditioner will control room temperature automatically around the temperature point set by you.
- If the AUTO mode is uncomfortable, you can select desired conditions manually.

ECONOMIC (SLEEP) OPERATION

- When you push the ECONO (SLEEP) button on the remote control during cooling, heating, or AUTO operation, the air conditioner will automatically increase (cooling) or decrease (heating) one (1) per hour. The set temperature will be steady two (2) hours later. The fan speed will be automatically controlled. This feature can maintain the most comfortable temperature and save more energy for you.

DRYING OPERATION

- The dry mode will automatically select the DRY operation based on the difference between the set temperature and the actual room temperature.
- The temperature is regulated while dehumidifying by repeatedly turning on and off the cooling operation or fan only. The fan speed indicator will display AUTO and low speed will be used.

 
 
 
HOW THE AIR CONDITIONER WORKS (CONT.)

OPTIMAL OPERATION

To achieve optimal performance, please note the following:

- Adjust the airflow direction correctly so that it is not directed on people.
- Adjust the temperature to achieve the highest comfort level.
- Do not adjust the unit to excessive temperature levels.
- Close doors and windows on COOL or HEAT modes, or performance may be reduced.
- Use TIMER ON button on the remote control to select a time you want to start your air conditioner.
- Do not put any object near air inlet or air outlet, as the efficiency of the air conditioner may be reduced and the air conditioner may stop running.
- Clean the air filter periodically; otherwise cooling or heating performance may be reduced.
- Do not operate unit with horizontal louvre in closed position.

MAINTENANCE

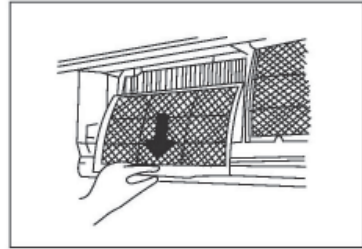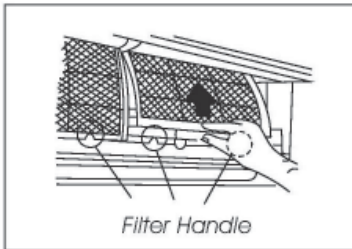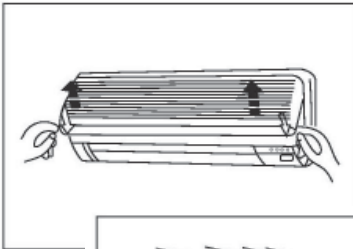

! WARNING

It is necessary to stop the air conditioner and disconnect the power supply before cleaning.

CLEANING THE INDOOR UNIT & REMOTE CONTROL

! CAUTIONS

 
 
 
 
- Use a dry cloth to wipe the indoor unit and remote controller.
- A cloth dampened with cold water may be used on the indoor unit if it is very dirty.
- The front panel of the indoor unit can be removed and cleaned with water. Then wipe it with a dry cloth.
- Do not use a chemically treated cloth or duster to clean the unit.
- Do not use benzine, thinner, polishing powder, or similar solvents for cleaning. These may cause the plastic surface to crack or deform.

Cleaning the Air Filter

A clogged air filter reduces the cooling efficiency of this unit. Please clean the filter once every 2 weeks.

1. Lift the indoor unit panel up to an angle until it stops with a clicking sound.
2. Take hold of the handle of the air filter and lift it up slightly to take it out from the filter holder, then pull it downwards.
3. Remove the AIR FILTER from the indoor unit.
 - Clean the AIR FILTER once two weeks.
 - Clean the AIR FILTER with a vacuum cleaner or water, then dry it in cool place.

MAINTENANCE (CONT.)

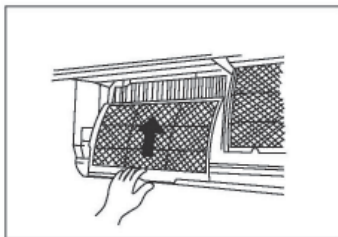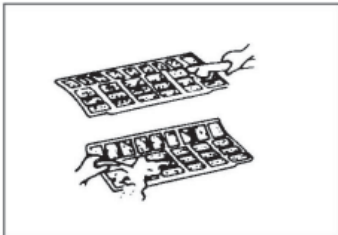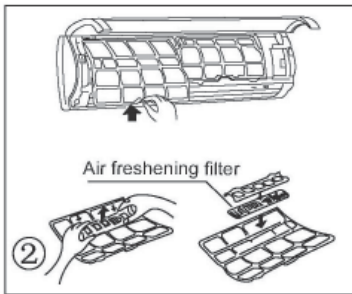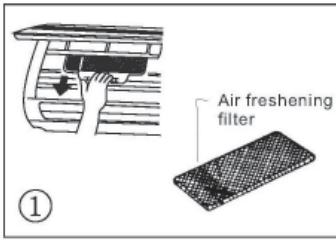

4. Remove the air-freshening filter from its support frame (The installation and removal method of the air-freshening filter is different depending on the models (see pictures marked as 1 and 2 on the left).

- Clean the air freshening filter at least once a month and replace it every 4-5 months.
- Clean it with vacuum cleaner, then dry in cool place.

5. Install the air-freshening filter back into position.

6. Insert the upper portion of air filter back into the unit taking care that the left and right edges line up correctly and place filter into position.

Maintenance

If you plan to idle the unit for a long time, perform the following:

1. Operate the fan for about half a day to dry the inside of the unit.
2. Stop the air conditioner and disconnect power. Remove the batteries from the remote control.
3. The outdoor unit requires periodic maintenance and cleaning. Do not attempt to do this yourself. Contact your dealer or servicer.

Checks Before Operation

- Check that the wiring is not broken off or disconnected.
- Check that the air filter is installed.
- Check if the air outlet or inlet is blocked after the air conditioner has not been used for a long time.

! Cautions

- Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- When cleaning the unit, first make sure that the power and circuit breaker are turned off.

OPERATION TIPS

The following events may occur during normal operation.

1. PROTECTION OF THE AIR CONDITIONER

COMPRESSOR PROTECTION

- The compressor can't restart for 3 minutes after it stops.
- Anti-cold air (Cooling and heating models only)
- The unit is designed not to blow cold air on HEAT mode, when the indoor heat exchanger is in one of the following three situations and the set temperature has not been reached.
 - A) When heating has just starting
 - B) Defrosting
 - C) Low temperature heating
- The indoor or outdoor fan stop running when defrosting (Cooling and heating models only).
- Defrosting (Cooling and heating models only)
- Frost may be generated on the outdoor unit during heat cycle when outdoor temperature is low and humidity is high resulting in lower heating efficiency of the air conditioner.
- During this condition air conditioner will stop heating operation and start defrosting automatically.
- The time to defrost may vary from 4 to 10 minutes according to the outdoor temperature and the amount of frost buildup on the outdoor unit.

2. A WHITE MIST COMING OUT FROM THE INDOOR UNIT

- A white mist may generate due to a large temperature difference between air inlet and air outlet on COOL mode in an indoor environment that has a high relative humidity.
- A white mist may generate due to moisture generated from defrosting process when the air conditioner restarts in HEAT mode operation after defrosting.

3. LOW NOISE OF THE AIR CONDITIONER

- You may hear a low hissing sound when the compressor is running or has just stopped running. This sound is the sound of the refrigerant flowing or coming to a stop.
- You can also hear a low "squeak" sound when the compressor is running or has just stopped running. This is caused by heat expansion and cold contraction of the plastic parts in the unit when the temperature is changing.
- A noise may be heard due to louver restoring to its original position when power is first turned on.

OPERATION TIPS (CONT.)

4. DUST IS BLOWN OUT FROM THE INDOOR UNIT

This is a normal condition when the air conditioner has not been used for a long time or during first use of the unit.

5. A PECULIAR SMELL COMES OUT FROM THE INDOOR UNIT

This is caused by the indoor unit giving off smells permeated from building material, furniture, or smoke.

6. THE AIR CONDITIONER TURNS TO FAN-ONLY MODE FROM COOL OR HEAT MODE

(FOR COOLING/HEATING MODELS ONLY)

When indoor temperature reaches the temperature setting on air conditioner, the compressor will stop automatically, and the air conditioner turns to FAN-only mode. The compressor will start again when the indoor temperature rises on COOL mode or falls on HEAT mode to the set point (for cooling/heating models only).

7. DRIPPING WATER

Dripping water may generate on the surface of the indoor unit when cooling in a relatively high humidity (relative humidity higher than 80%). Adjust the horizontal louver to the maximum air outlet position and select HIGH fan speed.

8. HEATING MODE (FOR COOLING/HEATING MODELS ONLY)

The air conditioner draws in heat from the outdoor unit and releases it via the indoor unit during HEAT operation. When the outdoor temperature falls, heat drawn in by the air conditioner decreases accordingly. At the same time, heat-loading of the air conditioner increases due to a larger difference between indoor and outdoor temperatures. If a comfortable temperature can't be achieved by the air conditioner, we suggest you use a supplementary heating device.

9. AUTO-RESTART FUNCTION

Power failure during operation will stop the unit completely. For units without auto-restart, the OPERATION indicator on the indoor unit will flash when the power is restored. To restart the unit, push the ON/OFF button on the remote control. For units with auto-restart, the unit restarts automatically with all the previous settings preserved by the memory function when the power is restored.

10. LIGHTNING OR OTHER ELECTRICAL INTERFERENCE

Lightning or a car wireless telephone operating nearby may cause the unit to malfunction. Disconnect the unit from the power and then re-connect the unit. Push the ON/OFF button on the remote control to restart the unit.

TROUBLESHOOTING TIPS

MALFUNCTIONS AND SOLUTIONS

| | |
|--|---|
| Stop the air conditioner immediately if one of the following faults occur. Disconnect the power and contact the nearest customer service center. | |
| Trouble | OPERATION indicator or other indicators flash rapidly (5 times every second) and this flash can't be fixed by disconnecting the power, and reconnecting it. |
| | Fuse blows frequently or circuit breaker trips frequently. |
| | Other objects or water penetrate the air conditioner. |
| | The remote control won't work or works abnormally. |
| | Other abnormal situations. |

| MALFUNCTIONS | CAUSE | WHAT SHOULD BE DONE? |
|--|---|---|
| Unit does not start | Power cut | Wait for power to be restored. |
| | Unit is unplugged. | Check that plug is securely in wall receptacle |
| | Fuse is blown. | Replace the fuse. |
| | Remote control battery is exhausted. | Replace the battery. |
| | The time you have set with the timer is incorrect. | Wait or cancel timer setting. |
| Unit not cooling / heating room very well while air is flowing from the unit (cooling/heating models only) | Inappropriate temperature setting. | Set temperature correctly. For instructions, refer to "Using Remote Control" section. |
| | Air filter is blocked. | Clean the air filter. |
| | Doors or windows are open. | Close the doors or windows. |
| | Air inlet / outlet of indoor / outdoor unit is blocked. | Clear obstructions, then restart the unit. |
| | Compressor 3-minute protection has been activated. | Wait. |
| If the trouble has not been corrected, please contact a local dealer or the nearest customer service center. Be sure to inform them of the detailed malfunctions and unit model. | | |

Note: Do not attempt to repair the unit yourself. Always consult an authorised service provider.



Thank goodness for Goodman!

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>