


Precision Weighing Solutions

Escali™

User Manual

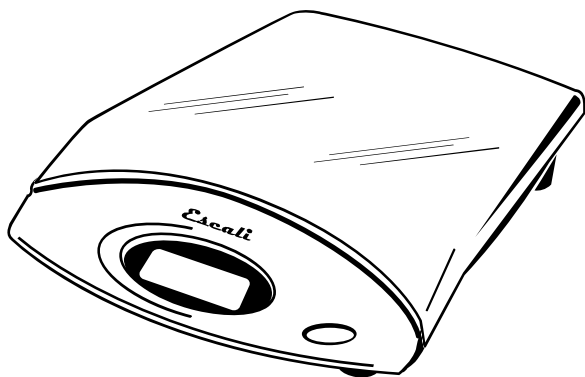

ARGENTA Digital Kitchen Scale

www.Escali.com

Turning off your scale:

Your scale will automatically turn off after 2 minutes of non-use. You can also manually turn off the scale by holding the Operating button down for approximately 3 seconds.

Changing the Weighing Mode:

Your scale can weigh Pounds/Ounces or Grams. You can simply change the weighing mode before you operate the scale.

- 1) Turn the scale on.
- 2) Press the Kg/Lb switch located on the bottom of your scale to change to Pounds/Ounces or Grams.
- 3) Your scale will keep the last used weighing mode in memory and will return automatically to this mode when you turn the scale on.

Do not place overweight items on the scale

Weighing items over the maximum weight capacity will cause an overload "EEEE" error to display. Immediately remove overweight items to avoid causing damage to your scale.

Power Source: two 3-volt lithium batteries

Dimensions: 7.5" x 6" x 1.5" (19.5cm x 16cm x 4cm)

Graduation: 1/8 oz. < 2 Lb, 1/4 oz > 2 Lb
2 gr. < 1 Kg, 5 gr. > 1 Kg.

Capacity: 5 Lb / 2000 Gram

Weight Modes: Pounds/Ounces or Grams

Auto Shut Off: Turns off after 2 minutes of non-use.

Warranty: Manufacturer's five (5) year warranty, see www.escali.com for full details.

Thank you for purchasing an *Escali* Digital Scale.

Please read the following operation information to ensure the proper function of your new scale.

Before use

Your scale is equipped with one easy to use all feature operating button. This button is located on the front of the scale, right from the display. With this button, you control all normal operating features; On, Off, and Tare.

How to weigh:

- 1) Turn the scale on. All display segments will appear for approximately 2 seconds before resetting to zero.
- 2) Place item gently on the platform.

How to use the "Tare" feature:

This feature allows the display to be reset to zero after you weigh an item in a container or bowl. It shows the weight of additional items as if you were to weigh them separately.

- 1) Turn the scale on.
- 2) Place the container, without the item, gently on the platform.
- 3) Press the operating button, and the weight of the container will be removed. The display value will reset to "0g/0oz".
- 4) Gently add the item to the container. The display will show the weight of the item only.
- 5) Repeat step 3 and 4 when adding more items to the container.

How to clear the "Tare" feature:

- 1) Remove all items from the platform.
- 2) Press the operating button, and the display value will reset to "0g/0oz".
- 3) The scale is reset. You can continue with normal operating.

Additional Information

- 1) Make sure your scale is at room temperature and on a stable horizontal surface free of vibration
- 2) This scale is not waterproof. Do not expose to moisture
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking or vibration
- 4) Do not disassemble this scale or the warranty will be void
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.

Battery Replacement/Installation:

Replace the batteries when the LCD display reads "bAtt".

- 1) Remove the battery door
- 2) Install two new 3-volt lithium batteries
- 3) Replace the battery door.

Escali's liability is limited to two (2) times the cost of the product

© Copyright Escali LLC, 2004

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>