

Bravetti™

PLATINUM PRO

Electric Digital Kettle

OWNER'S MANUAL

Model EK119H

120V., 60Hz., 1800 Watts.



EURO-PRO Operating LLC
Boston, MA, 02465
1 (800) 798-7398
www.euro-pro.com

IMPORTANT SAFETY INSTRUCTIONS

When using your **Electric Digital Kettle**, basic safety precautions should always be observed, including the following:

1. Read all instructions before using your **Electric Digital Kettle**.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the power base) corresponds with the voltage in your home.
3. **Do not** touch hot surfaces. Always use handles or knobs.
4. Close supervision is necessary when any appliance is used by or near children.
5. To protect against electric shock, do not immerse cord, plug or kettle in water or any other liquids.
6. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
7. **Do not** operate appliance with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to **EURO-PRO Operating LLC** for examination, repair or adjustment.
8. **Do not** place hot kettle on or near paper, cloth or other flammable material.
9. Position the kettle properly on the power base before switching on.
10. **Never** leave the kettle unattended when plugged in. When using this appliance, provide adequate air space above and on all sides for air circulation.
11. **Never** place a hot kettle on surfaces where heat may cause a problem. Always place hot kettle on an insulated heat pad.
12. **Do not** place the base or the kettle on or near a hot gas or electric burner.
13. **Never** place or use the kettle on a range top or in a microwave oven. Use only with the power base.
14. Always unplug the power base and empty the kettle when not in use.
15. **Do not** allow liquid to evaporate from kettle. **Do not** heat kettle when empty.
16. Use only the power base provided, and keep it clean and dry.
17. To disconnect, depress 'On/Off' button, and ensure that 'On/Off' LED is not illuminated. Then remove the plug. Always hold the plug, and never pull the cord.
18. Extreme caution must be used when moving an appliance containing hot liquids.
19. **Never** put less water in the kettle to boil than is indicated by the "MIN" mark on the water level window.
20. Always ensure that the lid is closed and the filter is in place when using the appliance. **Do not** lift the lid when the unit is in use. Scalding may occur if the lid is removed during the brewing cycles.
21. **Do not** fill above the 'MAX' or below the 'MIN' mark on the kettle body. **WARNING: If this kettle is overfilled, boiling water may be ejected.**
22. Ensure that the kettle is on a stable, flat surface.
23. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
24. To avoid possible steam damage, turn spout away from walls or cabinets during use.
25. Avoid contact with steam from the spout when the water is boiling or just after it has switched off.
26. **Do not** clean kettle with scouring powders, steel wool pads or other abrasive materials as these will damage the finish of the appliance.

SAVE THESE INSTRUCTIONS For Household Use Only

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

IMPORTANT SAFETY INSTRUCTIONS

 
27. **Do not** use outdoors or while standing in a damp area.
 28. **Do not** use appliance for other than intended use.
 29. Lift and tilt cover away from you carefully to avoid scalding and allow water to drip into unit.
 30. **USE CARE** when opening the lid for refilling when the kettle is HOT.
 31. **Do not** hold the switch in the "Temperature" hold position or tamper with the switch to fix it in the "ON" position as this may cause steam to be ejected from around the lid and could damage the automatic switch-off mechanism.
 32. **Do not** attempt to connect any other appliance to the power base unit, or tamper with the connector in any way.
 33. **Do not** touch the kettle with wet hands.
 34. **Do not** place any utensils or baby bottles into the kettle.
 35. **WARNING: Do not** place the power base unit onto any metal surfaces such as metal trays or stove tops when it is plugged into a power source of any kind.
 36. Always unplug the power base when the appliance is not in use.
- This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. It is **not recommend** to use an extension cord but should one be required:
1. An extension cord may be used if the electrical rating is equal to or greater than the rating of the kettle. Use an extension cord rated 15 amperes or greater.
 2. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



WARNING: Danger of Scalding. Please use caution when using the kettle. The steam emitted from this appliance is very hot.

SAVE THESE INSTRUCTIONS For Household Use Only

Getting To Know Your Electric Digital Kettle

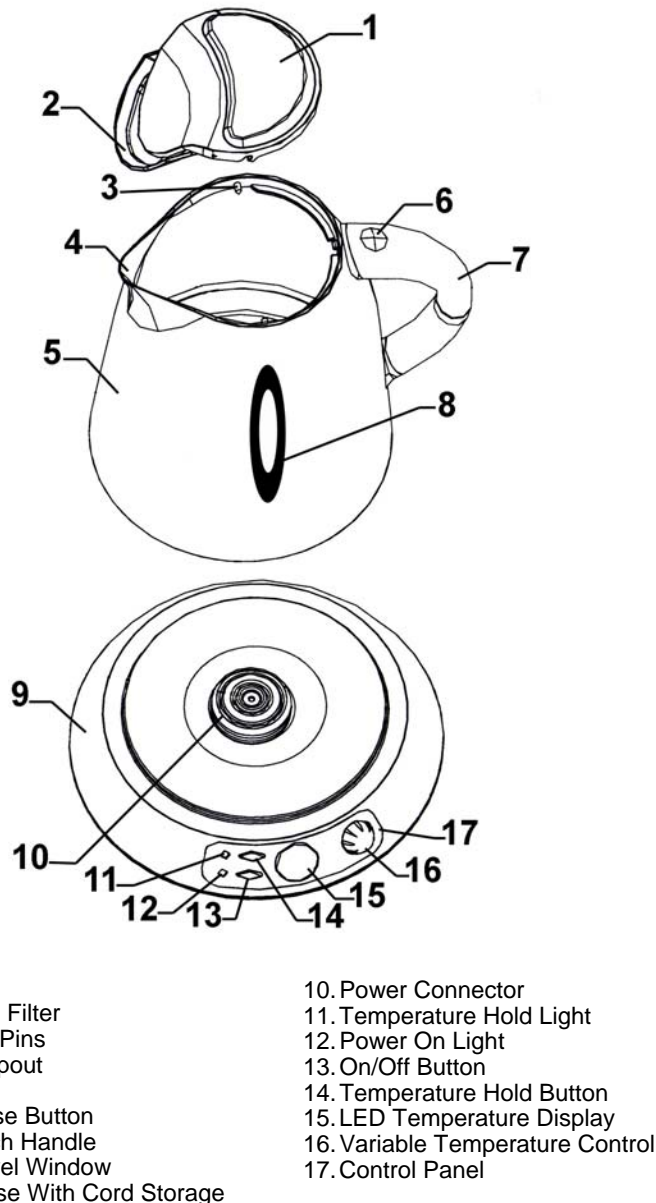

- | | |
|---------------------------------|----------------------------------|
| 1. Lid | 10. Power Connector |
| 2. Anti-Scale Filter | 11. Temperature Hold Light |
| 3. Lid Hinge Pins | 12. Power On Light |
| 4. Pouring Spout | 13. On/Off Button |
| 5. Main Unit | 14. Temperature Hold Button |
| 6. Lid Release Button | 15. LED Temperature Display |
| 7. Cool Touch Handle | 16. Variable Temperature Control |
| 8. Water Level Window | 17. Control Panel |
| 9. Power Base With Cord Storage | |

Technical Specifications

Voltage: 120V., 60Hz.
Power: 1800 Watts

Note: Illustrations may differ from actual unit.

FEATURES OF ELECTRIC DIGITAL KETTLE



- LED TEMPERATURE DISPLAY**
The LED temperature display screen will display the temperature selected.
- LID RELEASE BUTTON**
The lid release button allows you to open the lid without touching hot areas.
- POWER "ON" LIGHT**
The power "On" light will illuminate when the "On/Off" button is pressed to the "On" position. It will turn off when the "On/Off" button is pressed to stop the boiling process or when the desired temperature has been reached.
- VARIABLE TEMPERATURE CONTROL**
Turning this knob will select the water temperature desired. The temperature goes up in 10° increments from 80°F to 210°F. 210°F is shown as a series of automated symbols. Pushing this knob will automatically set it to the boiling point (210°F).
- ANTI-SCALE FILTER**
To protect your beverages from water scale deposits.
- TEMPERATURE HOLD BUTTON**
Press this button to keep heated water at the temperature selected.
- CONCEALED HEATING ELEMENT**
Concealed heating element provides faster heating and easier clean-ups.
- POWER BASE WITH CORD STORAGE**
Allows for easy cord storage.
- WATER LEVEL WINDOW**
Easy-to-read indicators lets you know how much water is left.
- AUTO SHUT-OFF**
Will turn the unit off when the water has reached the set temperature or the kettle is empty.
- SAFETY SHUT-OFF**
Will turn the unit off if there is no water left in the kettle.

OPERATING INSTRUCTIONS

Preparing Your Kettle

BEFORE FIRST USE: Remove any packaging material or stickers from your kettle.

1. Place the power base on a flat, stable surface.
2. Fill the kettle to the "Max" indicator on the water level window (2 quarts / 2 liters). (Fig. 1)
3. Ensure that the anti-scale filter is attached to lid. If it is not, then snap the anti-scale filter into place.
4. Snap the lid onto the lid hinge pins that are on either side of the kettle and lock the lid in place.
5. Place the kettle on the power base and press the On/Off button.
6. Set the variable temperature control to the highest temperature setting (210°F) and let the water come to a boil until the kettle shuts off automatically. (Fig. 2)
7. Discard this water and repeat the process one more time.
8. Rinse the kettle two or three times. The kettle is now ready for use.



Fig. 1

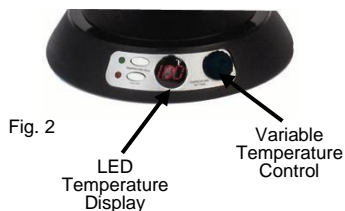 


Fig. 2

Using Your Kettle

1. Lift the kettle off the base before filling.
2. Press the lid release button for easy filling. (Fig. 3)

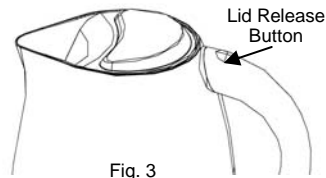 


Fig. 3

3. Fill the kettle to the desired amount of water using the water level window as your guide. Ensure that water is between the 'MIN' and 'MAX' levels.

CAUTION: Do not allow kettle to boil dry as this will cause damage to the kettle.

WARNING: If the kettle is overfilled, there is a risk that water will spit out of spout.

4. Make sure that the lid is securely locked in place and that the kettle is seated correctly on the base.
5. The LED temperature display on the control panel will blink 'OFF' when the kettle is placed on the power base. Press the On/Off button to turn the unit "On". The power "On" light will illuminate.
6. Turn the variable temperature control to the desired temperature, 80°F to 210°F or push it to set it directly to 210°F. Once the temperature of the water has reached the set temperature, the unit will automatically shut off and the power "On" light will turn off.
7. If you wish to keep your water at the set temperature, press the temperature hold button. The temperature hold light will now illuminate. (Fig. 4)

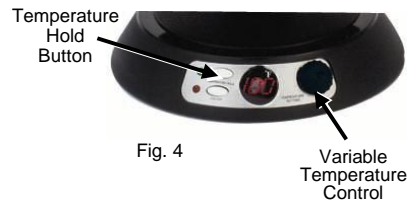 


Fig. 4

OPERATING INSTRUCTIONS

8. To stop the temperature hold feature, press the temperature hold button one more time and the temperature hold light will turn off.
9. To turn the unit "Off", depress the On/Off button. The power "On" light will turn "Off".
10. Remove the kettle from the power base for convenient and easy serving.

CAUTION: Do not place hot kettle directly onto furniture or flammable materials. Use a hot plate or cloth under the kettle when placing on a table, countertop or other furniture.

NOTE: The kettle will not turn on if the temperature of the water in the kettle is higher than the temperature selected.

11. After use, empty the kettle and ensure that the temperature hold is "Off". The unit will automatically shut off when the set temperature of the water has been reached.

12. Unplug the power base from the electrical outlet.

Care and Maintenance of Your Kettle

WARNING: Always disconnect the appliance from the power source before cleaning. Never immerse the kettle or base in water or any other liquid. It is necessary to clean your cordless kettle regularly to ensure optimum performance. Mineral deposits in tap water may cause the water level window and the inside of the kettle to discolor.

1. To remove build-up, fill the kettle with 1 part vinegar and 5 parts water and leave it unplugged overnight or for a period of approximately 8 hours. Do not use cordless kettle while descaling solution is inside.
 2. After the period of soaking, empty the kettle. Due to the fact that a small amount of solution will be left in the kettle, it is necessary to rinse the kettle out with clean water 2 or 3 times. Your kettle is now ready for use.
 3. The outside of the kettle can be wiped clean with a soft damp cloth.
- NOTE:** Never use any chemical, steel wool, or abrasive cleaners to clean any part of the kettle.

To Shorten Power Cord Length:

Wrap the extra cord length around hidden cord storage until length is correct for base placement. Make sure that the cord has been properly wrapped and the base is seated firmly.

Don'ts

- **Never** use the cordless kettle for boiling or heating anything other than water.
- **Never** place any utensils, containers or baby bottles in unit.
- **Never** immerse unit or power base in water or any other liquid.
- **Never** let unit run dry.
- **Never** leave unit unattended when in use.

Do's

- Use caution when pouring hot water.
- When boiling water for baby formula, always boil water to boiling point (210°F) and then let it cool. Follow the manufacturer's instructions on how to prepare the baby formula.
- Always ensure that there is water in kettle before turning the unit on.
- Always use fresh water.
- Always unplug power base when unit is not in use.
- Rinse the anti-scale filter regularly.
- Hold kettle firmly when lifting from power base.

Hints & Tips

- Boil water for hot water bottles.
- Heat water for manicures and pedicures.
- Boil water for baby formulas.
- Warm water for warm compresses.
- Boil water for tea, coffee and instant soup broth.

TROUBLE SHOOTING GUIDE

TROUBLESHOOTING GUIDE		
PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Flashing "Off" on LCD	1. Kettle has not been programmed.	1. Depress On/Off button and select a desired temperature.
Water does not boil	1. The kettle is not plugged into a 120V AC electrical outlet. 2. The 'On/Off' button was not depressed to start the heating process.	1. The kettle must be plugged into a 120V AC electrical outlet. 2. Depressed the 'On/Off' button to start the heating process.
'On/Off' light will not illuminate when depressed	1. Water has not cooled down from desired temperature.	1. Increase temperature selection.

EK119H



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO OPERATING LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid. For Customer Service support, call 1 (800) 798-7398 or visit our website www.euro-pro.com.

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase date and \$12.95 to cover the cost of return shipping and handling must be included.*The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC**, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO EURO-PRO OPERATING LLC, 4400 Bois Franc, St-Laurent, QC, H4S 1A7

EK119H

Appliance model

Date purchased

Name of store

Owner's name

Address

City

State

Zip Code

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>