




## 3-Speed Cordless Sweeper

### OWNER'S MANUAL

Model: UV627

7.2 Volt DC

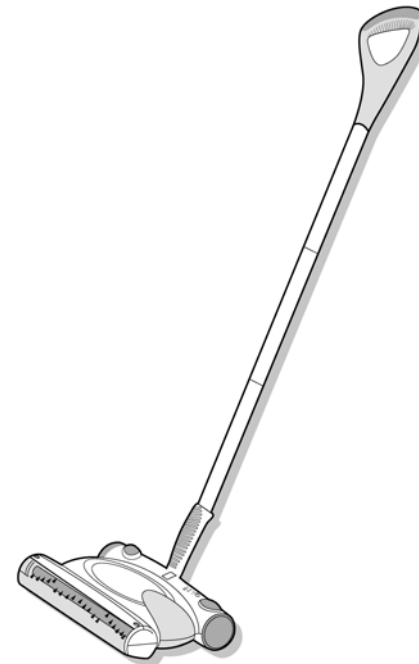

#### **EURO-PRO Operating LLC**

U.S.: 94 Main Mill Street, Door 16  
Plattsburgh, NY 12901

Canada: 4400, Bois-Franc  
St-Laurent, QC H4S 1A7

Tel. : 866-98shark  
[www.sharkvac.com](http://www.sharkvac.com)

**EURO-PRO** 

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following

**READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS SWEEPER.**

## WARNING:

- To reduce the risk of fire, electrical shock, or injury:
- Do not charge this unit outdoors.
  - Do not use outdoors or on wet surfaces.
  - Do not allow to be used as a toy. Close attention is necessary when used by or near children.
  - Use only as described in this manual. Use only manufacturer's recommended attachments.
  - Do not use with damaged cord or plug. Do not use cordless sweeper if it has been dropped, damaged, left outdoors, or dropped in water. Return it to **EURO-PRO Operating LLC** for examination, repair or adjustment.
  - Do not abuse the charger cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect.
  - Keep charger cord away from heated surfaces.
  - This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
  - Do not handle plug or appliance with wet hands.
  - Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
  - Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
  - Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
  - Do not attempt to change accessories while unit is running.
  - Use extra care when cleaning on stairs.
  - Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
  - Read and follow all label, operational and marking instructions.
  - Do not use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet.
  - Do not use the cordless sweeper without dust container in place.**
  - Store the cordless sweeper indoors. Store after use to prevent accidents.
  - Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin - wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
  - Use only on dry, indoor surfaces.
  - Do not use for any purpose other than described in this user's guide.
  - Do not attempt to use the charger with any other product or attempt to charge this product with another charger. **Use only charger model TechWorld AD-1215-UL8 supplied with this appliance.**
  - The appliance must be disconnected from the supply when removing the battery.

Model UV627



## ONE (1) YEAR LIMITED WARRANTY

**EURO-PRO Operating LLC** warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

In US: **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, N.Y. 12901  
In Canada: **EURO-PRO Operating LLC**, 4400 Bois Franc, St. Laurent, Quebec H4S 1A7

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase date and \$ 16.95 to cover the cost of return shipping and handling must be included. \*

Non-durable parts including, without limitation, dust cups and brushes which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is **EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

**\*Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



## OWNERSHIP REGISTRATION CARD For Canadian Consumers Only

Please fill out and mail the product registration card within ten (10) days of purchase in order to validate the foregoing Limited Warranty. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

**RETURN TO: EURO-PRO Operating LLC**, 4400 Bois Franc, St. Laurent, QC H4S 1A7  
**UV627**

Appliance model

Date purchased

Name of store

Owner's name

Address

City

Prov.

Postal Code

## SAVE THESE INSTRUCTIONS

### FOR HOUSEHOLD USE ONLY

## Care and Maintenance


To improve the performance and life of your unit, we recommend you do the following:

1. Once a month clean the unit with a dry cloth, including the chamber which the dust container fits into. Remove any hair, fiber or other materials that may have built up in the chamber, on the rotating brush or edging tool.
2. Don't use abrasive materials to clean the sweeper. **Do not immerse the unit in water.**
3. Do not pick up liquids or use on wet floors.
4. Do not use on concrete, tar or similar rough surfaces .
5. Don't pick up pieces of string or fabrics with the sweeper.
6. Do not clean tasseled or frayed carpets with the sweeper.



Model UV627  
7.2 Volt DC

TROUBLESHOOTING GUIDE		
PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
SWEeper WILL NOT OPERATE	<ol style="list-style-type: none"> <li>1. Batteries discharged.</li> <li>2. No power in electrical outlet supplying charging adapter.</li> <li>3. Unit needs servicing.</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge unit.</li> <li>2. Check fuse or breaker. Replace fuse/reset breaker.</li> <li>3. Call Customer Service.</li> </ol>
SWEeper WILL NOT PICK-UP	<ol style="list-style-type: none"> <li>1. Dust container is full.</li> <li>2. Unit needs recharging.</li> </ol>	<ol style="list-style-type: none"> <li>1. Empty dust container.</li> <li>2. Charge unit.</li> </ol>
DUST ESCAPING FROM SWEeper	<ol style="list-style-type: none"> <li>1. Dust container is full.</li> </ol>	<ol style="list-style-type: none"> <li>1. Empty dust container.</li> </ol>
ROTATING BRUSH WILL NOT PICK UP	<ol style="list-style-type: none"> <li>1. Unit clogged.</li> <li>2. Dust container is full.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for excessive material on brush or in bottom of sweeper. Remove obstruction from brushes and/or sweeper.</li> <li>2. Empty and clean dust container.</li> </ol>
SWEeper WILL NOT CHARGE	<ol style="list-style-type: none"> <li>1. Electrical outlet not working</li> <li>2. Charging Adapter not working</li> <li>3. Batteries no longer functioning</li> </ol>	<ol style="list-style-type: none"> <li>1. Check to ensure outlet is working properly. (Easily checked by plugging in another appliance.</li> <li>2. Replace charging adapter</li> <li>3. See battery disposal pg. 8.</li> </ol>

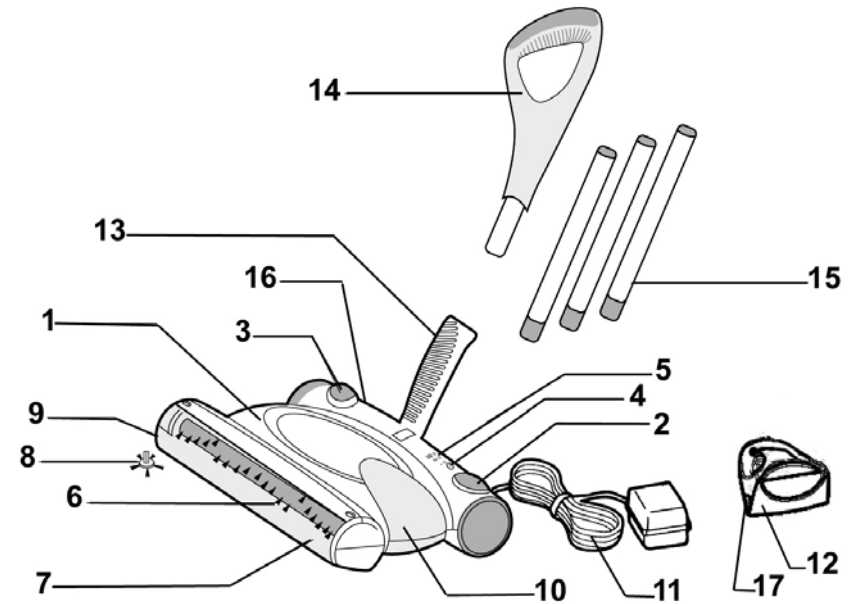

- |                             |   |
|-----------------------------|---|
| 1. Sweeper Power Head       | 11. Charging Adapter (TechWorld AD-1215-UL8 rated output DC 12V, 150mA) |
| 2. On / Off Switch          | 12. Charging stand  |
| 3. Speed Control            | 13. Lower Handle  |
| 4. Charging Light Indicator | 14. Upper Handle  |
| 5. Speed Indicator Lights   | 15. Extension tubes   |
| 6. Rotating Brush           | 16. Charging Jack (Main Unit)   |
| 7. Brush Cover              | 17. Charging Jack (Charging Stand)                                      |
| 8. Edging Tool              |   |
| 9. Gear Box                 |   |
| 10. Dust Container          |   |

## STORING THE CORDLESS SWEEPER

Your cordless sweeper may be stored by using the slot on the back of the upper handle and hanging it from a screw secured to a wall or other vertical surface. Use a #6 flat or pan head screw with the appropriate hardware for the surface that the sweeper will be mounted on, (i.e. gyproc). Allow the screw head to extend a approximately 3/16" from the mounting surface. Always empty your sweeper before hanging up for storage.

**NOTE:** Cordless Sweeper Model UV627 is shipped with the batteries uncharged. Charging of the unit for 20 hours prior to first use is required.

# ASSEMBLING YOUR CORDLESS SWEEPER

## Before you start:

Your Cordless Sweeper will require very little assembly. You should remove it from the carton and familiarize yourself with all the components listed as per the exploded view drawing (pg.2) This will help you in the assembly and operation of your cordless sweeper.

**Note:** The charging adapter and the lower handle are shipped inside the dust cup.

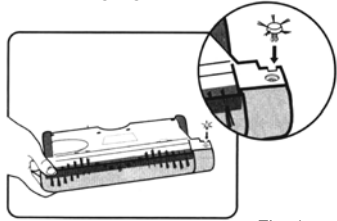


Fig. 1

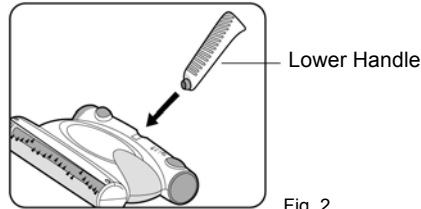


Fig. 2

1. In the event that the edging tool is not attached to the sweeper, insert the edging tool into the "square" hole under the bottom of the sweeper power head. Gently but firmly push until the edging tool locks into place. (Fig. 1)
2. Insert the lower handle - small end - into the sweeper power head. Push until firmly in place. (Fig. 2)
3. Assemble the extension tubes by pushing the plastic insert into the mating extension tube. (Fig. 3a) Push until only small portion of insert is visible or you cannot press any farther into the tubing. Push the extension tube assembly into the upper handle. (Fig. 3)

**NOTE: One extension tube has a different plastic insert. This tube should be on the bottom of the handle.**

Insert the extension tube assembly into the lower handle so that the tab on the plastic insert snaps into the open slot on the lower handle. (Fig. 3b)

4. Place the handle into the upward storage position.
5. Plug the charging adapter into the sweeper power head charging jack or plug the charging adaptor into the charging jack of the charging stand. If using the charging stand, place the sweeper onto the charging stand to charge. Plug the charging adapter cord into a standard electrical outlet (120V, 60Hz.) The red charging indicator should illuminate. If it does not, depress the On/Off switch one time.

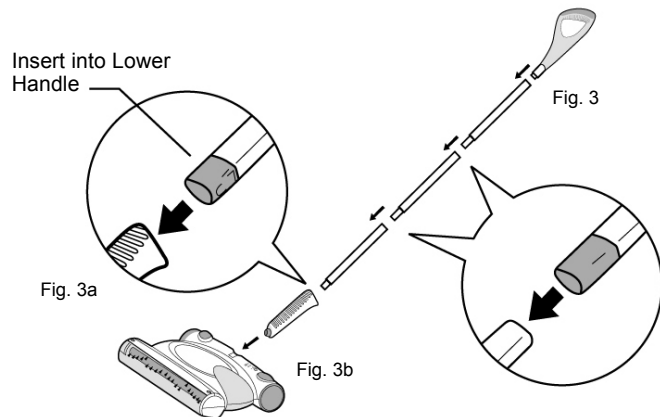


Fig. 3

Fig. 3a

Fig. 3b



**CAUTION: ALWAYS USE ADAPTOR SUPPLIED (ONLY) WITH SWEEPER**

# Battery Removal & Disposal

**NOTE:** If uncertain as to how to remove your battery pack, we suggest you take your sweeper to a reputable small appliance service technician to have this service performed.

Follow these steps when battery removal is required.

This sweeper is equipped with Ni-Cd batteries and you need to dispose of them properly. When the batteries are no longer good for use, they must be removed from the sweeper for disposal. Do not remove the batteries for any reason other than disposal of them. **The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.**



**WARNING:** You must never use ordinary batteries for replacement as these may leak and cause damage. Use only battery pack XBP615 for replacement.

## Removal of Battery Pack

1. Remove the extension tube and dust container.
2. Turn unit over so that the base is facing upwards. Be careful **NOT** to turn the unit **ON**. (Fig. 19)
3. Push in locking tab and lift off battery assembly. (Fig. 20)
4. Place battery assembly aside.
5. Insert the new battery assembly into unit. Ensure that locking tab snaps in place.



**CAUTION:** This appliance contains Ni-Cd batteries. The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.

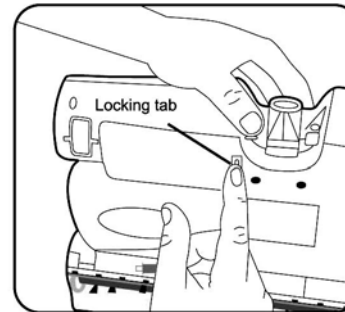


Fig. 19

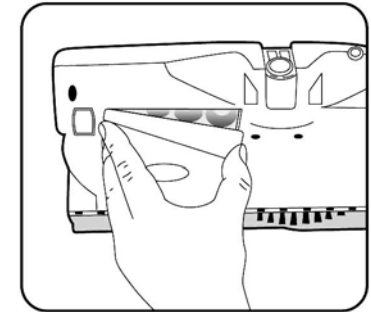


Fig. 20

## Changing the Rotating Brush, Gear Box & Squeegee



**WARNING:** Use caution when changing the rotating brush and gear box so that the unit does not turn ON when pressing down on the sweeper power head.

1. Remove the extension tube handle from the sweeper power head.
2. Turn sweeper power head upside down being careful **Not** to accidentally turn the unit **ON**.
3. Remove the brush cover. (Fig. 13) (Refer to page 5 for detailed instructions.)
4. Push in on the locking tab of the gear box and lift gear box to remove. (Fig. 14 & Fig. 15)
5. Lift the brush bar end cap up from the slot. (Fig. 16)
6. Pull the brush bar out from the bushing and slip off the belt to remove the brush bar. (Fig. 17)
7. Insert the new brush bar by first inserting the brush bar into the bushing on the end opposite the driver belt. (Fig. 17)
8. Slip the belt over the brush bar cap.
9. Insert the brush bar into the slot. (Fig. 16)
10. Insert the gear box tabs into the tab slots and push down until it clicks into place.
11. To replace the squeegee, follow instructions above for removing the gear box and slide the squeegee out from left to right. (Fig. 18)

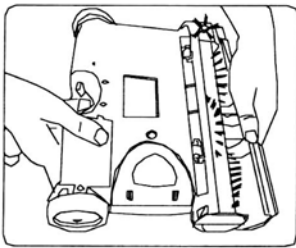


Fig. 13

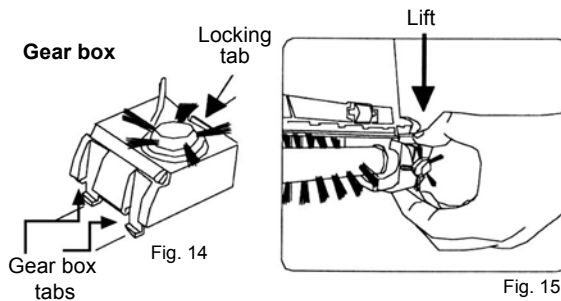


Fig. 14

Fig. 15

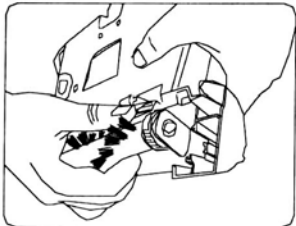


Fig. 16

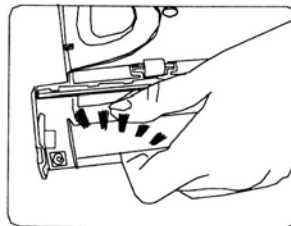


Fig. 17

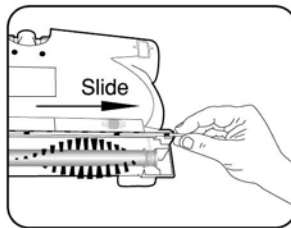


Fig. 18

## HOW TO OPERATE YOUR CORDLESS SWEEPER

1. **Before using, please ensure that the cordless sweeper has been initially charged for 20 hours**  
Your cordless sweeper will only operate properly when the batteries are fully charged. Your sweeper will operate for varying lengths of time on a full charge. This will depend upon the type of surface being cleaned. (Longer operating time on bare floors vs carpets.)
2. Push the On/Off switch to operate the unit. To turn off, press switch again.(Fig.4)

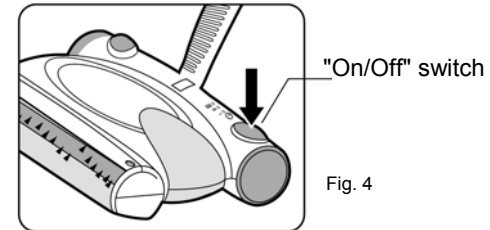


Fig. 4



**CAUTION:** Any electronic or electrical appliance should not be stored in or exposed to areas of high heat or humidity. Do not store your cordless sweeper close to stoves, radiators, furnaces or in a bathroom or bathing area.

3. To release the handle to a comfortable position, apply pressure to the top of the sweeper head with your foot while pulling back on the handle.(Fig. 5)

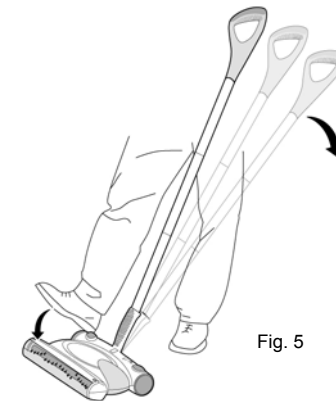


Fig. 5

4. To change the speed of the sweeper, press on the speed control button. As you press on it, the speed indicator light will change. If one light lights up, you have the low speed for hard floors; two lights, medium speed for carpeting; three lights, high speed for turbo deep cleaning. (Fig. 6)
5. Flashing LED lights indicate that the brush bar system is blocked or jammed. If this occurs, first turn the unit off, then remove the obstruction before turning the unit on again.


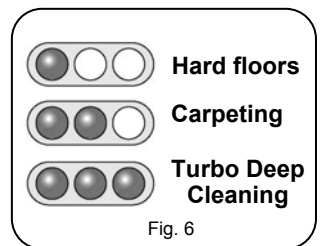


Fig. 6


## CLEANING THE DUST CONTAINER

To achieve the best performance, empty the dust container after each use.


1. Pull the dust container straight out from the side. (Fig. 7)

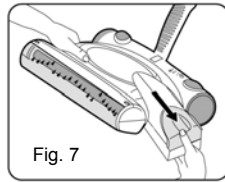

2. Empty dust container contents. (Fig. 8) If desired- you may rinse with water to clean the dust container – but **dry thoroughly** before replacing on the sweeper.

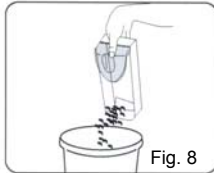




3. Replace dust container on cordless sweeper.
4. Periodically remove the brush cover on the front of the cordless sweeper and remove any build up of lint, hair or fiber on the rotating brush. To remove the cover - grip the cover from the bottom, pull out and upward until the cover unlocks from the side slots and tabs located on the top of the sweeper. (Fig. 9)

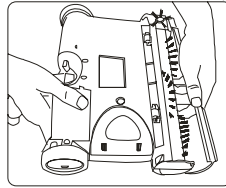

**CAUTION:** Do not accidentally turn unit on while cleaning. Do not clean while unit is charging.

## CHARGING THE CORDLESS SWEEPER

- 1a. Connect the charger plug to the charging jack or hole on the back of the sweeper. Plug the the charging adapter into the wall outlet. (120V., 60Hz.) Use only TechWorld Charger AD-1215-UL8. (Fig. 10)  
OR
- 1b. Connect the charger plug on the charging jack of charging stand (Fig. 11). Plug the charging adapter into the wall outlet (120V., 60Hz). Use only Techworld Charger AD-1215-UL8, and place the unit in the charging stand. (Fig. 12)
2. This cordless sweeper is powered by Ni-Cd batteries. Before first use, they must be charged for a minimum of 20 hours.
3. When recharging the unit, the "On/Off" switch must be in the "OFF" position.
4. The charging light indicator on the top of the sweeper will illuminate to indicate that the sweeper is properly charging.
5. When the battery is running low, the speed indicator lights will start to flash. To recharge, repeat step #1 above. Charging times will vary depending upon the amount of usage between charging cycles.

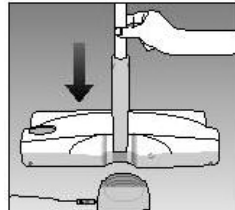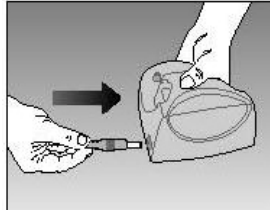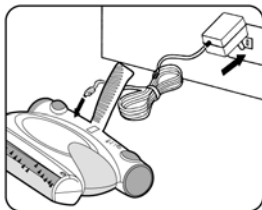

**Note:** Your sweeper is highly advanced and has electronic controls that optimize the cleaning ability and durability of the sweeper. Please review the following instructions carefully to ensure that all features are utilized for best performance.

1. The electronic controls of your sweeper will prevent the batteries from being deeply discharged and will indicate this by the speed indicator lights flashing. The sweeper will then stop operating. This is normal. To start charging the unit, turn the sweeper off, plug in the adapter or the charging stand and attach the sweeper to charge.
2. When the sweeper on/off switch is depressed the sweeper will slowly come up to speed. This is done to optimize the life of all components of the sweeper and is normal.
3. When first started, the sweeper will start in the highest speed "III" to prevent overloading the unit when starting on heavy carpets. Other speeds can then be selected by depressing the speed selector switch.
4. For best cleaning performance, use speed "I" (low) on floors, speed "II" (medium) on carpets, and use speed "III" (high) for turbo deep cleaning. These are guide lines and you will find the optimum speed settings for your surfaces and debris to be picked up through use and experience.
5. The sweeper will automatically try to maintain speeds on all surfaces. The unit may appear to be pulsing during use to maintain it's speed, this is normal. If this occurs, please select the next highest speed to gain optimum performance.
6. To protect your sweeper and it's components, the sweeper is provided with an electronic overload circuit. If something were to jam or overload the brush bar system, the units speed indicators will flash and the unit will stop operating, this is normal. If this occurs, first turn the unit off, then remove the obstruction before turning the unit on again.

**NOTE:** If, when you place the sweeper to recharge and the charging indicator light does **NOT** illuminate, then press the On/Off button once to turn the sweeper off. The charging indicator light should now light up.

**NOTE:** Peak performance may only be realized after the unit has been charged and discharged two (2) or three (3) times.

**IMPORTANT:** To maintain peak performance of your cordless sweeper, it is recommended that the unit be fully discharged, then completely recharged at least once a month.



### CAUTION

- Use only with the battery pack supplied with the unit. (Item # XBP615)
- Do not attempt to remove the battery pack from the unit to charge it.
- Never attempt to throw the battery pack or unit into a fire or incinerate it.
- Do not attempt to remove or damage the battery casing.
- Battery must be recycled or disposed of in accordance with local regulations at the end of it's service life. Please consult your Yellow Pages or local recycling center for more information.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>