

Style # XSY1730 for Model V1730 Sweeper

Service Pack Contains:

- 1 Replacement Brush Roll
- 1 Squeegee
- 1 Gear Box With Side Sweeper
- 1 Battery Pack 8.4V dc



Changing the Rotating Brush, Gear Box & Squeegee

WARNING: Use caution when changing the rotating brush, gear box and squeegee so that the unit does not turn ON when pressing down on the sweeper power head.

1. Remove the extension tube from the sweeper power head.
2. Turn sweeper power head upside down being careful **Not** to accidentally turn the unit ON.
3. Remove the transparent brush cover. (Fig. 1) (Refer to your owner's manual for detailed instructions.)
4. Push in on the locking tab of the gear box and lift gear box to remove. (Fig. 2 & Fig. 3)
5. Lift the brush bar end cap up from the slot. (Fig. 4)
6. Lift the brush bar out from the bushing and slip off the belt to remove the brush bar. (Fig. 5)
7. Insert the new brush bar by first inserting the brush bar into the bushing on the end opposite the driver belt. (Fig. 5)
8. Slip the belt over the brush bar cap.
9. Insert the brush bar into the slot. (Fig. 4)
10. Insert the gear box tabs into the tab slots and push down until it clicks into place.
11. To remove the squeegee, follow instructions above for removing the gear box and pull the squeegee out from the clips. (Fig. 6) To replace the squeegee, press the new one back into the clips.

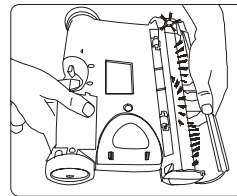


Fig. 1

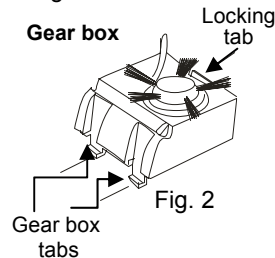


Fig. 2

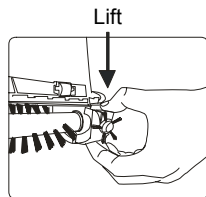


Fig. 3

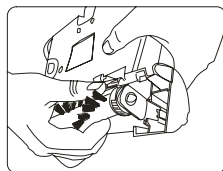


Fig. 4

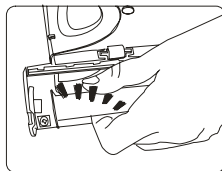


Fig. 5

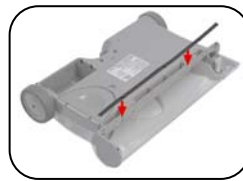


Fig. 6

Style # XSY1730 for Model V1730 Sweeper

Service Pack Contains:

- 1 Replacement Brush Roll
- 1 Squeegee
- 1 Gear Box With Side Sweeper
- 1 Battery Pack 8.4V dc



Changing the Rotating Brush, Gear Box & Squeegee

WARNING: Use caution when changing the rotating brush, gear box and squeegee so that the unit does not turn ON when pressing down on the sweeper power head.

1. Remove the extension tube from the sweeper power head.
2. Turn sweeper power head upside down being careful **Not** to accidentally turn the unit ON.
3. Remove the transparent brush cover. (Fig. 1) (Refer to your owner's manual for detailed instructions.)
4. Push in on the locking tab of the gear box and lift gear box to remove. (Fig. 2 & Fig. 3)
5. Lift the brush bar end cap up from the slot. (Fig. 4)
6. Lift the brush bar out from the bushing and slip off the belt to remove the brush bar. (Fig. 5)
7. Insert the new brush bar by first inserting the brush bar into the bushing on the end opposite the driver belt. (Fig. 5)
8. Slip the belt over the brush bar cap.
9. Insert the brush bar into the slot. (Fig. 4)
10. Insert the gear box tabs into the tab slots and push down until it clicks into place.
11. To remove the squeegee, follow instructions above for removing the gear box and pull the squeegee out from the clips. (Fig. 6) To replace the squeegee, press the new one back into the clips.

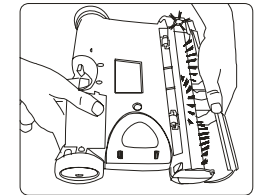


Fig. 1

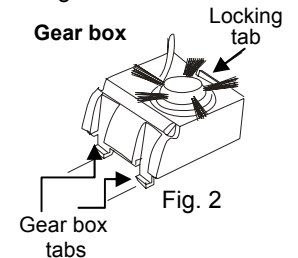


Fig. 2

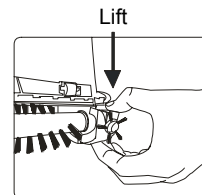


Fig. 3

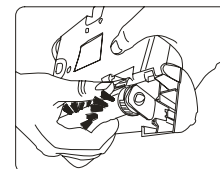


Fig. 4

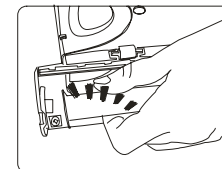


Fig. 5



Fig. 6

BATTERY REMOVAL & DISPOSAL

NOTE : If uncertain as to how to remove your battery pack, we suggest you take your sweeper to a reputable small appliance service technician to have this service performed.

Follow these steps when battery removal is required.

This sweeper is equipped with Ni-Cd batteries and you need to dispose of them properly. When the batteries are no longer good for use, they must be removed from the sweeper for disposal. Do not remove the batteries for any reason other than disposal of them. Call your nearest recycling center for information on the recycling and disposal of Ni-Cd batteries.

WARNING: You must never use ordinary batteries for replacement as these may leak and cause damage.

REMOVAL & REPLACEMENT OF BATTERY PACK

1. Remove the extension tubes and dust cup container.
2. Turn unit over so that the base is facing upwards.
3. Lift locking tab on battery compartment cover and set aside cover.
4. Remove the old battery pack from the unit.
5. Insert the new battery pack into the battery compartment and replace cover.



THIRTY (30) DAY LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of thirty (30) days from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete accessory kit, freight prepaid to:

In US: **EURO-PRO** Operating LLC: 94 Main Mill Rd., Door 16, Plattsburgh, N.Y. 12901

In Canada: **EURO-PRO** Operating LLC, 4400 Bois Franc, St. Laurent, QC, H4S 1A7

If the appliance is found by **EURO-PRO** to be defective in material or workmanship, **EURO-PRO** will repair or replace it free of charge. Proof of purchase date and \$ 6.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts including, without limitation brushes, squeegees, which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO** Corporation is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO** Corporation if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event** is **EURO-PRO** Corporation liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

***Important:** Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

For information or assistance:
EURO-PRO Operating LLC
94 Main Mill Rd., Door 16
Plattsburgh, N.Y. 12901

Tel: 1 (800) 798-7398

Printed in Turkey

Rev. 11/04

BATTERY REMOVAL & DISPOSAL

NOTE : If uncertain as to how to remove your battery pack, we suggest you take your sweeper to a reputable small appliance service technician to have this service performed.

Follow these steps when battery removal is required.

This sweeper is equipped with Ni-Cd batteries and you need to dispose of them properly. When the batteries are no longer good for use, they must be removed from the sweeper for disposal. Do not remove the batteries for any reason other than disposal of them. Call your nearest recycling center for information on the recycling and disposal of Ni-Cd batteries.

WARNING: You must never use ordinary batteries for replacement as these may leak and cause damage.

REMOVAL & REPLACEMENT OF BATTERY PACK

1. Remove the extension tubes and dust cup container.
2. Turn unit over so that the base is facing upwards.
3. Lift locking tab on battery compartment cover and set aside cover.
4. Remove the old battery pack from the unit.
5. Insert the new battery pack into the battery compartment and replace cover.



THIRTY (30) DAY LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of thirty (30) days from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete accessory kit, freight prepaid to:

In US: **EURO-PRO** Operating LLC: 94 Main Mill Rd., Door 16, Plattsburgh, N.Y. 12901

In Canada: **EURO-PRO** Operating LLC, 4400 Bois Franc, St. Laurent, QC, H4S 1A7

If the appliance is found by **EURO-PRO** to be defective in material or workmanship, **EURO-PRO** will repair or replace it free of charge. Proof of purchase date and \$ 6.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts including, without limitation brushes, squeegees, which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO** Corporation is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO** Corporation if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event** is **EURO-PRO** Corporation liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

***Important:** Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

For information or assistance:
EURO-PRO Operating LLC
94 Main Mill Rd., Door 16
Plattsburgh, N.Y. 12901

Tel: 1 (800) 798-7398

Printed in Turkey

Rev. 11/04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>