


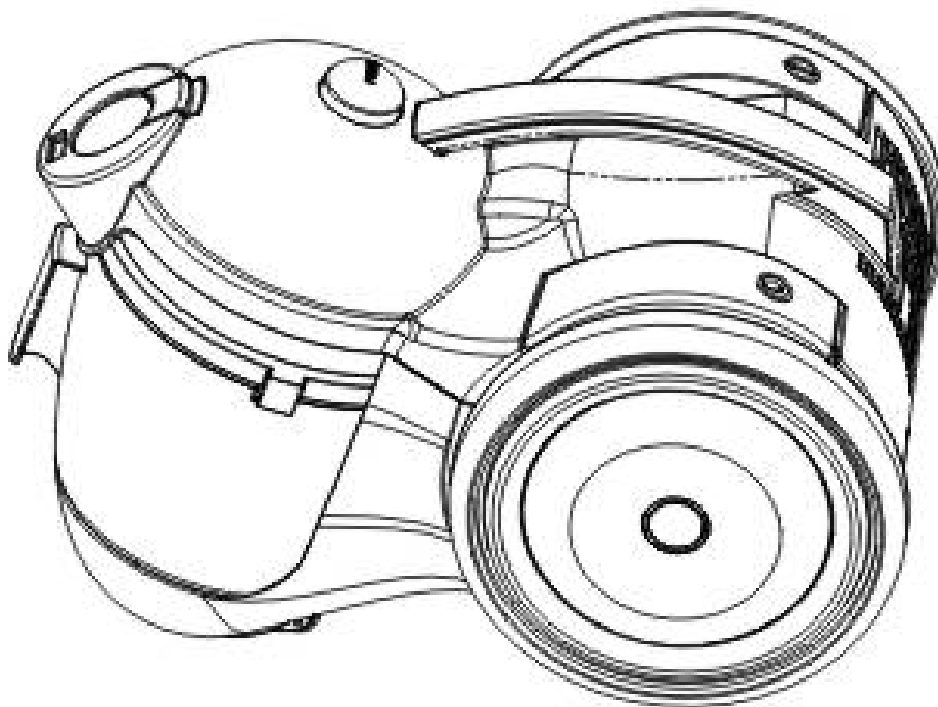

## ***Cyclonic Canister***

Model EP239

# **Use and Care Instructions**



For information or assistance:

**USA:** **EURO-PRO** Corporation  
178 West Service Rd.  
Champlain, NY 12919  
Tel.: 800-798-7398

**Canada:** **EURO-PRO** Corporation  
4400 Bois Franc  
St. Laurent, QC H4S 1A7  
Tel.: 514-842-8691

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

## **READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM CLEANER.**

**WARNING:** To reduce the risk of fire, electrical shock, or injury:

1. Do not leave vacuum cleaner unattended when it is plugged in. Unplug from outlet when not in use and before changing bags or filters.
2. To reduce the risk of electric shock – do not use outdoors or on wet surfaces.
3. Do not allow children to use as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water. Return appliance to **EURO-PRO** Corporation for examination, repair or adjustment.
6. Do not pull or carry by cord. Do not use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
9. Do not put any objects into openings. Do not use with any opening blocked and do not restrict airflow. Keep all openings free of dust, lint, hair, and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up hot coals, cigarette butts, matches or any hot, smoking, or burning objects.
12. Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
13. Do not use without dust bag and/or filters in place.
14. Turn off all controls before plugging or unplugging vacuum cleaner.
15. Use extra care when vacuuming on stairs.
16. Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
17. Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
18. Do not use in an enclosed space filled with vapors given off by oil based paints, paint thinner, moth proofing substances, flammable dust, or other explosive or toxic vapors.
19. Always unplug this appliance before connecting or disconnecting vacuum hose. Do not allow plug to whip when rewinding.
20. Use only on dry, indoor surfaces.
21. Do not use for any purpose other than described in this user's guide.

## **IMPORTANT NOTICE**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

Rev. 0701A


# EURO-PRO X™

## Cyclonic Canister

Model EP239

Rated 120 V~, 60Hz., 1200 Watts


### Main Components

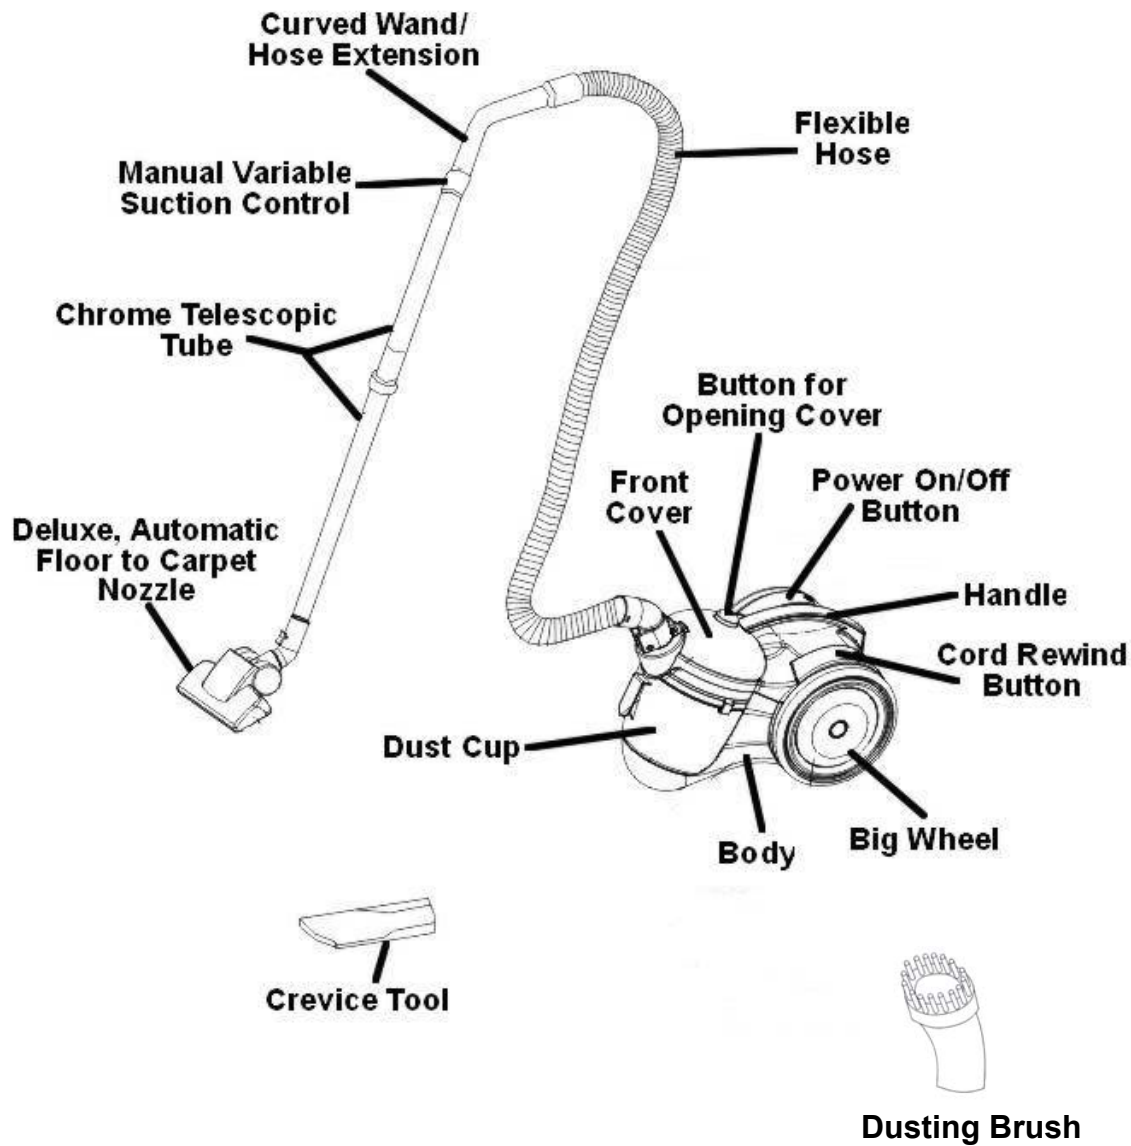


## Precautionary Measures

**IMPORTANT:** If the suction opening in the unit, the hose or the chrome telescopic tube are **BLOCKED**, switch off the vacuum cleaner and remove the blocking substance before you start the unit again.


1. Do not operate the vacuum cleaner too close to heaters, radiators or cigarette butts.

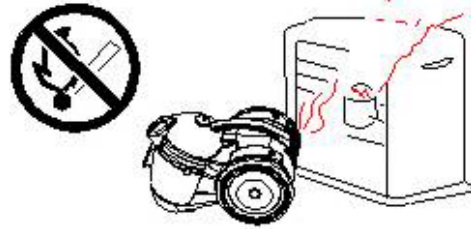


2. Before inserting the power plug into the wall outlet, make sure that your hands are dry.

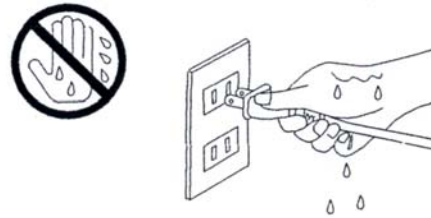

3. Before you start vacuuming, make sure to remove large or sharp objects that might damage the dust cup filter.

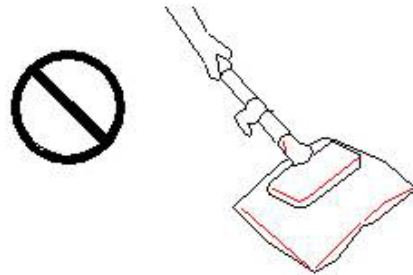

4. When pulling out the power plug from the wall outlet, pull the plug not the power cord.

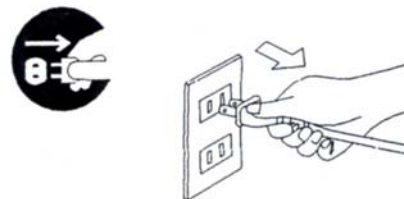

5. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
6. Do not use without dust bag and / or filters in place.

**NOTE:** This vacuum cleaner is equipped with a plug and power cord that retract automatically. If the cord or plug get damaged, it must be replaced by a qualified technician.

**Warning:** Hold the plug when rewinding the cord. Do not allow the cord to whip when rewinding.


## Assembling Your Vacuum Cleaner

**NOTE:** Always remove the power plug from the wall outlet before assembling or removing accessories.

### 1. Attaching the Flexible Hose into the Vacuum


Connect the flexible hose into the air intake duct. Push in until you hear a “click”, indicating it is in its position.

To remove the flexible hose, reverse the operation.

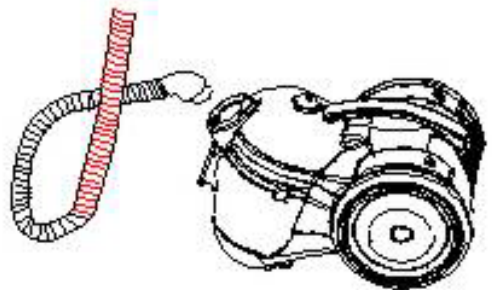


### 2. Fitting the Chrome Telescopic Tube to the Curved Wand / Hose Extension

Push the chrome telescopic tube into the curved wand / hose extension, as shown in the illustration.

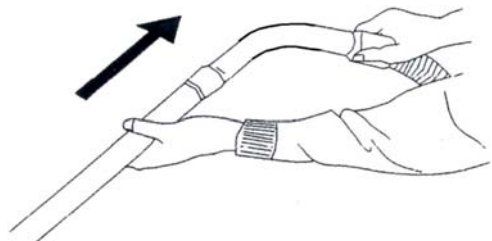


### 3. Extending the Chrome Telescopic Tube

Push forward the plastic knob and pull the smaller tube outward.

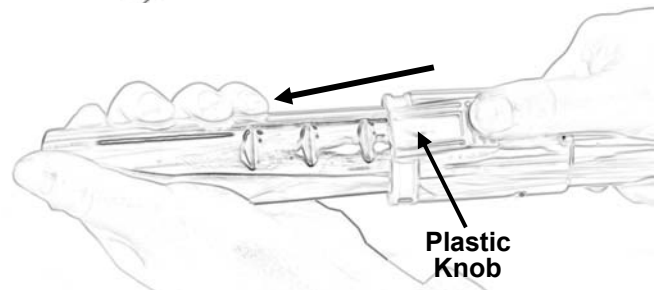

## Fitting the Floor Brush to the Telescopic Tube


Push the telescopic tube into the Floor brush, as shown in the illustration.

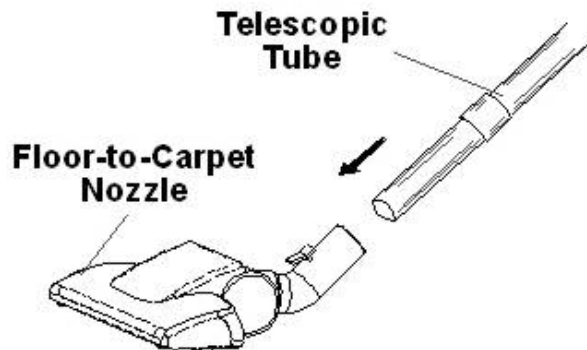

## Using the Cleaning Tools

### 1. Crevice Tool

For radiators, crevices, corners, baseboards and between cushions.

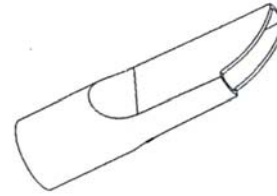

### 2. Dusting Brush


The dusting brush is used for furniture, venetian blinds, books, lamp shades and shelves.



## Instructions for Use


**NOTE:** Before using the appliance, unwind a sufficient length of cable and insert the plug into the wall socket. A yellow mark on the power cord shows the ideal cable length. Don't pull the power cord beyond the red mark.

1. Insert the power plug into the wall outlet.

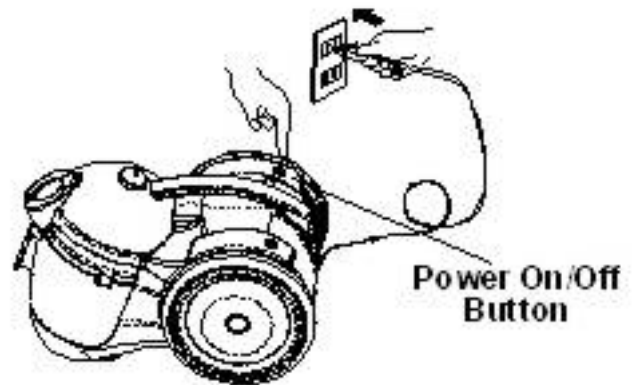


2. Press the Power On/Off Switch to activate the vacuum cleaner.

3. To rewind the power cord, press the cable rewind button with one hand and guide the power cord with the other hand to ensure that it does not whip causing damage.

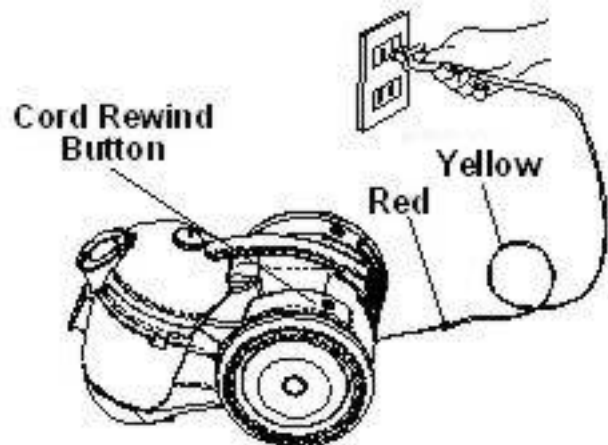


3. To adjust the suction, slide the manual variable suction control button to control the suction power of the vacuum cleaner. See illustration at right.

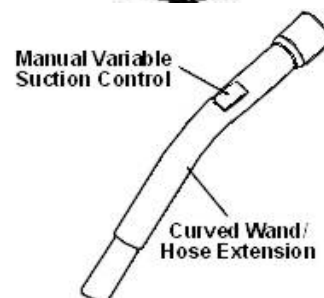


## Removing the Dust Cup Filter

1. Push the Power On/Off switch to disconnect the power.
2. Remove the flexible hose.
3. Push the dust cup lock and open the dust cup.

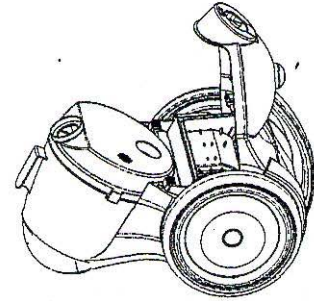


4. Pull up the dust cup cover and shake up and down. Take the dust cup cover out of the dust cup, do not let the dust fall out.

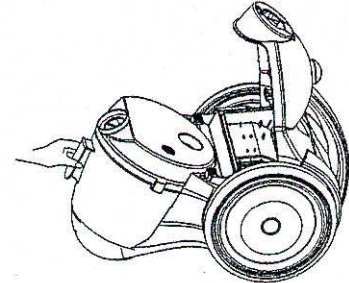


5. Take out the dust cup and dispose of the dust inside.

**Caution:**

If the dust is tightly packed and difficult to remove, lightly tap the front cover.

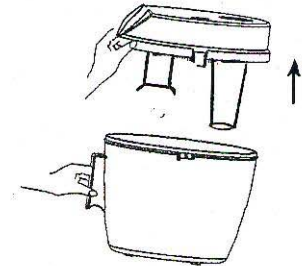


6. Insert the dust cup cover into the dust cup.

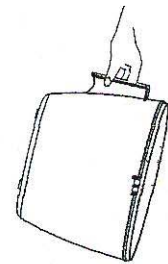

7. Attach the dust cup to the vacuum by pressing together until it is locked.
8. Reassemble the unit.

## Changing and Cleaning the Post Motor Filter and Pre Motor Filter

- Filters should be cleaned at least twice a year or when they become visible solid.
- Always operate the cleaner with the filters installed.
- Disconnect from electrical outlet before cleaning the filters.
- Do not use a washing machine to rinse the filters.
- Do not use a hair dryer or put in clothes dryer to dry either filter. **Always** allow the filters to air dry.

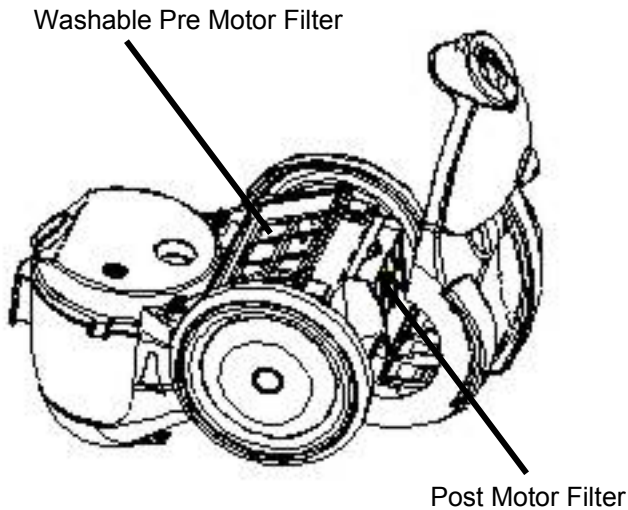

### Pre Motor Filter


1. Holding pre motor filter by its plastic frame, carefully remove the filter from the vacuum cleaner.
2. Rinse the dirty side of the pre motor filter under warm, low pressure tap water. Water should flow parallel to pleats. Angle filter to water stream to wash the dirt from the ridges of the pleats. Avoid getting clean side of filter wet during washing. Wetting clean side will increase drying time.
3. Angle filter and rinse from opposite direction. Continue this process until filter is clean.
4. Carefully shake the water from the surface of the filter and allow the filter to air dry completely before reinstalling the filter into the vacuum cleaner. Do **NOT** dry filter using hair dryer or place in clothes dryer. Do not put damp filter back in vacuum.

### Post Motor Filter

1. Push the dust cup lock to open the dust cup.
2. Remove the filter from the grill-filter.
3. Rinse filter in lukewarm water and air dry the filter completely.
4. Put the filter into the grill-filter.
5. A severely solid or clogged filter should be thoroughly washed with fresh tepid water. A mild detergent can be used if required.



**Pre Motor Filter**

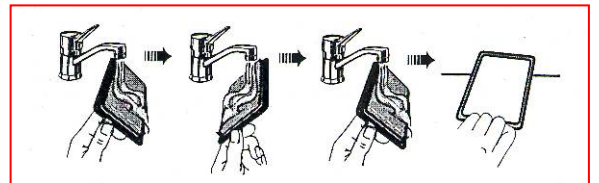





## ***Cyclonic Canister***

### **TO ORDER REPLACEMENT FILTERS Model EP239**

To order additional Filters or any other accessories or for Customer Service:

Call **EURO-PRO** Customer Service:

In U.S.: 800-798-7398

In Canada: 800-361-4639  
514-842-8691

Monday to Friday 8:30 A.M. - 5:00 P.M. Eastern Standard Time

#### **Please Note:**

The Pre Motor Filter and Post Motor Filter are washable.

#### **Important:**

Make sure that both Filters are **completely** dry before inserting back in the vacuum.



### THREE (3) YEAR LIMITED WARRANTY

**EURO-PRO** CORPORATION warrants this product to be free from defects in material and workmanship for a period of three (3) years from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to

In US: **EURO-PRO** Corporation, 178 West Service Rd., Champlain, N.Y. 12919

In Canada: **EURO-PRO** Corporation, 4400 Bois Franc, St. Laurent, QC, H4S 1A7

If the appliance is found by **EURO-PRO** to be defective in material or workmanship, **EURO-PRO** will repair or replace it free of charge. Proof of purchase date and \$18.95 to cover the cost of return shipping and handling must be included. \*

Non-durable parts including, without limitation, dust cup filters, filters, brushes and electrical parts which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO** Corporation is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO** Corporation if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event is EURO-PRO Corporation liable for incidental or consequential damages of any nature whatsoever.** Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**\*Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".**



### OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase in order to validate the foregoing Limited Warranty. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

**RETURN TO EURO-PRO CORPORATION, 178 WEST SERVICE RD., CHAMPLAIN, N.Y. 12919  
IN CANADA: 4400 BOIS FRANC, ST. LAURENT, QUEBEC, H4S 1A7**

Appliance model			
Date purchased		Name of store	
Owner's name			
Address	City	Prov./State	Postal code/Zip Code

Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>